

Section C10

Workshop Tools

Tool Number	Description
RH 529	Spring Balance - 0 to 11,5 kg (0 to 25 lb.)
RH 530	Thermometer
RH 7789 (J-9397)	Compressing Fixture - Compressor
RH 7790 (J-9432)	Bearing Installer - Compressor
RH 7791 (J-8433)	Extractor - Compressor Pulley
RH 7792 (J-9395)	Pilot - Compressor Pulley
RH 7793 (J-9392)	Seal Fitting and Extracting Tool - Compressor Shaft (Carbon type seal)
RH 7794 (J-8092)	Universal Handle - Compressor (For use with Tools RH 7795 and RH 7796)
RH 7795 (J-9398)	Pulley Bearing Remover - Compressor
RH 7796 (J-9481)	Pulley and Bearing Installer - Compressor
RH 7798 (J-9403)	Clutch Holding Tool - Compressor
RH 7799 (J-9480)	Fitting Tool - Clutch Plate and Hub - Compressor
RH 7800 (J-9401)	Extractor - Clutch Plate and Hub - Compressor
RH 7801 (J-9402)	Parts Tray - Compressor
RH 7802 (J-9393)	Extraction and Fitting Tool - Seal Seat - Compressor
RH 7803 (J-9521)	Support Block - Internal Mechanism - Compressor
RH 7937	Adapter - Schrader Valve
RH 8342 (J-23128)	Seal Fitting and Extracting Tool - Compressor Shaft (Ceramic type seal)
RH 8851	Test Box - Automatic Air Conditioning System