

BENTLEY

"R" TYPE

SECTION B

SPARES AND TOOLS

Containing tools and spare parts  
supplied with each car.

Tools for repair depot use will be  
listed in separate schedule.

## SCHEDULE OF SPARE PARTS

REF. NO. PART NO.

QUANTITY  
GROUP ASSY LY

NOTES

## GROUP B.1. SPARES AND TOOLS.

## Comprising:

BAR, tommy, .187" dia.,	1	KB.6036	1	E
BAR, tommy, .250" dia.		KB.6037	1	E
BAR, tommy, .312" dia.		KB.6038	1	E
BAR, tommy, .406" dia.		RF.5941	1	
BAR, tommy, .500" dia.		KB.6041	1	E
BRACE, wheel	2	RF.9084	1	
BULB, headlamp (Home) 12V 48/48 DC. LH dip.		RD.5296	1	
BULB, headlamp (Home) 12V 48/48 DC. RH dip.		RD.7623	1	E
BULB, headlamp 12V 36W double filament (all export except U.S.A. & Europe).		RD.4162	1	
BULB, headlamp 12V 36/36W DC (Export Europe, except France).		RD.5329	1	
BULB, headlamp 12V 36/36W (export France).		RD.5330	1	
BULB, side 12V 3W (RC)		RD.5085	1	
BULB, side 12V 3W (IC)		RD.5085	1	Q
BULB, side 12V 18/6W (IC)		RD.6602	1	W
BULB, side 12V 18/6W (RC)		RD.6602	1	W
BULB, side 12V 18W (IC)		RD.7425	1	Q
BULB, stop-tail 12V 18/6W		RD.6602	1	
CAN, oil (as illustrated).	5	RF.3844	1	
CAN, oil, alternative type.		RF.6712	1	
CONDENSER, ignition	6	RD.7774	1	
GAUGES, feeler	7	RF.6616	1	
GAUGE, tyre pressure	8	RF.5279	1	
GUN, grease	9	RF.6615	1	
HANDLE, Dunlop jack	10	RF.9220	1	
HANDLE, engine starting (Home).	11	RE.18068	1	
HANDLE, engine starting (export bumpers)		RE.18067	1	
HANDLE, engine starting, (with Pyrene bumpers).		RE.18426	1	
HOLDER, valve assembly	12	RF.5214	1	E
JACK, bottle type, Dunlop	13	RF.6019	1	
LEVER, drain plug	14	RF.5951	1	
LEVER, tyre, 8" long	15	RF.4392	3	E
PLIERS	16	RF.5949	1	
PUMP, tyre, hand type	17	RF.9083	1	
SCREWDRIVER (Hardwood Handle)	18	RF.7227	1	
SPANNER, adjustable	19	RF.6613	1	
SPANNER, box, 5 BA & 3 BA.	20	KB.6016	1	E
SPANNER, box, 2 BA		KB.6017	1	E
SPANNER, box, .312" dia. & .375" dia.		KB.6018	1	E
SPANNER, box, .437" dia. & .500" dia.		RF.5939	1	
SPANNER, box, .750" dia. & .812" dia.		KB.6021	1	E
SPANNER, jaw, 2 BA	21	RF.5908	1	
SPANNER, jaw, .250" dia. B.S.F.		RF.5910	1	
SPANNER, jaw, 5 BA & 3 BA	22	RF.5906	1	
SPANNER, jaw, .312" dia. & .375" dia. B.S.F.		RF.5912	1	
SPANNER, jaw, .437" dia. & .500" dia. B.S.F.		RF.5914	1	
SPANNER, jaw, .312" dia.		RF.5916	1	

SCHEDULE OF SPARE PARTS

REF. NO. PART NO. QUANTITY GROUP ASS'LY NOTES

SECTION B.

Bentley Continental 'R' Type  
As for Bentley 'R' except

GROUP B.1

	<u>Continental Qty</u>	<u>Standard Qty</u>
HANDLE, engine starting	PE.18339 1	PE.18068 1
HANDLE, engine starting	UE.1527 1	( 'E' Series Onwds )

CB/1/11/55