

SECTION J.

BRAKES.

Containing:—

- | | | |
|-------|-----|--|
| Group | 1. | Reservoir and Brake Pipes. |
| „ | 2. | Hydraulic Master Cylinders. |
| „ | 3. | Servo Motor and Connecting Rods. |
| „ | 4. | Rear Brake Intermediate Linkage. |
| „ | 5. | Rear Brake Equalising Gear. |
| „ | 6. | Rear Brakes. |
| „ | 7. | Handbrake. |
| „ | 8. | Front Brake—R.H.—(Other than Continental). |
| „ | 9. | Front Brake—L.H.—(Other than Continental). |
| „ | 10. | Front Brake—R.H.—(Continental). |
| „ | 11. | Front Brake—L.H.—(Continental). |
| „ | 12. | Brake Pedal—R.H. Cars. |
| „ | 13. | Brake Pedal—L.H. Cars. |

PARTS LIST

ROLLS-ROYCE SILVER CLOUD III,

BENTLEY S3, BENTLEY CONTINENTAL S3.



Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
1	UR.5344	ASSEMBLY-Reservoir	2		52	UA.1253/Z	WASHER-Plain-Flexible Hose to		
2	UR.5343	FILTER-Reservoir	2				Bracket	2	
3	UR.2842	GASKET-Filter	4		53	RE.22430	NUT-Flexible Hose to Bracket	2	
4	UR.3214	CONNECTION-Reservoir	2		54	UR.3063	PIPE-Operating-Upper Cylinder-		
5	UR.2852	PIECE-Distance-Reservoir	4				Front Brake-LH	1	
6	UA.108/Z	SETSCREW-Reservoir	4		55	UR.2922	CLIP-Pipes-Master Cylinder		
7	K.4407/Z	WASHER-Plain-Setscrew	4				Delivery Pipes	10	
8	UR.4988	HOSE-Long-1" Master Cylinder	1		56	K.4404/Z	WASHER-Plain-Clip	10	
9	UR.4985	HOSE-Long-¾" Master Cylinder	1		57	K.4307/Z	NUT-Clip	10	
10	UR.4919	PIPE-Connecting-Master Cylinder			58	UR.2793	PIPE-3 Way on Cruciform to		
		to Reservoir	2				Flexible Hose	1	123" W/Base Cars
11	UR.3234	HOSE-Short-1" Master Cylinder	1		59	UR.4915	PIPE-3 Way on Cruciform to		
12	UR.3235	HOSE-Short-¾" Master Cylinder	1				Flexible Hose	1	127" W/Base Cars
13	UR.8054	CLIP-Hose-Master Cylinder Supply	8		60	UR.1201	CLIP-Delivery Pipes	12	
14	UR.3430	CLIP-Flexible Pipe to Valance	1	Required on Continental Cars	61	RE.16784	CLIP-Pipe Bracket on Z Bar	2	
		Plate	1		62	K.4404/Z	WASHER-Plain-Clip to Frame	5	
15	UR.8574	CLIP-Flexible Hose to Valance	1		63	K.4307/Z	NUT-Clip-Delivery Pipes	5	
		Plate	1		64	UA.1252/Z	WASHER-Plain-Clips	9	
16	RF.3332	CLIP-Flexible Hose to Actuator	1	Other than Continental Cars	65	UR.4808	HOSE-Flexible-Rear Brakes	1	
		Mounting Bracket	1		66	UA.1253/Z	WASHER-Plain-Flexible Hose	1	
17	UA.1501/Z	BOLT-Clip	1		67	RE.22430	NUT-Flexible Hose to Bracket	1	
18	K.4006/Z	NUT-Bolt	1		68	UR.1200	WASHER-Sealing-Hose to 3 Way		
19	KC.171/Z	SETSCREW-Clip to Valance Plate	1				Junction	1	
20	K.4404/Z	WASHER-Plain-Setscrew	1		69	UR.1199	JUNCTION-3 Way-Axle Casing	1	
21	UR.3290	CLIP-Pipe Supply to Master	6		70	UA.204/Z	BOLT-3 Way Junction	1	
		Cylinder	1		71	UA.1253/Z	WASHER-Plain-Bolt	1	
22	KC.179/Z	SCREW-Clip to Pedal Blanking	1		72	RE.22430	NUT-Bolt	1	
		Plate	1		73	UR.2794	PIPE-3 Way to RH Rear Brake	1	
23	K.4404/Z	WASHER-Plain-Screw	1		74	UR.4629	PIPE-3 Way to L H Rear Brake	1	
24	K.4404/Z	WASHER-Plain-Clip to Brake	1		75	UA.1252/Z	WASHER-Plain-Pipe Clips	4	
		Pedal Housing	1		76	K.4006/Z	NUT-Pipe Clips	4	
25	K.4006/Z	NUT-Clip to Brake Pedal	1		77	K.1910/Z	SCREW-Brake Pipe Clip	1	
		Housing	1		78	K.1904/Z	SCREW-Brake Pipe Clip	3	
26	KC.179/Z	SCREW-Clip-Supply Pipe to	2		79	K.4404/Z	WASHER-Plain-Screws	4	
		Master Cylinder	2						
27	K.4404/Z	WASHER-Plain-Screw	2						
28	UR.5040	PIPE-¾" Master Cylinder to 3 Way	1						
		on Front Pan	1						
29	UR.4707	PIPE-1" Master Cylinder to 3 Way	1						
		on Cruciform	1						
30	UR.3647	JUNCTION-3 Way-Cruciform	1						
31	UR.5041	PIPE-3 Way Junction on Front	1						
		Pan to 3 Way on Cruciform	1						
32	UR.1199	JUNCTION-3 Way-Foot Mounted-	2						
		Front Pan	1						
33	UA.1252/Z	WASHER-Plain-3 Way Junction to	1						
		Frame	1						
34	UA.302/Z	NUT-3 Way Junction to Frame	1						
35	UR.3064	PIPE-Bracket on RH Shock	1						
		Damper to 3 Way Junction	1						
36	UR.4807	HOSE-Flexible-RH Front Brake	1						
37	UA.1253/Z	WASHER-Plain-Flexible Hose to	2						
		Bracket	2						
38	RE.22430	NUT-Flexible Hose to Bracket	2						
39	UR.3061	PIPE-Operating-Upper Cylinder-	1						
		Front Brake-RH	1						
40	UR.1721	PIPE-Bracket-RH-Shock Damper	1						
		to 3 Way Junction	1						
41	UR.4807	HOSE-Flexible-RH Front Brake	1						
42	UA.1253/Z	WASHER-Plain-Flexible Hose to	2						
		Bracket	2						
43	RE.22430	NUT-Flexible Hose to Bracket	2						
44	UG.1183	PIPE-Operating-Lower Cylinder-	1						
		Front Brake-RH	1						
45	UR.3065	PIPE-Bracket on LH Shock Damper	1						
		to 3 Way Junction	1						
46	UR.4807	HOSE-Flexible-LH Front Brake	1						
47	UA.1253/Z	WASHER-Plain-Flexible Hose to	2						
		Bracket	2						
48	RE.22430	NUT-Flexible Hose to Bracket	2						
49	UG.1182	PIPE-Operating-Lower Cylinder-	1						
		Front Brake-LH	1						
50	UR.1722	PIPE-Bracket on LH Shock Damper	1						
		to 3 Way Junction	1						
51	UR.4807	HOSE-Flexible-LH Front Brake	1						

Silver Cloud III- From SAZ.1 to 61 Incl. Bentley S.3- From B.2.AV. to 26 Incl.

Silver Cloud III- From SCX.1. Bentley S.3- From B.2.CN.

Silver Cloud III LWB- From CAL.1. Bentley S.3 LWB- From BAL.2.

Bentley Continental S.3- From BC.2XA.

Items marked † are not supplied as individual parts

BRAKES-


RESERVOIR AND BRAKE PIPES

J.1
Amendment 1

PARTS LIST

ROLLS-ROYCE SILVER CLOUD III,

BENTLEY S3, BENTLEY CONTINENTAL S3,

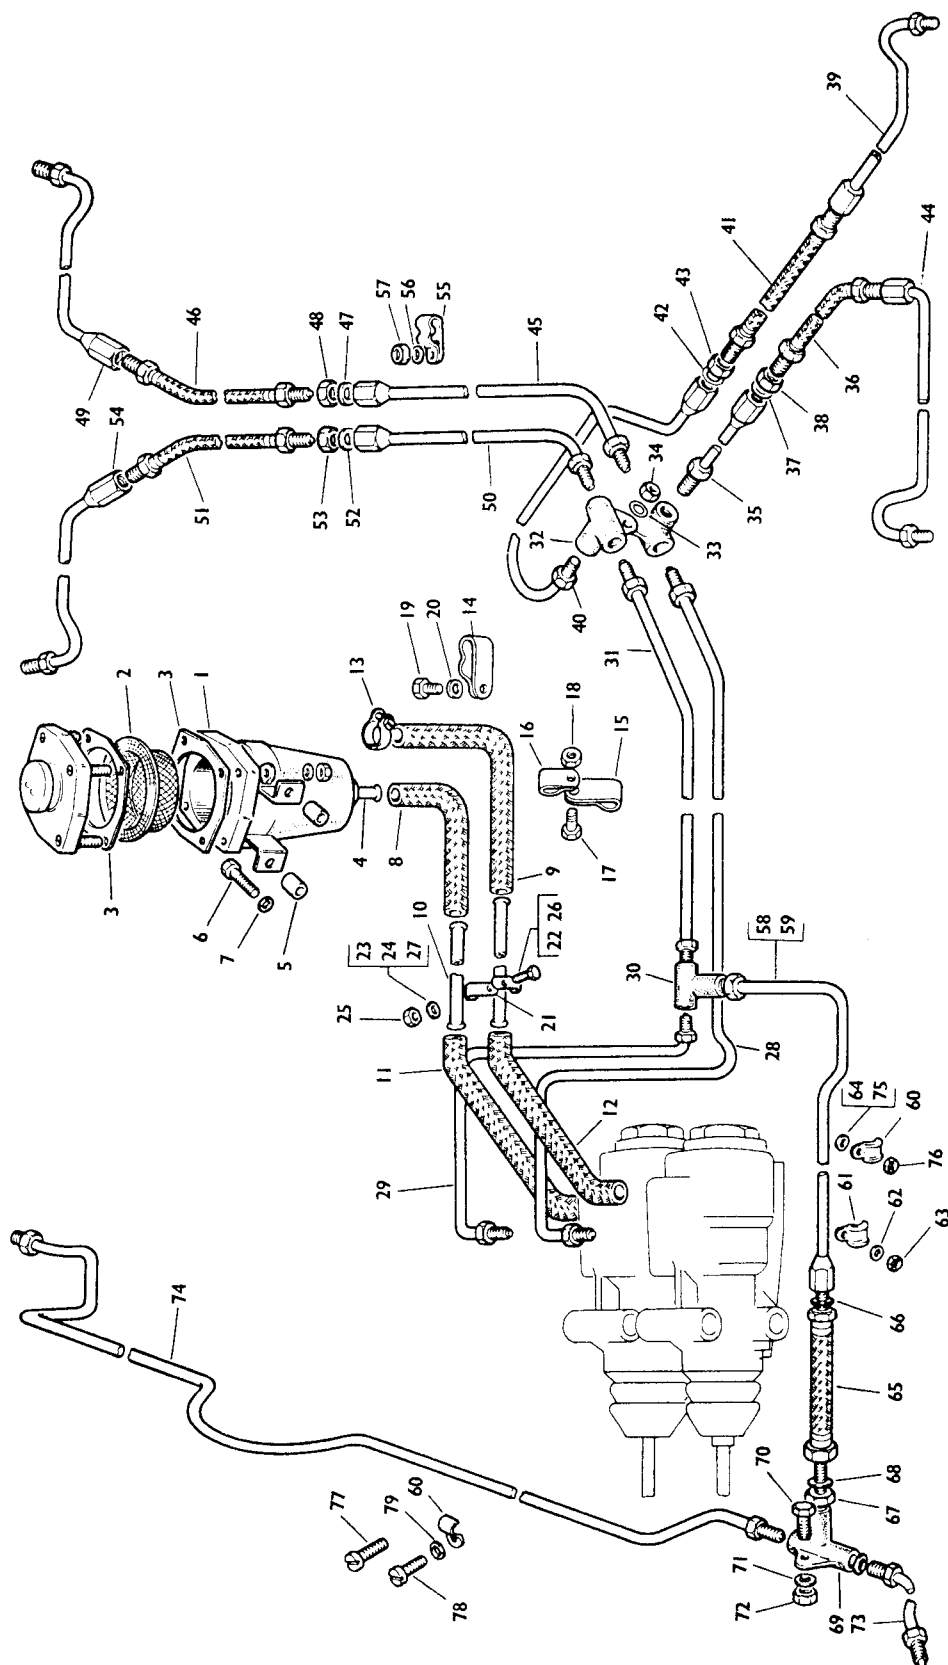


BRAKES-

RESERVOIR AND BRAKE PIPES

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

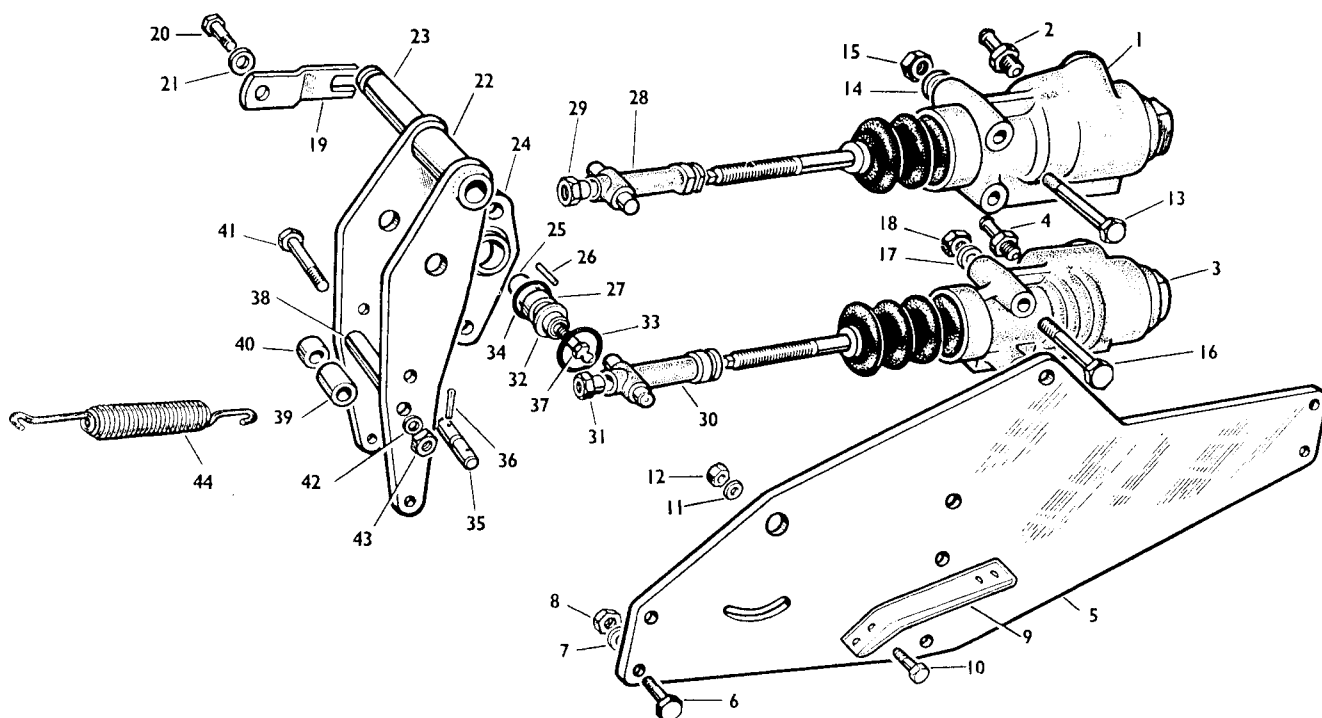

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
1	UG. 3847	ASSEMBLY-Hydraulic Master Cylinder-(1")	1			UG. 2440	WASHER-Adjusting-Balance Levers -(.0425")		
2	UG. 2883	CONNECTION-Inlet	1			UG. 2439	WASHER-Adjusting-Balance Levers -(.0475")		
3	UG. 3848	ASSEMBLY-Hydraulic Master Cylinder-(3/4")	1			UG. 2438	WASHER-Adjusting-Balance Levers -(.0525")		
4	UG. 2883	CONNECTION-Inlet	1		32	UG. 2437	WASHER-Adjusting-Balance Levers -(.0575")		2 off to suit
5	UG. 2487	PLATE-Support-Outer	1			UG. 2436	WASHER-Adjusting-Balance Levers -(.0625")		
6	UA. 152/Z	BOLT-Outer Plate-Cylinder Mounting	4			UG. 3155	WASHER-Adjusting-Balance Levers -(.0675")		
7	UA. 1252/Z	WASHER-Plain-Bolt	4		33	LC. 280	RING-Sealing-Balance Lever-Outer	2	
8	UA. 302/Z	NUT-Bolt	4		34	LC. 212	RING-Sealing-Balance Lever-Inner	1	
9	UG. 4046	BRACKET-Handbrake Micro Switch	1		35	UG. 2510	PIN-Fixing-Pull Off Spring-Servo Operating Lever	1	
10	KC. 178/Z	BOLT-Bracket to Support Plate	2		36	K4607/Z	PIN-Split-Fixing Pin	2	
11	K4404/Z	WASHER-Plain-Bolt	2		37	UG. 2472	NIPPLE-Grease-Pivot Pin-Balance Lever	1	
12	K4006/Z	NUT-Bolt	2		38	UG. 2452	BUSH-Pivot Bolt-Operating Levers	2	
13	UG. 1205	BOLT-Mounting-1" Master Cylinder	2		39	UG. 2470	TUBE-Distance-Long-Drag Link to Operating Lever	2	
14	UA. 1253/Z	WASHER-Plain-Bolt	2		40	UG. 2471	TUBE-Distance-Short-Drag Link to Operating Lever	2	
15	RE. 22428	NUT-Bolt	2		41	UG. 2469	BOLT-Pivot-Operating Lever- Drag Link	2	
16	UA. 171/Z	BOLT-Mounting-3/4" Master Cylinder	2		42	UA. 1251/Z	WASHER-Plain-Bolt	2	
17	UA. 1252/Z	WASHER-Plain-Bolt	2		43	UA. 301/Z	NUT-Bolt	2	
18	UA. 302/Z	NUT-Bolt	2		44	UG. 2509	SPRING-Pull Off-Servo Operating Lever	1	
19	UG. 2434	PLATE-Retaining-Operating Lever- Pivot Pin	1			CD. 2026	KIT-Service-1" Master Cylinder	1	94/81 9/24
20	UA. 103/Z	SETSCREW-Retaining Plate to Cruciform	1			CD. 2027	KIT-Service-3/4" Master Cylinder	1	\$140/96 7/24
21	UA. 1251/Z	WASHER-Plain-Setscrew	1						
22	UG. 2576	ASSEMBLY-Operating Levers and Distance Tube	1						
23	UG. 2447	PIN-Pivot-Operating Lever	1						
24	UG. 2994	LEVER-Balance-Master Cylinder	2						
25	UG. 2449	PIN-Pivot-Balance Lever	1						
26	RF. 7364	ROLLER-Needle-Balance Lever	46						
27	UG. 2448	PIECE-Distance-Pivot Pin- Balance Lever	1						
28	UG. 2466	TRUNNION-Upper-Master Cylinder	1						
29	UG. 2473	LOCKNUT-Trunnion-Upper	1						
30	UG. 2484	TRUNNION-Lower-Master Cylinder	1						
31	UG. 2485	LOCKNUT-Trunnion-Lower	1						

FOR CHASSIS NUMBERS SEE OVERLEAF


BRAKES-
HYDRAULIC MASTER
CYLINDERS

J.2
Amendment 1.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

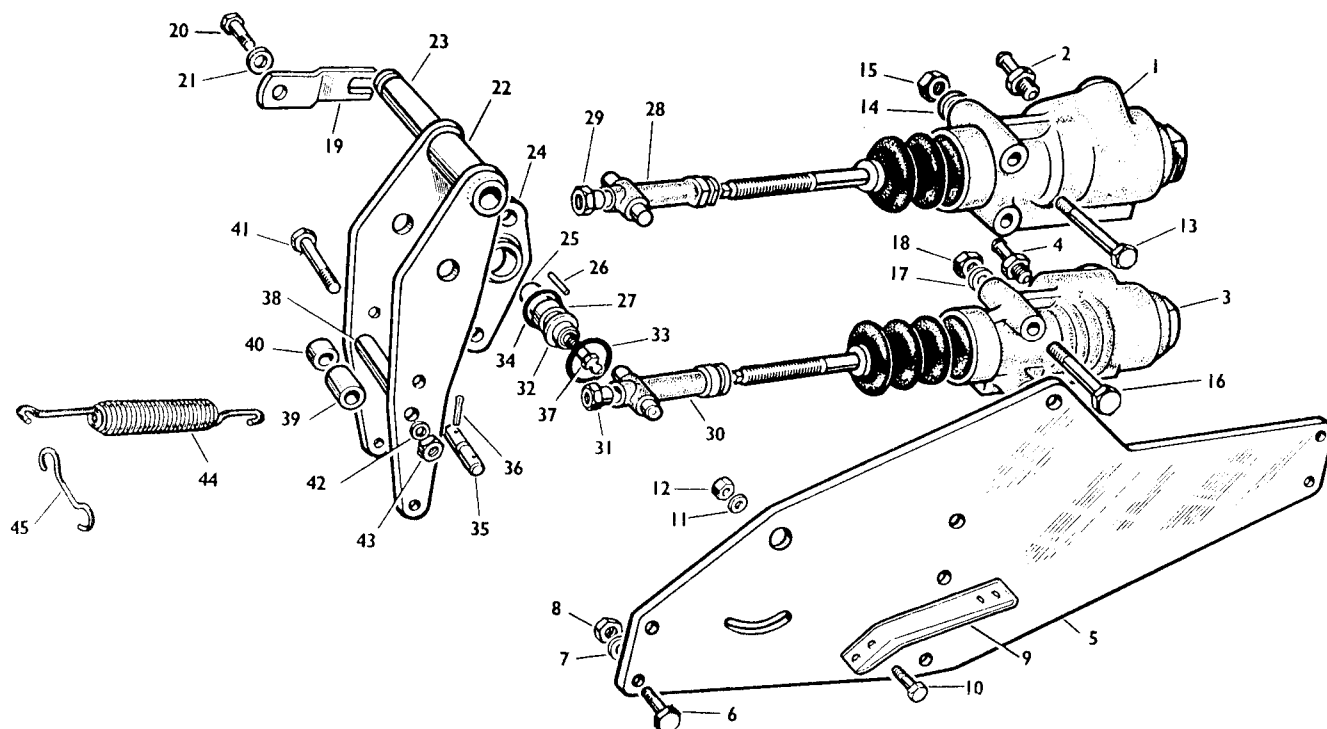

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
1	UG. 3847	ASSEMBLY-Hydraulic Master Cylinder-(1")	1			UG. 2440	WASHER-Adjusting-Balance Levers -(0.425")		
2	UG. 2883	CONNECTION-Inlet	1			UG. 2439	WASHER-Adjusting-Balance Levers -(0.475")		
3	UG. 3848	ASSEMBLY-Hydraulic Master Cylinder-(3/4")	1			UG. 2438	WASHER-Adjusting-Balance Levers -(0.525")		
4	UG. 2883	CONNECTION-Inlet	1		32	UG. 2437	WASHER-Adjusting-Balance Levers -(0.575")		2 off to suit
5	UG. 2487	PLATE-Support-Outer	1			UG. 2436	WASHER-Adjusting-Balance Levers -(0.625")		
6	UA. 152/Z	BOLT-Outer Plate-Cylinder Mounting	4			UG. 3155	WASHER-Adjusting-Balance Levers -(0.675")		
7	UA. 1252/Z	WASHER-Plain-Bolt	4						
8	UA. 302/Z	NUT-Bolt	4						
9	UG. 4046	BRACKET-Handbrake Micro Switch	1						
10	KC. 178/Z	BOLT-Bracket to Support Plate	2		33	LC. 280	RING-Sealing-Balance Lever-Outer	2	
11	K4404/Z	WASHER-Plain-Bolt	2		34	LC. 212	RING-Sealing-Balance Lever-Inner	1	
12	K4006/Z	NUT-Bolt	2		35	UG. 2510	PIN-Fixing-Pull Off Spring-Servo Operating Lever	1	
13	UG. 1205	BOLT-Mounting-1" Master Cylinder	2						
14	UA. 1253/Z	WASHER-Plain-Bolt	2		36	K4607/Z	PIN-Split-Fixing Pin	2	
15	RE. 22428	NUT-Bolt	2		37	UG. 2472	NIPPLE-Grease-Pivot Pin-Balance Lever	1	
16	UA. 171/Z	BOLT-Mounting-3/4" Master Cylinder	2		38	UG. 2452	BUSH-Pivot Bolt-Operating Levers	2	
17	UA. 1252/Z	WASHER-Plain-Bolt	2		39	UG. 2470	TUBE-Distance-Long-Drag Link to Operating Lever	2	
18	UA. 302/Z	NUT-Bolt	2		40	UG. 2471	TUBE-Distance-Short-Drag Link to Operating Lever	2	
19	UG. 2434	PLATE-Retaining-Operating Lever -Pivot Pin	1		41	UG. 2469	BOLT-Pivot-Operating Lever-Drag Link	2	
20	UA. 103/Z	SETSCREW-Retaining Plate to Cruciform	1		42	UA. 1251/Z	WASHER-Plain-Bolt	2	
21	UA. 1251/Z	WASHER-Plain-Setscrew	1		43	UA. 301/Z	NUT-Bolt	2	
22	UG. 2576	ASSEMBLY-Operating Levers and Distance Tube	1		44	UG. 2509	SPRING-Pull Off-Servo Operating Lever	1	
23	UG. 2447	PIN-Pivot-Operating Lever	1		45	UG. 4396	LINK-Pull Off Spring-Servo Operating Lever	1	RH Cars only
24	UG. 2994	LEVER-Balance-Master Cylinder	2			CD. 2026	KIT-Service-1" Master Cylinder	1	
25	UG. 2449	PIN-Pivot-Balance Lever	1			CD. 2027	KIT-Service-3/4" Master Cylinder	1	
26	RF. 7364	ROLLER-Needle-Balance Lever	46						
27	UG. 2448	PIECE-Distance-Pivot Pin-Balance Lever	1						
28	UG. 2466	TRUNNION-Upper-Master Cylinder	1						
29	UG. 2473	LOCKNUT-Trunnion-Upper	1						
30	UG. 2484	TRUNNION-Lower-Master Cylinder	1						
31	UG. 2485	LOCKNUT-Trunnion-Lower	1						

FOR CHASSIS NUMBERS SEE OVERLEAF

BRAKES-
HYDRAULIC MASTER CYLINDERS


J.2/1

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,



BENTLEY S3, BENTLEY CONTINENTAL S3.

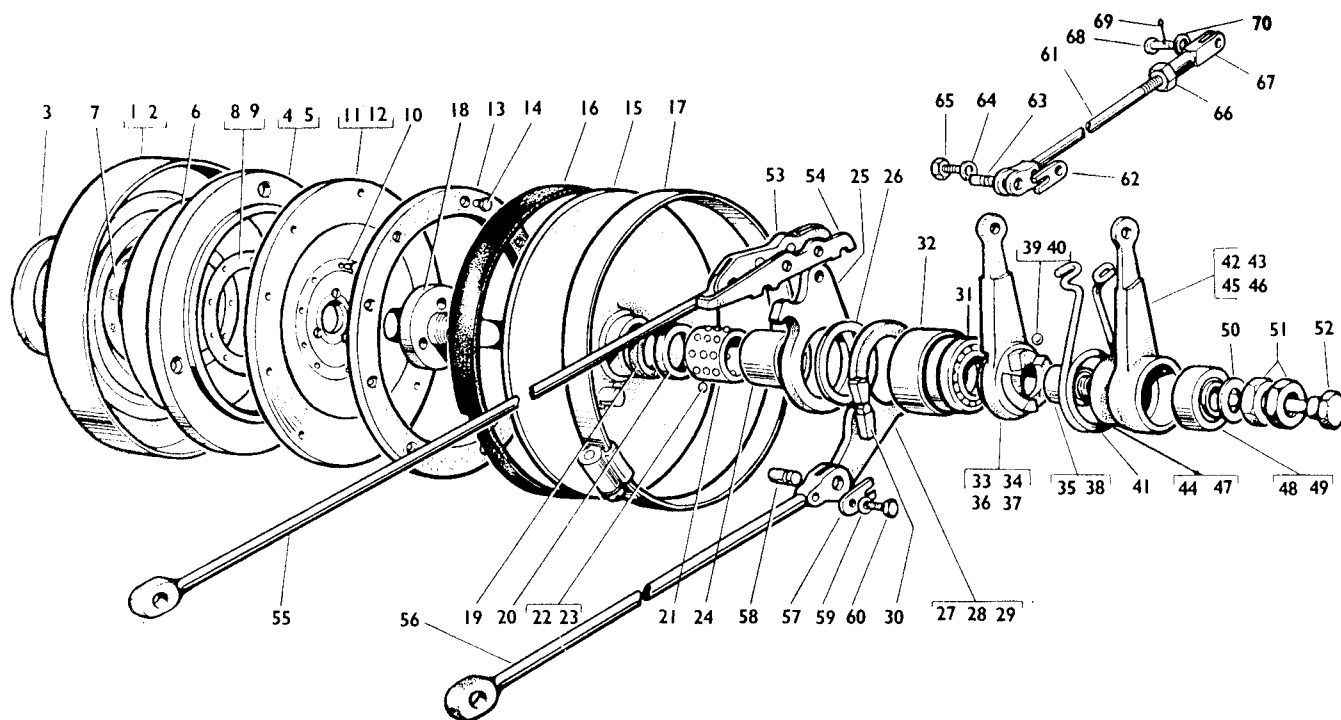

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
1	UG.3528	ASSEMBLY-Spring Plate and Washer	1		36	UG.2586	ASSEMBLY-Operating Lever-inner	1	
2	UG.3053	†PLATE-Spring	1		37	UG.2580	†LEVER	1	Continental
3	UG.2936	WASHER-Sealing	1		38	GB.3546	BUSH-Lever	1	
4	UG.4374	ASSEMBLY-Inertia Ring and Driving Plate	1		39	RG.6131	BALL-Race	3	Alternative
5	RG.4767	RING-Inertia	1		40	RG.6594	BALL-Race	3	
6	RG.4220	WASHER-Belleville	1		41	UG.3846	SPRING-Torsion-Cam Levers	1	Other than Continental
7	RG.4221	PLATE-Backing	1		42	UG.3549	ASSEMBLY-Operating Lever-Outer	1	
8	RG.7148	WASHER-Adjusting- (.003" thick)	1	To suit	43	UG.3551	†LEVER	1	
9	RG.7149	WASHER-Adjusting- (.005" thick)	1		44	GB.3545	BUSH-Lever	1	Continental
10	KB.13126/R	RIVET	9		45	UG.2587	ASSEMBLY-Operating Lever-Outer	1	
11	UG.4373	ASSEMBLY-Plates and Lining	1		46	UG.2581	†LEVER	1	
12	UG.3675	PLATE-Driving	1		47	GB.3545	BUSH-Lever	1	Alternative
13	UG.4372	LINING-Friction	1		48	RG.4450	BEARING-Outer	1	
14	UG.3849	RIVET-Lining to Plate	9		49	RG.5656	BEARING-Outer	1	
15	UG.3066	ASSEMBLY-Pressure Plate and Pin	1		50	UG.1136	WASHER-Plain-Servo Shaft	1	
16	UG.2140	BAND-Sealing	1		51	UA.356/Z	NUT-Servo Shaft	2	
17	UG.3069	CLIP-Jubilee	1		52	UG.775	SETSCREW-Servo Retaining	1	
18	UG.805	SHAFT-Servo	1		53	RG.8028	LINK-Forward Take-Off Lever	1	
19	D54399	WASHER-Oil Retaining-Felt	1		54	RG.8027	LEVER-Stop	1	
20	GB.4171	WASHER-Oil Retaining-Steel	1		55	UG.2790	LINK-Drag-Forward	1	
21	GB.3898	CAGE-Ball	1		56	UG.2791	LINK-Drag-Reverse	1	
22	RG.6209	BALL-Race	24	Alternative	57	GB.5085	PLATE-Locking-Reverse Drag link	1	
23	RG.6593	BALL-Race	24		58	GB.5086	PIN-Locating-Drag Links	3	
24	GB.4061	BALLRACE	1		59	K4404/Z	WASHER-Plain-Locating Pins	3	
25	UG.2554	LEVER-Forward Take-Off	1		60	KC.151/Z	SETSCREW-Locating Pins	3	
26	GB.5083	WASHER-Brake Actuating Lever	1		61	UG.2788	ROD-Brake	1	
27	UG.2446	ASSEMBLY-Reverse Take-Off Lever	1		62	GB.5085	PLATE-Locking-Brake Rod	2	
28	UG.2445	†LEVER-Reverse Take-Off	1		63	GB.5086	PIN-Locating Plate	2	
29	RG.9022	†CUP-Bump Rubber	1		64	K4404/Z	WASHER-Plain-Locking Pin	2	
30	RG.8021	RUBBER-Bump	1		65	UA.1501/Z	SETSCREW-Locking Pin	2	
31	GB.3501	BEARING-Thrust-Cam Levers	1		66	UA.351/Z	NUT-Jaw-Brake Rod	1	
32	RG.3939	COVER-Dust-Thrust Bearing	1		67	UG.1184	JAW-Brake Rod to Output Lever	1	
33	UG.3548	ASSEMBLY-Operating Lever-Inner	1	Other than Continental	68	K6507/Z	PIN-Jaw	1	
34	UG.3550	†LEVER	1		69	K4608/Z	PIN-Split-Pin-Jaw	1	
35	GB.3546	BUSH-Lever	1		70	UR.2630	WASHER-Tension-Brake Lever Joint	1	

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

BRAKES-
SERVO MOTOR AND
CONNECTING RODS


J.3
Amendment 1.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,



BENTLEY S3, BENTLEY CONTINENTAL S3.

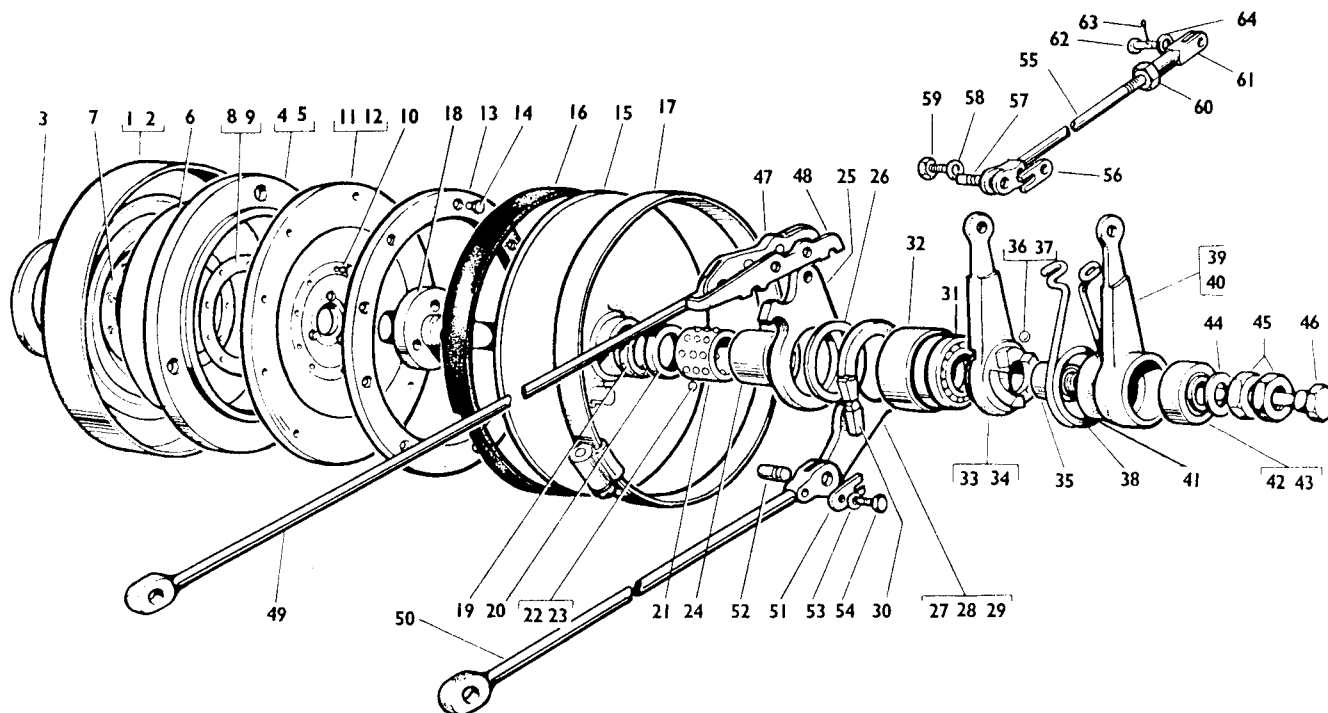

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
1	UG.3528	ASSEMBLY-Spring Plate and Washer	1		38	UG.3846	SPRING-Torsion-Cam Levers	1	
2	UG.3053	†PLATE-Spring	1		39	UG.3549	ASSEMBLY-Operating Lever-Outer	1	
3	UG.2936	WASHER-Sealing	1		40	UG.3551	†LEVER	1	
4	UG.4374	ASSEMBLY-Inertia Ring and Driving Plate	1		41	GB.3545	BUSH-Lever	1	
5	RG.4767	RING-Inertia	1		42	RG.4450	BEARING-Outer	1	
6	RG.4220	WASHER-Bellville	1		43	RG.5656	BEARING-Outer	1	
7	RG.4221	PLATE-Backing	1		44	UG.1136	WASHER-Plain-Servo Shaft	1	
8	RG.7148	WASHER-Adjusting- (.003" thick)	1		45	UA.356/Z	NUT-Servo Shaft	2	
9	RG.7149	WASHER-Adjusting- (.005" thick)	1	To suit	46	UG.775	SETSCREW-Servo Retaining	1	
10	KB.13126/R	RIVET	9		47	RG.8028	LINK-Forward Take-Off Lever	1	
11	UG.4373	ASSEMBLY-Plates and Lining	1		48	RG.8027	LEVER-Stop	1	
12	UG.3675	PLATE-Driving	1		49	UG.2790	LINK-Drag-Forward	1	
13	UG.4372	LINING-Friction	1		50	UG.2791	LINK-Drag-Reverse	1	
14	UG.3849	RIVET-Lining to Plate	9		51	GB.5085	PLATE-Locking-Reverse Drag Link	1	
15	UG.3066	ASSEMBLY-Pressure Plate and Pin	1		52	GB.5086	PIN-Locating-Drag Links	3	
16	UG.2140	BAND-Sealing	1		53	K4404/Z	WASHER-Plain-Locating Pins	3	
17	UG.3069	CLIP-Jubilee	1		54	KC151/Z	SETSCREW-Locating Pins	3	
18	UG.805	SHAFT-Servo	1		55	UG.2788	ROD-Brake	1	
19	D54399	WASHER-Oil Retaining-Felt	1		56	GB.5085	PLATE-Locking-Brake Rod	2	
20	GB.4171	WASHER-Oil Retaining-Steel	1		57	GB.5086	PIN-Locating-Drag Links	3	
21	GB.3898	CAGE-Ball	1		58	K4404/Z	WASHER-Plain-Locating Pins	3	
22	RG.6209	BALL-Race	24		59	UA.1501/Z	SETSCREW-Locking Pin	2	
23	RG.6593	BALL-Race	24	Alternative	60	UA.351/Z	NUT-Jaw-Brake Rod	1	
24	GB.4061	BALLRACE	1		61	UG.1184	JAW-Brake Rod to Output Lever	1	
25	UG.2554	LEVER-Forward Take-Off	1		62	K6507/Z	PIN-Jaw	1	
26	GB.5083	WASHER-Brake Actuating Lever	1		63	K4608/Z	PIN-Split-Pin-Jaw	1	
27	UG.2446	ASSEMBLY-Reverse Take-Off Lever	1		64	UR.2630	WASHER-Tension-Brake Lever Joint	1	
28	UG.2445	†LEVER-Reverse Take-Off	1						
29	RG.8022	†CUP-Bump Rubber	1						
30	RG.8021	RUBBER-Bump	1						
31	GB.3501	BEARING-Thrust-Cam Levers	1						
32	RG.3939	COVER-Dust-Thrust Bearing	1						
33	UG.3548	ASSEMBLY-Operating Lever-Inner	1						
34	UG.3550	†LEVER	1						
35	GB.3546	BUSH-Lever	1						
36	RG.6131	BALL-Race	3						
37	RG.6594	BALL-Race	3	Alternative					

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

BRAKES-

SERVO MOTOR AND CONNECTING RODS

J.3/1

PARTN° 203 FFS
Alternative 88503


PARTS LIST

ROLLS-ROYCE SILVER CLOUD III,

BENTLEY S3, BENTLEY CONTINENTAL S3,



Printed in England

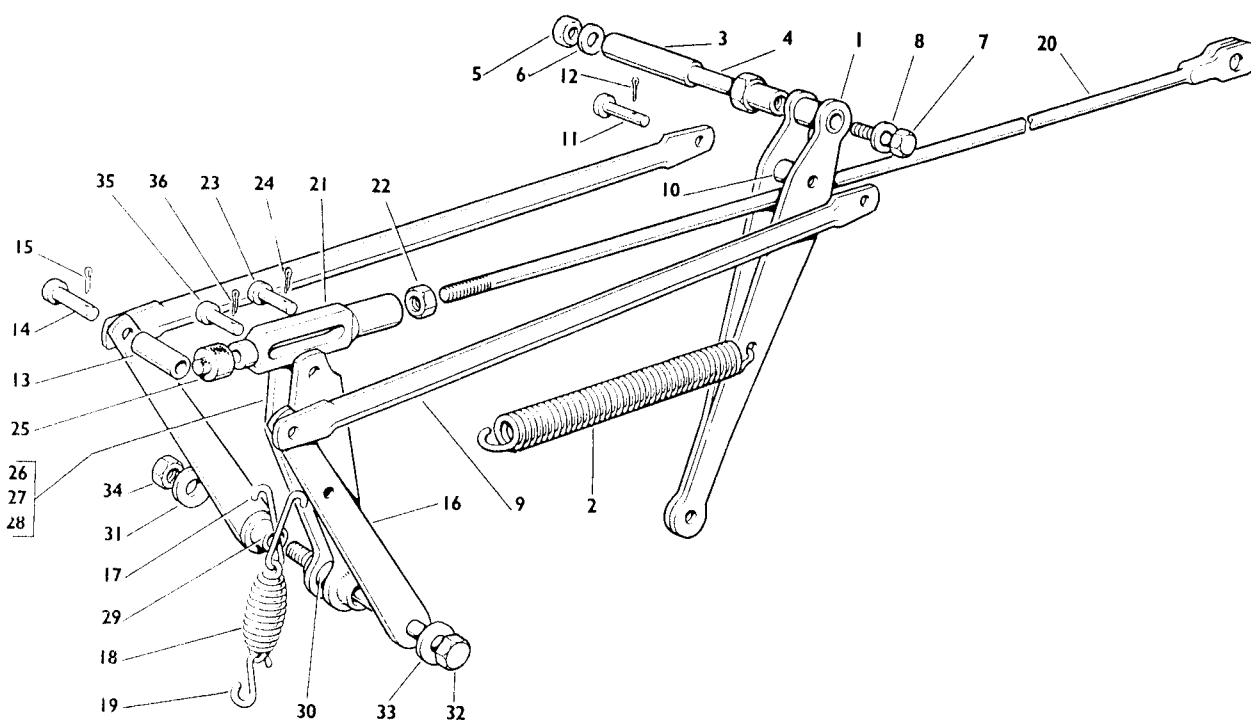

Ref.	Part No.	Description	No. off	Remarks	Ref.	Part No.	Description	No. off	Remarks
1	UG.4083	ASSEMBLY-Operating Lever-Handbrake Linkage	1						
2	UB.1534	SPRING-Handbrake Return	1						
3	UG.925	PIECE-Distance-Operating Lever	1						
4	UG.1206	PIN-Fulcrum-Operating Lever	1						
5	UA.352/Z	NUT-Fulcrum Pin	1						
6	UA.1252/Z	WASHER-Plain-Fulcrum Pin	1						
7	UA.102/Z	SETSCREW-Fulcrum Pin	1						
8	UA.1251/Z	WASHER-Plain-Set screw	1						
9	UG.1200	LEVER-Connecting	2						
10	UG.1199	PIECE-Distance-Levers	1						
11	K.6515/Z	PIN-Connecting Levers	1						
12	K.4608/Z	PIN-Split	1						
13	UG.913	PIECE-Distance-Levers	1						
14	K.6513/Z	PIN-Connecting Levers	1						
15	K.4608/Z	PIN-Split	1						
16	UG.3042	LEVER-Operating-Rear Handbrake Mechanism	2						
17	UG.917	HOOK-Spring-Anti-Rattle	1						
18	RE.17032	SPRING-Anti-Rattle-Lever	1						
19	UG.1266	HOOK-Spring-Anti-Rattle	1						
20	UG.2789	ROD-Servo Cam to Linkage	1						
21	UG.1264	LINK-Rod	1						
22	UA.351/Z	NUT-Link	1						
23	K.6508/Z	PIN-Link	1						
24	K.4608/Z	PIN-Split	1						
25	UR.1234	RUBBER-Off Stop	1						
26	UG.3031	ASSEMBLY-Fulcrum Lever	1						
27	UG.915	† LEVER-Fulcrum	1						
28	UG.3032	† BOSS-Fulcrum Lever	1						
29	RF.7381	BUSH-Oilite	2						
30	UG.3033	PIECE-Distance-Pivot	1						
31	UG.900	WASHER-Fulcrum Lever-Pivot	2						
32	UA.162/Z	BOLT-Lever to Pivot Bracket	1						
33	UA.1252/Z	WASHER-Plain-Bolt	1						
34	UA.352/Z	NUT-Bolt	1						
35	K.6508/Z	PIN-Rod to Lever	1						
36	K.4608/Z	PIN-Split	1						

Silver Cloud III—From SAZ.1 to 61 incl. Silver Cloud III, LWB—From CAL.1
 Bentley S.3— From B.2.AV to 26 incl. Bentley S.3, LWB— From BAL.2
 Silver Cloud III—From SCX.1. Bentley S.3— From B.2.CN
 Bentley Continental S.3—From BC.2.XA

BRAKES -


Items marked † are not supplied as individual parts

REAR BRAKE INTERMEDIATE LINKAGE

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

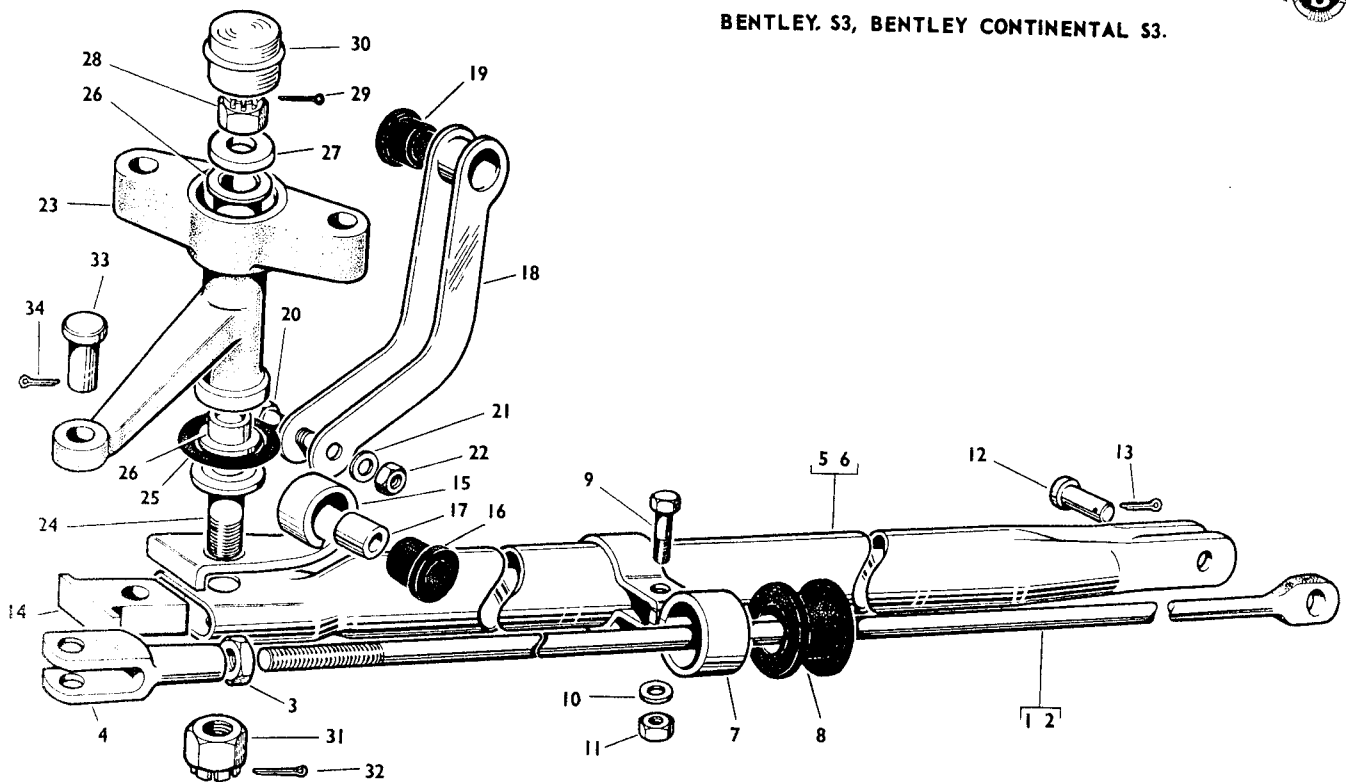

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
1	UG.3776	ROD-Brake-Fulcrum Bracket to Equalising Lever	1	123" W/Base Cars	30	UG.898	CAP-Equaliser Lever	1	
2	UG.3777	ROD-Brake-Fulcrum Bracket to Equalising Lever	1	127" W/Base Cars	31	RE.22436	NUT-Castellated-Stud-Equaliser Lever	1	
3	UA.351/Z	LOCKNUT-Jaw	1		32	K4602/Z	PIN-Split-Nut	1	
4	UG.1184	JAW-Brake Rod	1		33	K6507/Z	PIN-Equaliser Lever-Jaw-Brake Rod	1	
5	UG.3060	BAR-Equaliser	1	123" W/Base Cars	34	K4608/Z	PIN-Split-Pin	1	
6	UG.3780	BAR-Equaliser	1	127" W/Base Cars					
7	UG.1054	BRACKET-Steady-Equaliser Bar	1						
8	RG.4204	BUSH-Steady Bracket	1						
9	KC.173/Z	BOLT-Steady Bracket	1						
10	K4404/Z	WASHER-Plain-Bolt	1						
11	K4307/Z	NUT-Bolt	1						
12	K6509/Z	PIN-Equaliser to Bracket	1						
13	K4608/Z	PIN-Split-Pin	1						
14	UG.3153	PIECE-Distance-Equaliser Bar	1						
15	UG.3771	SHACKLE-Equaliser Lever	1						
16	RG.5085	BUSH-Rubber-Shackle	2						
17	UG.895	PIECE-Distance-Shackle	1						
18	UG.891	ASSEMBLY-Shackle Plates	1						
19	RG.5085	BUSH-Rubber-Shackle	2						
20	KC.158/Z	BOLT-Shackle Plates	1						
21	K4404/Z	WASHER-Plain-Bolt	1						
22	K4307/Z	NUT-Bolt	1						
23	UG.897	LEVER-Equaliser	1						
24	UG.3058	STUD-Equaliser Lever	1						
25	FB.3940	RING-Sealing-Equaliser Lever	1						
26	RF.7381	BUSH-Oilite	2						
27	UG.3059	WASHER-Stud-Equaliser Lever	1						
28	UA.1101/Z	NUT-Castellated-Stud-Equaliser Lever	1						
29	KA.4602/Z	PIN-Split-Nut	1						

FOR CHASSIS NUMBERS SEE OVERLEAF

BRAKES-


REAR BRAKE EQUALISING GEAR

J.5.
Amendment. 1.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

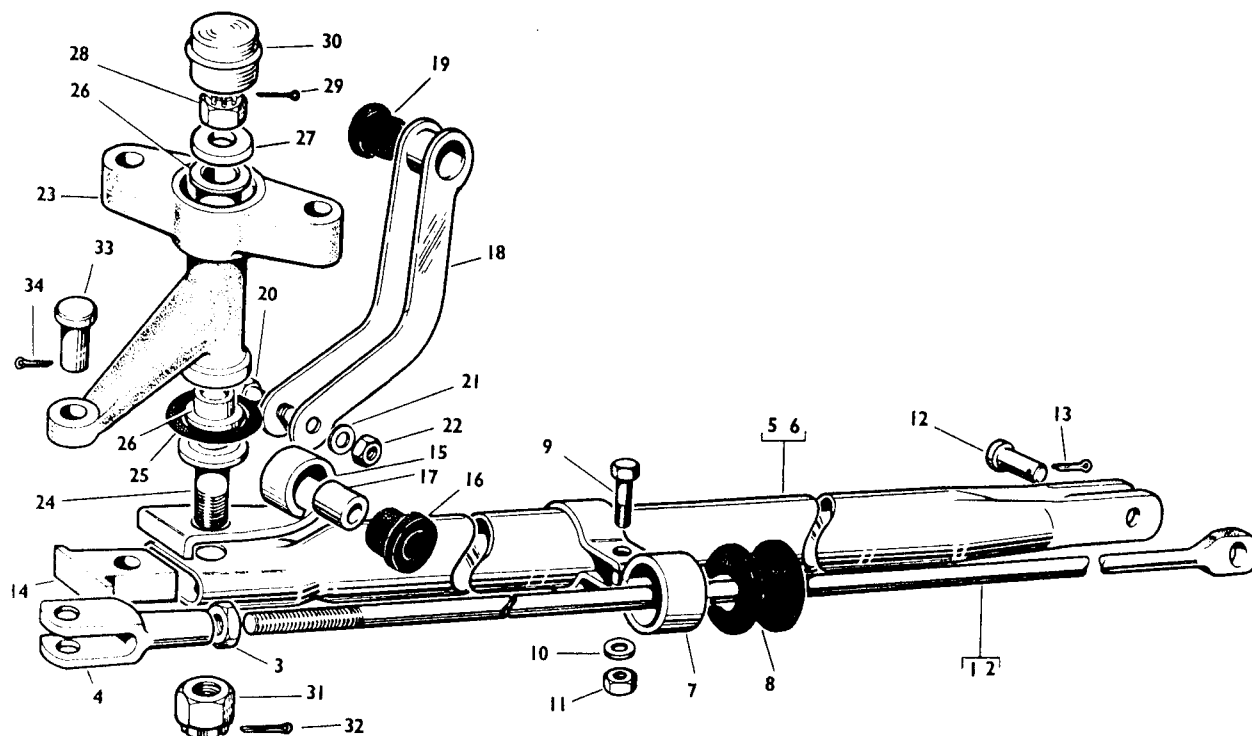

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
1	UG.3776	ROD-Brake-Fulcrum Bracket to Equalising Lever	1	123" W/Base Cars	33	K6507/Z	PIN-Equaliser Lever-Jaw-Brake Rod	1	
2	UG.3777	ROD-Brake-Fulcrum Bracket to Equalising Lever	1	127" W/Base Cars	34	K4608/Z	PIN-Split-Pin	1	
3	UA.351/Z	LOCKNUT-Jaw	1						
4	UG.1184	JAW-Brake Rod	1						
5	UG.3060	BAR-Equaliser	1	123" W/Base Cars					
6	UG.3780	BAR-Equaliser	1	127" W/Base Cars					
7	UG.1054	BRACKET-Steady-Equaliser Bar	1						
8	RG.4204	BUSH-Steady Bracket	1						
9	KC.173/Z	BOLT-Steady Bracket	1						
10	K4404/Z	WASHER-Plain-Bolt	1						
11	K4307/Z	NUT-Bolt	1						
12	K6509/Z	PIN-Equaliser to Bracket	1						
13	K4608/Z	PIN-Split-Pin	1						
14	UG.3153	PIECE-Distance-Equaliser Bar	1						
15	UG.3771	SHACKLE-Equaliser Lever	1						
16	RG.5085	BUSH-Rubber-Shackle	2						
17	UG.895	PIECE-Distance-Shackle	1						
18	UG.891	ASSEMBLY-Shackle Plates	1						
19	RG.5085	BUSH-Rubber-Shackle	2						
20	KC.158/Z	BOLT-Shackle Plates	1						
21	K4404/Z	WASHER-Plain-Bolt	1						
22	K4307/Z	NUT-Bolt	1						
23	UG.4397	LEVER-Equaliser	1						
24	UG.3058	STUD-Equaliser Lever	1						
25	FB.3940	RING-Sealing-Equaliser Lever	1						
26	RF.7381	BUSH-Oilite	2						
27	UG.3059	WASHER-Stud-Equaliser Lever	1						
28	UA.1101/Z	NUT-Castellated-Stud-Equaliser Lever	1						
29	KA.4602/Z	PIN-Split-Nut	1						
30	UG.898	CAP-Equaliser Lever	1						
31	RE.22436	NUT-Castellated-Stud-Equaliser Lever	1						
32	K4602/Z	PIN-Split-Nut	1						

Silver Cloud III- From SDW.485 Onwards. Bentley S.3- From B.738CN Onwards
Silver Cloud III LWB- From CCL.43 Onwards. Bentley S.3 LWB- From BAL.18 Onwards
Bentley Continental S.3- From BC.100XC Onwards

**BRAKES-
REAR BRAKE EQUALISING GEAR**

J.5/1.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,



BENTLEY S3, BENTLEY CONTINENTAL S3.

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Rem
1	UG.2555	ASSEMBLY-Water Excluder	2						
2	UG.2299	ASSEMBLY-Carrier Plate	2						
3	UG.3409	ASSEMBLY-Steady Post	2						
4	UG.2325	STEADY POST-Shakeback Stop	2						
5	UA.352/Z	NUT-Steady Posts	4						
6	UG.1169	CAP-Dust-Water Excluder-Steady Posts	4						
7	UG.803	BOLT-Carrier Plate to Bearing Housing	6						
8	UG.1166	ECCENTRIC-Adjusting-Carrier	2						
9	UA.302/Z	NUT-Carrier Plate to Bearing Housing	8						
10	UA.1252/Z	WASHER-Plain-Carrier Plate to Bearing Housing	8						
11	K.1904/Z	SCREW-Excluder to Carrier	10						
12	K.4404/Z	WASHER-Plain-Screw	12						
13	UG.3682	ASSEMBLY-Wheel Cylinder-RH	1						
14	UG.3768	ASSEMBLY-Draw Link-RH	1						
15	UG.3681	ASSEMBLY-Wheel Cylinder-LH	1						
16	UG.3665	ASSEMBLY-Draw Link-LH	1						
		The following items are common to Right and Left Hand Assemblies :-							
17	UG.3683	ASSEMBLY-Cylinder Unit	1		59	UG.3089	ASSEMBLY-Web and Rim	1	
18	UG.1146	SPRING-Cylinder	1		60	UG.2071	LINING-(Ferodo)-Brake Shoe	1	
19	UG.3684	ASSEMBLY-Seal Spreader	2		61	UG.3114	RIVET-Lining	12	Darkened GG 1046
20	UG.3687	SEAL-Cylinder	2		62	UG.3658	COLLAR-Shakeback Stop	1	
21	UG.3689	PISTON-Cylinder	2		63	UG.3659	NUT-Shakeback Stop	1	Used In Sets
22	UG.3688	COVER-Dust	2		64	UG.3222	WASHER-Friction-Shakeback Stop	2	
23	UG.3690	BODY-Cylinder	1		65	UG.2032	SPRING-Shakeback Stop	1	
24	UG.1227	GUIDE-Tappet	1		66	UG.1262	WASHER-Clamping-Shakeback Stop	1	
25	UG.3462	PIECE-Distance-Tappet Guide	4		67	UG.3478	ASSEMBLY-Lining and Shoe-Leading	2	
26	UG.1228	PLATE-Sandwich	1		68	UG.3089	ASSEMBLY-Web and Rim	2	
27	UG.2068	STUD-Body to Tappet Guide	4		69	UG.2071	LINING-(Ferodo)-Brake Shoe	2	
28	K.4404/Z	WASHER-Plain-Stud	4		70	UG.3114	RIVET-Lining	24	
29	K.9006/Z	WASHER-Spring-Stud	4		71	UG.2236	LEVER-Compression Link	2	
30	K4307/Z	NUT-Stud	4		72	K6504/Z	PIN-Lever to Shoe	2	
31	UG.863	ROLLER-Tappet Guide	2		73	K4608/Z	PIN-Split-Pin	2	
32	UG.861	TAPPET	2		74	UG.864	LINK-Compression	2	
33	UG.1181	BALL VALVE-Bleed Screw	1		75	UG.2237	PIN-Centre Lever to Compression Link	2	
34	UG.1175	SCREW-Bleed	1		76	K4602/Z	PIN-Split-Pin	2	
35	UG.2427	CAP-Dust-Bleed Screw	1		77	UG.1173	LINK-Tension-Lever to Shoe	4	
36	UG.3774	ASSEMBLY-Brake Rod-RH	1		78	K6508/Z	PIN-Lever to Tension Link	2	
37	UG.3775	ASSEMBLY-Brake Rod-LH	1		79	K4608/Z	PIN-Split-Pin	2	
38	K.6504/Z	PIN-Brake Rod to Draw Link	2		80	K6504/Z	PIN-Tension Link to Shoe	2	
39	K4608/Z	PIN-Split-Pin	2		81	K4407/Z	WASHER-Plain-Pin	2	
40	K6513/Z	PIN-Brake Rod to Compensator	2		82	K4608/Z	PIN-Split-Pins-Inter Linkage	2	
41	K4608/Z	PIN-Split-Pin	2		83	UG.1171	HOOK-Spring-Eccentric	2	
42	UG.1174	BOOT-Brake Rod End	2		84	UG.1153	ASSEMBLY-Pull Off Spring	2	
43	RE.17032	SPRING-Brake Rod to Water Excluder	2		85	UG.1154	SPRING-Pull Off	2	
44	RG.6025	LINK-Spring	4		86	UG.1155	LEVER-Spring	2	
45	UG.2549	ASSEMBLY-Cover Plate and Rubber Seal	1		87	UG.1552	SPRING-Adjuster	2	
46	UG.2301	SEAL-Cover Plate	2			CD.1607	SERVICE KIT		
47	K.1910/Z	SCREW-Cover Plate to Carrier	2						
48	K4404/Z	WASHER-Plain-Screw	2						
49	KC.178/Z	SETSCREW-Cover Plate to Cylinder	2						
50	KB.7104/R	WASHER-Tab-Setscrew	2						
51	UG.2302	PIECE-Distance-Cover Plate to Cylinder	4						
52	UG.4154	ASSEMBLY-Adjuster Unit	2						
53	UG.1376	SETSCREW-Adjuster Unit to Carrier Plate	4						
54	UA.1253/Z	WASHER-Plain-Setscrew	4						
55	GB.4327	SEAL-Adjuster to Water Excluder	2						
56	UG.1367	PIECE-Distance-Excluder to Carrier	4						
57	UG.3480	ASSEMBLY-Lining, Shoe and Shakeback Stop-Trailing-RH	1						
58	UG.3482	ASSEMBLY-Lining, Shoe and Shakeback Stop-Trailing-LH	1						

FOR CHASSIS NUMBERS SEE OVERLEAF


BRAKES-
REAR BRAKES

J.6.
Amendment 1.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD III,

BENTLEY S 3, BENTLEY CONTINENTAL S 3,

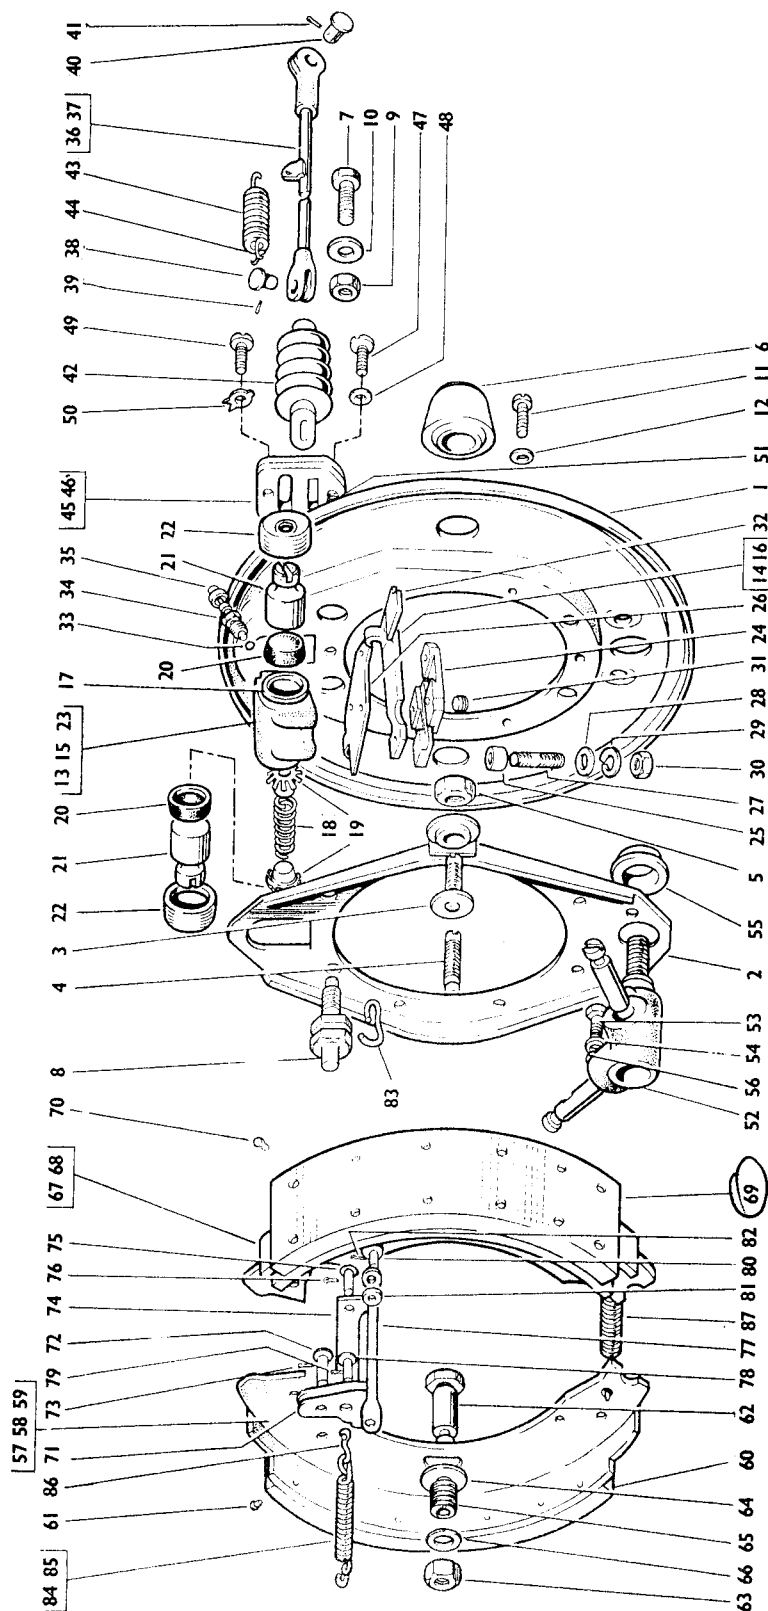

BRAKES -

REAR BRAKES

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111.

BENTLEY S3, BENTLEY CONTINENTAL S3.



Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
1	UG.2555	ASSEMBLY-Water Excluder	2						
2	UG.2299	ASSEMBLY-Carrier Plate	2						
3	UG.3409	ASSEMBLY-Steady Post	2						
4	UG.2325	STEADY POST-Shakeback Stop	2						
5	UA.352/Z	NUT-Steady Posts	4						
6	UG.1169	CAP-Dust-Water Excluder-Steady Posts	4						
7	UG.803	BOLT-Carrier Plate to Bearing Housing	6						
8	UG.1166	ECCENTRIC-Adjusting-Carrier	2						
9	UA.302/Z	NUT-Carrier Plate to Bearing Housing	8						
10	UA.1252/Z	WASHER-Plain-Carrier Plate to Bearing Housing	8						
11	K1904/Z	SCREW-Excluder to Carrier	10						
12	K4404/Z	WASHER-Plain-Screw	12						
13	UG.3682	ASSEMBLY-Wheel Cylinder-RH	1						
14	UG.3768	ASSEMBLY-Draw Link-RH	1						
15	UG.3681	ASSEMBLY-Wheel, Cylinder-LH	1						
16	UG.3665	ASSEMBLY-Draw Link-LH	1						
		The following items are common to Right and Left Hand Assemblies:-							
17	UG.3683	ASSEMBLY-Cylinder Unit	1		59	UG.4425	ASSEMBLY-Lining and Shoe	1	
18	UG.1146	SPRING-Cylinder	1		60	UG.4412	ASSEMBLY-Web and Rim	1	
19	UG.3684	ASSEMBLY-Seal Spreader	2		61	UG.4407	LINING-(Ferodo)-Brake Shoe	1	
20	UG.3687	SEAL-Cylinder	2		62	UG.3114	RIVET-Lining	12	
21	UG.3689	PISTON-Cylinder	2		63	UG.3658	COLLAR-Shakeback Stop	1	Used in Sets
22	UG.3688	COVER-Dust	2		64	UG.3659	NUT-Shakeback Stop	1	
23	UG.3690	BODY-Cylinder	1		65	UG.3222	WASHER-Friction-Shakeback Stop	2	
24	UG.1227	GUIDE-Tappet	1		66	UG.2032	SPRING-Shakeback Stop	1	
25	UG.3462	PIECE-Distance-Tappet Guide	4		67	UG.1262	WASHER-Clamping-Shakeback Stop	1	
26	UG.1228	PLATE-Sandwich	1		68	UG.4423	ASSEMBLY-Lining and Shoe-(Leading)	2	
27	UG.2068	STUD-Body to Tappet Guide	4		69	UG.4412	ASSEMBLY-Web and Rim	2	
28	K4404/Z	WASHER-Plain-Stud	4		70	UG.4407	LINING-(Ferodo)-Brake Shoe	2	
29	K9006/Z	WASHER-Spring-Stud	4		71	UG.3114	RIVET-Lining	24	
30	K4307/Z	NUT-Stud	4		72	UG.2236	LEVER-Compression Link	2	
31	UG.863	ROLLER-Tappet Guide	2		73	K6504/Z	PIN-Lever to Shore	2	
32	UG.861	TAPPET	2		74	K4608/Z	PIN-Split-Pin	2	
33	UG.1181	BALL VALVE-Bleed Screw	1		75	UG.864	LINK-Compression	2	
34	UG.1175	SCREW-Bleed	1		76	UG.2237	PIN-Centre Lever to Compression Link	2	
35	UG.2427	CAP-Dust-Bleed Screw	1		77	K4602/Z	PIN-Split-Pin	2	
36	UG.3774	ASSEMBLY-Brake Rod-RH	1		78	UG.1173	LINK-Tension-Lever to Shoe	4	
37	UG.3775	ASSEMBLY-Brake Rod-LH	1		79	K6508/Z	PIN-Lever to Tension Link	2	
38	K6504/Z	PIN-Brake Rod to Draw Link	2		80	K4608/Z	PIN-Split-Pin	2	
39	K4608/Z	PIN-Split-Pin	2		81	K6504/Z	PIN-Tension Link to Shoe	2	
40	K6513/Z	PIN-Brake Rod to Compensator	2		82	K4407/Z	WASHER-Plain-Pin	2	
41	K4608/Z	PIN-Split-Pin	2		83	K4608/Z	PIN-Split-Pins-Inter Linkage	2	
42	UG.1174	BOOT-Brake Rod End	2		84	UG.1171	HOOK-Spring-Eccentric	2	
43	RE.17032	SPRING-Brake Rod to Water Excluder	2		85	UG.1153	ASSEMBLY-Pull Off Spring	2	
44	RG.6025	LINK-Spring	4		86	UG.1154	SPRING-Pull Off	2	
45	UG.2549	ASSEMBLY-Cover Plate and Rubber Seal	1		87	UG.1155	LEVER-Spring	2	
46	UG.2301	SEAL-Cover Plate	2		88	UG.1552	SPRING-Adjuster	2	
47	K.1910/Z	SCREW-Cover Plate to Carrier	2			CD.1607	SERVICE KIT		
48	K.4404/Z	WASHER-Plain-Screw	2						
49	KC.178/Z	SETSCREW-Cover Plate to Cylinder	2						
50	KB.7104/Z	WASHER-Tab-Setcrew	2						
51	UG.2302	PIECE-Distance-Cover Plate to Cylinder	4						
52	UG.4154	ASSEMBLY-Adjuster Unit	2						
53	UG.1376	SETSCREW-Adjuster Unit to Carrier Plate	4						
54	UA.1253/Z	WASHER-Plain-Setcrew	4						
55	GB.4327	SEAL-Adjuster to Water Excluder	2						
56	UG.1367	PIECE-Distance-Excluder to Carrier	4						
57	UG.4427	ASSEMBLY-Lining, Shoe and Shakeback Stop-Trailing-RH	1						
58	UG.4419	ASSEMBLY-Lining, Shoe and Shakeback Stop-Trailing-LH	1						

FOR CHASSIS NUMBERS SEE OVERLEAF

BRAKES-


REAR BRAKES

J.6/1

PARTS LIST

ROLLS-ROYCE SILVER CLOUD III,

BENTLEY S3, BENTLEY CONTINENTAL S3,

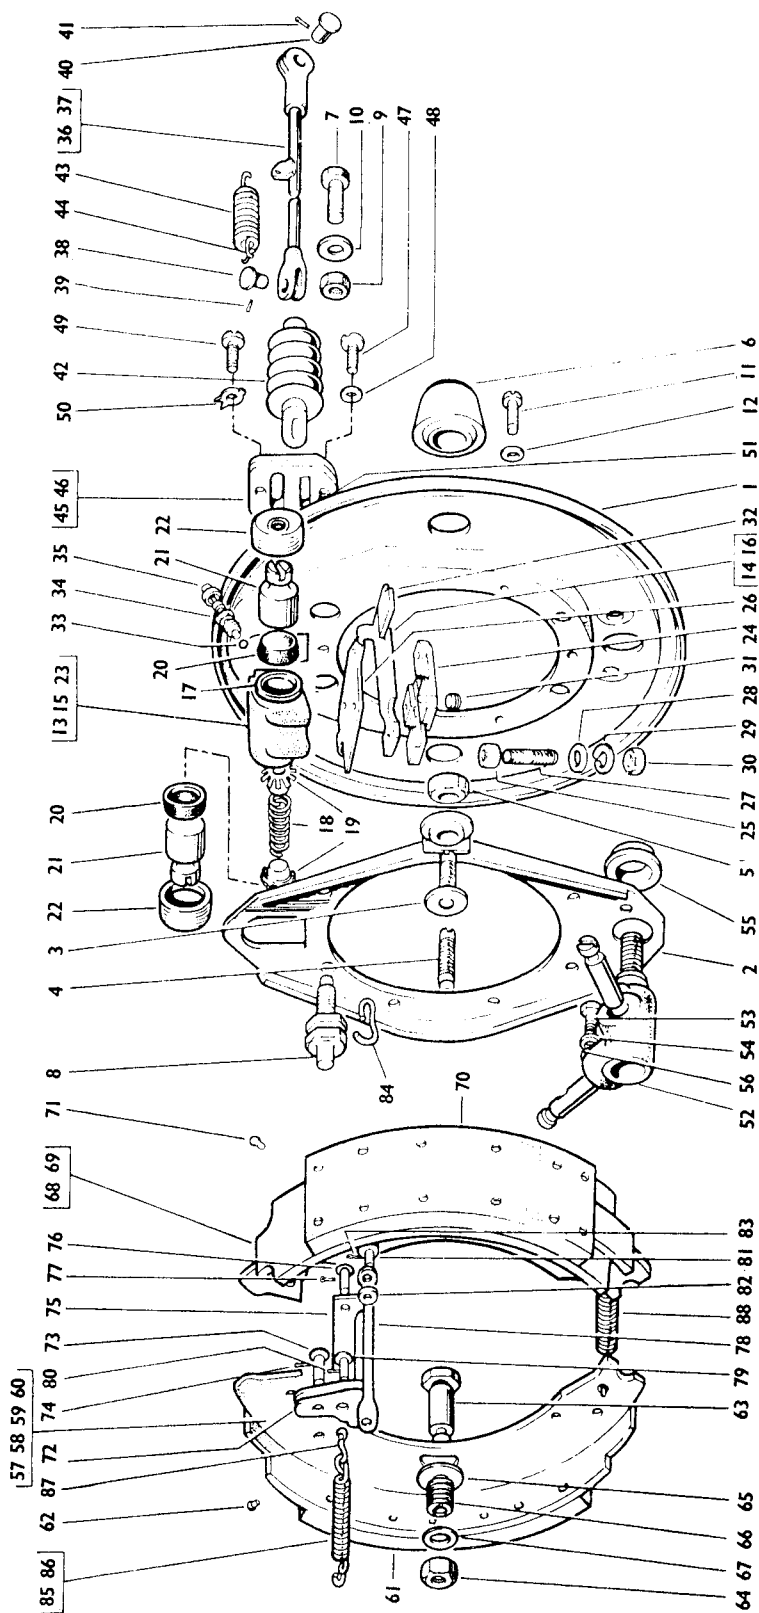


BRAKES-

REAR BRAKES

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

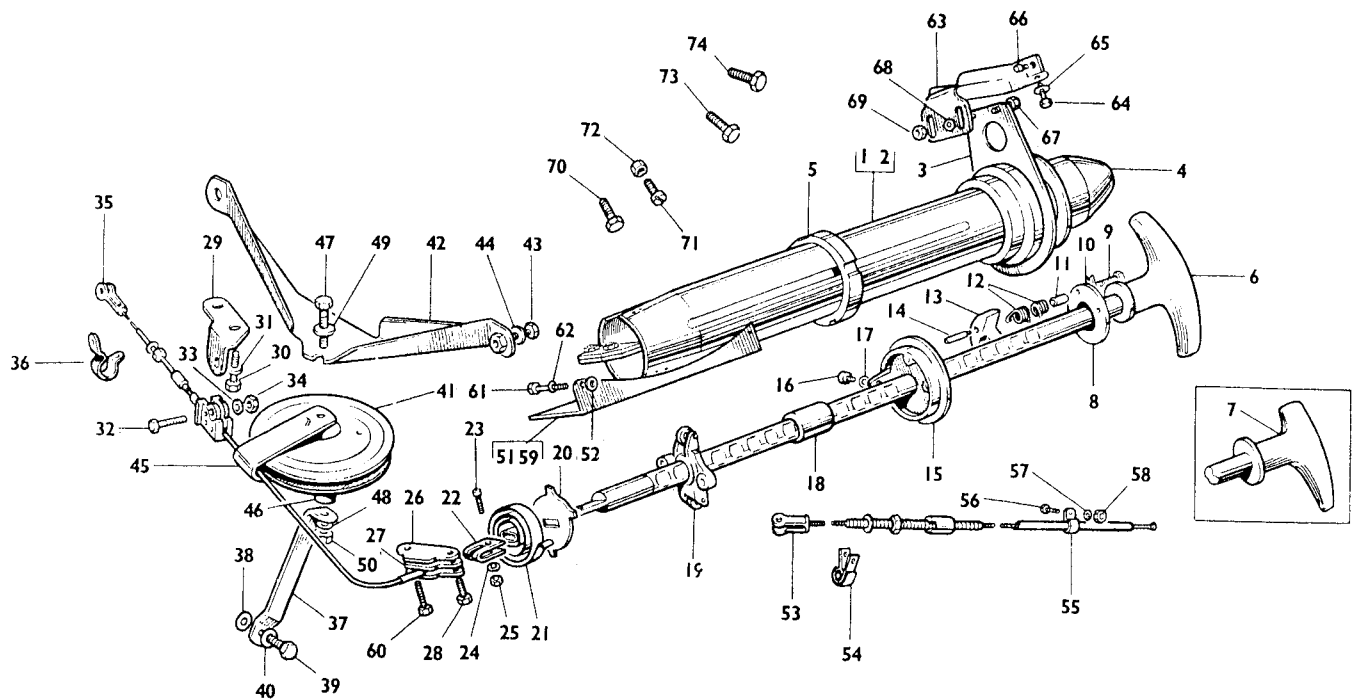

Ref.	Part No.	Description	No. off	Remarks	Ref.	Part No.	Description	No. off	Remarks
1	UG. 1873	ASSEMBLY-Tube-Twist Pull Handbrake	1	Other than RH Continental	41	UG. 1478	ASSEMBLY-Handbrake Pulley	1	
2	UG. 4153	ASSEMBLY-Tube-Twist Pull Handbrake	1	RH Continental	42	UG. 3696	BRACKET-Support-Handbrake Pulley	1	
3	UG. 1865	ASSEMBLY-Plate and Retaining Piece	1		43	UA. 1501/Z	SETSCREW-Support Bracket	2	
4	UG. 1839	ASSEMBLY-Cover	1		44	K. 4404/Z	WASHER-Plain-Setcrew	2	
5	UG. 1829	NUT-Ring	1		45	UG. 1476	SHIELD-Cable-Handbrake Pulley	1	LH Cars
6	UG. 1862	ASSEMBLY-Rod and Handle	1	Other than RH Continental	46	UG. 1475	TUBE-Distance-Handbrake Pulley	1	
7	UG. 4151	ASSEMBLY-Rod and Handle	1	RH Continental	47	UA. 108/Z	BOLT-Handbrake Pulley	1	
8	RG. 5326	PLATE-Cover	1		48	RG. 4833	WASHER-Plain-Bolt	1	
9	KC. 106/Z	SETSCREW-Cover Plate	1		49	UA. 1251/Z	WASHER-Plain-Bolt	1	
10	KB. 7103/R	WASHER-Tab-Setcrew	1		50	UA. 301/Z	NUT-Bolt	1	
11	RG. 5303	PIECE-Distance-Pawl Spring	1		51	UG. 1892	BRACKET-Lower Dashboard	1	
12	RG. 6208	SPRING-Pawl	1		52	FW. 337	WASHER-Packing-Bracket-LH Side	2	
13	RG. 5723	PAWL	2		53	UG. 3778	ASSEMBLY-Cable-Handbrake	1	
14	RG. 5325	PIN-Pawl	2		54	UD. 5288	CLIP-Handbrake Cable	1	
15	UG. 1823	CARRIER-Pawl	1		55	UG. 1431	CLIP-Handbrake Cable	1	
16	K. 1907/Z	SETSCREW-Tube to Carrier	1		56	UA. 1501/Z	BOLT-Clip	1	RH Cars
17	K. 4404/Z	WASHER-Plain-Setcrew	1		57	K. 4404/Z	WASHER-Plain-Bolt	1	
18	UG. 1821	SLEEVE-Stop	1		58	K. 4307/Z	NUT-Bolt	1	
19	UG. 1871	ASSEMBLY-Roller Carrier	1		59	UG. 1875	BRACKET-Lower-Dashboard	1	
20	UG. 1820	PLATE-Stop-Return Spring	1		60	UG. 1876	SETSCREW-Bracket	1	
21	UG. 1817	SPRING-Return	1		61	UA. 102/Z	SETSCREW-Bracket to Dash Side	2	
22	UG. 2350	CONNECTOR-Cable-Rod	1		62	UA. 1251	WASHER-Plain-Setcrew	2	
23	UA. 1551/Z	BOLT-Cable Connector-Rod	1		63	UG. 2964	BRACKET-Upper-Dash Crossmember	1	
24	K. 4404/Z	WASHER-Plain-Bolt	1		64	UA. 1501/Z	SETSCREW-Bracket to Crossmember	2	
25	K. 4307/Z	NUT-Bolt	1		65	K. 4404/Z	WASHER-Plain-Setcrew	2	
26	UG. 2351	CLAMP-Conduit	1		66	CS. 30541/Z	SCREW-Bracket to Dash	2	
27	UG. 1833	SPACER-Conduit Clamp	1		67	UA. 102/Z	BOLT-Retaining Plate to Support Bracket	2	
28	UA. 105/Z	BOLT-Conduit Clamp	1		68	UA. 2052/Z	WASHER-Plain-Bolt	2	
29	UG. 3694	BRACKET-Support-Conduit Abutment	1		69	UA. 301/Z	NUT-Bolt	2	
30	UA. 1501/Z	SETSCREW-Support Bracket	2		70	KC. 150/Z	SETSCREW-Blanking-Support Bracket	3	
31	K. 4404/Z	WASHER-Plain-Setcrew	2		71	UA. 2151/Z	SCREW-Blanking	1	RH Cars
32	UA. 105/Z	BOLT-Conduit Abutment	1		72	UA. 352/Z	NUT-Blanking	1	
33	UA. 1251/Z	WASHER-Plain-Bolt	2	LH Cars	73	UA. 2101/Z	SETSCREW-Blanking-Support Stay	1	
34	UA. 301/Z	NUT-Bolt	1		74	UA. 101/Z	SETSCREW-Blanking-Dash Side Panel	2	
35	UG. 3693	ASSEMBLY-Cable-Handbrake	1						
36	UG. 6097	CLIP-Handbrake Cable	1						
37	UG. 3695	STAY-Support-Handbrake Pulley	1						
38	RE. 4790	WASHER-Distance-Support Stay	1						
39	UA. 103/Z	SETSCREW-Support Stay	1						
40	UA. 1251/Z	WASHER-Plain-Setcrew	1						

FOR CHASSIS NUMBERS SEE OVERLEAF

Items marked † are not supplied as individual parts

BRAKES-
HANDBRAKE

PARTS LIST

ROLLS-ROYCE SILVER CLOUD III,

BENTLEY S3, BENTLEY CONTINENTAL S3.



Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remark
1	UG.1873	ASSEMBLY-Tube and Retaining Piece-Twist Pull Handbrake	1	Not required on RH 123" W/Base Coachbuilt Cars.	59	UG.4282	ASSEMBLY-Cable-Handbrake	1	
2	UG.4153	ASSEMBLY-Tube and Retaining Piece-Twist Pull Handbrake	1	Required on RH 123" W/Base Coachbuilt Cars.	60	UG.4283	BRACKET-Upper Pulley-Handbrake	1	
3	UG.1865	ASSEMBLY-Plate and Retaining Piece	1		61	UA.102/Z	SETSCREW-Pulley Mounting Bracket	2	
4	UG.1839	ASSEMBLY-Cover	1		62	UA.1251/Z	WASHER-Plain-Setscrew	2	
5	UG.1829	RING NUT	1		63	UG.10640	ASSEMBLY-Pulley-Handbrake Cable	1	
6	UG.1862	ASSEMBLY-Rod and Handle	1	Not required on RH 123" W/Base Coachbuilt Cars.	64	UG.1475	TUBE-Distance-Pulley Pivot	1	
7	UG.4151	ASSEMBLY-Rod and Handle	1	Required on RH 123" W/Base Coachbuilt Cars.	65	UG.10642	SHIELD-Cable-Handbrake Cable	1	
8	RG.5326	PLATE-Cover-Pawl	1		66	UA.107/Z	BOLT-Pulley Pivot	1	
9	KC.106/Z	SETSCREW-Pawl Cover Plate	1		67	RG.4833	WASHER-Bolt	1	
10	K.B.7103/R	WASHER-Tab-Setscrew	1		68	UA.1251/Z	WASHER-Plain-Bolt	1	
11	RG.5303	PIECE-Distance-Pawl Spring	1		69	UA.301/Z	NUT-Bolt	1	
12	RG.6208	SPRING-Pawl	1		70	UR.8676	BRACKET-Lower-Handbrake Pulley	1	
13	RG.5723	PAWL	2		71	KC.178/Z	SETSCREW-Lower Bracket-Sidemember	4	
14	RG.5325	PIN-Pawl	2		72	UG.10640	ASSEMBLY-Pulley-Handbrake Cable	1	RH Cars.
15	UG.1823	CARRIER-Pawl Mechanism	1		73	UG.1475	TUBE-Distance-Pulley Pivot	1	
16	K.1907/Z	SETSCREW-Tube to Carrier	1		74	UG.10642	SHIELD-Cable-Handbrake Cable	1	
17	K.4404/Z	WASHER-Plain-Setscrew	1		75	UA.107/Z	BOLT-Pulley Pivot	1	
18	UG.1871	STOP SLEEVE	1		76	RG.4833	WASHER-Bolt	1	
19	UG.1871	ASSEMBLY-Roller-Carrier	1		77	UA.1251/Z	WASHER-Plain-Bolt	1	
20	UG.1820	STOP PLATE-Return Spring	1		78	UA.301/Z	NUT-Bolt	1	
21	UG.1817	RETURN SPRING	1		79	UA.102/Z	BOLT-Guide Bracket-Cable	2	
22	UG.2350	CONNECTOR-Cable	1		80	UA.1251/Z	WASHER-Plain-Bolt	4	
23	UA.1551/Z	BOLT-Rod-Cable Connector	1		81	UA.301/Z	NUT-Bolt	2	
24	K.4404/Z	WASHER-Plain-Bolt	1		82	UG.4273	JAW-Handbrake Rod	1	
25	K.4307/Z	NUT-Bolt	1		83	K.6606/Z	PIN-Jaw	1	
26	UG.2351	CLAMP-Conduit	1		84	UA.1252/Z	WASHER-Plain-Pin	1	
27	UG.1833	SPACER-Conduit Clamp	1		85	UA.10031/Z	PIN-Split-Pin	1	
28	UA.105/Z	BOLT-Conduit Clamp	1		86	KC.150/Z	SETSCREW-Blanking-Support Bracket	2	
29	UG.3694	BRACKET-Support-Conduit Abutment	1		87	UA.2101/Z	SETSCREW-Blanking-Support Stay	1	
30	UA.1501/Z	SETSCREW-Support Bracket	2		88	UA.2151/Z	SCREW-Blanking	1	
31	K.4404/Z	WASHER-Plain-Setscrew	2		89	UA.352/Z	NUT-Screw	1	
32	UA.105/Z	BOLT-Conduit Abutment	1		90	KC.150/Z	SETSCREW-Blanking-Support Bracket	1	
33	UA.1251/Z	WASHER-Plain-Bolt	2		91	UG.1875	BRACKET-Lower-Dashboard	1	
34	UA.301/Z	NUT-Bolt	1		92	UG.1876	SETSCREW-Handbrake to Bracket	1	
35	UG.3693	ASSEMBLY-Cable-Handbrake	1		93	UA.102/Z	BOLT-Support Bracket to Dash Side Panel	2	
36	UD.6097	CLIP-Handbrake Cable	1		94	UA.1251/Z	WASHER-Plain-Bolt	2	
37	UG.3695	STAY-Support-Handbrake Pulley	1		95	UA.101/Z	BOLT-Blanking-Dash Side Panel	2	
38	RE.4790	WASHER-Distance-Support Stay	1		96	UG.2964	BRACKET-Upper-Handbrake to Dash Sidemember	1	
39	UA.103/Z	SETSCREW-Support Stay	1	LH Cars.	97	UA.1501/Z	SETSCREW-Bracket to Dash Sidemember	2	
40	UA.1251/Z	WASHER-Plain-Setscrew	1		98	K.4404/Z	WASHER-Plain-Setscrew	2	
41	UG.1478	ASSEMBLY-Handbrake Pulley	1		99	CS.30541/Z	SCREW-Bracket to Dash	2	
42	UG.3696	BRACKET-Support-Handbrake Pulley	1		100	UA.102/Z	BOLT-Retaining Plate to Support Bracket	2	
43	UA.1501/Z	SETSCREW-Support Bracket	2		101	UA.2052/Z	WASHER-Plain-Bolt	2	
44	K.4404/Z	WASHER-Plain-Setscrew	2		102	UA.301/Z	NUT-Bolt	2	
45	UG.1476	SHIELD-Cable-Handbrake Pulley	1						
46	UG.1475	TUBE-Distance-Handbrake Pulley	1						
47	UA.108/Z	BOLT-Handbrake Pulley	1						
48	RG.4833	WASHER-Bolt	1						
49	UA.1251/Z	WASHER-Plain-Bolt	1						
50	UA.301/Z	NUT-Bolt	1						
51	UG.1892	BRACKET-Lower-Dashboard	1						
52	FW.337	WASHER-Packing-Bracket-LH Side	2						
53	UG.4274	CLAMP-Conduit-Handbrake	1						
54	UG.1833	SPACER-Conduit Clamp	1						
55	UA.105/Z	BOLT-Conduit Clamp	1						
56	UG.4281	CLIP-Cable Conduit	1						
57	UA.102/Z	SETSCREW-Clip	1						
58	RD.3188	WASHER-Setscrew	1						

FOR CHASSIS NUMBERS SEE OVERLEAF.

Items marked † are not supplied as individual parts

BRAKES-




HANDBRAKE

J.7/1.
Amendment 1.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD III,

BENTLEY S 3, BENTLEY CONTINENTAL S 3,

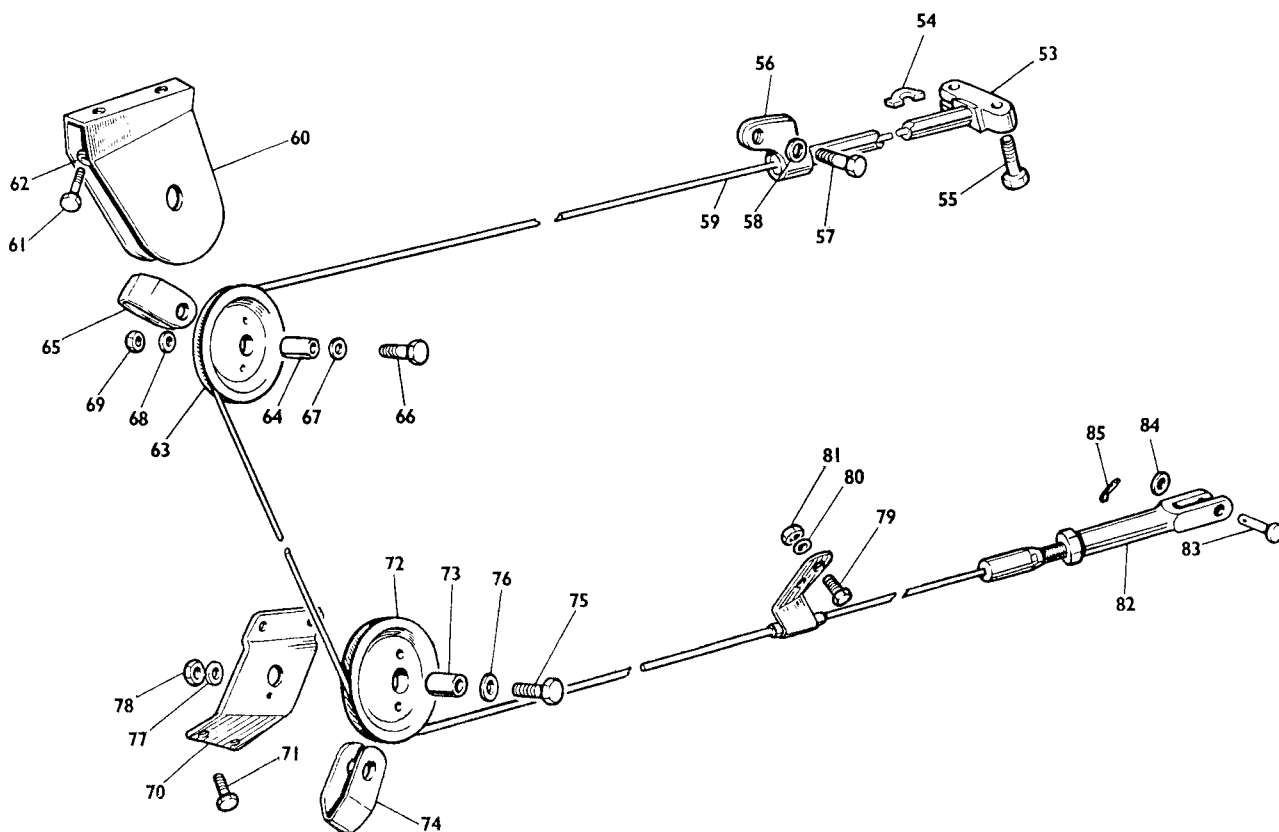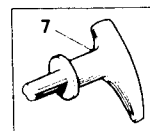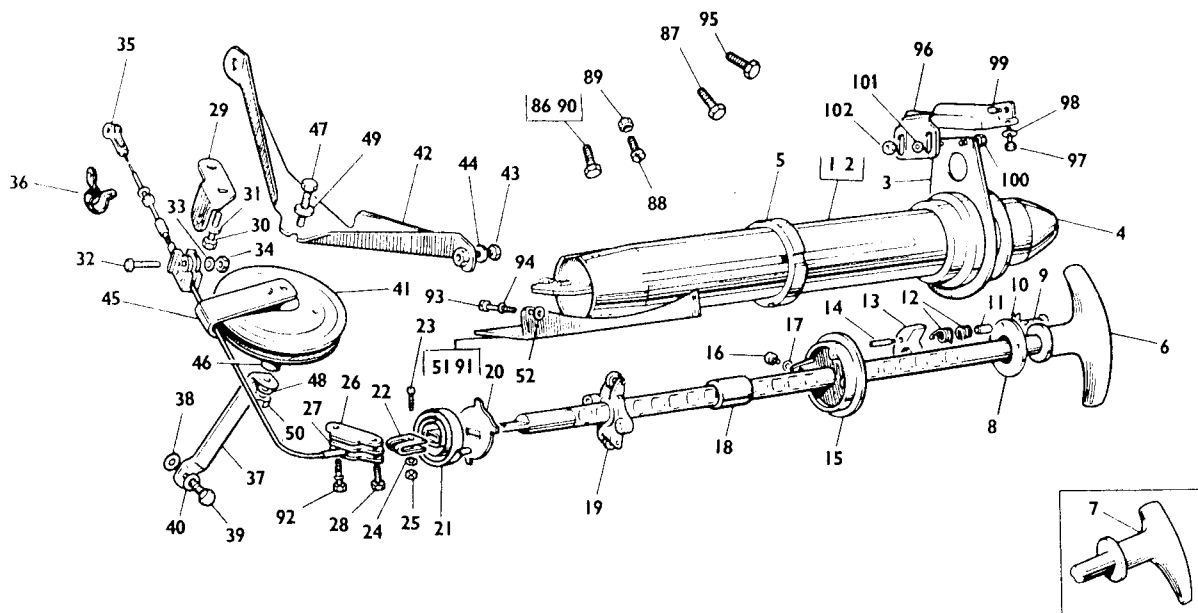

BRAKES -

HANDBRAKE

PARTS LIST

ROLLS-ROYCE SILVER CLOUD III,

BENTLEY S3, BENTLEY CONTINENTAL S3.



Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remark
1	UG.1873	ASSEMBLY-Tube and Retaining Piece-Twist Pull Handbrake	1	Not required on RH 123" W/Base Coachbuilt Cars.	60	UG.4635	BRACKET-Upper Pulley-Handbrake	1	
2	UG.4153	ASSEMBLY-Tube and Retaining Piece-Twist Pull Handbrake	1	Required on RH 123" W/Base Coachbuilt Cars.	61	UA.102/Z	SETSCREW-Pulley Mounting Bracket	2	
3	UG.1865	ASSEMBLY-Plate and Retaining Piece	1		62	UA.1251/Z	WASHER-Plain-Setscrew	2	
4	UG.1839	ASSEMBLY-Cover	1		63	UG.10640	ASSEMBLY-Pulley-Handbrake Cable	1	
5	UG.1829	RING NUT	1		64	UG.1475	TUBE-Distance-Pulley Pivot	1	
6	UG.1862	ASSEMBLY-Rod and Handle	1	Not required on RH 123" W/Base Coachbuilt Cars.	65	UG.10642	SHIELD-Cable-Handbrake Cable	1	
7	UG.4151	ASSEMBLY-Rod and Handle	1	Required on RH 123" W/Base Coachbuilt Cars.	66	UA.107/Z	BOLT-Pulley Pivot	1	
8	RG.5326	PLATE-Cover-Pawl	1		67	RG.4833	WASHER-Bolt	1	
9	KC.106/Z	SETSCREW-Pawl Cover Plate	1		68	UA.1251/Z	WASHER-Plain-Bolt	1	
10	KB.7103/R	WASHER-Tab-Setscrew	1		69	UA.301/Z	NUT-Bolt	1	
11	RG.5303	PIECE-Distance-Pawl Spring	1		70	UR.8676	BRACKET-Lower-Handbrake Pulley	1	
12	RG.6208	SPRING-Pawl	1		71	KC.178/Z	SETSCREW-Lower Bracket-Sidemember	4	
13	RG.5723	PAWL	2		72	UG.10640	ASSEMBLY-Pulley-Handbrake Cable	1	RH Cars.
14	RG.5325	PIN-Pawl	2		73	UG.1475	TUBE-Distance-Pulley Pivot	1	
15	UG.1823	CARRIER-Pawl Mechanism	1		74	UG.10642	SHIELD-Cable-Handbrake Cable	1	
16	K.1907/Z	SETSCREW-Tube to Carrier	1		75	UA.107/Z	BOLT-Pulley Pivot	1	
17	K.4404/Z	WASHER-Plain-Setscrew	1		76	RG.4833	WASHER-Bolt	1	
18	UG.1821	STOP SLEEVE	1		77	UA.1251/Z	WASHER-Plain-Bolt	1	
19	UG.1871	ASSEMBLY-Roller-Carrier	1		78	UA.301/Z	NUT-Bolt	1	
20	UG.1820	STOP PLATE-Return Spring	1		79	UA.102/Z	BOLT-Guide Bracket-Cable	2	
21	UG.1817	RETURN SPRING	1		80	UA.1251/Z	WASHER-Plain-Bolt	4	
22	UG.2350	CONNECTOR-Cable	1		81	UA.301/Z	NUT-Bolt	2	
23	UA.1551/Z	BOLT-Rod-Cable Connector	1		82	UG.4273	JAW-Handbrake Rod	1	
24	K.4404/Z	WASHER-Plain-Bolt	1		83	K.6606/Z	PIN-Jaw	1	
25	K.4307/Z	NUT-Bolt	1		84	UA.1252/Z	WASHER-Plain-Pin	1	
26	UG.2351	CLAMP-Conduit	1		85	UA.10031/Z	PIN-Split-Pin	1	
27	UG.1833	SPACER-Conduit Clamp	1		86	KC.150/Z	SETSCREW-Blanking-Support Bracket	2	
28	UA.105/Z	BOLT-Conduit Clamp	1		87	UA.2101/Z	SETSCREW-Blanking-Support Stay	1	
29	UG.3694	BRACKET-Support-Conduit Abutment	1		88	UA.2151/Z	SCREW-Blanking	1	
30	UA.1501/Z	SETSCREW-Support Bracket	2		89	UA.352/Z	NUT-Screw	1	
31	K.4404/Z	WASHER-Plain-Setscrew	2		90	KC.150/Z	SETSCREW-Blanking-Support Bracket	1	
32	UA.105/Z	BOLT-Conduit Abutment	1		91	UG.1875	BRACKET-Lower-Dashboard	1	
33	UA.1251/Z	WASHER-Plain-Bolt	2		92	UG.1876	SETSCREW-Handbrake to Bracket	1	
34	UA.301/Z	NUT-Bolt	1		93	UA.102/Z	BOLT-Support Bracket to Dash Side Panel	2	
35	UG.3693	ASSEMBLY-Cable-Handbrake	1		94	UA.1251/Z	WASHER-Plain-Bolt	2	
36	UD.6097	CLIP-Handbrake Cable	1		95	UA.101/Z	BOLT-Blanking-Dash Side Panel	2	
37	UG.3695	STAY-Support-Handbrake Pulley	1		96	UG.2964	BRACKET-Upper-Handbrake to Dash Sidemember	1	
38	RE.4790	WASHER-Distance-Support Stay	1		97	UA.1501/Z	SETSCREW-Bracket to Dash Sidemember	2	
39	UA.103/Z	SETSCREW-Support Stay	1	LH Cars.	98	K.4404/Z	WASHER-Plain-Setscrew	2	
40	UA.1251/Z	WASHER-Plain-Setscrew	1		99	CS.30541/Z	SCREW-Bracket to Dash	2	
41	UG.1478	ASSEMBLY-Handbrake Pulley	1		100	UA.102/Z	BOLT-Retaining Plate to Support Bracket	2	
42	UG.3696	BRACKET-Support-Handbrake Pulley	1		101	UA.2052/Z	WASHER-Plain-Bolt	2	
43	UA.1501/Z	SETSCREW-Support Bracket	2		102	UA.301/Z	NUT-Bolt	2	
44	K.4404/Z	WASHER-Plain-Setscrew	2						
45	UG.1476	SHIELD-Cable-Handbrake Pulley	1						
46	UG.1475	TUBE-Distance-Handbrake Pulley	1						
47	UA.108/Z	BOLT-Handbrake Pulley	1						
48	RG.4833	WASHER-Bolt	1						
49	UA.1251/Z	WASHER-Plain-Bolt	1						
50	UA.301/Z	NUT-Bolt	1						
51	UG.1892	BRACKET-Lower-Dashboard	1						
52	FW.337	WASHER-Packing-Bracket-LH Side	2						
53	UG.4274	CLAMP-Conduit-Handbrake	1						
54	UG.1833	SPACER-Conduit Clamp	1						
55	UA.105/Z	BOLT-Conduit Clamp	1						
56	UG.4281	CLIP-Cable Conduit	1						
57	UA.102/Z	SETSCREW-Clip	1						
58	RD.3188	WASHER-Setscrew	1						
59	UG.4634	ASSEMBLY-Cable-Handbrake	1						

Silver Cloud III- From SHS.103 Onwards. Bentley S.3- From B.348FG Onwards.
Silver Cloud III. LWB- From CEL.17 Onwards.
Bentley Continental S.3- From BC.182XC Onwards.

Items marked † are not supplied as individual parts



**BRAKES-
HANDBRAKE**

J.7/2.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD III,

BENTLEY S 3, BENTLEY CONTINENTAL S 3,

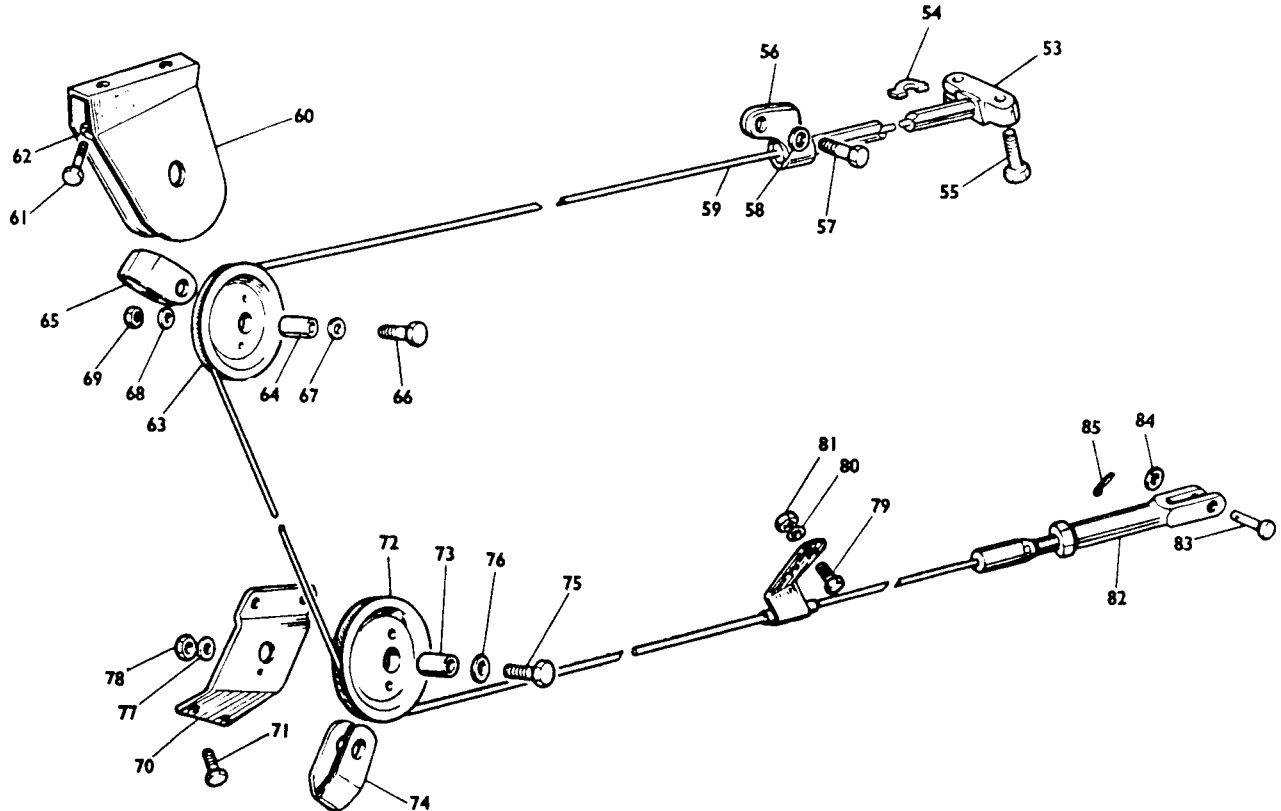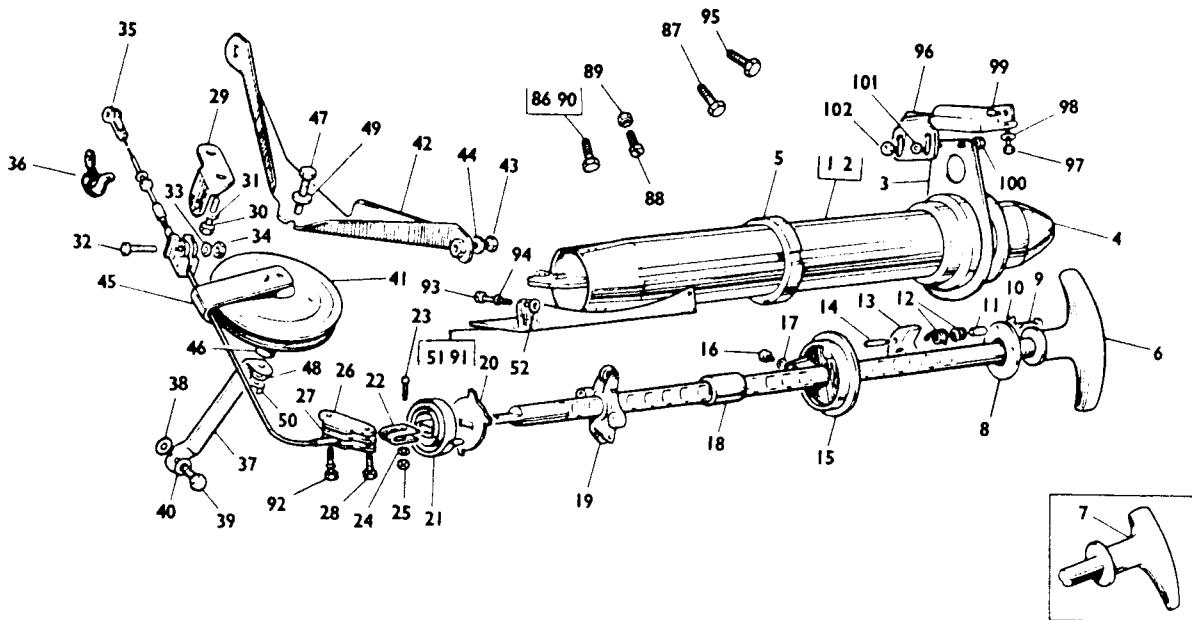


BRAKES -

HANDBRAKE

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

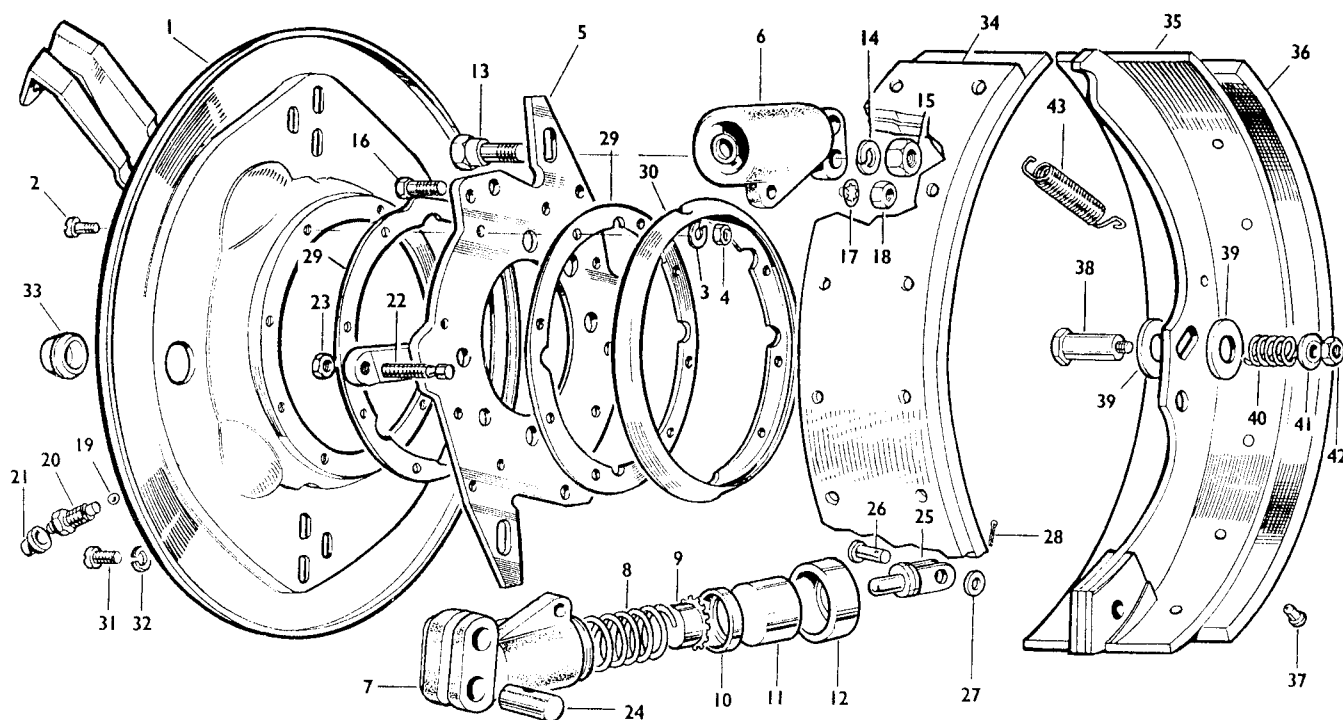

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remark
	UG.4164	ASSEMBLY-Front Brake	1		37	UG.3114	RIVET-Lining	24	
1	UG.3702	ASSEMBLY-Water Excluder	1		38	UG.3658	COLLAR-Shakeback Stop	2	
2	K.1910/Z	SCREW-Excluder	8		39	UG.3222	WASHER-Friction-Shakeback Stop	4	
3	K.9006/Z	WASHER-Spring-Screw	8		40	UG.2032	SPRING-Shakeback Stop	2	
4	K.4307/Z	NUT-Screw	8		41	UG.1262	WASHER-Clamping-Shakeback Stop	2	
5	UG.3706	ASSEMBLY-Carrier Plate	1		42	UG.3659	NUT-Clamping-Shakeback Stop	2	
6	UG.3650	ASSEMBLY-Wheel Cylinder	2		43	UG.1285	SPRING-Return-Shoe	2	
7	UG.3644	BODY	2			CD.1608	KIT-Service-Seal	1	
8	UG.3647	SPRING	2			RH.2035	ASSEMBLY-Lining and Shoe- (Ferodo)		
9	UG.3649	ASSEMBLY-Seal Spreader	2						
10	UG.1385	SEAL-Piston	2						
11	UG.1177	PISTON-Cylinder	2						
12	UG.3646	COVER-Dust	2						
13	UG.658	BOLT-Cylinder	2						
14	K.9012/Z	WASHER-Spring-Bolt	2						
15	UA.355/Z	NUT-Bolt	2						
16	UG.1379	BOLT-Cylinder	2						
17	CS.32060/Z	WASHER-Shakeproof-Bolt	2						
18	UA.302/Z	NUT-Bolt	2						
19	UG.1181	BALL VALVE-Cylinder	2						
20	UG.1175	SCREW-Bleed-Cylinder	2						
21	UG.2427	CAP-Dust-Bleed Screw	2						
22	UG.2325	STEADY POST	2						
23	UA.352/Z	NUT-Steady Post	2						
24	UG.1280	PIN-Pivot	2						
25	UG.3709	LINK-Brake Shoe	2						
26	UG.4160	PIN-Link	2						
27	UG.1446	WASHER-Link Pin	2						
28	K.4607/R	PIN-Split-Link Pin	2						
29	UG.3761	JOINT-Grease Catcher	2						
30	UG.3762	CATCHER-Grease	1						
31	UA.2101/Z	SCREW-Cylinder	2						
32	K.9008/Z	WASHER-Spring-Screw	2						
33	UG.1169	CAP-Dust-Excluder	2						
34	UG.2804	ASSEMBLY-Lining, Shoe and Shakeback	2						
35	UG.2682	ASSEMBLY-Web and Rim	2						
36	UG.2071	LINING-Brake Shoe- (Ferodo)	2						

FOR CHASSIS NUMBERS SEE OVERLEAF

Items marked † are not supplied as individual parts

BRAKES-


FRONT BRAKE - RIGHT HAND

J.8
Amendment 1.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

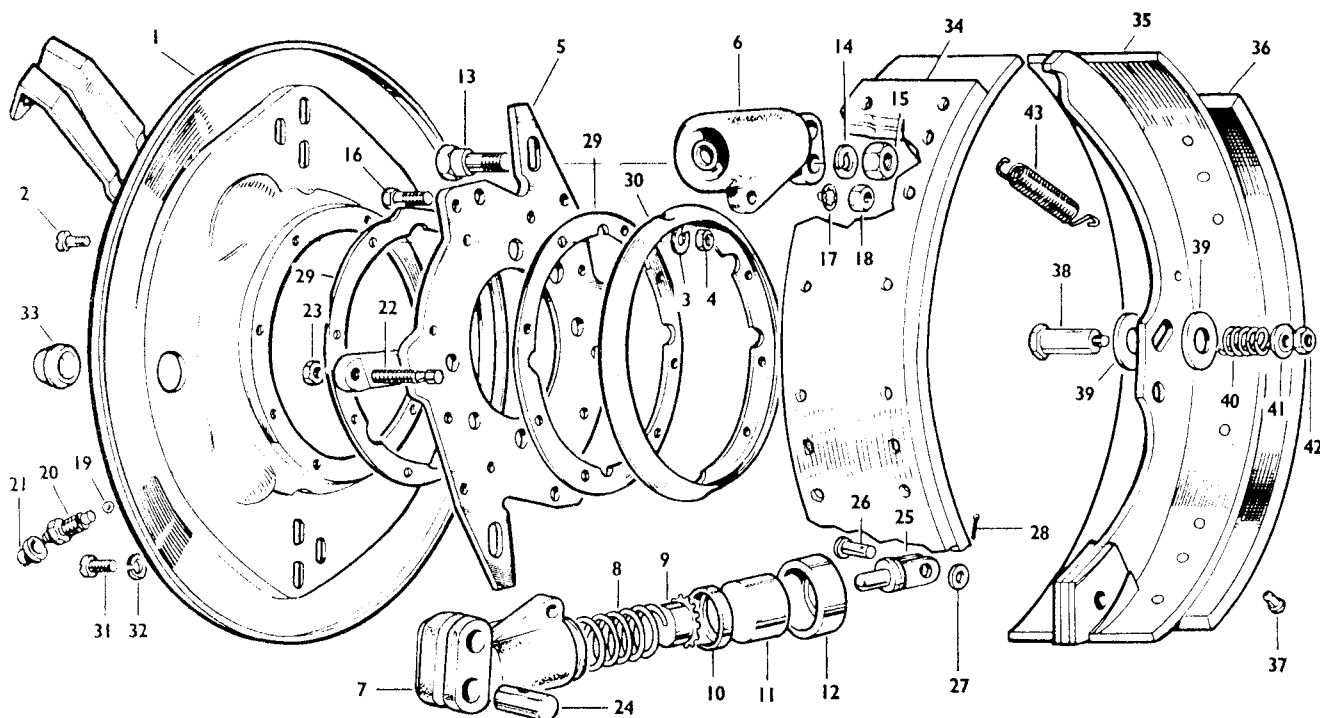

Ref.	Part No.	Description	No. off.	Remarks	Ref.	Part No.	Description	No. off.	Remarks
	UG. 4417	ASSEMBLY-Front Brake	1		37	UG.3114	RIVET-Lining	24	
1	UG. 3702	ASSEMBLY-Water Excluder	1		38	UG.3658	COLLAR-Shakeback Stop	2	
2	K. 1910/Z	SCREW-Excluder	8		39	UG.3222	WASHER-Friction-Shakeback Stop	4	
3	K. 9006/Z	WASHER-Spring-Screw	8		40	UG. 2032	SPRING-Shakeback Stop	2	
4	K. 4307/Z	NUT-Screw	8		41	UG. 1262	WASHER-Clamping-Shakeback Stop	2	
5	UG. 3706	ASSEMBLY-Carrier Plate	1		42	UG. 3659	NUT-Clamping-Shakeback Stop	2	
6	UG. 3650	ASSEMBLY-Wheel Cylinder	2		43	UG. 1285	SPRING-Return-Shoe	2	
7	UG. 3644	BODY	2			CD. 1608	KIT-Service-Seal	1	
8	UG. 3647	SPRING	2			RH. 2300	ASSEMBLY-Lining and Shoe- (Ferodo)- (Less Shakeback Stops)		
9	UG. 3649	ASSEMBLY-Seal Spreader	2						
10	UG. 1385	SEAL-Piston	2						
11	UG. 1177	PISTON-Cylinder	2						
12	UG. 3646	COVER-Dust	2						
13	UG. 658	BOLT-Cylinder	2						
14	K. 9012/Z	WASHER-Spring-Bolt	2						
15	UA. 355/Z	NUT-Bolt	2						
16	UG. 1379	BOLT-Cylinder	2						
17	CS.32060/Z	WASHER-Shakeproof-Bolt	2						
18	UA. 302/Z	NUT-Bolt	2						
19	UG. 1181	BALL VALVE-Cylinder	2						
20	UG. 1175	SCREW-Bleed-Cylinder	2						
21	UG. 2427	CAP-Dust-Bleed Screw	2						
22	UG. 2325	STEADY POST	2						
23	UA. 352/Z	NUT-Steady Post	2						
24	UG. 1280	PIN-Pivot	2						
25	UG. 3709	LINK-Brake Shoe	2						
26	UG. 4160	PIN-Link	2						
27	UG. 1446	WASHER-Link Pin	2						
28	K. 4607/R	PIN-Split-Link Pin	2						
29	UG. 3761	JOINT-Grease Catcher	2						
30	UG. 3762	CATCHER-Grease	1						
31	UA. 210/VZ	SCREW-Cylinder	2						
32	K. 9008/Z	WASHER-Spring-Screw	2						
33	UG. 1169	CAP-Dust-Excluder	2						
34	UG. 4416	ASSEMBLY-Lining, Shoe and Shakeback	2						
35	UG. 4411	ASSEMBLY-Web and Rim	2						
36	UG. 4407	LINING-Brake Shoe- (Ferodo)	2						

FOR CHASSIS NUMBERS SEE OVERLEAF

Items marked † are not supplied as individual parts


**BRAKES-
FRONT BRAKE-RIGHT HAND**

J.8/1

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

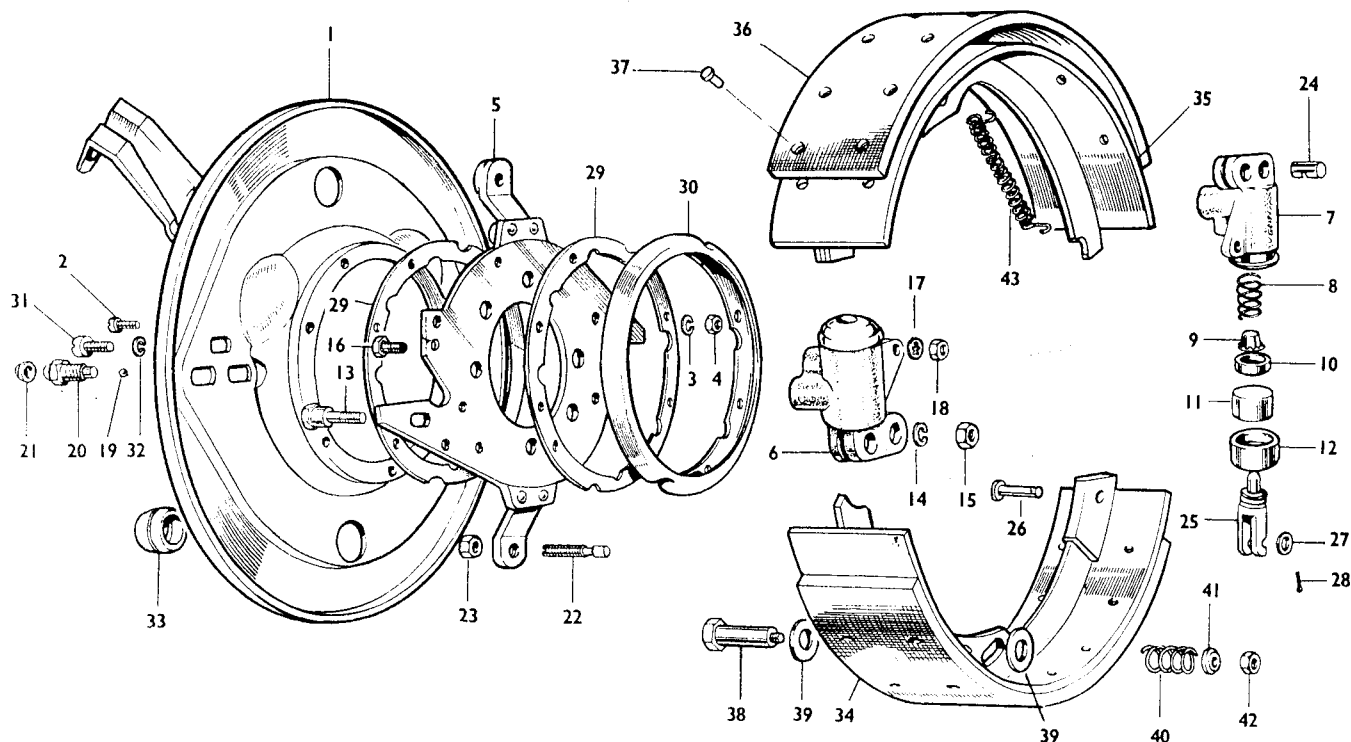

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
1	UG.4166	ASSEMBLY-Front Brake	1		37	UG.3114	RIVET-Lining	24	
2	UG.3703	ASSEMBLY-Water Excluder	1		38	UG.3658	COLLAR-Shakeback Stop	2	
3	K.1910/Z	SCREW-Excluder	8		39	UG.3222	WASHER-Friction-Shakeback Stop	4	
4	K.9006/Z	WASHER-Spring-Screw	8		40	UG.2032	SPRING-Shakeback Stop	2	
5	UG.3707	ASSEMBLY-Carrier Plate	1		41	UG.1262	WASHER-Clamping-Shakeback Stop	2	
6	UG.3651	ASSEMBLY-Wheel Cylinder	2		42	UG.3659	NUT-Clamping-Shakeback Stop	2	
7	UG.3645	BODY	2		43	UG.1285	SPRING-Return-Shoe	2	
8	UG.3647	SPRING	2			CD.1608	KIT-Service-Seal	1	
9	UG.3649	ASSEMBLY-Seal Spreader	2			RH.2035	ASSEMBLY-Lining and Shoe- (Ferodo)		
10	UG.1385	SEAL-Piston	2						
11	UG.1177	PISTON-Cylinder	2						
12	UG.3646	COVER-Dust	2						
13	UG.658	BOLT-Cylinder	2						
14	K.9012/Z	WASHER-Spring-Bolt	2						
15	UA.355/Z	NUT-Bolt	2						
16	UG.1379	BOLT-Cylinder	2						
17	CS.32060/Z	WASHER-Shakeproof-Bolt	2						
18	UA.302/Z	NUT-Bolt	2						
19	UG.1181	BALL VALVE-Cylinder	2						
20	UG.1175	SCREW-Bleed-Cylinder	2						
21	UG.2427	CAP-Dust-Bleed Screw	2						
22	UG.2325	STEADY POST	2						
23	UA.352/Z	NUT-Steady Post	2						
24	UG.1280	PIN-Pivot	2						
25	UG.3709	LINK-Brake Shoe	2						
26	UG.4160	PIN-Link	2						
27	UG.1446	WASHER-Link Pin	2						
28	K.4607/R	PIN-Split-Link Pin	2						
29	UG.3761	JOINT-Grease Catcher	2						
30	UG.3763	CATCHER-Grease	1						
31	UA.2101/Z	SCREW-Cylinder	2						
32	K.9008/Z	WASHER-Spring-Screw	2						
33	UG.1169	CAP-Dust-Excluder	2						
34	UG.2801	ASSEMBLY-Lining, Shoe and Shakeback	2						
35	UG.2682	ASSEMBLY-Web and Rim	2						
36	UG.2071	LINING-Brake Shoe- (Ferodo)	2						

FOR CHASSIS NUMBERS SEE OVERLEAF

Items marked † are not supplied as individual parts

BRAKES-


FRONT BRAKE-LEFT HAND

J.9
Amendment 1.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

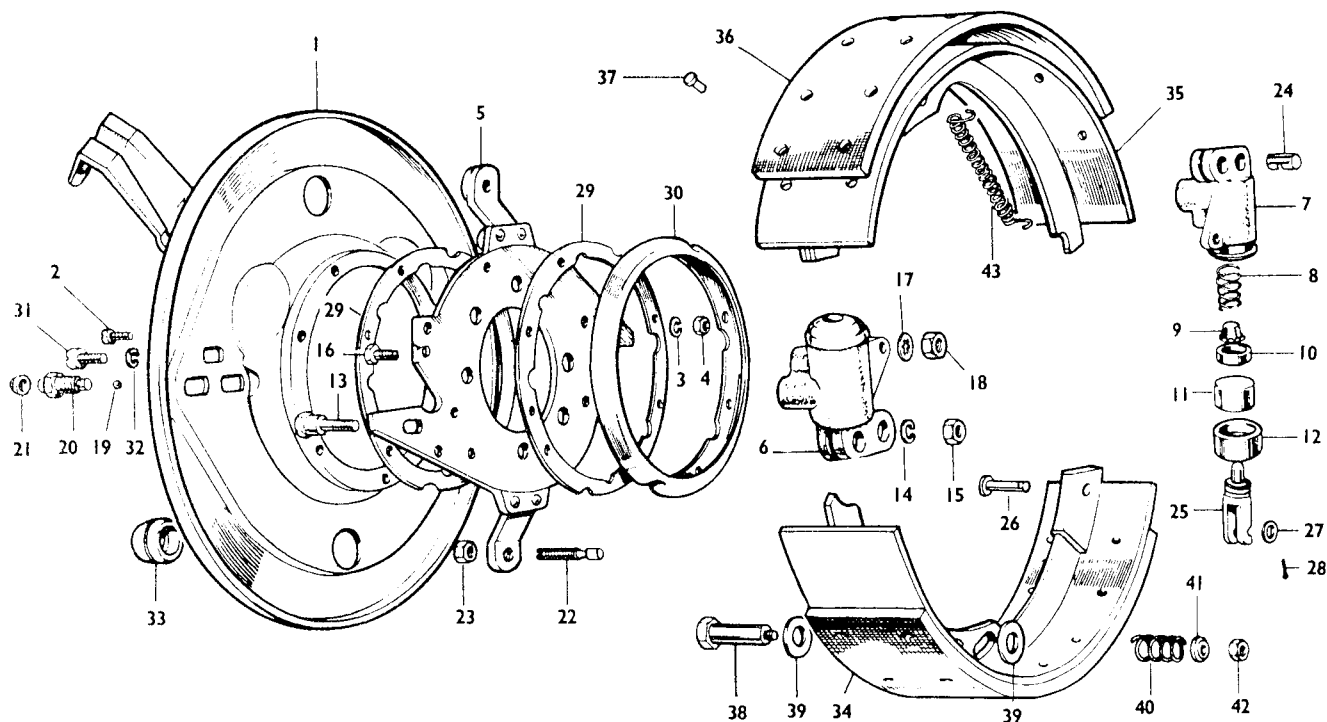

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remark
-	UG.4421	ASSEMBLY-Front Brake	1		37	UG.3114	RIVET-Lining	24	
1	UG.3703	ASSEMBLY-Water Excluder	1		38	UG.3658	COLLAR-Shakeback	2	
2	K.1910/Z	SCREW-Excluder	8		39	UG.3222	WASHER-Friction-Shakeback	4	
3	K.9006/Z	WASHER-Spring-Screw	8				Stop	2	
4	K.4307/Z	NUT-Screw	8		40	UG.2032	SPRING-Shakeback Stop	2	
5	UG.3707	ASSEMBLY-Carrier Plate	1		41	UG.1262	WASHER-Clamping-Shakeback	2	
6	UG.3651	ASSEMBLY-Wheel Cylinder	2				Stop	2	
7	UG.3645	BODY	2		42	UG.3659	NUT-Clamping-Shakeback Stop	2	
8	UG.3647	SPRING	2		43	UG.1285	SPRING-Return-Shoe	2	
9	UG.3649	ASSEMBLY-Seal Spreader	2			CD.1608	KIT-Service-Seal	1	
10	UG.1385	SEAL-Piston	2			RH.2300	ASSEMBLY-Lining and Shoe-(Ferodo)		
11	UG.1177	PISTON-Cylinder	2				- (Less Shakeback Stops)		
12	UG.3646	COVER-Dust	2						
13	UG.658	BOLT-Cylinder	2						
14	K.9012/Z	WASHER-Spring-Bolt	2						
15	UA.355/Z	NUT-Bolt	2						
16	UG.1379	BOLT-Cylinder	2						
17	CS.32060/Z	WASHER-Shakeproof-Bolt	2						
18	UA.302/Z	NUT-Bolt	2						
19	UG.1181	BALL VALVE-Cylinder	2						
20	UG.1175	SCREW-Bleed-Cylinder	2						
21	UG.2427	CAP-Dust-Bleed Screw	2						
22	UG.2325	STEADY POST	2						
23	UA.352/Z	NUT-Steady Post	2						
24	UG.1280	PIN-Pivot	2						
25	UG.3709	LINK-Brake Shoe	2						
26	UG.4160	PIN-Link	2						
27	UG.1446	WASHER-Link Pin	2						
28	K.4607/R	PIN-Split-Link Pin	2						
29	UG.3761	JOINT-Grease Catcher	2						
30	UG.3763	CATCHER-Grease	2						
31	UA.2101/Z	SCREW-Cylinder	2						
32	K.9008/Z	WASHER-Spring-Screw	2						
33	UG.1169	CAP-Dust-Excluder	2						
34	UG.4413	ASSEMBLY-Lining, Shoe and	2						
		Shakeback	2						
35	UG.4411	ASSEMBLY-Web and Rim	2						
36	UG.4407	LINING-Brake Shoe-(Ferodo)	2						

FOR CHASSIS NUMBERS SEE OVERLEAF

Items marked † are not supplied as individual parts

BRAKES-


FRONT BRAKE-LEFT HAND

J.9/1

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

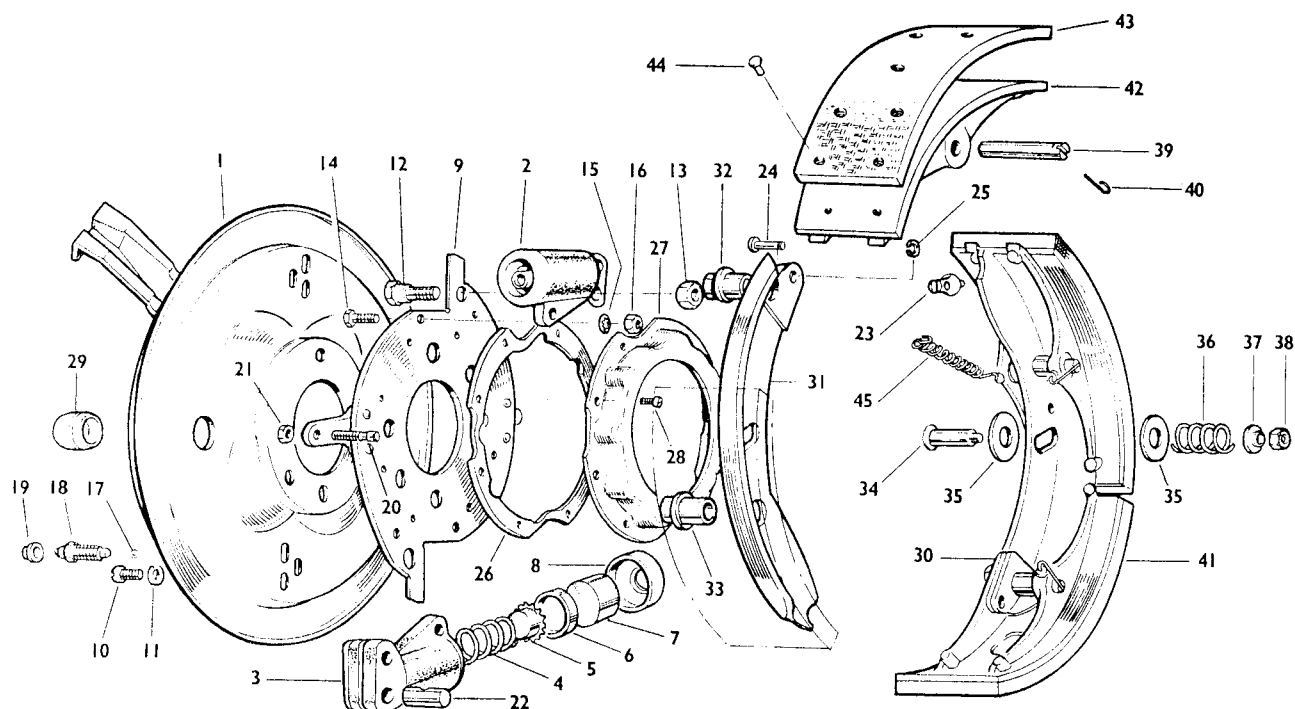

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
	UG. 4142	ASSEMBLY-Front Brake	1		36	UG. 2032	SPRING-Shakeback Stop	2	
1	UG. 3144	ASSEMBLY-Water Excluder	1		37	UG. 1262	WASHER-Clamping-Shakeback Stop	2	
2	UG. 3650	ASSEMBLY-Wheel Cylinder	2						
3	UG. 3644	BODY	2		38	UG. 3659	NUT-Clamping-Shakeback Stop	2	
4	UG. 3647	SPRING	2		39	UG. 3118	PIN-Pivot-Brake Shoe	4	
5	UG. 3649	ASSEMBLY-Seal Spreader	2		40	UG. 3119	SPRING-Retaining-Pivot	4	
6	UG. 1385	SEAL-Piston	2		41	UG. 3129	ASSEMBLY-Brake Shoe and Lining	4	
7	UG. 1177	PISTON	2		42	UG. 3115	SHOE-Brake	4	
8	UG. 3646	COVER-Dust	2		43	UG. 3116	LINING-Brake Shoe-(Ferodo)	4	
9	UG. 3138	ASSEMBLY-Carrier Plate	1		44	UG. 3114	RIVET-Brake Lining	36	
10	UA. 2101/Z	SCREW-Wheel Cylinder to Excluder	2		45	UG. 1285	SPRING-Return-Shoe	2	
11	K. 9008/Z	WASHER-Spring-Screw	2			CD. 1608	KIT-Service-Seal	1	
12	UG. 4133	BOLT-Wheel Cylinder	2						
13	UG. 4134	NUT-Bolt	2						
14	UG. 4135	BOLT-Wheel Cylinder	2						
15	CS. 32060/Z	WASHER-Shakeproof-Bolt	2						
16	UA. 302/Z	NUT-Bolt	2						
17	UG. 1181	BALL VALVE-Bleed Screw	2						
18	UG. 1175	SCREW-Bleed	2						
19	UG. 2427	CAP-Dust-Bleed Screw	2						
20	UG. 2325	STEADY POST	2						
21	UA. 352/Z	NUT-Steady Post	2						
22	UG. 1280	PIVOT-Brake Shoe Carrier	2						
23	UG. 3120	LINK-Cylinders to Shoe Carrier	2						
24	UG. 4161	PIN-Link-Brake Shoe	2						
25	UG. 3640	CIRCLIP-Link Pin	2						
26	UG. 3142	JOINT-Grease Catcher	1						
27	UG. 3140	CATCHER-Grease	1						
28	UG. 3840	SETSCREW-Grease Catcher	8						
29	UG. 1169	CAP-Dust-Excluder	2						
30	UG. 3108	ASSEMBLY-Shoe Carrier Plate and Shakeback Stop	2						
31	UG. 3125	ASSEMBLY-Shoe Carrier Plate	2						
32	UG. 3635	BUSH	2						
33	UG. 3110	BUSH	2						
34	UG. 3658	COLLAR-Shakeback Stop	2						
35	UG. 2314	WASHER-Friction-Shakeback Stop	4						

Bentley Continental S.3- From BC.2.XA to 164 Incl.

Items marked † are not supplied as individual parts


**BRAKES-
FRONT BRAKE-RIGHT HAND**

J.10
Amendment 1.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

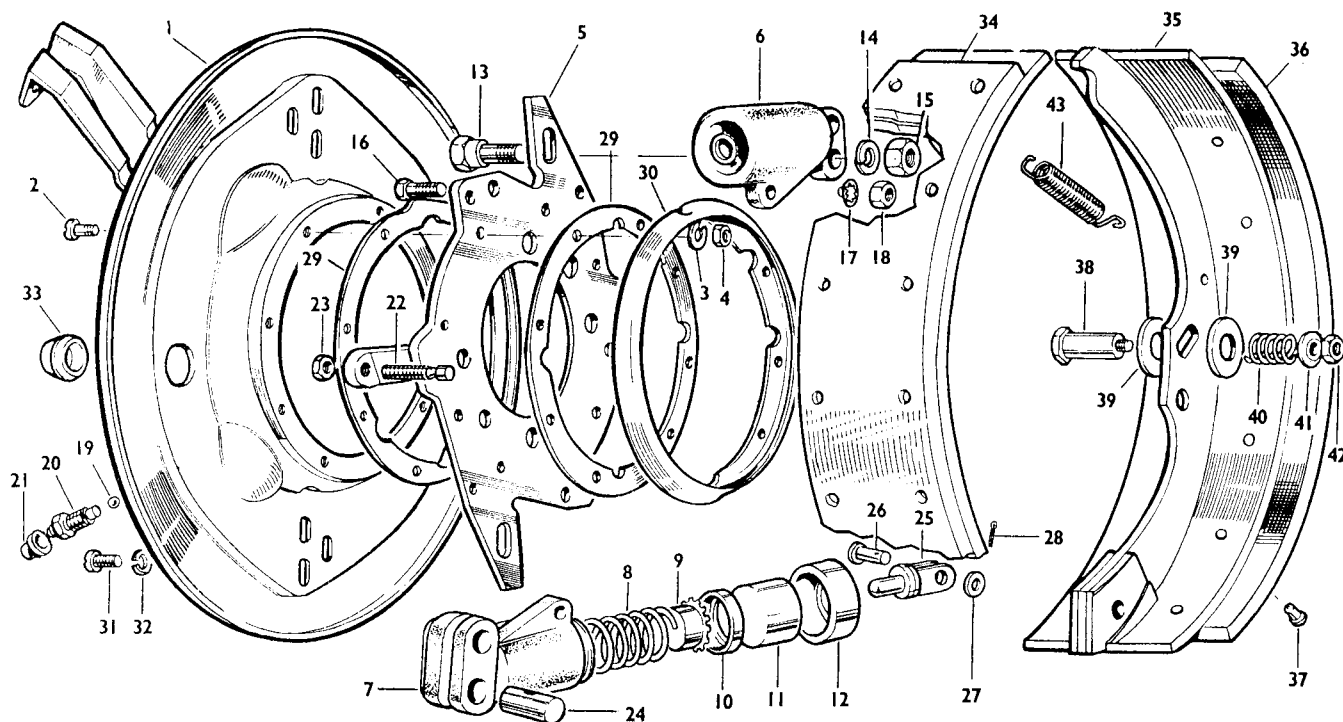

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
	UG. 4164	ASSEMBLY-Front Brake	1		37	UG. 3114	RIVET-Lining	24	
1	UG. 3702	ASSEMBLY-Water Excluder	1		38	UG. 3658	COLLAR- Shakeback Stop	2	
2	K. 1910/Z	SCREW-Excluder	8		39	UG. 3222	WASHER-Friction-Shakeback Stop	4	
3	K. 9006/Z	WASHER-Spring-Screw	8		40	UG. 2032	SPRING-Shakeback Stop	2	
4	K. 4307/Z	NUT-Screw	8		41	UG. 1262	WASHER-Clamping-Shakeback Stop	2	
5	UG. 3706	ASSEMBLY-Carrier Plate	1		42	UG. 3659	NUT-Clamping-Shakeback Stop	2	
6	UG. 3650	ASSEMBLY-Wheel Cylinder	2		43	UG. 1285	SPRING-Return-Shoe	2	
7	UG. 3644	BODY	2			CD. 1608	KIT-Service-Seal	1	
8	UG. 3647	SPRING	2			RH. 2035	ASSEMBLY-Lining and Shoe-(Ferodo)		
9	UG. 3649	ASSEMBLY-Seal Spreader	2						
10	UG. 1385	SEAL-Piston	2						
11	UG. 1177	PISTON-Cylinder	2						
12	UG. 3646	COVER-Dust	2						
13	UG. 658	BOLT-Cylinder	2						
14	K. 9012/Z	WASHER-Spring-Bolt	2						
15	UA. 355/Z	NUT-Bolt	2						
16	UG. 1379	BOLT-Cylinder	2						
17	CS. 32060/Z	WASHER-Shakeproof-Bolt	2						
18	UA. 302/Z	NUT-Bolt	2						
19	UG. 1181	BALL VALVE-Cylinder	2						
20	UG. 1175	SCREW-Bleed- Cylinder	2						
21	UG. 2427	CAP-Dust-Bleed Screw	2						
22	UG. 2325	STEADY POST	2						
23	UA. 352/Z	NUT-Steady Post	2						
24	UG. 1280	PIN-Pivot	2						
25	UG. 3709	LINK-Brake Shoe	2						
26	UG. 4160	PIN-Link	2						
27	UG. 1446	WASHER-Link Pin	2						
28	K. 4607/Z	PIN-Split-Link Pin	2						
29	UG. 3761	JOINT-Grease Catcher	2						
30	UG. 3762	CATCHER-Grease	1						
31	UA. 2101/Z	SCREW-Cylinder	2						
32	K. 9008/Z	WASHER-Spring-Screw	2						
33	UG. 1169	CAP-Dust Excluder	2						
34	UG. 2804	ASSEMBLY-Lining, Shoe and Shakeback	2						
35	UG. 2682	ASSEMBLY-Web and Rim	2						
36	UG. 2071	LINING-Brake Shoe-(Ferodo)	2						

Bentley Continental S.3- From BC. 166XA to BC. 70XC Incl.
BC. 74XC to 82 Incl.
BC. 86XC, 88.

Items marked † are not supplied as individual parts

BRAKES-


FRONT BRAKE-RIGHT HAND

J 10/1

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

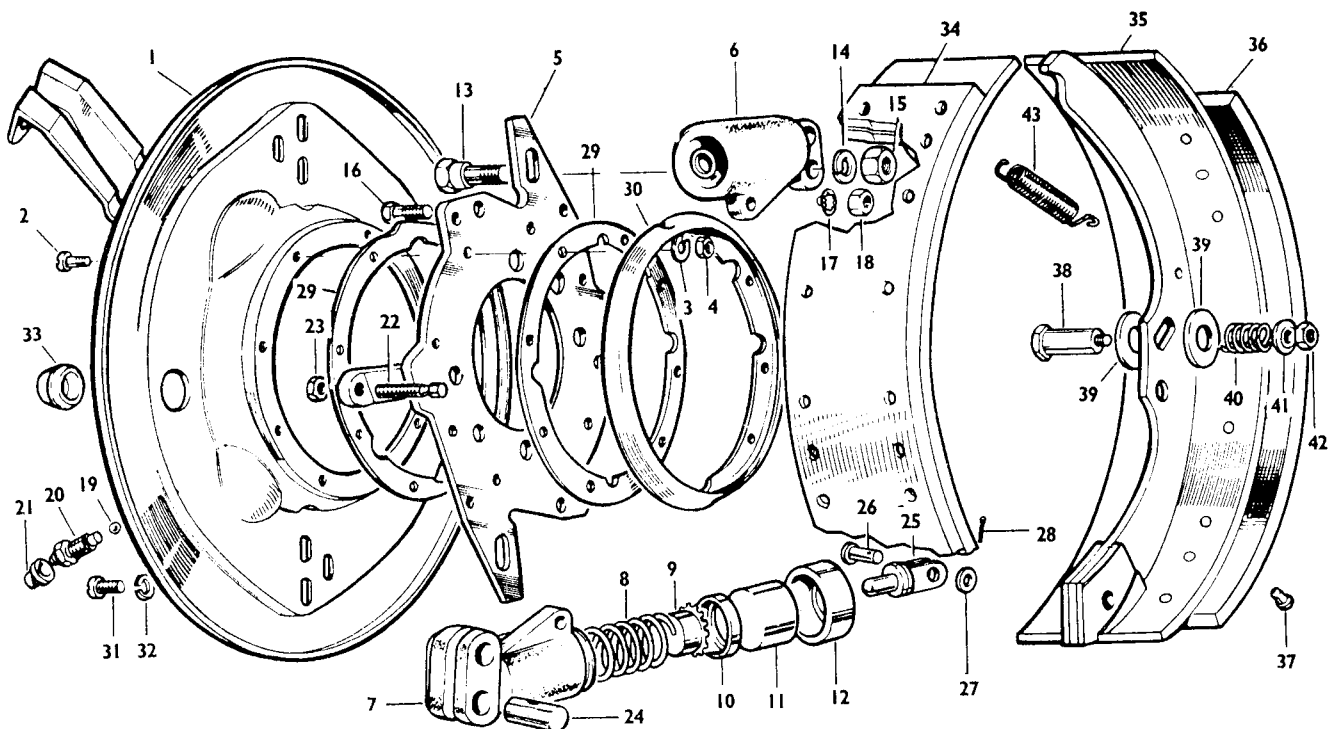

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
	UG. 4417	ASSEMBLY-Front Brake	1		37	UG. 3114	RIVET-Lining	24	
1	UG. 3702	ASSEMBLY-Water Excluder	1		38	UG. 3658	COLLAR-Shakeback Stop	2	
2	K. 1910/Z	SCREW-Excluder	8		39	UG. 3222	WASHER-Friction-Shakeback Stop	4	
3	K. 9006/Z	WASHER-Spring-Screw	8		40	UG. 2032	SPRING-Shakeback Stop	2	
4	K. 4307/Z	NUT-Screw	8		41	UG. 1262	WASHER-Clamping-Shakeback Stop	2	
5	UG. 3706	ASSEMBLY-Carrier Plate	1		42	UG. 3659	NUT-Clamping-Shakeback Stop	2	
6	UG. 3650	ASSEMBLY-Wheel Cylinder	2		43	UG. 1285	SPRING-Return-Shoe	2	
7	UG. 3644	BODY	2			CD. 1608	KIT-Service-Seal	1	
8	UG. 3647	SPRING	2			RH. 2300	ASSEMBLY-Lining and Shoe-(Ferodo) -(Less Shakeback Stops)		
9	UG. 3649	ASSEMBLY-Seal Spreader	2						
10	UG. 1385	SEAL-Piston	2						
11	UG. 1177	PISTON-Cylinder	2						
12	UG. 3646	COVER-Dust	2						
13	UG. 658	BOLT-Cylinder	2						
14	K. 9012/Z	WASHER-Spring-Bolt	2						
15	UA. 355/Z	NUT-Bolt	2						
16	UG. 1379	BOLT-Cylinder	2						
17	CS. 32060/Z	WASHER-Shakeproof-Bolt	2						
18	UA. 302/Z	NUT-Bolt	2						
19	UG. 1181	BALL VALVE-Cylinder	2						
20	UG. 1175	SCREW-Bleed-Cylinder	2						
21	UG. 2427	CAP-Dust-Bleed Screw	2						
22	UG. 2325	STEADY POST	2						
23	UA. 352/Z	NUT-Steady Post	2						
24	UG. 1280	PIN-Pivot	2						
25	UG. 3709	LINK-Brake Shoe	2						
26	UG. 4160	PIN-Link	2						
27	UG. 1446	WASHER-Link Pin	2						
28	K. 4607/R	PIN-Split-Link Pin	2						
29	UG. 3761	JOINT-Grease Catcher	2						
30	UG. 3762	CATCHER-Grease	1						
31	UA. 2101/Z	SCREW-Cylinder	2						
32	K. 9008/Z	WASHER-Spring-Screw	2						
33	UG. 1169	CAP-Dust-Excluder	2						
34	UG. 4416	ASSEMBLY-Lining, Shoe and Shakeback	2						
35	UG. 4411	ASSEMBLY-Web and Rim	2						
36	UG. 4407	LINING -Brake Shoe-(Ferodo)	2						

Items marked † are not supplied as individual parts

Bentley Continental S.3- From BC.72XC, 84, 90 Onwards.

BRAKES-


FRONT BRAKE-RIGHT HAND

J.10/2

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

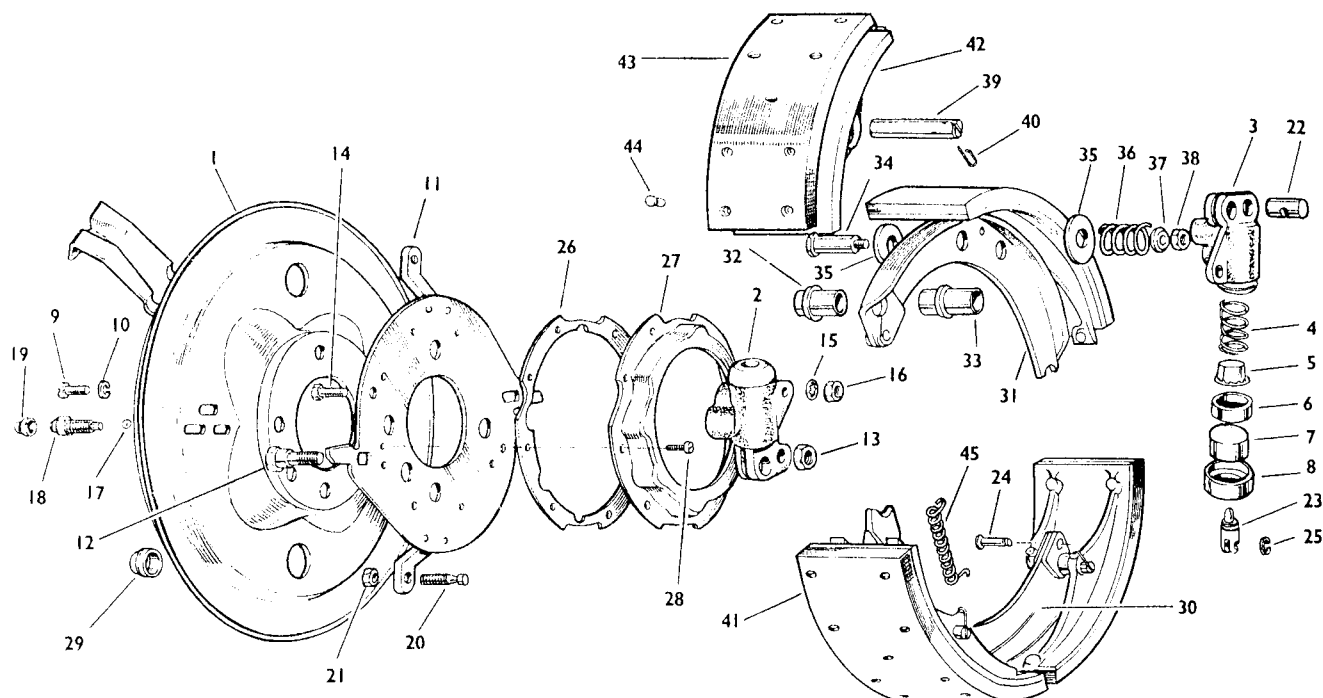

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remark
	UG. 4140	ASSEMBLY-Front Brake	1		37	UG. 1262	WASHER-Clamping-Shakeback Stop	2	
1	UG. 3143	ASSEMBLY-Water Excluder	1		38	UG. 3659	NUT-Clamping-Shakeback Stop	2	
2	UG. 3651	ASSEMBLY-Wheel Cylinder	2		39	UG. 3118	PIN-Pivot-Brake Shoe	4	
3	UG. 3645	BODY	2		40	UG. 3119	SPRING-Retaining-Pivot	4	
4	UG. 3647	SPRING	2		41	UG. 3129	ASSEMBLY-Brake Shoe and Lining	4	
5	UG. 3649	ASSEMBLY-Seal Spreader	2		42	UG. 3115	SHOE-Brake	4	
6	UG. 1385	SEAL-Piston	2		43	UG. 3116	LINING-Brake Shoe-(Ferodo)	4	
7	UG. 1177	PISTON	2		44	UG. 3114	RIVET-Lining	36	
8	UG. 3646	COVER-Dust	2		45	UG. 1285	SPRING-Return-Shoe	2	
9	UA. 2101/Z	SCREW-Wheel Cylinder to Excluder	2			CD. 1608	KIT-Service-Seal	1	
10	K. 9008/Z	WASHER-Spring-Screw	2						
11	UG. 3139	ASSEMBLY-Carrier Plate	1						
12	UG. 4133	BOLT-Cylinder	2						
13	UG. 4134	NUT-Bolt	2						
14	UG. 4135	BOLT-Cylinder	2						
15	CS. 32060/Z	WASHER-Shakeproof-Bolt	2						
16	UA. 302/Z	NUT-Bolt	2						
17	UG. 1181	BALL VALVE-Bleed Screw	2						
18	UG. 1175	SCREW-Bleed	2						
19	UG. 2427	CAP-Dust-Bleed Screw	2						
20	UG. 2325	STEADY POST	2						
21	UA. 352/Z	NUT-Steady Post	2						
22	UG. 1280	PIN-Pivot	2						
23	UG. 3120	LINK-Cylinders to Shoe Carrier	2						
24	UG. 4161	PIN-Link	2						
25	UG. 3640	CIRCLIP-Link Pin	2						
26	UG. 3142	JOINT-Grease Catcher	1						
27	UG. 3141	CATCHER-Grease	1						
28	UG. 3840	SETSCREW-Grease Catcher	8						
29	UG. 1169	CAP-Dust-Excluder	2						
30	UG. 3109	ASSEMBLY-Shoe Carrier Plate and Shakeback Stop	2						
31	UG. 3126	ASSEMBLY-Shoe Carrier Plate	2						
32	UG. 3635	BUSH	2						
33	UG. 3110	BUSH	2						
34	UG. 3658	COLLAR-Shakeback Stop	2						
35	UG. 2314	WASHER-Friction-Shakeback Stop	4						
36	UG. 2032	SPRING-Shakeback Stop	2						

Items marked † are not supplied as individual parts

Bentley Continental S3- From BC.2XA to 164 Incl.

BRAKES-


FRONT BRAKE-LEFT HAND

J.11
Amendment 1

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

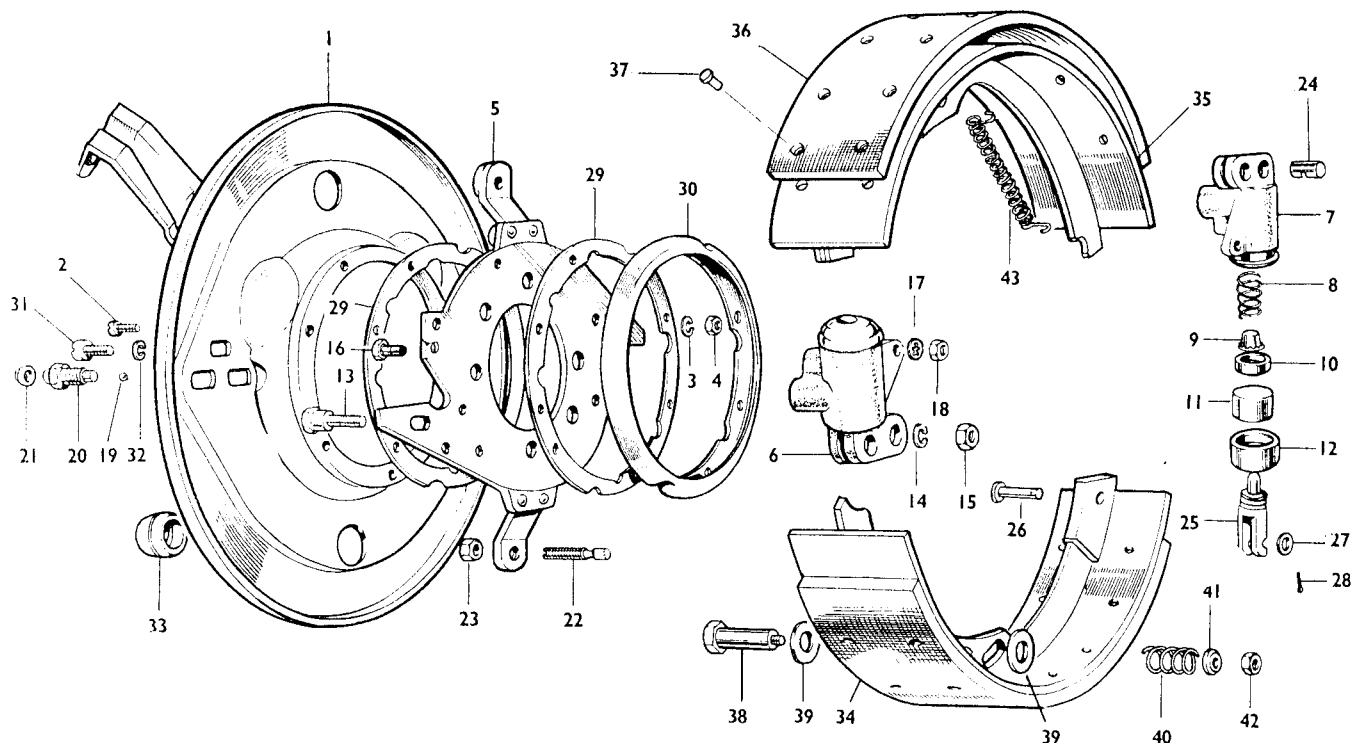

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
	UG. 4166	ASSEMBLY-Front Brake	1		37	UG. 3114	RIVET-Lining	24	
1	UG. 3703	ASSEMBLY-Water Excluder	1		38	UG. 3658	COLLAR-Shakeback Stop	2	
2	K. 1910/Z	SCREW-Excluder	8		39	UG. 3222	WASHER-Friction-Shakeback Stop	4	
3	K. 9006/Z	WASHER-Spring-Screw	8		40	UG. 2032	SPRING-Shakeback Stop	2	
4	K. 4307/Z	NUT-Screw	8		41	UG. 1262	WASHER-Clamping-Shakeback Stop	2	
5	UG. 3707	ASSEMBLY-Carrier Plate	1		42	UG. 3659	NUT-Clamping-Shakeback Stop	2	
6	UG. 3651	ASSEMBLY-Wheel Cylinder	2		43	UG. 1285	SPRING-Return-Shoe	2	
7	UG. 3645	BODY	2			CD. 1608	KIT-Service-Seal	1	
8	UG. 3647	SPRING	2			RH. 2035	ASSEMBLY-Lining and Shoe-(Ferodo)		
9	UG. 3649	ASSEMBLY-Seal Spreader	2						
10	UG. 1385	SEAL-Piston	2						
11	UG. 1177	PISTON-Cylinder	2						
12	UG. 3646	COVER-Dust	2						
13	UG. 658	BOLT-Cylinder	2						
14	K. 9012/Z	WASHER-Spring-Bolt	2						
15	UA. 355/Z	NUT-Bolt	2						
16	UG. 1379	BOLT-Cylinder	2						
17	CS. 32060/Z	WASHER-Shakeproof-Bolt	2						
18	UA. 302/Z	NUT-Bolt	2						
19	UG. 1181	BALL VALVE-Cylinder	2						
20	UG. 1175	SCREW-Bleed-Cylinder	2						
21	UG. 2427	CAP-Dust-Bleed Screw	2						
22	UG. 2325	STEADY POST	2						
23	UA. 352/Z	NUT-Steady Post	2						
24	UG. 1280	PIN-Pivot	2						
25	UG. 3709	LINK-Brake Shoe	2						
26	UG. 4160	PIN-Link	2						
27	UG. 1446	WASHER-Link Pin	2						
28	K. 4607/R	PIN-Split-Link Pin	2						
29	UG. 3761	JOINT-Grease Catcher	2						
30	UG. 3763	CATCHER-Grease	1						
31	UA. 2101/Z	SCREW-Cylinder	2						
32	K. 9008/Z	WASHER-Spring-Screw	2						
33	UG. 1169	CAP-Dust-Excluder	2						
34	UG. 2801	ASSEMBLY-Lining, Shoe and Shakeback	2						
35	UG. 2682	ASSEMBLY-Web and Rim	2						
36	UG. 2071	LINING-Brake Shoe-(Ferodo)	2						

Bentley Continental S.3- From BC.166.XA to BC.70XC Incl.
BC.74XC to 82 Incl.
BC.86XC. 88

Items marked † are not supplied as individual parts


**BRAKES-
FRONT BRAKE-LEFT HAND**

J.11/1.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD 111,

BENTLEY S3, BENTLEY CONTINENTAL S3.

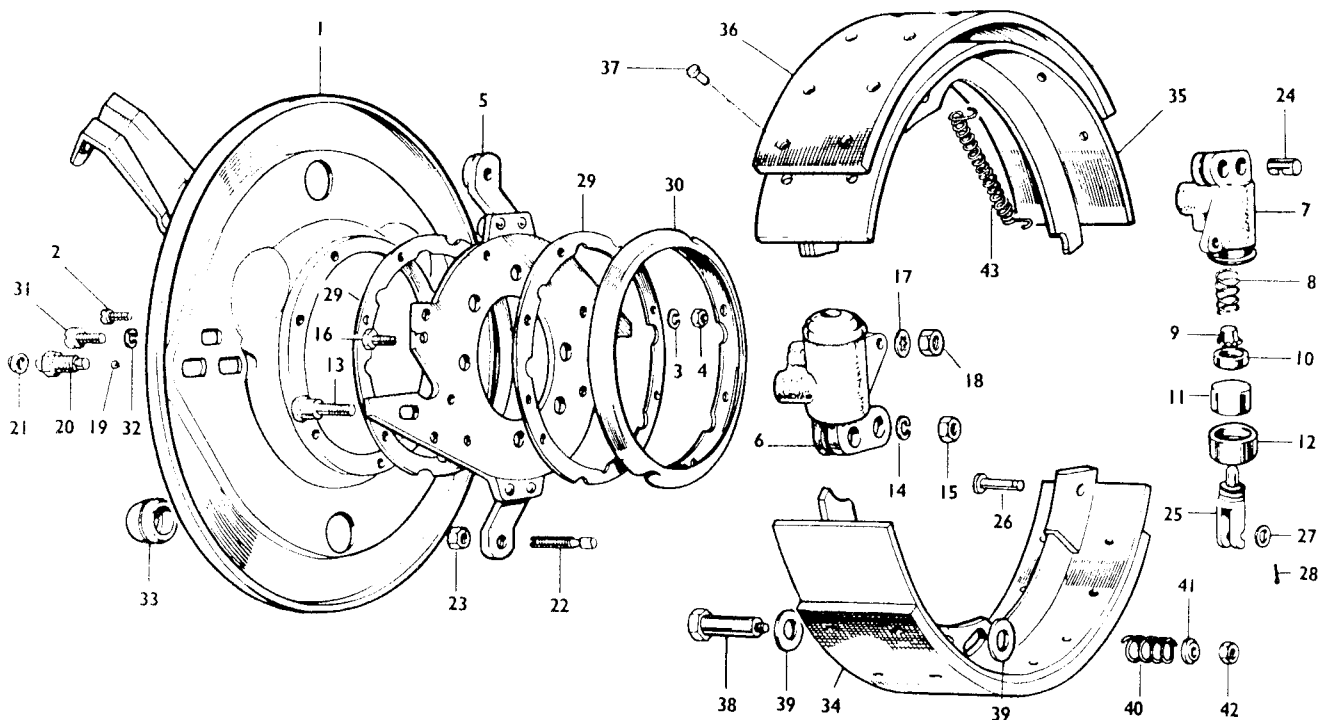

Ref	Part No.	Description	No. off	Remarks	Ref	Part No.	Description	No. off	Remarks
	UG. 4421	ASSEMBLY-Front Brake	1		37	UG. 3114	RIVET-Lining	24	
1	UG. 3703	ASSEMBLY-Water Excluder	1		38	UG. 3658	COLLAR-Shakeback	2	
2	K. 1910/Z	SCREW-Excluder	8		39	UG. 3222	WASHER-Friction-Shakeback Stop	4	
3	K. 9006/Z	WASHER-Spring-Screw	8		40	UG. 2032	SPRING-Shakeback Stop	2	
4	K. 4307/Z	NUT-Screw	8		41	UG. 1262	WASHER-Clamping-Shakeback Stop	2	
5	UG. 3707	ASSEMBLY-Carrier Plate	1		42	UG. 3659	NUT-Clamping-Shakeback Stop	2	
6	UG. 3651	ASSEMBLY-Wheel Cylinder	2		43	UG. 1285	SPRING-Return-Shoe	2	
7	UG. 3645	BODY	2			CD. 1608	KIT-Service-Seal	1	
8	UG. 3647	SPRING-Cylinder	2			RH. 2300	ASSEMBLY-Lining and Shoe-(Ferodo)-(Less Shakeback Stops)		
9	UG. 3649	ASSEMBLY-Seal Spreader	2						
10	UG. 1385	SEAL-Piston	2						
11	UG. 1177	PISTON-Cylinder	2						
12	UG. 3646	COVER-Dust	2						
13	UG. 658	BOLT-Cylinder	2						
14	K. 9012/Z	WASHER-Spring-Bolt	2						
15	UA. 355/Z	NUT-Bolt	2						
16	UG. 1379	BOLT-Cylinder	2						
17	CS. 32060/Z	WASHER-Shakeproof-Bolt	2						
18	UA. 302/Z	NUT-Bolt	2						
19	UG. 1181	BALL VALVE-Cylinder	2						
20	UG. 1175	SCREW-Bleed-Cylinder	2						
21	UG. 2427	CAP-Dust-Bleed Screw	2						
22	UG. 2325	STEADY POST	2						
23	UA. 352/Z	NUT-Steady Post	2						
24	UG. 1280	PIN-Pivot	2						
25	UG. 3709	LINK-Brake Shoe	2						
26	UG. 4160	PIN-Link	2						
27	UG. 1446	WASHER-Link Pin	2						
28	K. 4607/R	PIN-Split-Link Pin	2						
29	UG. 3761	JOINT-Grease Catcher	2						
30	UG. 3763	CATCHER-Grease	2						
31	UA. 2101/Z	SCREW-Cylinder	2						
32	K. 9008/Z	WASHER-Spring-Screw	2						
33	UG. 1169	CAP-Dust-Excluder	2						
34	UG. 4413	ASSEMBLY-Lining, Shoe and Shakeback	2						
35	UG. 4411	ASSEMBLY-Web and Rim	2						
36	UG. 4407	LINING-Brake Shoe- (Ferodo)	2						

Bentley Continental S.3- From BC.72XC, 84, 90 Onwards

Items marked † are not supplied as individual parts

BRAKES-


FRONT BRAKE-LEFT HAND

J.11/2

PARTS LIST

ROLLS-ROYCE SILVER CLOUD III,

BENTLEY S3, BENTLEY CONTINENTAL S3,

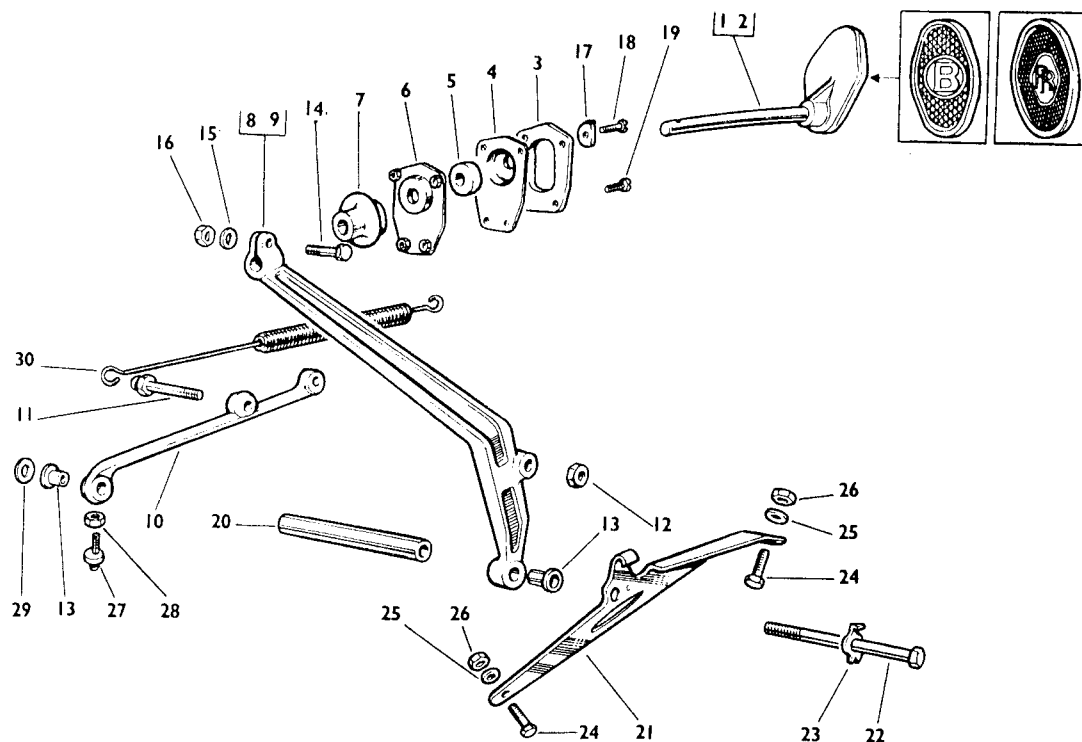

Ref.	Part No.	Description	No. off	Remarks	Ref.	Part No.	Description	No. off	Remarks
1	UR.4655	ASSEMBLY—Brake Pedal	1	Bentley.					
2	UR.4656	ASSEMBLY—Brake Pedal	1	Rolls-Royce.					
3	UR.5059	JOINT—Housing—Brake Pedal	1						
4	UR.5060	HOUSING—Upper	1						
5	UR.1009	SEAL—Housing	1						
6	UR.5064	ASSEMBLY—Housing—Lower	1						
7	UR.1634	SEAL—Brake Pedal	1						
8	UR.3159	ASSEMBLY—Brake Pedal Lever	1						
9	UR.3160	LEVER	1						
10	UR.3161	LEVER—Brake Operating	1						
11	UR.3163	BOLT—Return Spring	1						
12	RE.22430	NUT—Bolt	1						
13	UR.3164	BUSH—Oilite—Levers	2						
14	UA.157/Z	BOLT—Pedal Stem	1						
15	UA.1252/Z	WASHER—Plain—Bolt	1						
16	UA.302/Z	NUT—Bolt	1						
17	UR.1570	WASHER—Screw—Housing	4						
18	CS.30542/Z	SCREW—Housing	3						
19	CS.30545/Z	SCREW—Housing	1						
20	UR.3166	TUBE—Distance	1						
21	UR.4974	BRACKET—Pedal Pivot	1						
22	UR.2483	SETSCREW—Pivot	1						
23	UR.2482	WASHER—Tab—Setscrew	1						
24	UA.152/Z	BOLT—Bracket—Pedal Pivot	2						
25	UA.1252/Z	WASHER—Plain—Bolt	2						
26	UA.352/Z	NUT—Bolt	2						
27	UR.835	ASSEMBLY—Operating Stop and Screw	1						
28	UA.351/Z	NUT—Locking—Screw	1						
29	UG.900	WASHER—Setscrew—Pivot	1						
30	UR.1279	SPRING—Pull Off	1						

Items marked † are not supplied as individual parts

Silver Cloud III—From SAZ.1 to 61 incl.

Silver Cloud III—From SCX.1.

Bentley S.3— From B.2.AV to 26 inc.

Bentley S.3— From B.2.CN

Silver Cloud III, LWB—From CAL.1

Bentley S.3, LWB— From BAL.2

Bentley Continental S.3—From BC.2.XA


BRAKES—

BRAKE PEDAL—RH CARS

PARTS LIST

ROLLS-ROYCE SILVER CLOUD III,

BENTLEY S3, BENTLEY CONTINENTAL S3,

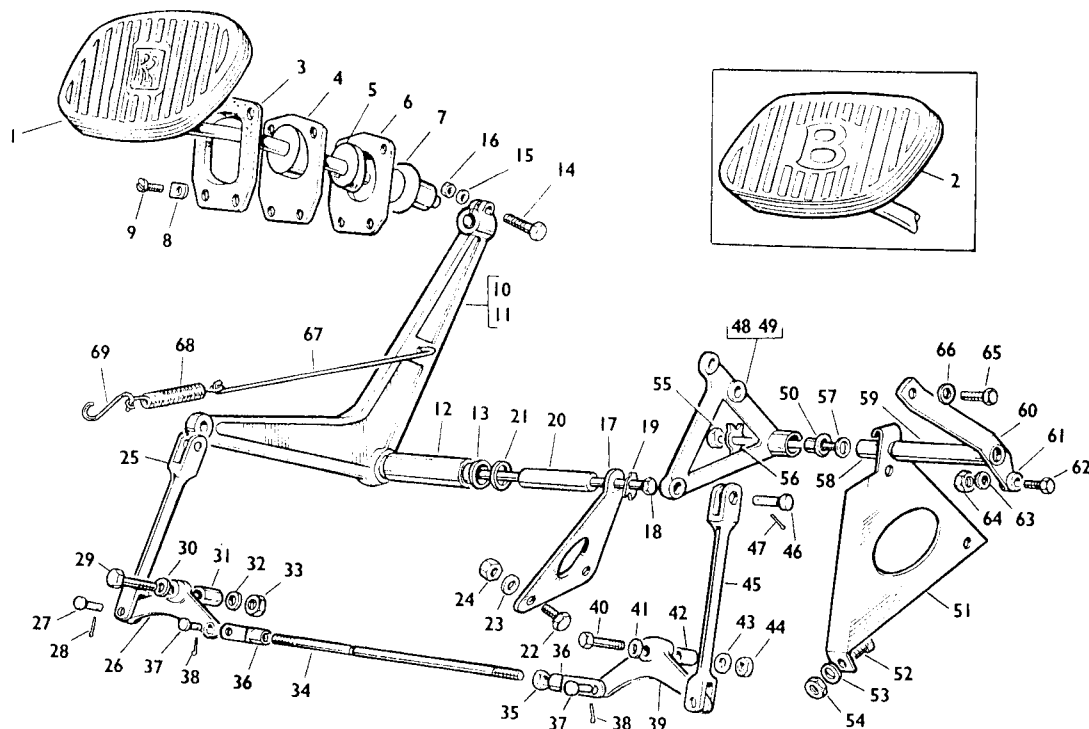

Ref.	Part No.	Description	No. off	Remarks	Ref.	Part No.	Description	No. off	Remarks
1	UR.5143	ASSEMBLY-Brake Pedal	1	Rolls-Royce. Bentley.	41	UA.1252/Z	WASHER-Plain-Bolt	1	
2	UR.5142	ASSEMBLY-Brake Pedal	1		42	UR.5777	TUBE-Distance	1	
3	UR.5059	JOINT-Housing-Brake Pedal	1		43	K.4410/Z	WASHER-Spacing	2	
4	UR.5060	HOUSING-Upper	1		44	UA.302/Z	NUT-Bolt	1	
5	UR.1009	SEAL-Housing	1		45	UR.4026	LINK-Connecting Lever-RH	1	
6	UR.5064	ASSEMBLY-Housing-Lower	1		46	K.6507/Z	PIN-Jaw to Lever	2	
7	UR.1634	SEAL-Brake Pedal	1		47	K.4608/Z	PIN-Split-Pin	2	
8	UR.1570	WASHER-Plain-Screw-Housing	4		48	UR.4028	ASSEMBLY-Bell Crank Lever	1	
9	CS.30542/Z	SCREW-Housing	4		49	UR.4022	LEVER	1	
10	UR.5001	ASSEMBLY-Lever-Brake Pedal	1		50	RF.7381	BUSH-Oilite	2	
11	UR.5000	LEVER	1		51	UR.4974	BRACKET-Support	1	
12	UR.932	TUBE-Lever	1		52	UA.152/Z	BOLT-Support Bracket	2	
13	RF.7381	BUSH-Oilite	2		53	UA.1252/Z	WASHER-Plain-Bolt	2	
14	UA.156/Z	BOLT-Pedal Stem	1		54	UA.302/Z	NUT-Bolt	2	
15	UA.1252/Z	WASHER-Plain-Bolt	1		55	UR.2483	BOLT-Pivot	1	
16	UA.302/Z	NUT-Bolt	1		56	UR.2482	WASHER-Lock-Pivot Bolt	1	
17	UR.933	PLATE-Support-Lever	1		57	UG.900	WASHER-Pivot Bolt	2	
18	UA.179/Z	BOLT-Pivot-Lever	1		58	UR.945	TUBE-Distance-Bush	1	
19	UR.2482	WASHER-Lock-Pivot Bolt	1		59	UR.941	TUBE-Distance-Pivot Bolt	1	
20	UR.931	TUBE-Distance-Pivot Bolt	1		60	UR.4027	LEVER-Operating-Stop Lamp Switch	1	
21	UG.900	WASHER-Pivot Bolt	2		61	UR.943	CAM-Operating-Stop Lamp Switch	1	
22	UA.152/Z	BOLT-Support Plate	2		62	KC.173/Z	BOLT-Cam to Lever	1	
23	UA.1252/Z	WASHER-Plain-Bolt	2		63	K.4404/Z	WASHER-Plain-Bolt	1	
24	UA.302/Z	NUT-Bolt	2		64	K.4307/Z	NUT-Bolt	1	
25	UR.4666	LINK-Connecting Lever-LH	1		65	UA.102/Z	BOLT-Lever to Bell Crank Lever	1	
26	UR.5776	LEVER-Bell Crank	1		66	UA.1251/Z	WASHER-Plain-Bolt	1	
27	K.6507/Z	PIN-Jaw to Lever	1		67	UR.942	LINK-Pull Off Spring to Lever	1	
28	K.4608/Z	PIN-Split-Pin	2		68	GB.5097	SPRING-Pull Off	1	
29	UA.161/Z	BOLT-Bell Crank Lever	1		69	RG.5050	LINK-Pull Off Spring	1	
30	UA.1252/Z	WASHER-Plain-Bolt	1						
31	UR.5777	TUBE-Distance	1						
32	K.4410/Z	WASHER-Spacing	2						
33	UA.302/Z	NUT-Bolt	1						
34	UR.936	ROD-Intermediate	1						
35	UA.351/Z	NUT-Lock-Rod	1						
36	UG.1184	JAW-Rod	2						
37	K.6507/Z	PIN-Rod	2						
38	K.4608/Z	PIN-Split-Pin	2						
39	UR.5776	LEVER-Bell Crank	1						
40	UA.161/Z	BOLT-Bell Crank Lever	1						

Silver Cloud III—From SCX.1

Bentley S.3— From B.2CN

Silver Cloud III, LWB—From CAL.1

Bentley S.3, LWB— From BAL.2

Bentley Continental S.3—From BC.2.XA

Items marked † are not supplied as individual parts

BRAKES—

BRAKE PEDAL—LH CARS