



Non-dipping headlamps: toggle only when on RT 8/7/05

Original

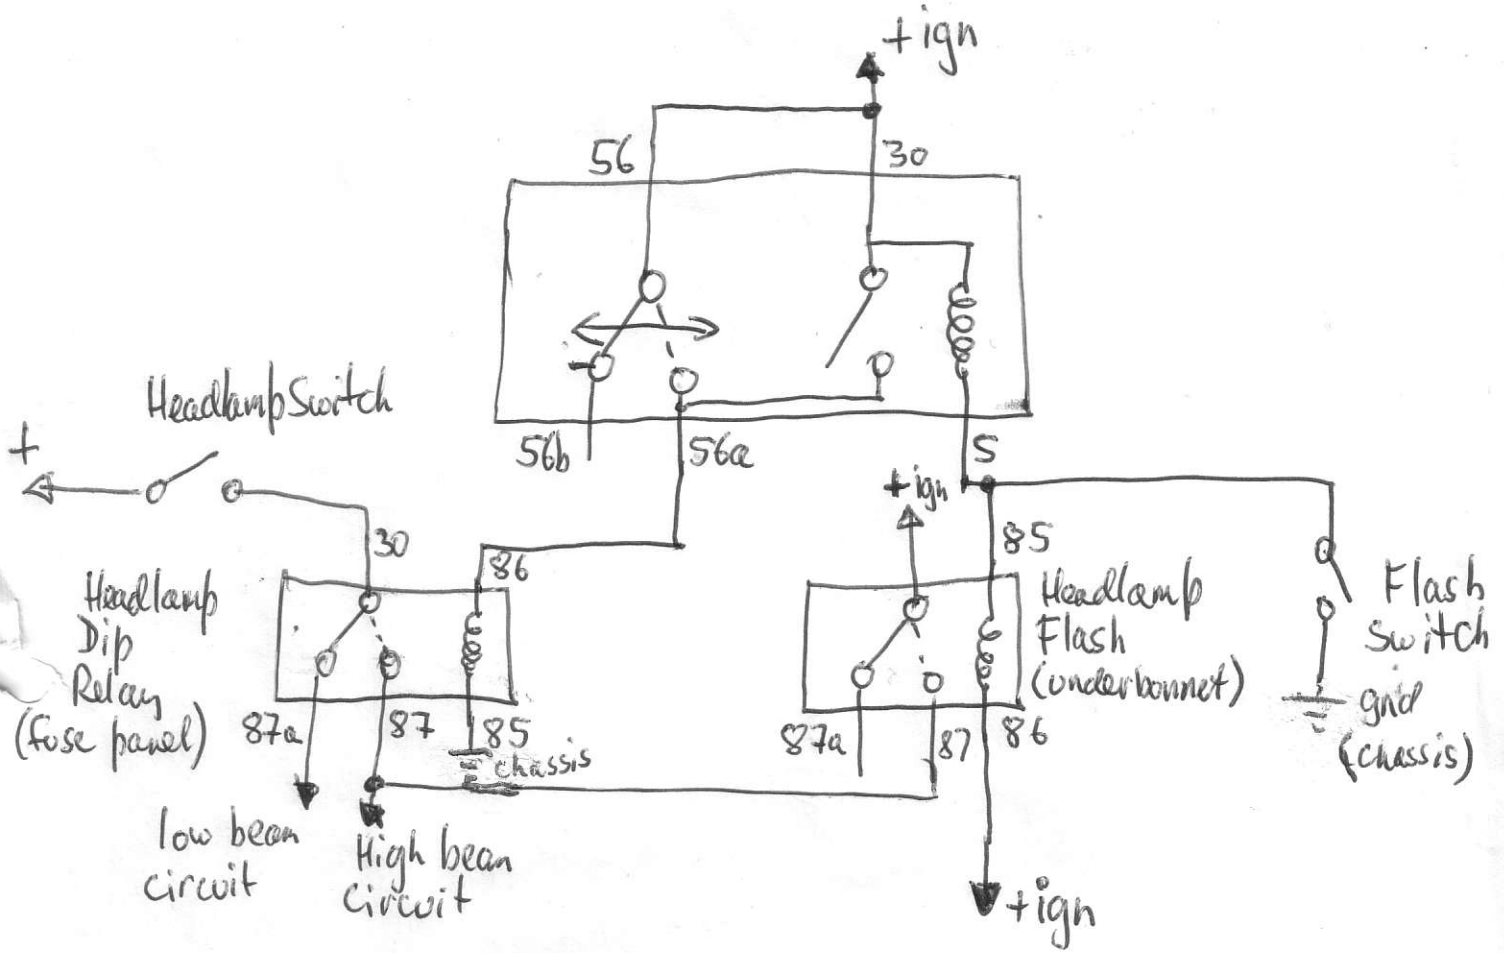

Modified

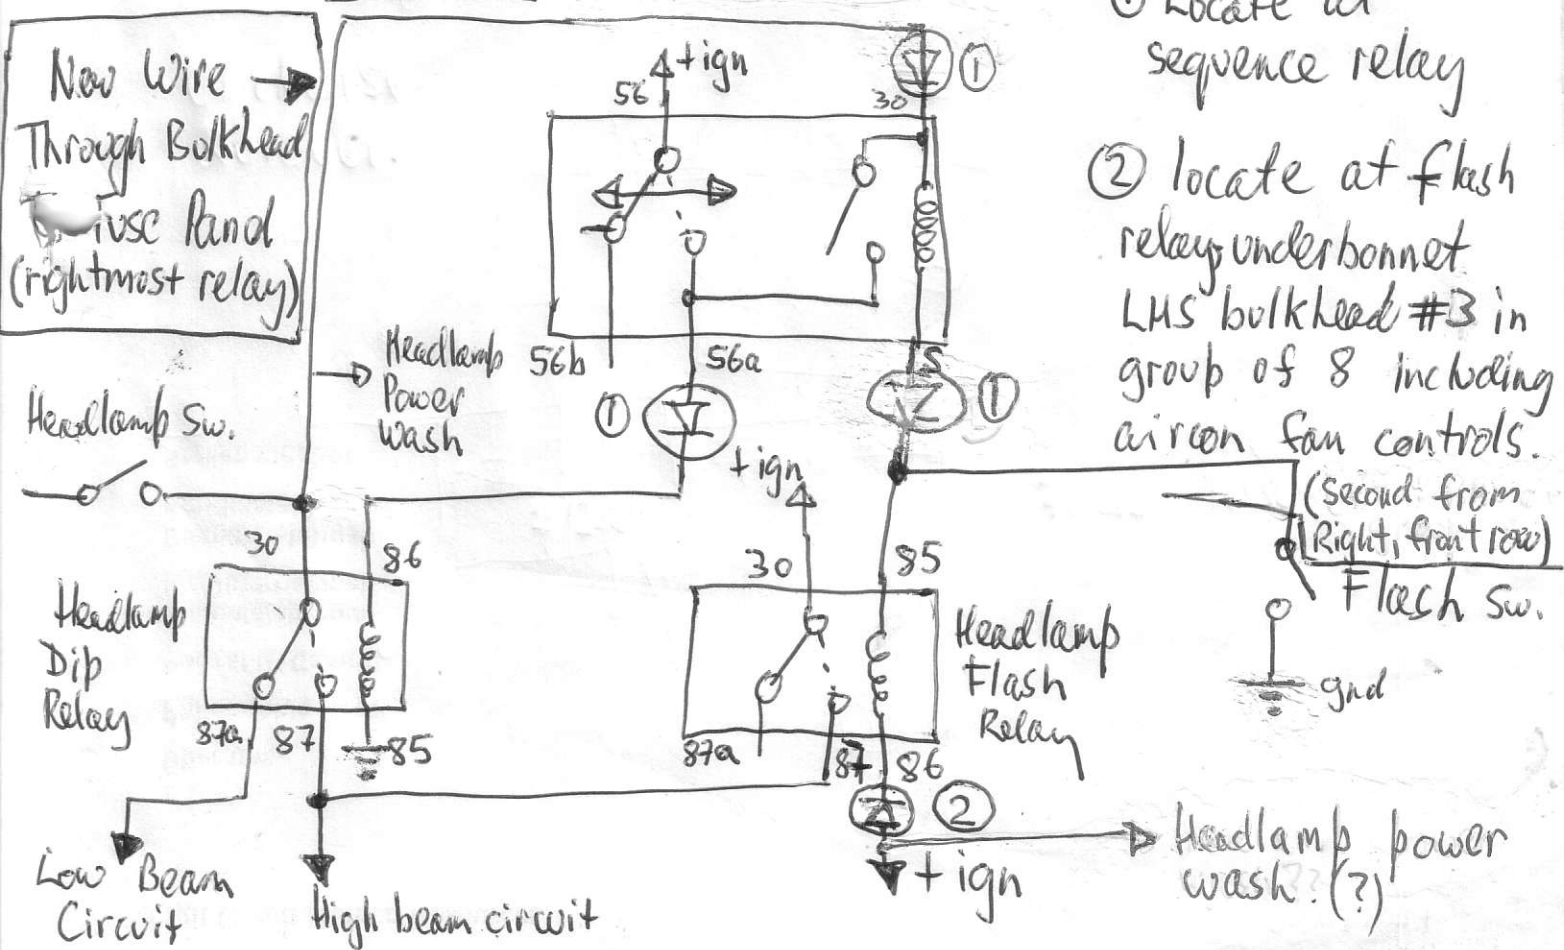

- ① Locate at sequence relay
- ② locate at flash relay under bonnet LHS bulkhead #3 in group of 8 including aircon fan controls.

(Second from Right, front row)
Flash Sw.
gnd

Headlamp power wash? (?)