

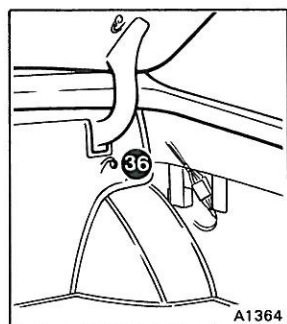
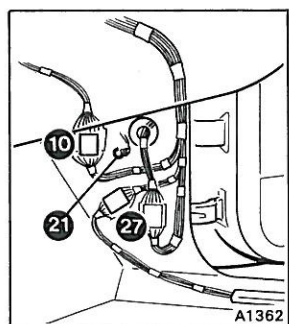
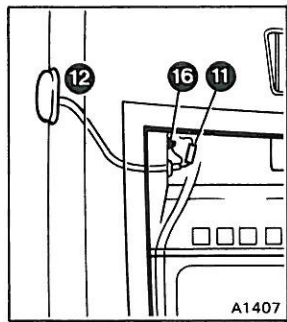


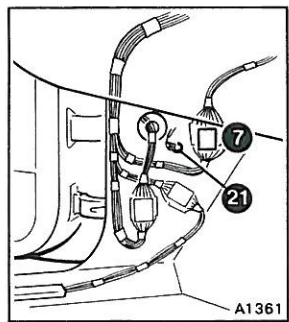


Direction indicators and hazard warning


Contents	Specific application	Pages							
		Rolls-Royce		Corniche / Corniche II	Bentley	Mulsanne	Mulsanne S	Turbo R	Continental
Silver Spirit	Silver Spur	Eight							
Direction indicators and hazard warning									
Component location	1987 model year cars	12-2	12-2	12-3	12-2	12-2	—	12-2	12-3
Wiring diagram		12-2	12-2	12-3	12-2	12-2	—	12-2	12-3
Component location	1988 model year cars	12-4	12-4	12-5	12-4	—	12-4	12-4	12-5
Wiring diagram		12-4	12-4	12-5	12-4	—	12-4	12-4	12-5

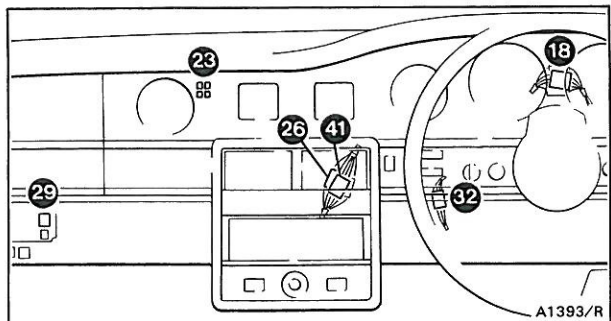

 
- 7 Left-hand main to valance loom plug and socket 9-way
- 8 Left-hand indicators warning lamp
- 9 Right-hand indicators warning lamp
- 10 Right-hand main to valance loom plug and socket 12-way
- 11 Right-hand repeater barrel connector
- 12 Right-hand repeater lamp
- 13 Splice D



 
- 14 Right-hand front indicator lamp
- 15 Right-hand front earth point (engine compartment)
- 16 Right-hand valance earth point
- 17 Splice C



- 18 Steering column plug and socket 7-way
- 19 Direction indicators switch
- 20 Splice B

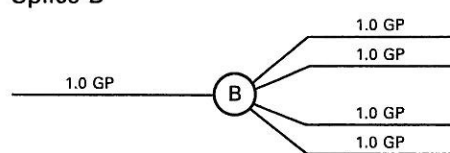


- 21 'A' post earth point
- 22 Warning lamp — hazard warning
- 23 Instrument panel earth point
- 24 Splice E

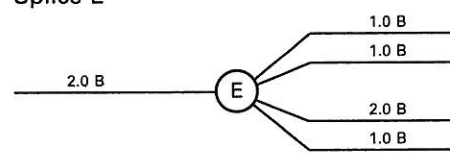


- 25 Splice F
- 26 Centre console plug and socket 3-way




- 27 Right-hand 'A' post main to body loom plug and socket 6-way
- 28 Right-hand rear indicator lamp
- 29 Electronic flasher unit
- 30 Splice H

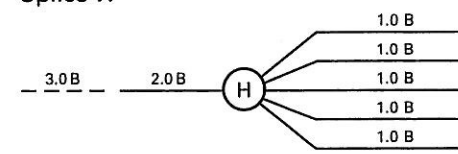


- 31 Splice G
- 32 Inboard switch panel plug and socket 7-way
- 33 Hazard warning switch
- 34 Left-hand rear indicator lamp
- 35 Splice J

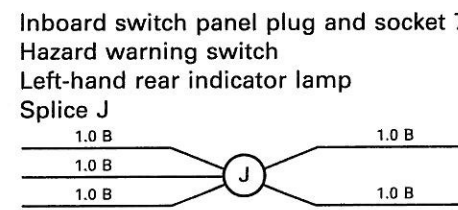

- 36 Luggage compartment earth point — right-hand
- 37 Splice K

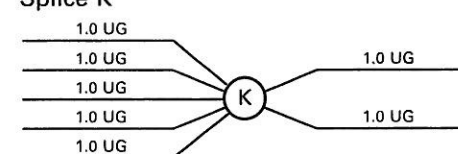


 
- 38 Fuseboard F1, fuse B2, 10 Amp
- 39 Fuseboard F2, fuse C2, 20 Amp
- 40 Splice L








- 41 Centre console plug and socket 12-way

Key to 12-2

 

- 1 Left-hand front earth point (engine compartment)
- 2 Left-hand front indicator lamp
- 3 Splice A
- 4 Left-hand valance earth point
- 5 Left-hand repeater lamp
- 6 Left-hand repeater barrel connector

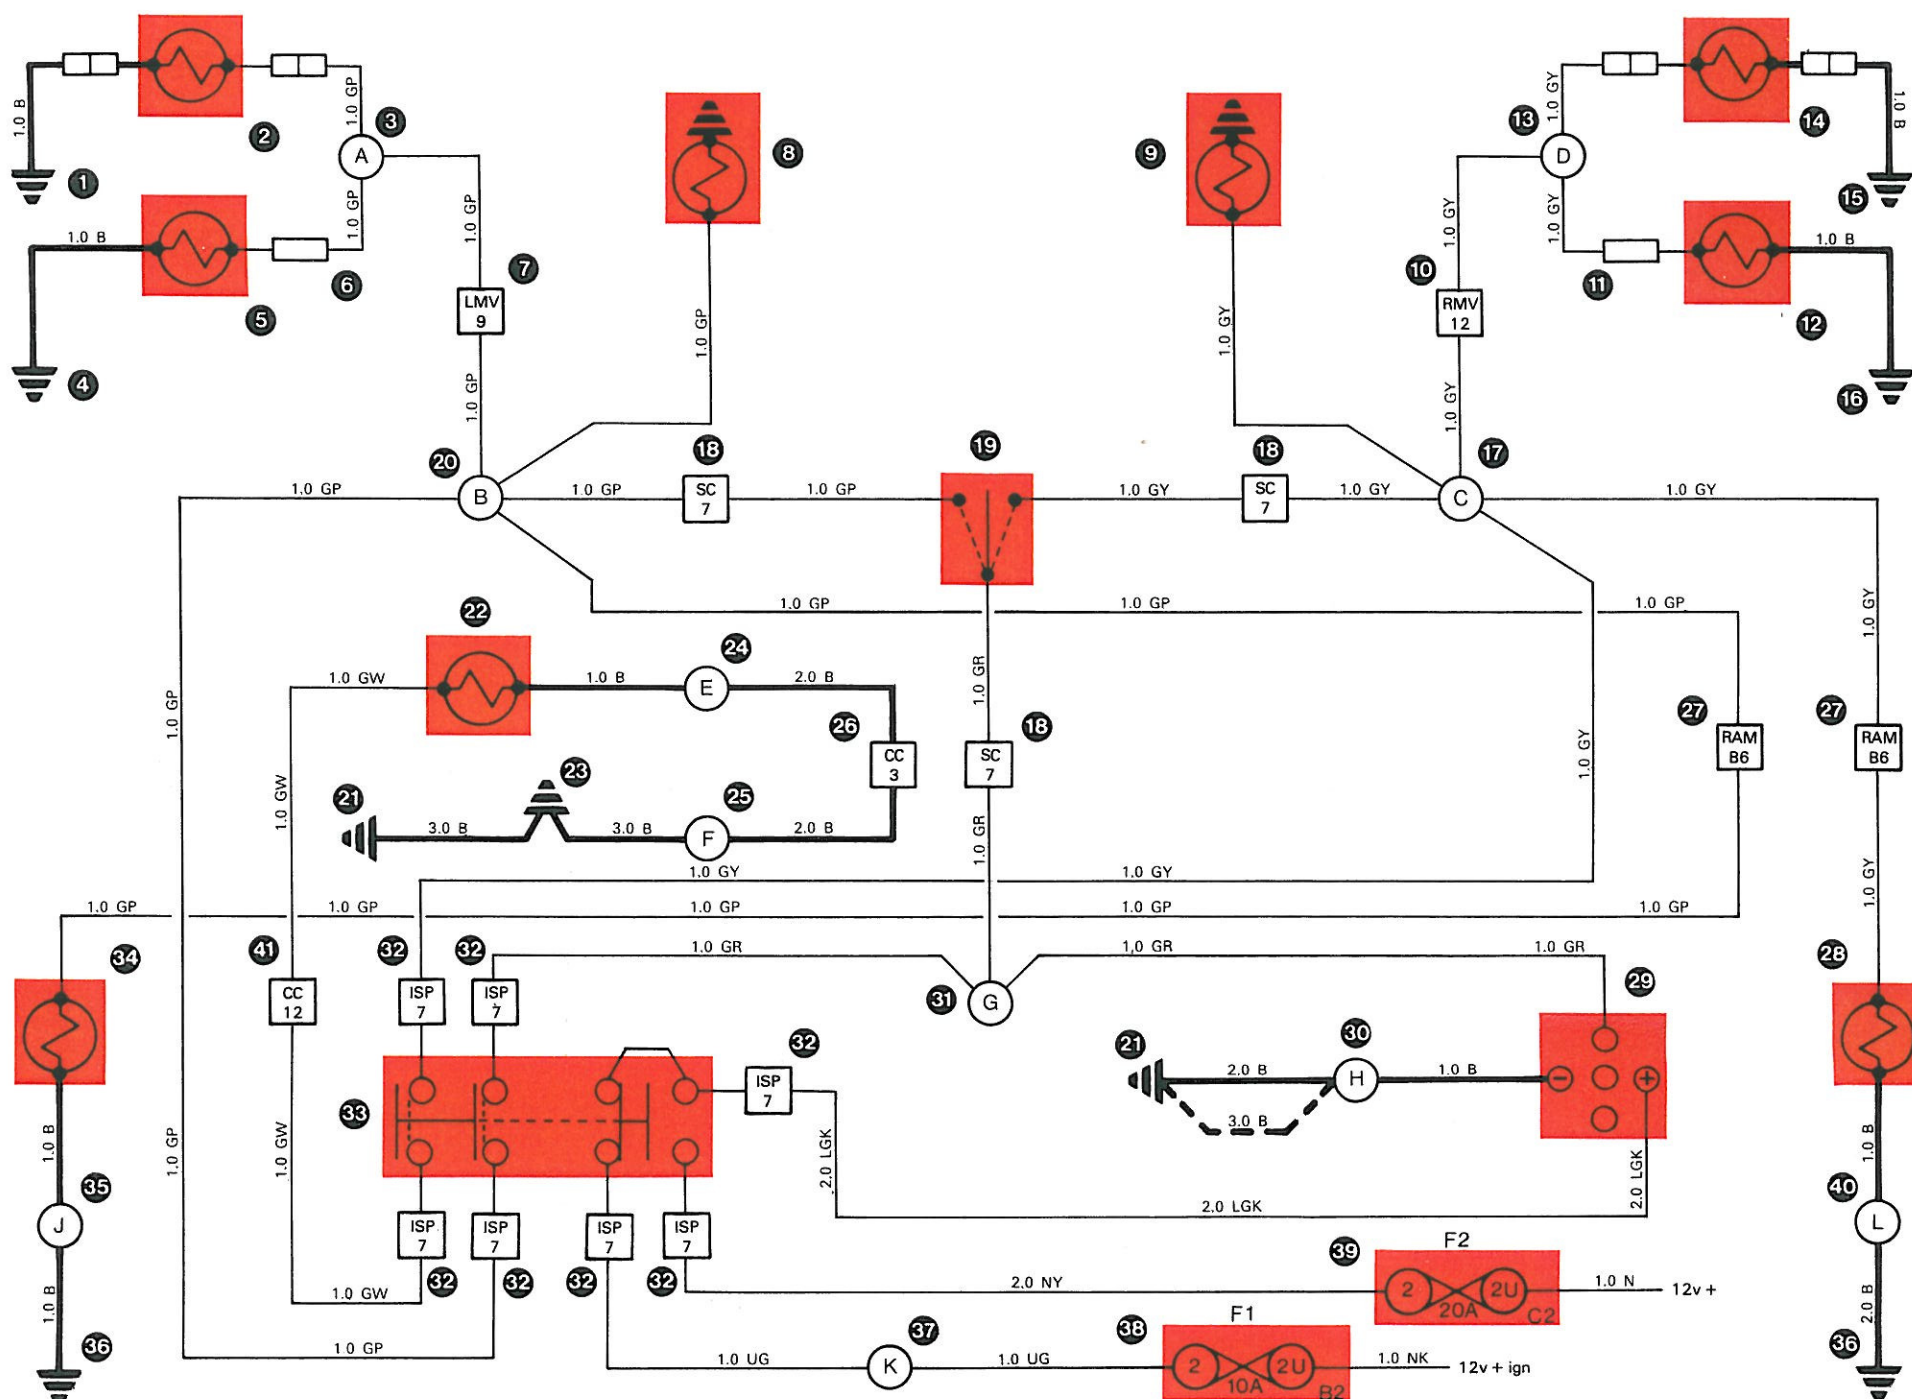

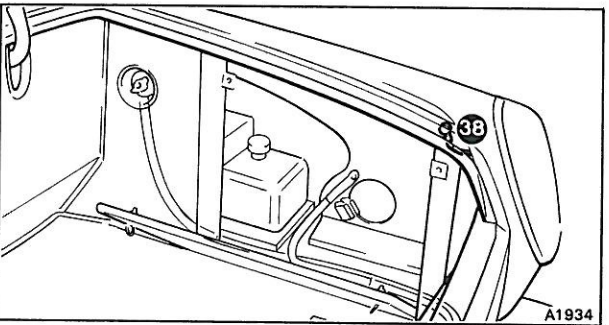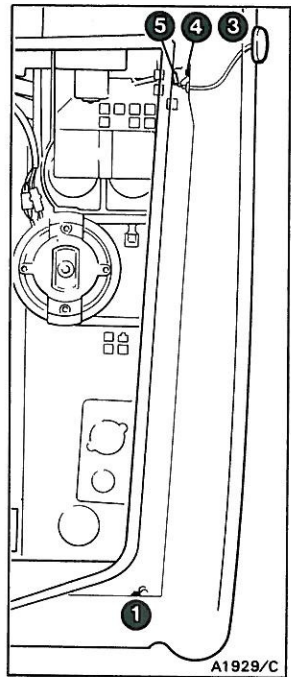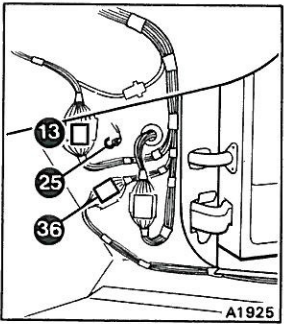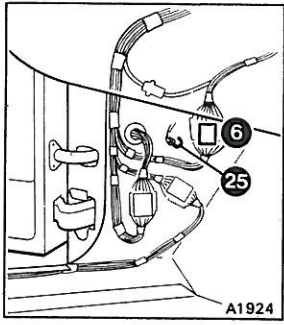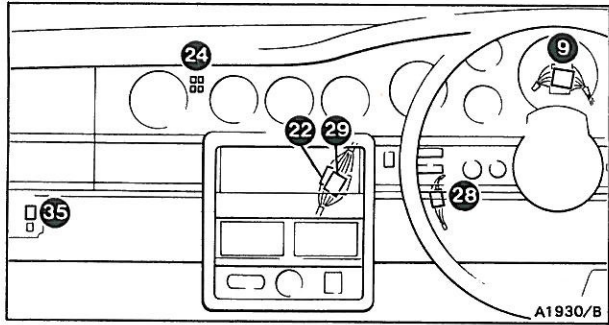


Key to 12-3


- 1 Left-hand front earth point (engine compartment)
- 2 Left-hand front indicator lamp
- 3 Left-hand repeater lamp (*Cars other than those conforming to a North American specification*)
- 4 Left-hand valance earth point
- 5 Left-hand repeater barrel connector
- 6 Left-hand main to valance loom plug and socket 9-way
- 7 Left-hand indicators warning lamp
- 8 Splice A

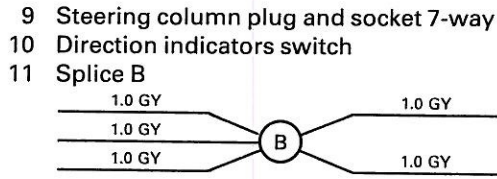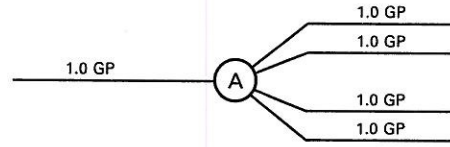

 - 9 Steering column plug and socket 7-way
- 10 Direction indicators switch
- 11 Splice B
- 12 Right-hand indicators warning lamp
- 13 Right-hand main to valance loom plug and socket 12-way
- 14 Splice C




 - 15 Right-hand repeater barrel connector
- 16 Right-hand front indicator lamp
- 17 Right-hand repeater lamp (*Cars other than those conforming to a North American specification*)
- 18 Right-hand front earth point (engine compartment)
- 19 Right-hand valance earth point
- 20 Warning lamp — hazard warning
- 21 Splice D




- 22 Centre console plug and socket 3-way

 
- 23 Splice E




- 24 Instrument panel earth point
- 25 'A' post earth point
- 26 Left-hand rear indicator lamp
- 27 Luggage compartment earth point — left-hand rear
- 28 Inboard switch panel plug and socket 7-way
- 29 Centre console plug and socket 12-way
- 30 Splice F

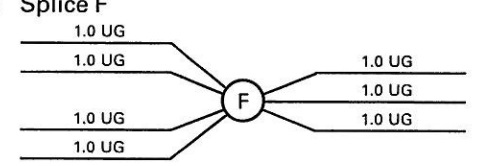

 
- 31 Fuseboard F1, fuse B2, 10 Amp
- 32 Fuseboard F2, fuse C2, 20 Amp
- 33 Splice G








- 34 Splice H

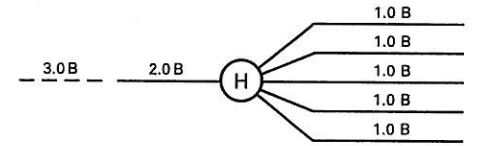









- 35 Electronic flasher unit
- 36 Right-hand 'A' post main to body loom plug and socket 6-way
- 37 Right-hand rear indicator lamp
- 38 Luggage compartment earth point — right-hand rear

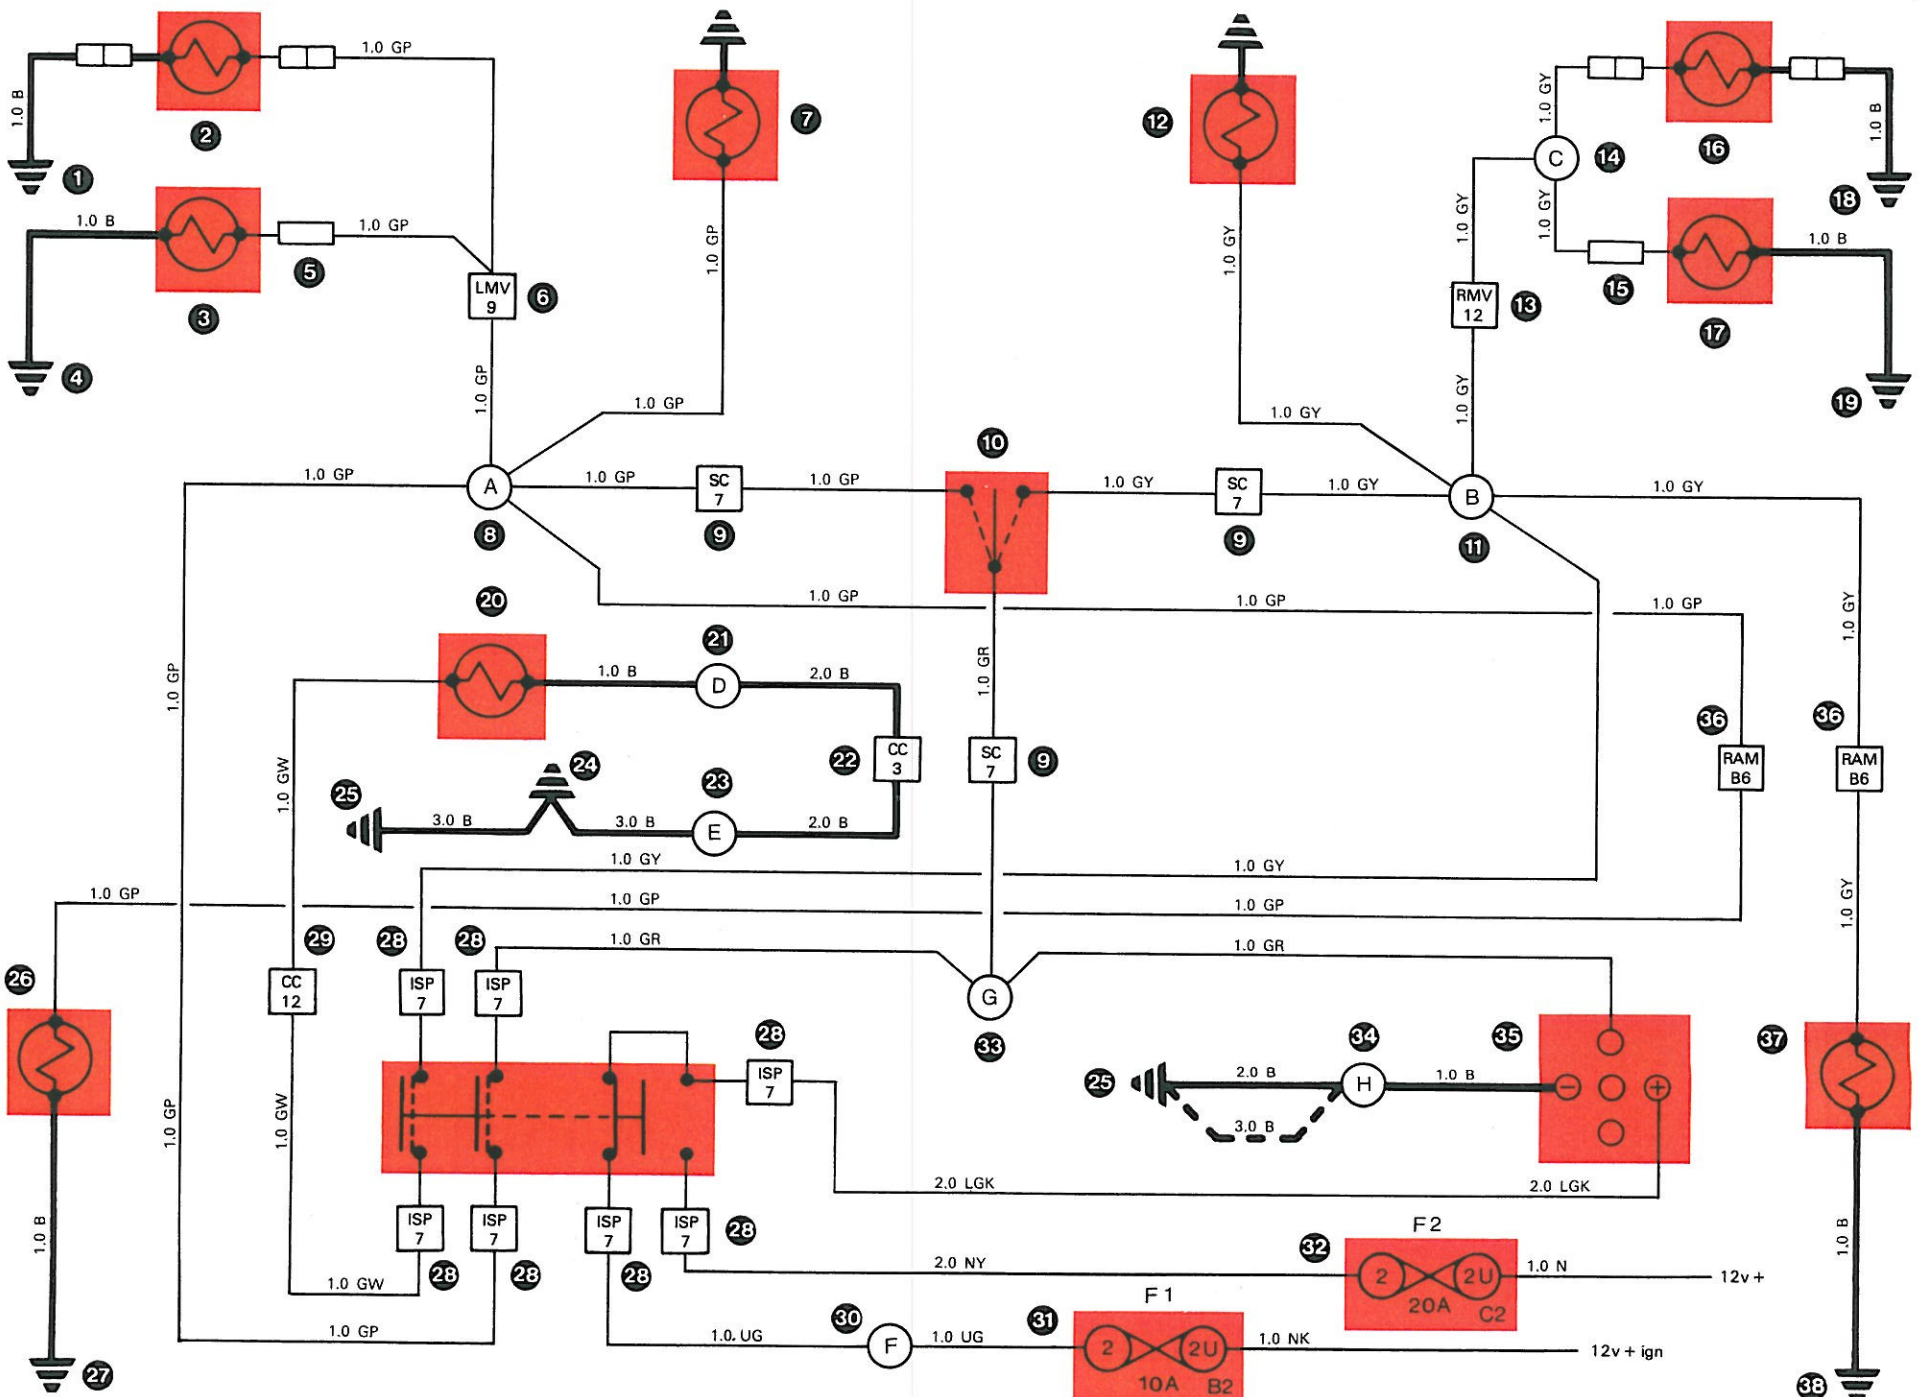

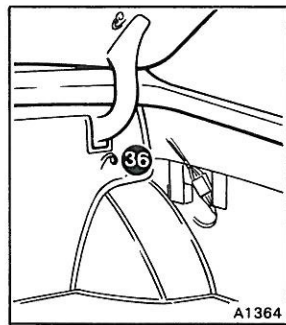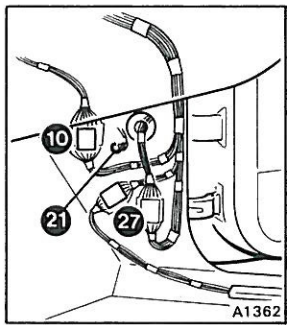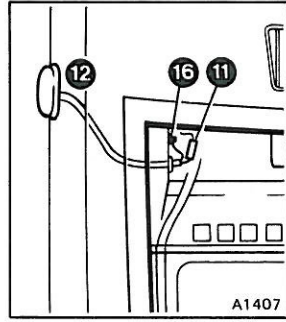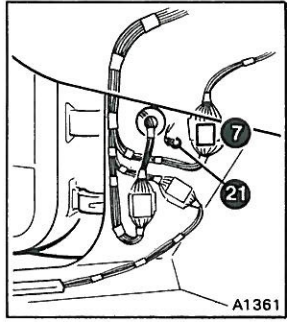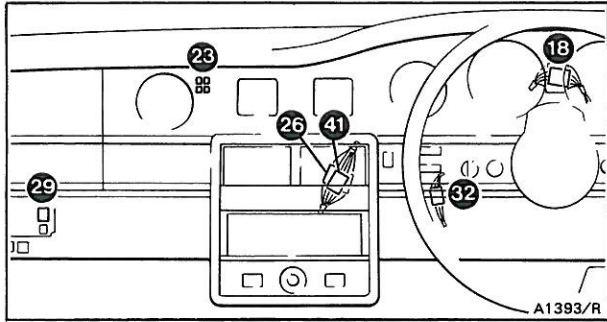


- 7 Left-hand main to valance loom plug and socket 9-way
- 8 Left-hand indicators warning lamp
- 9 Right-hand indicators warning lamp
- 10 Right-hand main to valance loom plug and socket 12-way
- 11 Right-hand repeater barrel connector
- 12 Right-hand repeater lamp
- 13 Splice D
- 14 Right-hand front indicator lamp
- 15 Right-hand front earth point (engine compartment)
- 16 Right-hand valance earth point
- 17 Splice C
- 18 Steering column plug and socket 7-way
- 19 Direction indicators switch
- 20 Splice B
- 21 'A' post earth point
- 22 Left-hand hazard warning indicator lamp (when fitted)
- 23 Instrument panel earth point
- 24 Splice E

   - 26 Centre console plug and socket 3-way
- 27 Right-hand 'A' point main to body loom plug and socket 6-way
- 28 Right-hand rear indicator lamp
- 29 Electronic flasher unit
- 30 Splice H

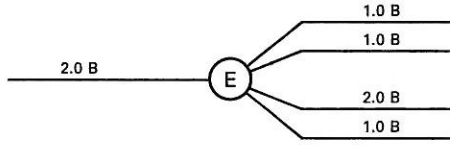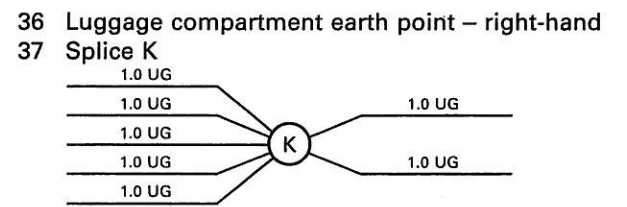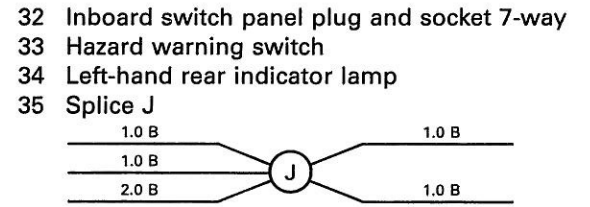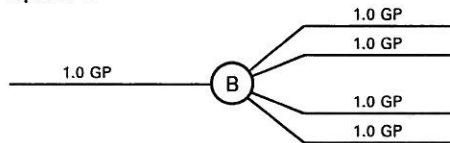
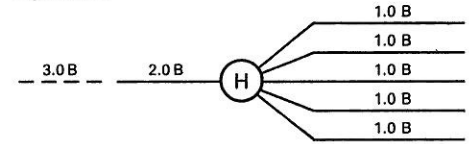







 
- 32 Inboard switch panel plug and socket 7-way
- 33 Hazard warning switch
- 34 Left-hand rear indicator lamp
- 35 Splice J
- 36 Luggage compartment earth point - right-hand
- 37 Splice K
- 38 Fuseboard F1, fuse B2, 10 Amp
- 39 Fuseboard F2, fuse C2, 20 Amp
- 40 Splice L



Key to 12-4

  
- 1 Left-hand front earth point (engine compartment)
- 2 Left-hand front indicator lamp
- 3 Splice A
- 4 Left-hand valance earth point
- 5 Left-hand repeater lamp
- 6 Left-hand repeater barrel connector

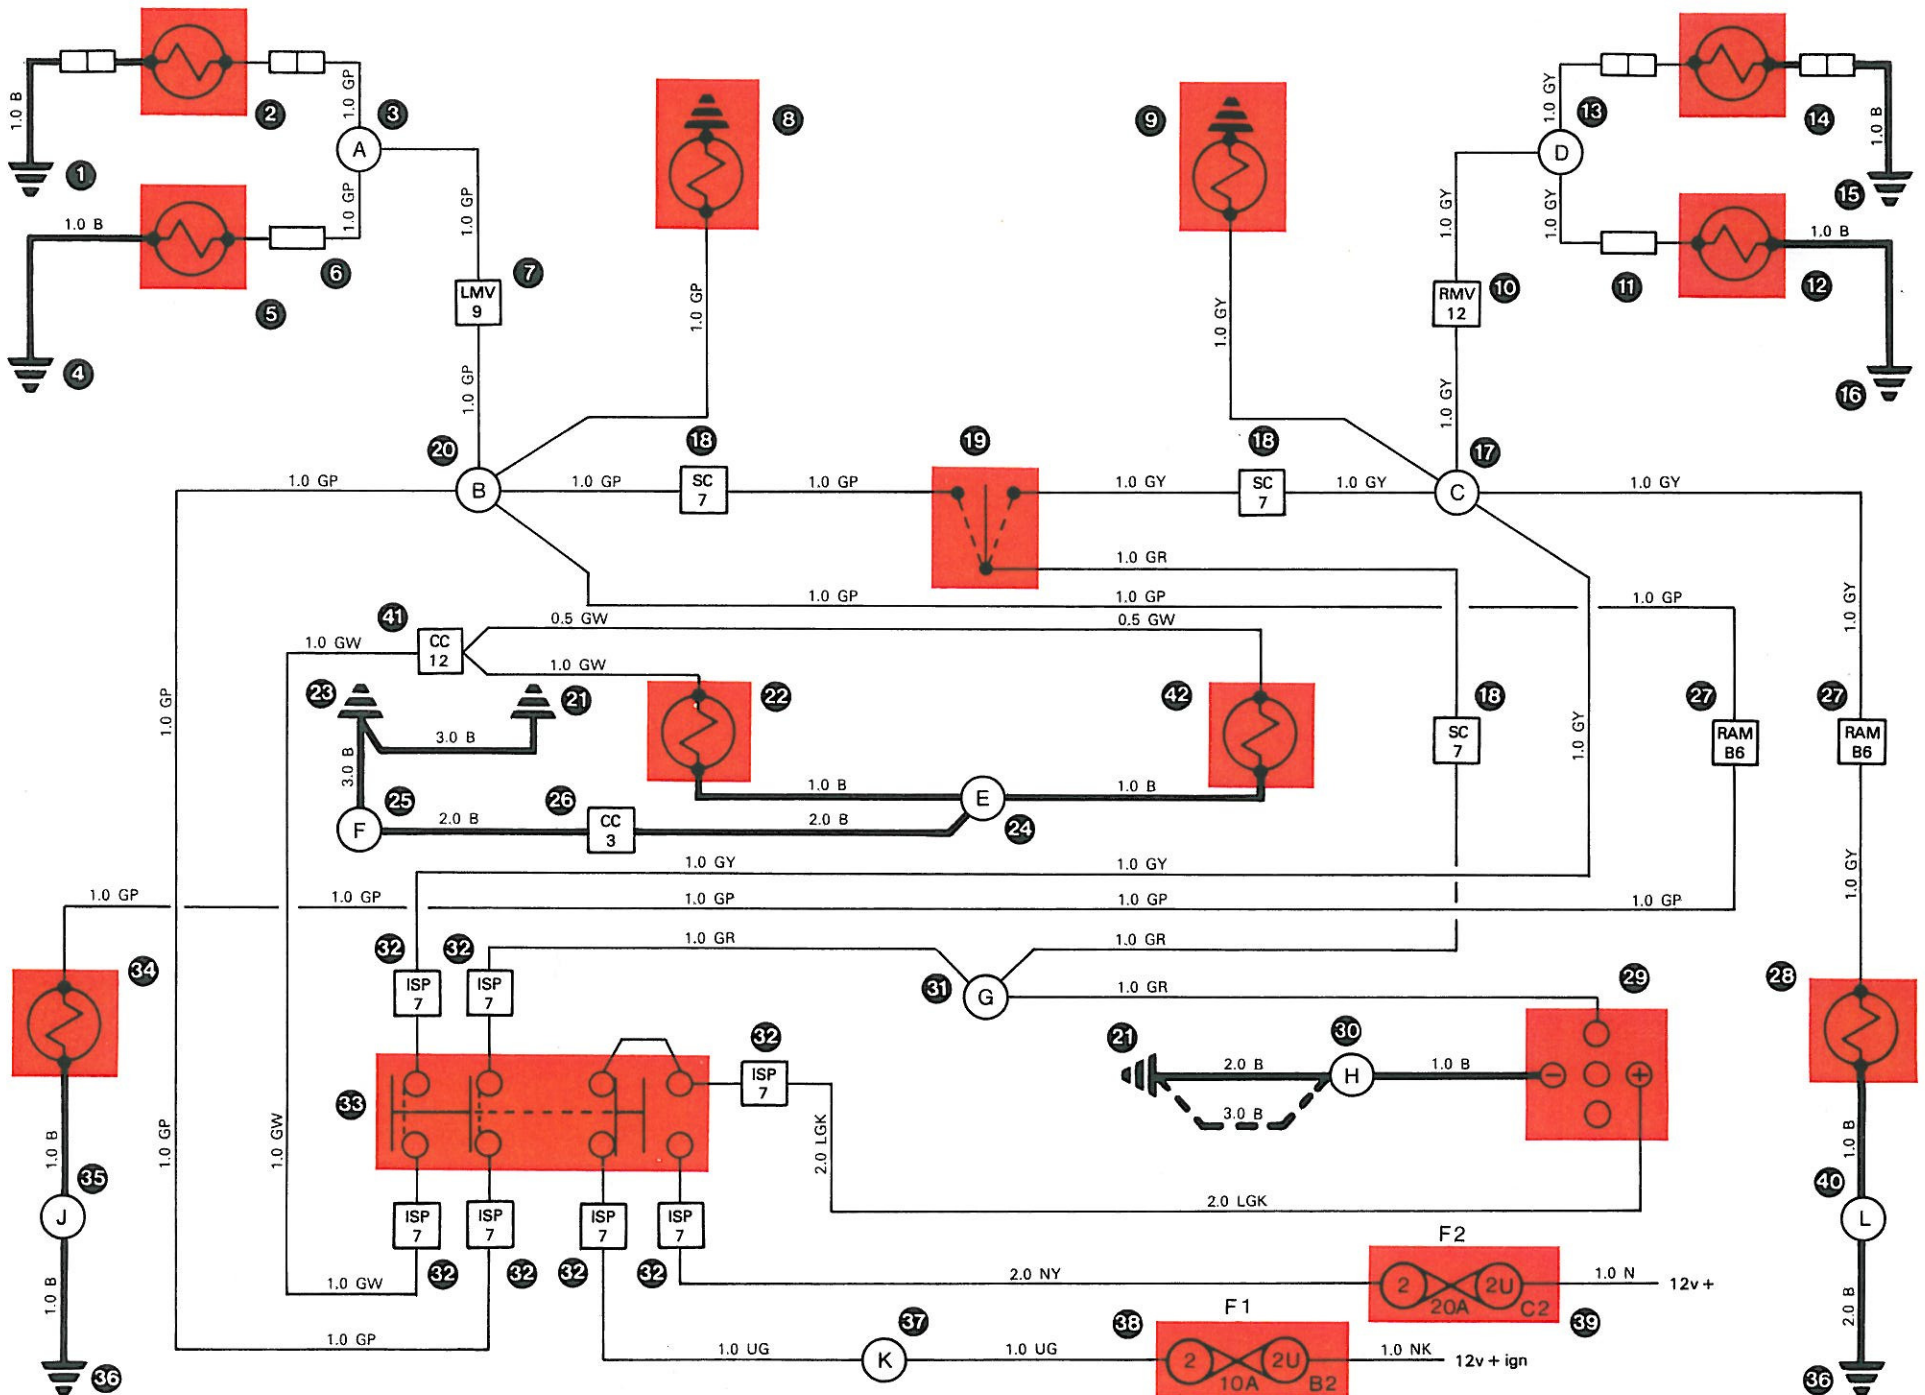

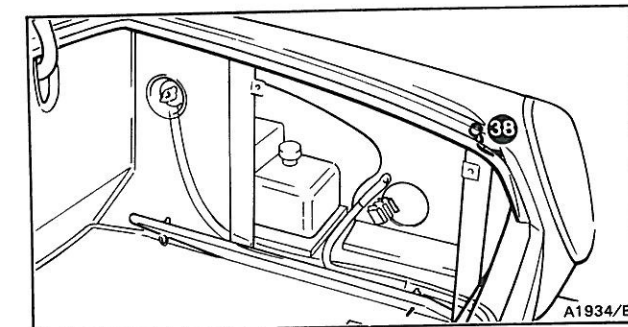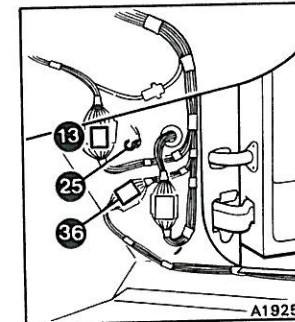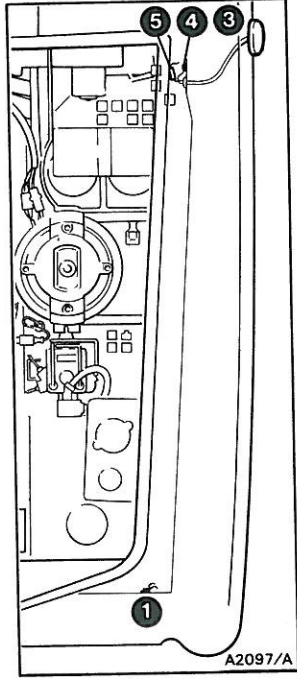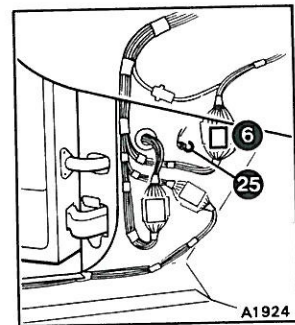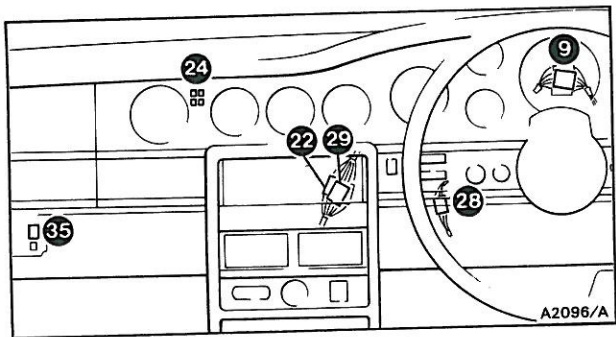


Key to 12-5


- 1 Left-hand front earth point (engine compartment)
- 2 Left-hand front indicator lamp
- 3 Left-hand repeater lamp (Cars other than those conforming to a North American specification)
- 4 Left-hand valance earth point
- 5 Left-hand repeater barrel connector
- 6 Left-hand main to valance loom plug and socket 9-way
- 7 Left-hand indicators warning lamp
- 8 Splice A

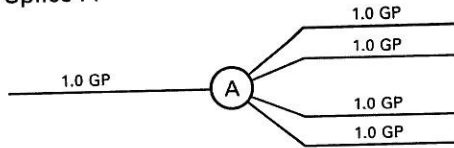

 
- 9 Steering column plug and socket 7-way
- 10 Direction indicators switch
- 11 Splice B



 - 12 Right-hand indicators warning lamp
- 13 Right-hand main to valance loom plug and socket 12-way
- 14 Splice C




 - 15 Right-hand repeater barrel connector
- 16 Right-hand front indicator lamp
- 17 Right-hand repeater lamp (Cars other than those conforming to a North American specification)
- 18 Right-hand front earth point (engine compartment)
- 19 Right-hand valance earth point
- 20 Left-hand hazard warning indicator lamp
- 21 Splice D




- 22 Centre console plug and socket 3-way

 
23 Splice E




- 24 Instrument panel earth point
- 25 'A' post earth point
- 26 Left-hand rear indicator lamp
- 27 Luggage compartment earth point - left-hand rear
- 28 Inboard switch panel plug and socket 7-way
- 29 Centre console plug and socket 12-way
- 30 Splice F

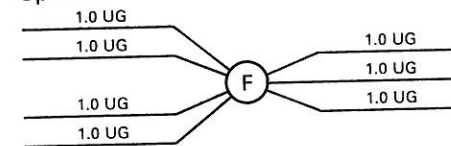

 - 31 Fuseboard F1, fuse B2, 10 Amp
- 32 Fuseboard F2, fuse C2, 20 Amp
- 33 Splice G



34 Splice H

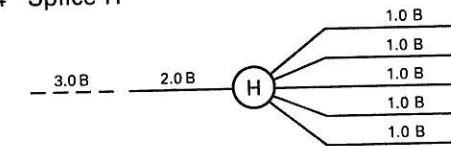

- 35 Electronic flasher unit
- 36 Right-hand 'A' post main to body loom plug and socket 6-way
- 37 Right-hand rear indicator lamp
- 38 Luggage compartment earth point - right-hand rear
- 39 Right-hand hazard warning indicator lamp (when fitted)
- 40 Hazard warning switch

