

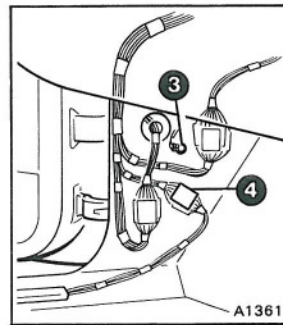
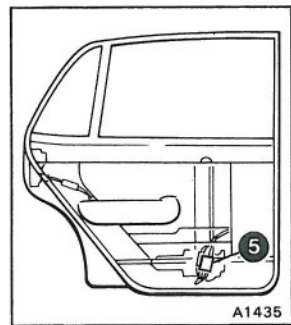
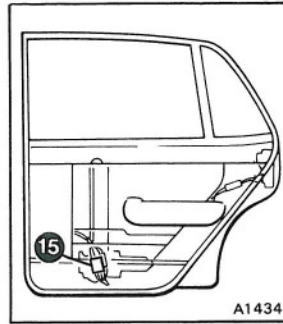
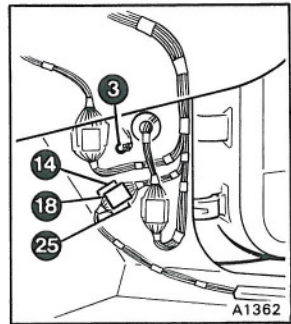


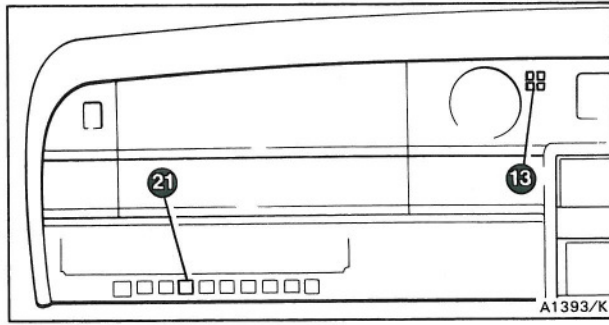



## Cigar lighters and fuel filler door release


Contents	Specific application	Pages							
		Rolls-Royce		Corniche / Corniche II	Bentley	Mulsanne	Mulsanne S	Turbo R	Continental
Silver Spirit	Silver Spur	Eight							
<b>Cigar lighters and fuel filler door release</b>									
Component location		19-2	19-2	19-3	19-2	19-2	19-2	19-2	19-3
Wiring diagram		19-2	19-2	19-3	19-2	19-2	19-2	19-2	19-3

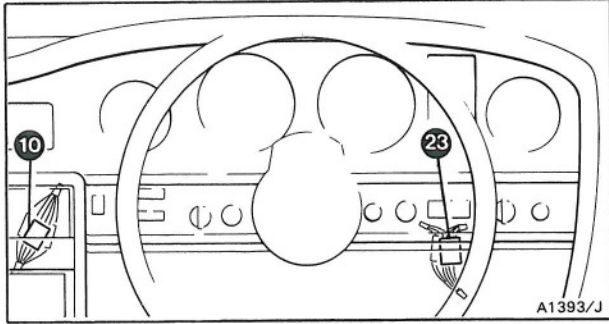


**Key to 19-2**

- 1 Fuseboard F2, fuse C4, 20 Amp
- 2 Splice A
  - 2.0 NP
  - 2.0 NP
  - 1.0 NP
  - 2.0 NP
- 3 'A' post earth points
- 4 Left-hand 'A' post main to body loom plug and socket 9-way
- 5 Left-hand rear door plug and socket 9-way
- 6 Splice B
  - 2.0 B
  - 2.0 B
  - 1.0 B
  - 1.0 B
- 7 Left-hand rear door cigar lighter
- 8 Centre console cigar lighter
- 9 Splice C
  - 1.0 B
  - 1.0 B
  - 2.0 B
  - 1.0 B
- 10 Centre console plug and socket 3-way
- 11 Splice J
  - 2.0 NP
  - 2.0 NP
  - 1.0 NP
  - 2.0 NP
- 12 Splice D
  - 3.0 B
  - 2.0 B
  - 2.0 B
- 13 Instrument panel earth point
- 14 Right-hand 'A' post main to body loom plug and socket 7-way
- 15 Right-hand rear door plug and socket 9-way
- 16 Right-hand rear door cigar lighter
- 17 Splice E
  - 2.0 B
  - 2.0 B
  - 1.0 B
  - 1.0 B
- 18 Right-hand 'A' post main to body loom plug and socket 5-way
- 19 Fuseboard F1, fuse B2, 10 Amp
- 20 Splice F
  - 1.0 UG
  - 1.0 UG
  - 1.0 UG
  - 1.0 UG
- 21 Fuel filler door relay
- 22 Splice G
  - 1.0 B
  - 1.0 B
  - 1.0 B
  - 1.0 B
  - 1.0 B
  - 3.0 B
  - 1.0 B
- 23 Outer switch panel plug and socket 12-way
- 24 Fuel filler door release switch
- 25 Right-hand 'A' post main to body loom plug and socket 6-way
- 26 Fuel filler door solenoid
- 27 Splice H
  - 1.0 B
  - 1.0 B
  - 2.0 B
  - 1.0 B
  - 1.0 B
- 28 Luggage compartment earth point — right-hand

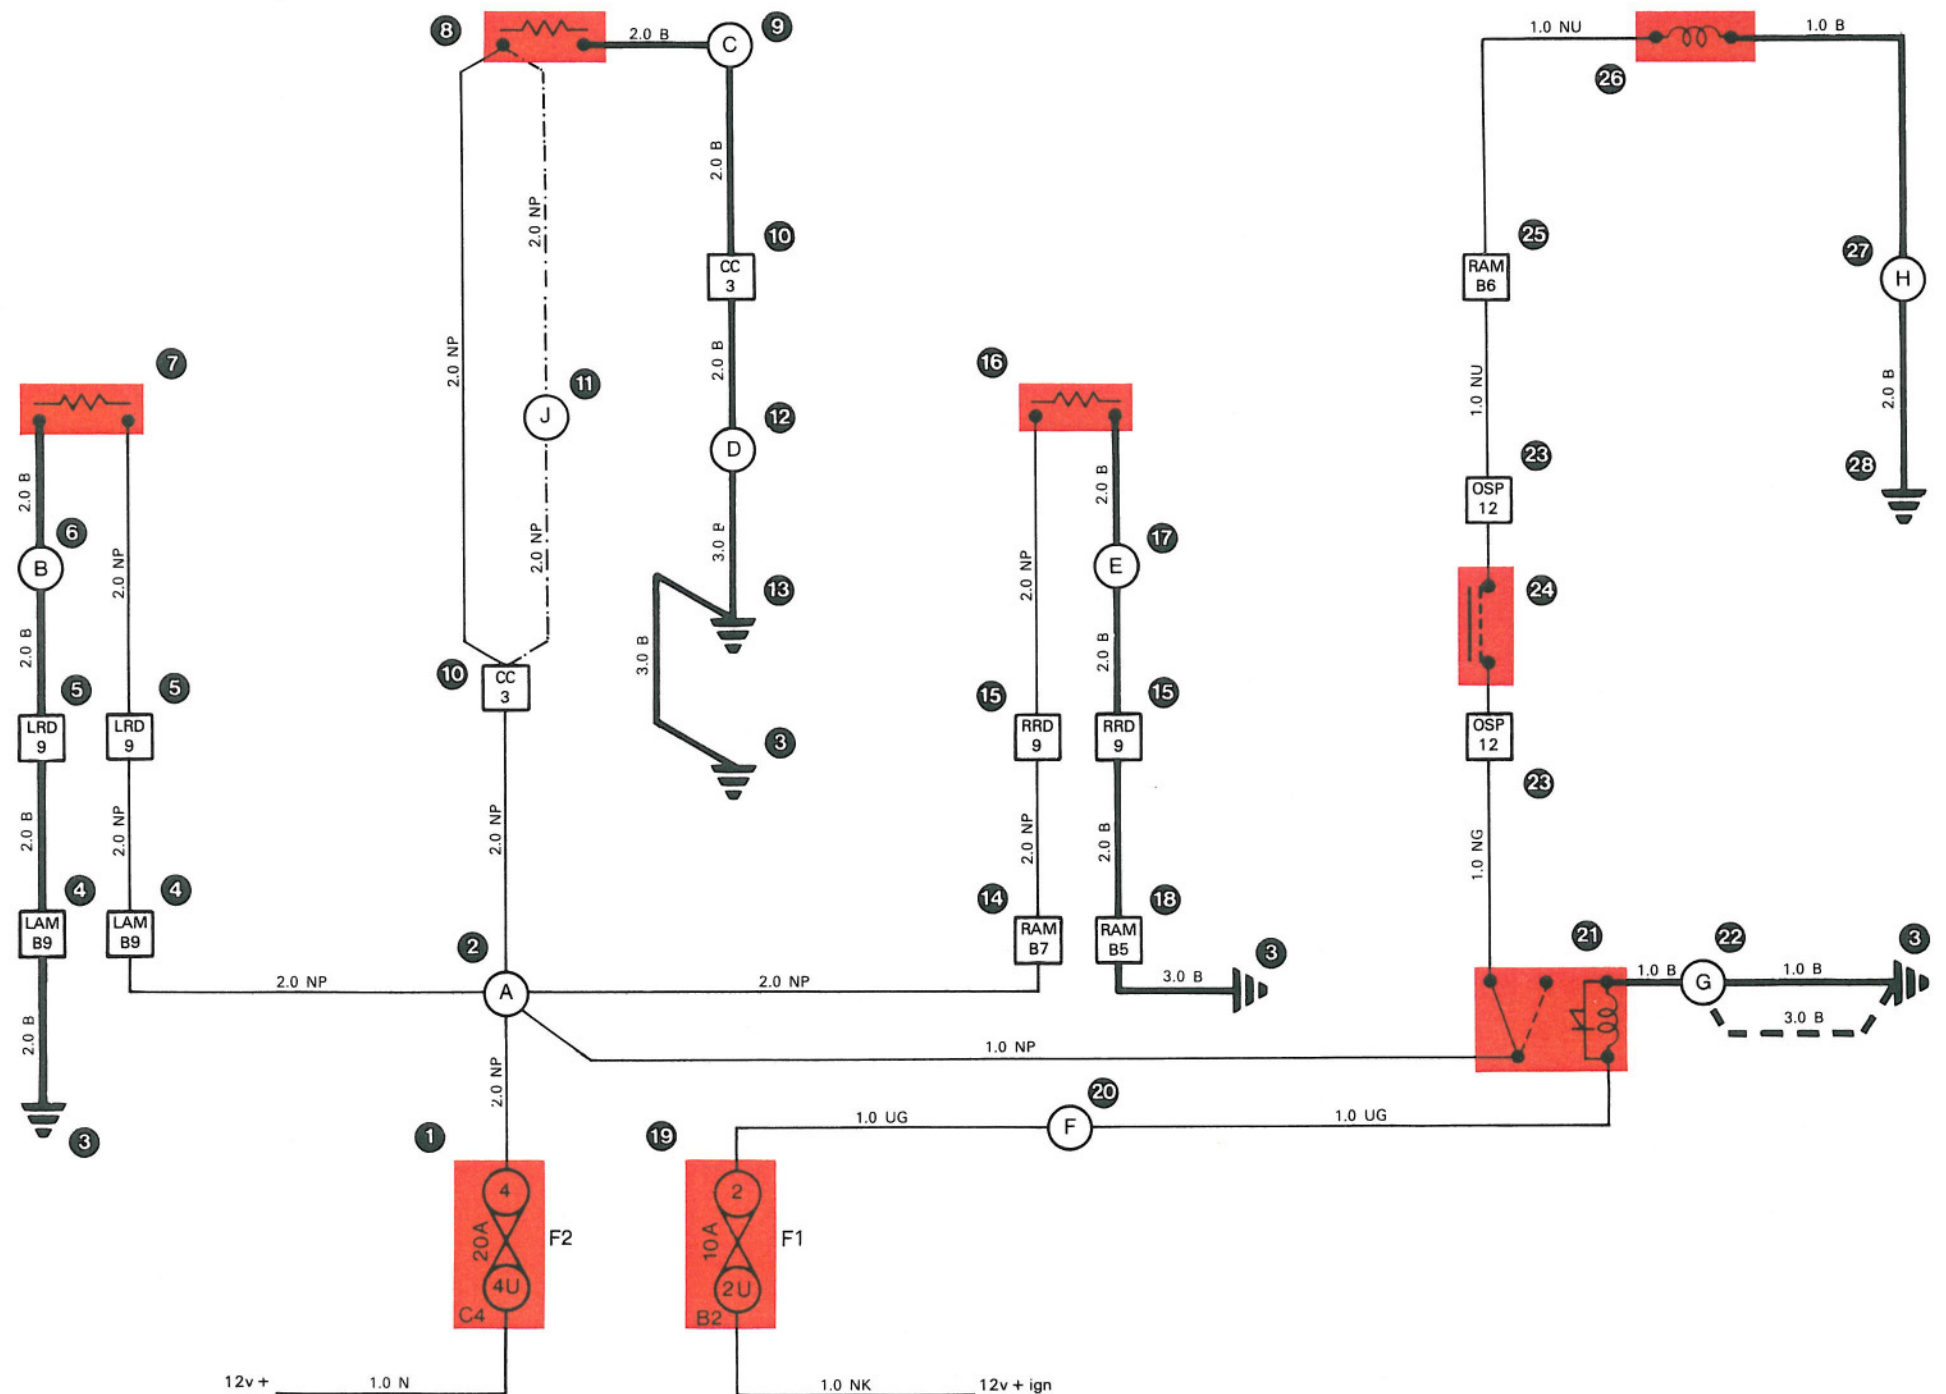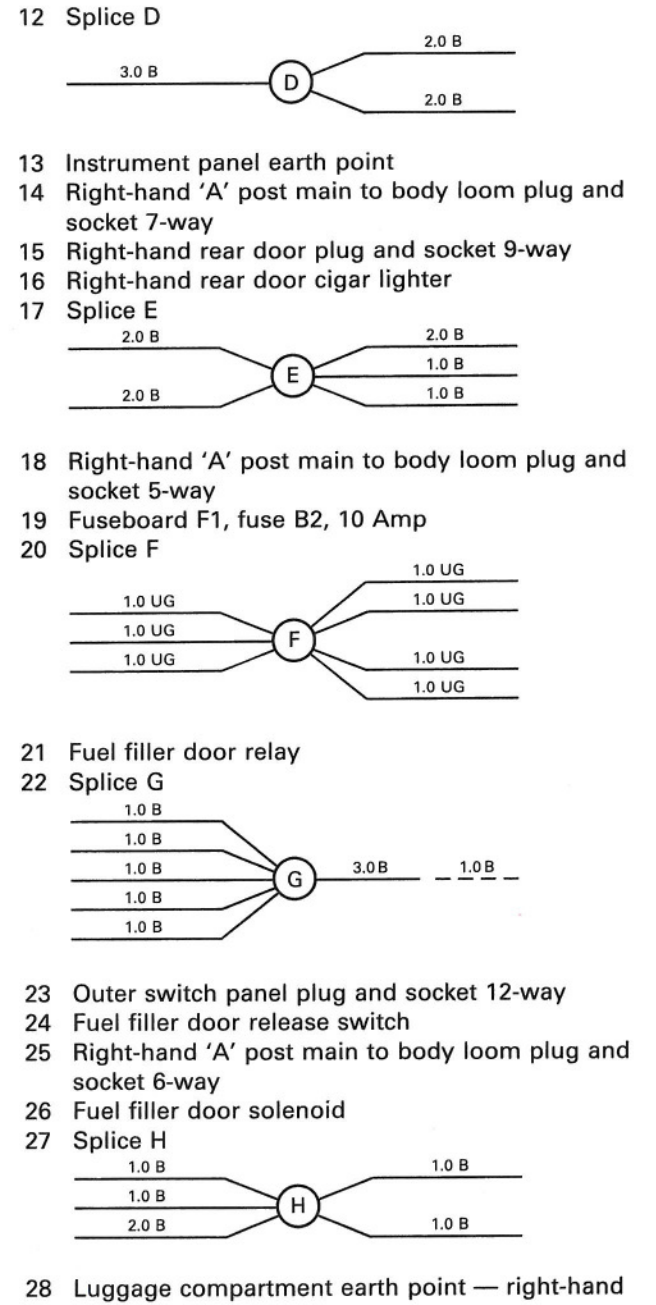


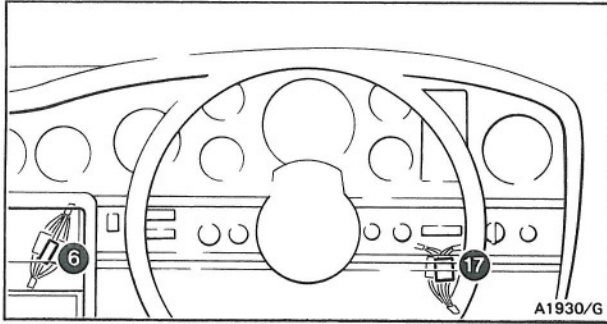


A1930/G

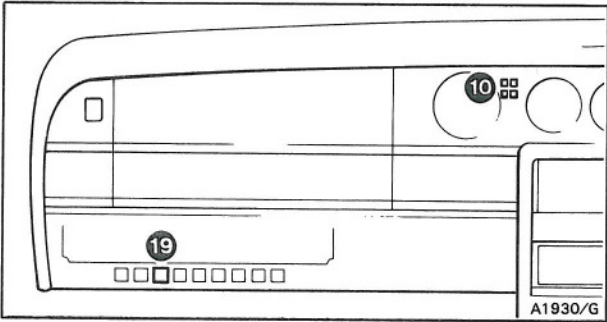


A1930/G

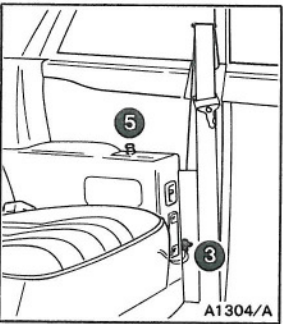


A1304/A

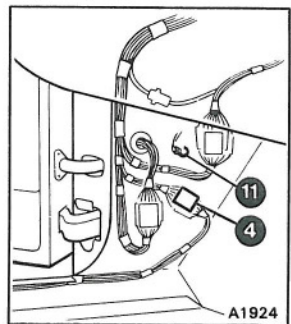

A1924

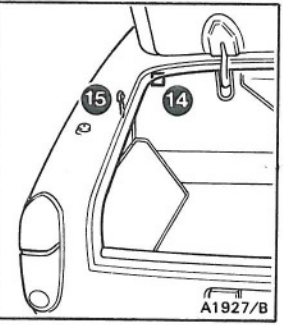





A1927/B

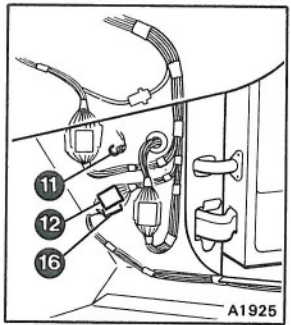


A1925

**Key to 19-3**

   - 1 Fuseboard F2, fuse C4, 20 Amp
- 2 Splice C
- 3 'BC' post earth point
- 4 Left-hand 'A' post main to body loom plug and socket 9-way
- 5 Left-hand rear cigar lighter
- 6 Centre console plug and socket 3-way
- 7 Centre console cigar lighter
- 8 Splice A
- 9 Splice B
- 10 Instrument panel earth point
- 11 'A' post earth point
- 12 Right-hand 'A' post main to body loom plug and socket 7-way
- 13 Right-hand rear cigar lighter
- 14 Fuel filler door solenoid
- 15 Luggage compartment earth point — left-hand
- 16 Right-hand 'A' post main to body loom plug and socket 6-way
- 17 Outer switch panel plug and socket 12-way
- 18 Fuel filler door release switch
- 19 Fuel filler door relay
- 20 Splice E

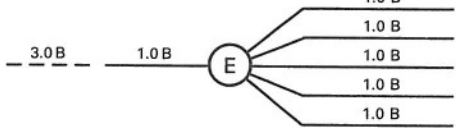

**21 Splice D**

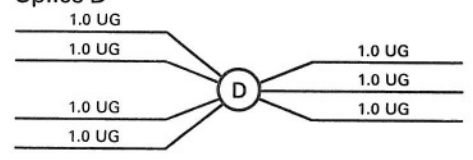

**22 Fuseboard F1, fuse B2, 10 Amp**

