

Power distribution system

Contents	Pages					
	Silver Spirit Mulsanne	Silver Spur	Mulsanne Turbo	Bentley Eight	Bentley Turbo R	Corniche/ Continental
Cars prior to vehicle identification number						
SCAZS42A3FCX12001						
Component location	M3-3	M3-3	M3-3	—	—	M3-11
Wiring diagram	M3-5	M3-5	M3-5	—	—	M3-13
Cars from vehicle identification number						
* SCAZS42A3FCX12001* to						
* SCAZS0001FCX13859*						
(including						
* SCAZN0004FCH14000* to						
* SCAZN0009FCH14025*)						
Component location	M3-7	M3-7	M3-7	M3-7	M3-7	—
Wiring diagram	M3-9	M3-9	M3-9	M3-9	M3-9	—

M3-2

From VIN *SCAZS0006GCX13860* (excluding Corniche/Continental) and with the exception of VIN *SCAZN0004FCH14000* to VIN *SCAZN0009FCH14025* inclusive, a new type of fuseboard is fitted incorporating Littell or Buss fuses (these fuses are not interchangeable with Bulgin type fuses).

Therefore when working to a wiring diagram or component location showing the earlier Bulgin type of fuse, reference must be made to the following table for its equivalent.

















Circuits controlled	Bulgin fuse number	Littell or Buss fuse number and fuseboard identification	Fuse rating (amps)	Circuits controlled	Bulgin fuse number	Littell or Buss fuse number and fuseboard identification	Fuse rating (amps)
Cellular telephone when fitted	—	A1 – F2	4A	Rear window demister and mirror heaters	11	B4 – F3	20A
Cellular telephone when fitted	—	A2 – F2	10A	Reverse lamps, stoplamps, speed control, headlamp wash	10	B3 – F3	20A
Interior lamps	1	A6 – F2	10A	Direction indicators, headlamp flash, fuel door, horns control	14	B2 – F3	20A
Radio, panel illumination, ACU control	20	B1 – F2	10A	Cigar lighters, clock, aerial, fuel door	7	C4 – F3	20A
Radio amplifier when fitted	19	B2 – F2	10A	Engine cooling fan	2	C1 – F3	20A
Starter, ignition, fuel pump	27	B3 – F2	10A	Engine cooling fan	9	C1 – F3	20A
Instruments and warning lamps	28	B4 – F2	10A	Wipers and washers	5	B1 – F3	20A
ACU control	8	B5 – F2	10A	Spare	—	B6 – F3	20A
Spare	—	B6 – F2	10A	Fuel pump	13	B5 – F3	20A
L.H. Tail lamp	15	C1 – F2	10A	Horns	3	C3 – F3	20A
R.H. Tail lamp	22	C2 – F2	10A	Fog lamps when fitted	12	C6 – F3	20A
Parking lamps, number plate lamps, W.L. dim control	16	C3 – F2	10A	Air horns when fitted	4	C5 – F3	20A
L.H. Dip beam	24	C4 – F2	10A	Hazard warning	6	C2 – F3	20A
R.H. Dip beam	25	C5 – F2	10A				
Spare	—	C6 – F2	10A				
Spare	—	A6 – F3	20A				

For fuse identification refer to Section M1, General information, page M1-3.

Power distribution system

Silver Spirit, Silver Spur, and Mulsanne
(including Turbo)

Component location

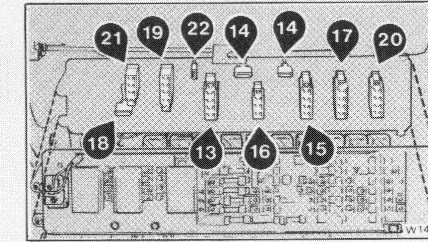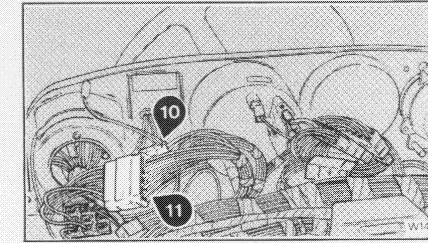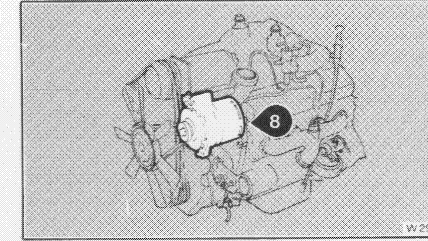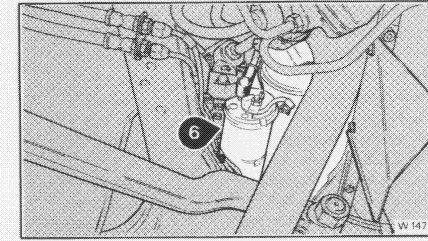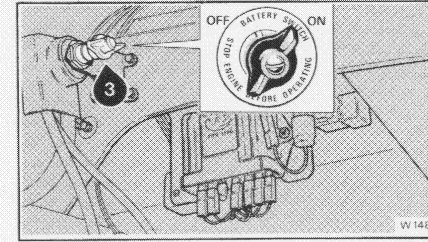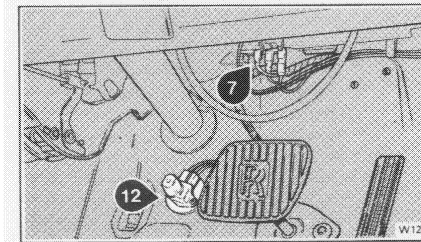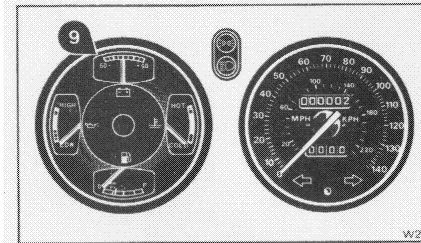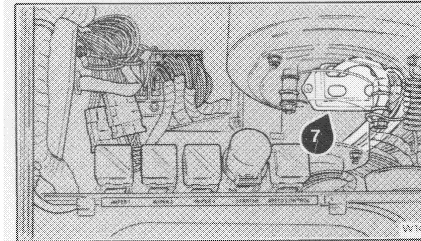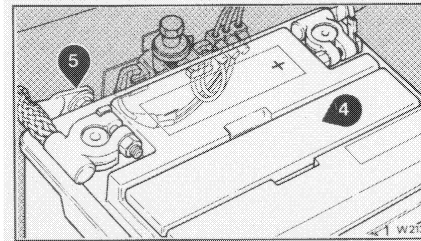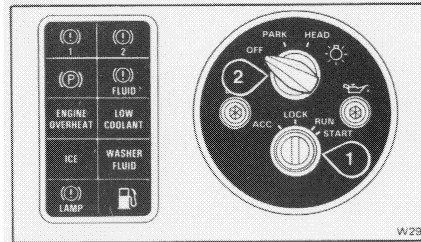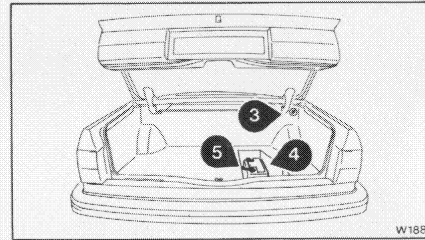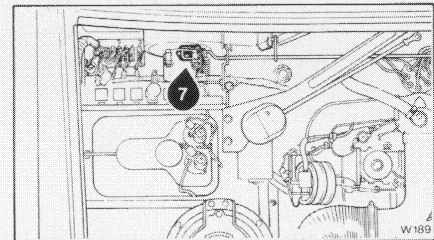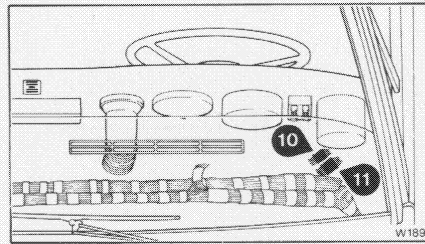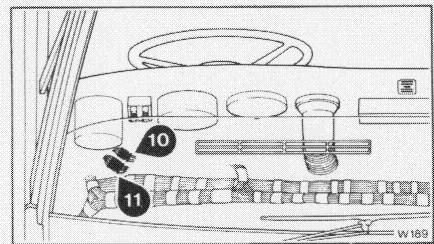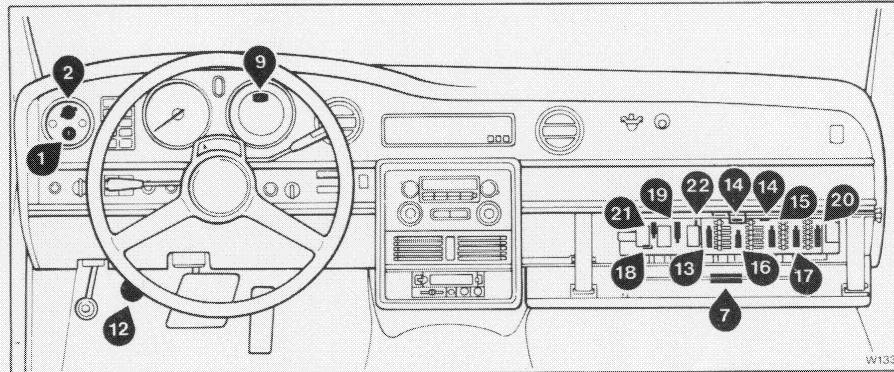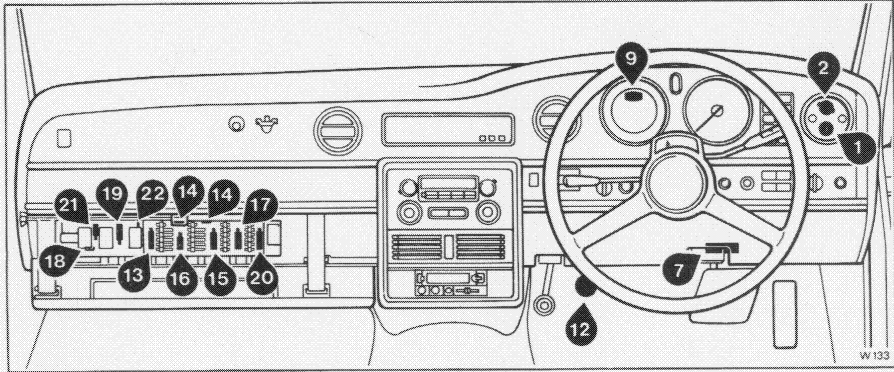


Power distribution system

Silver Spirit, Silver Spur, and Mulsanne
(including Turbo)

Wiring diagram

- A** Ignition switched circuits
- B** Lighting switched circuits
- C** Unswitched circuits

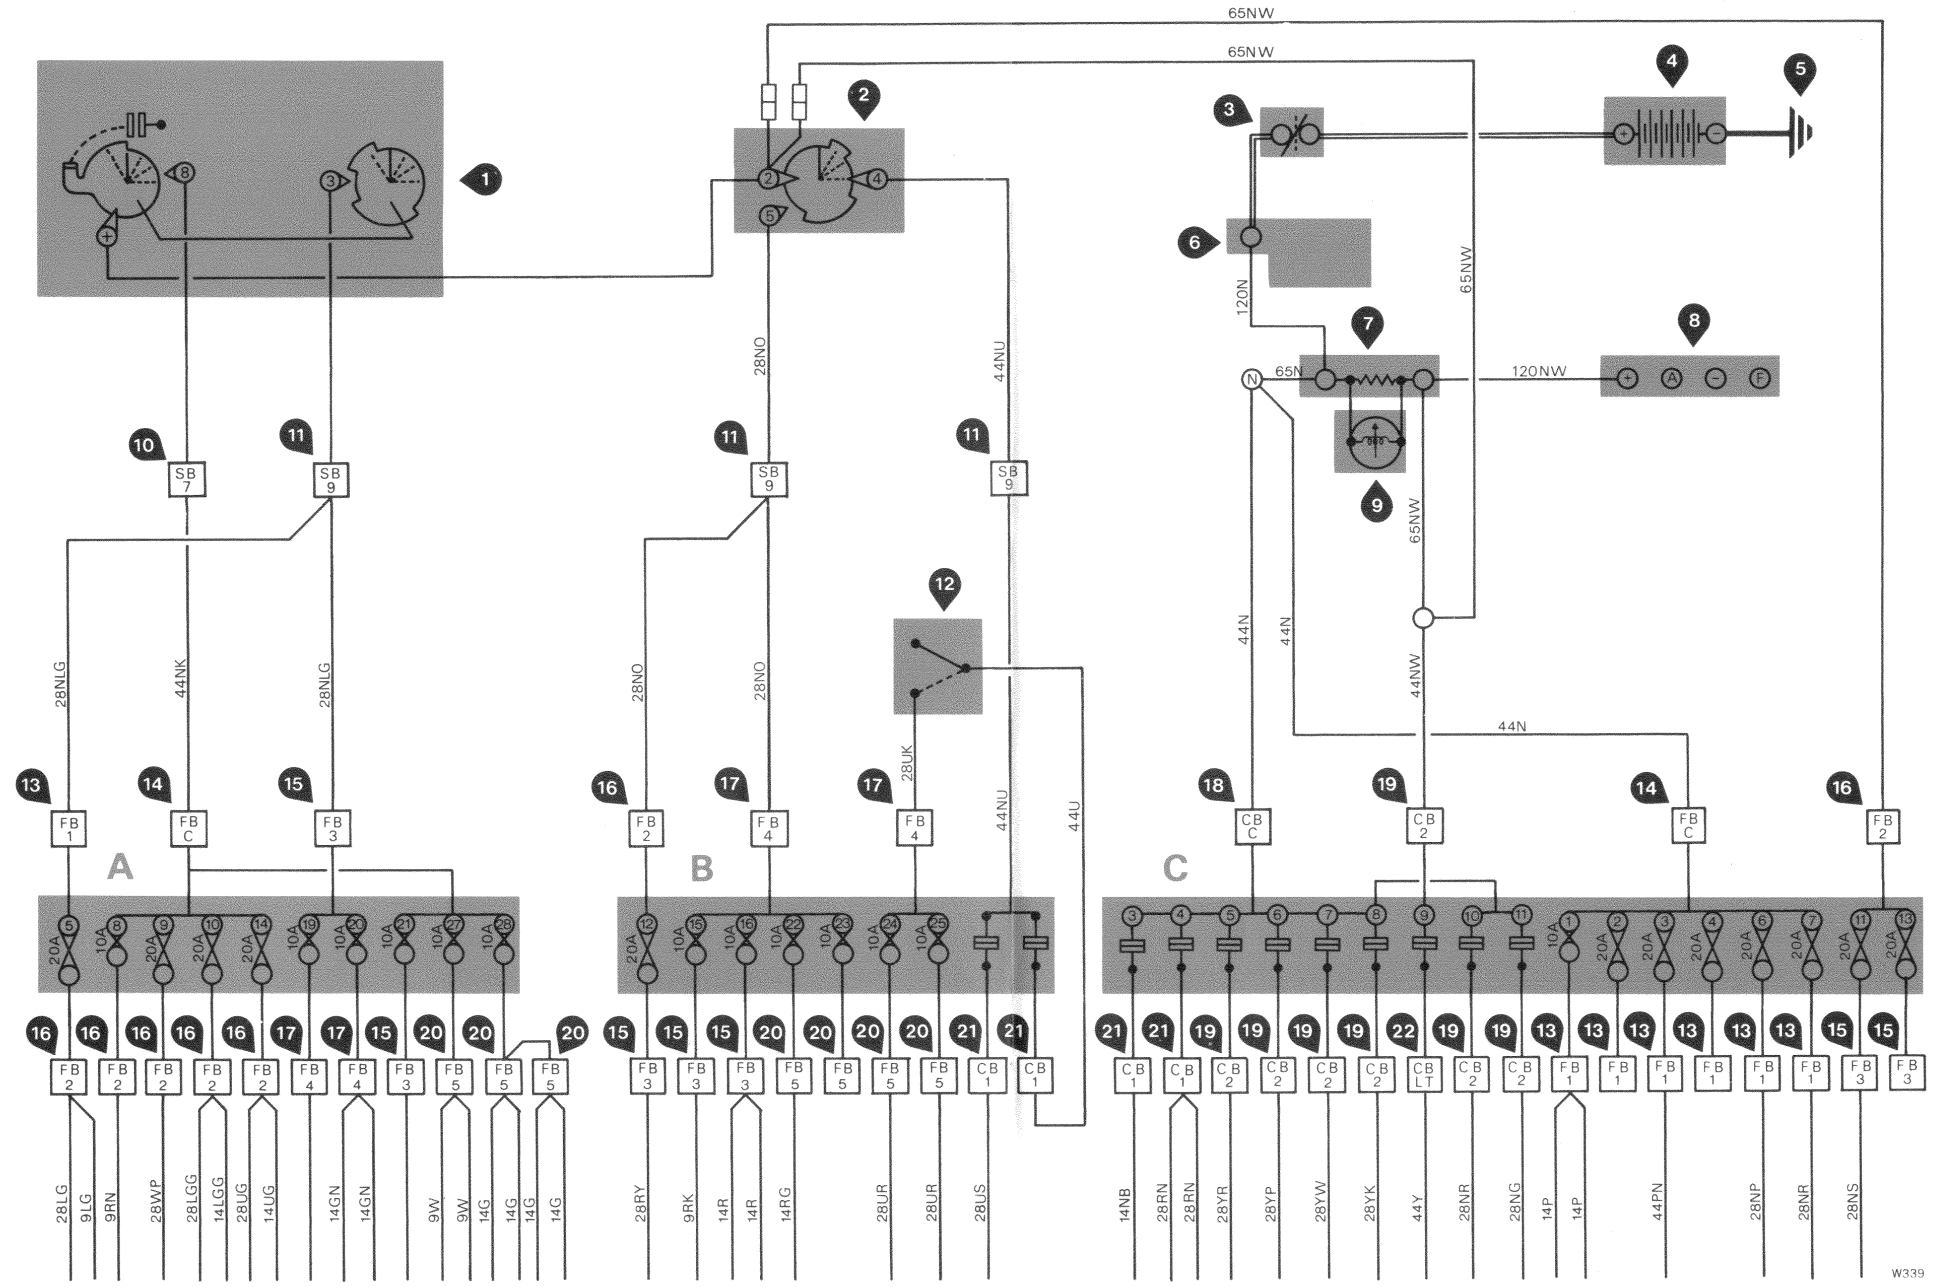

Power distribution system





Silver Spirit, Silver Spur, Mulsanne (including Turbo), Bentley Eight, and Bentley Turbo R


Component location

Note


The number/size of cables at the fuseboard plugs vary dependant on the cars specification

— — — Applicable to Turbocharged cars only

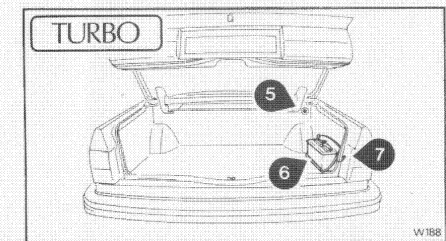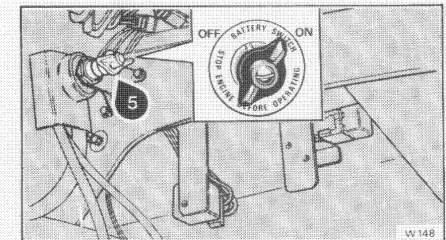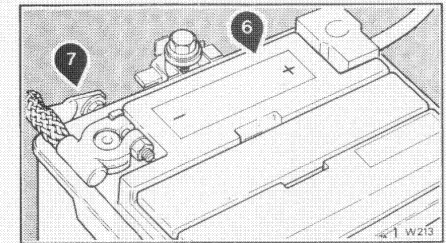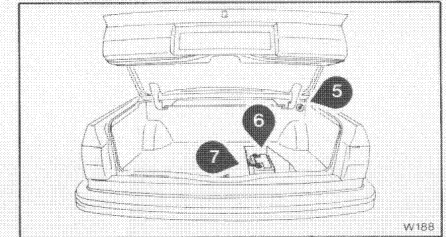


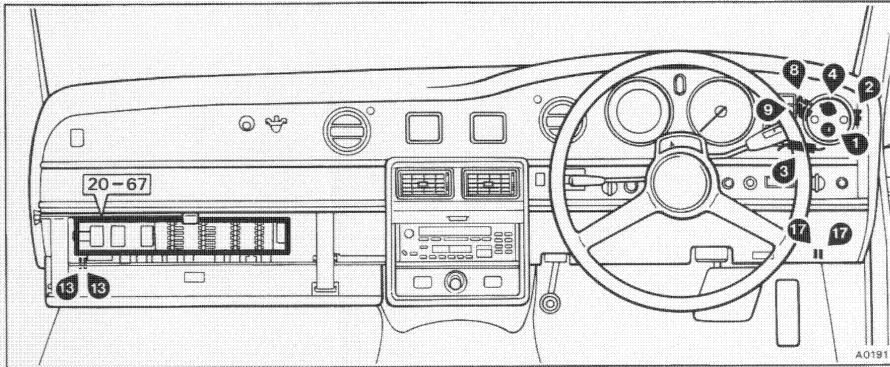


A0191

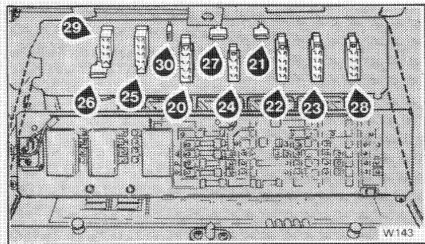


W143

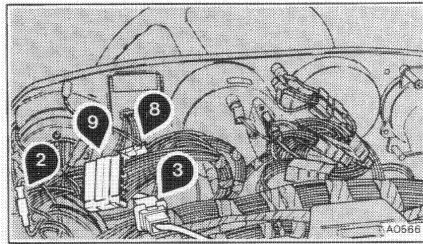


A0566

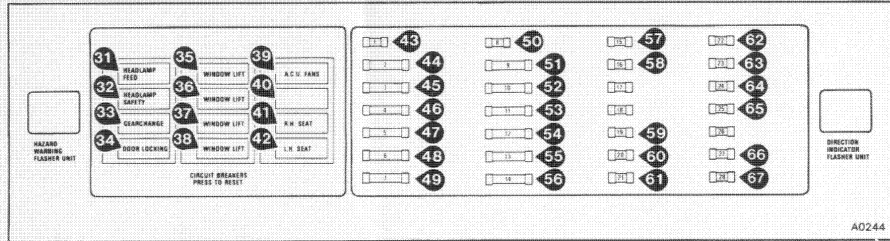


A0244

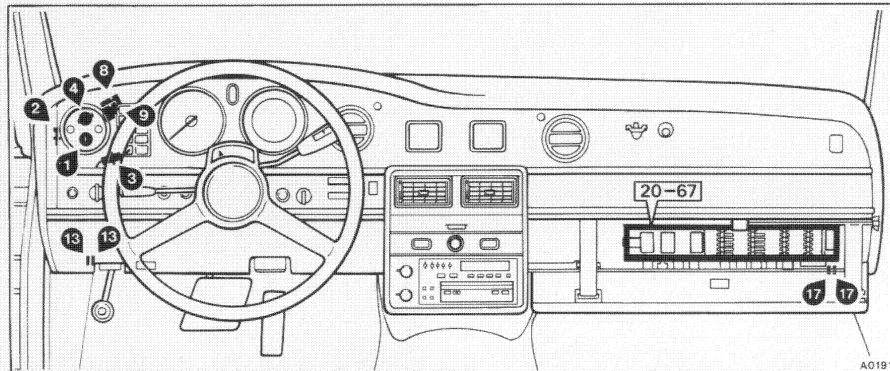


A0191

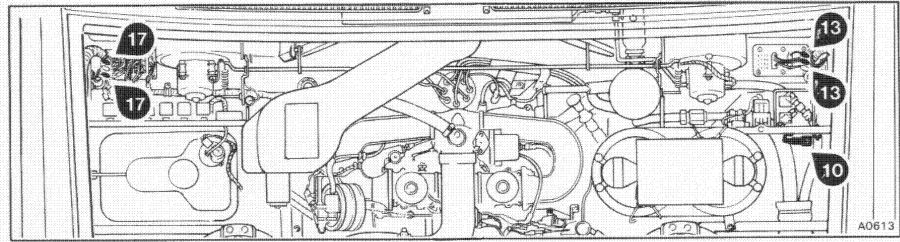


A0613

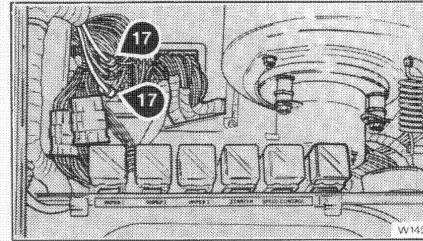


W145

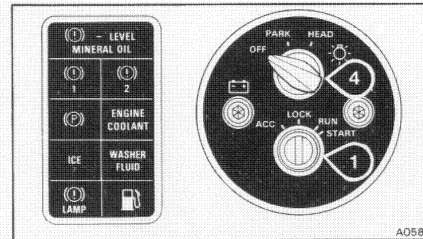


A0584

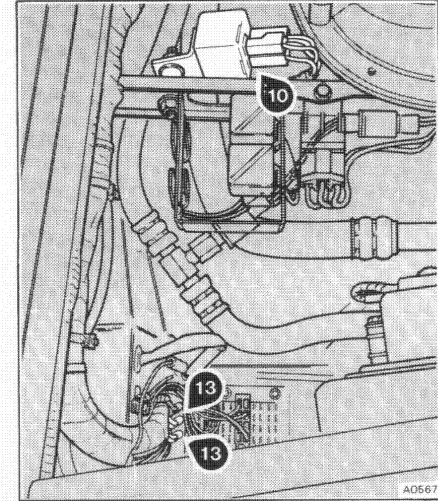


A0667

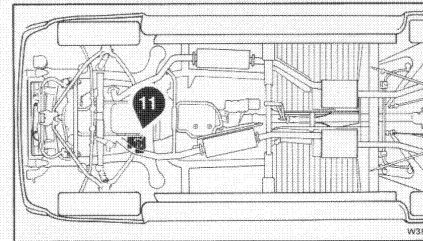


W090

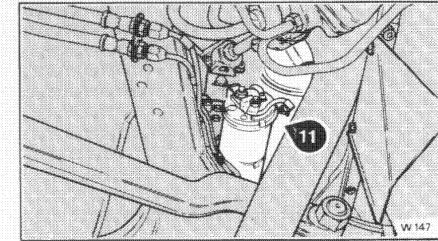

W147

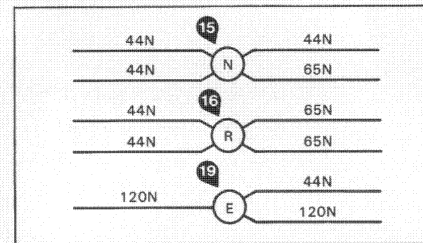

A0468

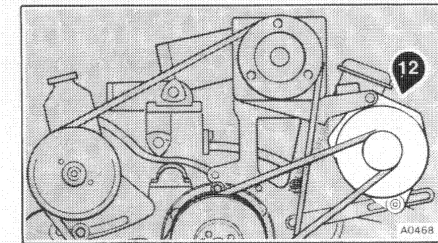

Power distribution system

Silver Spirit, Silver Spur, Mulsanne (including Turbo),
Bentley Eight, and Bentley Turbo R

















Wiring diagram

- A** Ignition switched circuits
- B** Lighting switched circuits
- C** Unswitched circuits

Power distribution system

Corniche/Continental

Component location

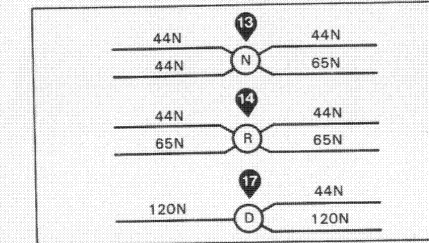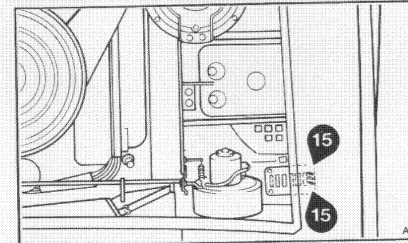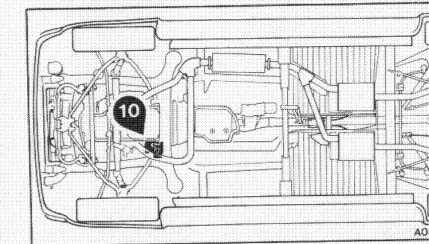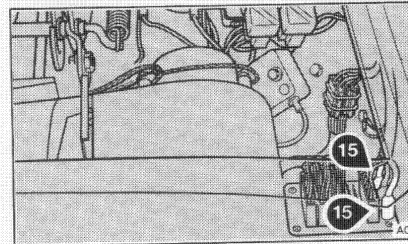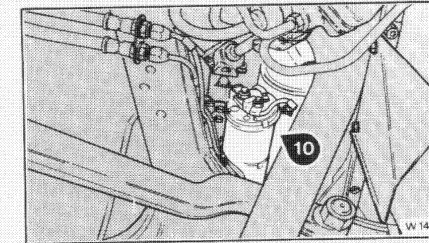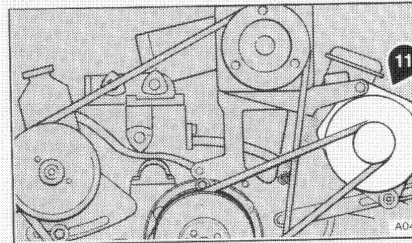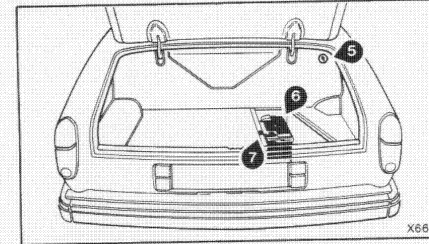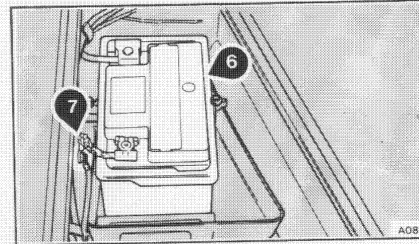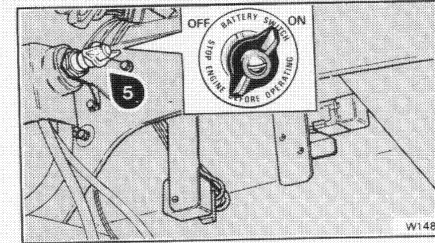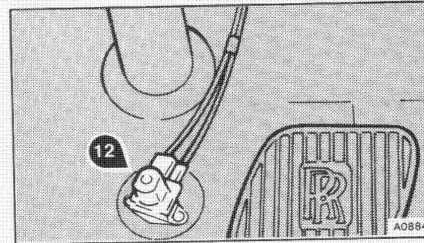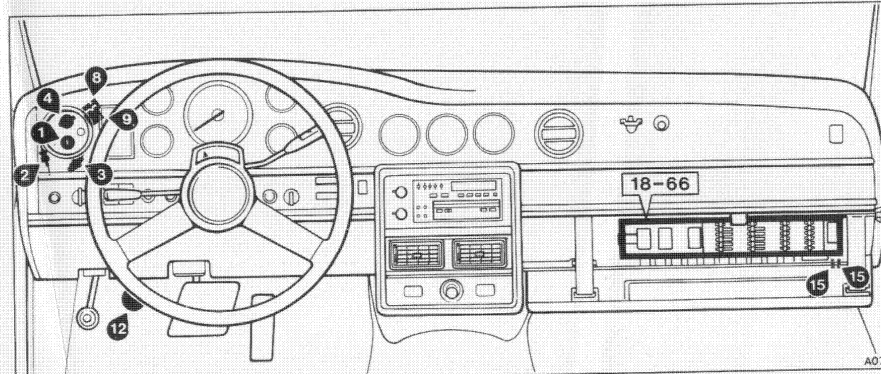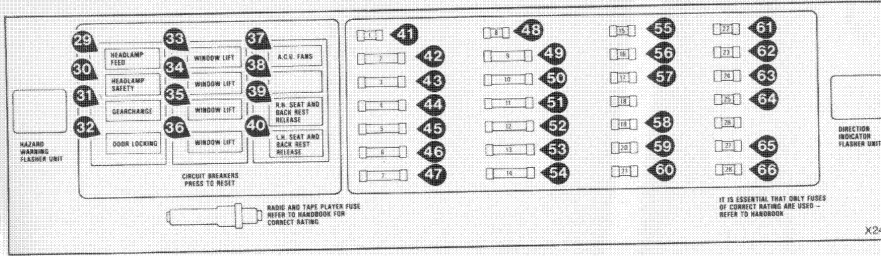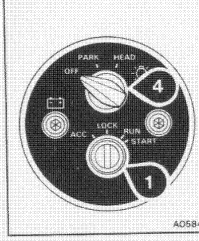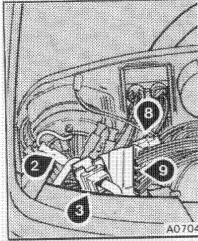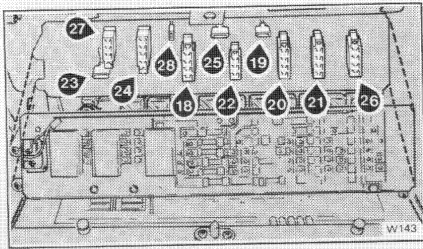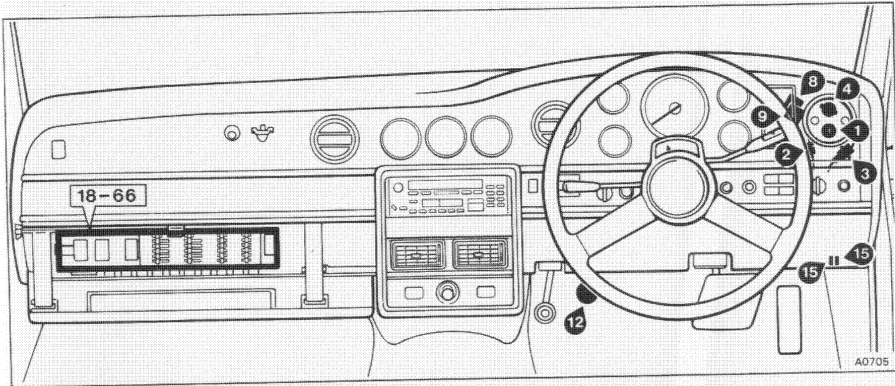

Power distribution system

Corniche/Continental

Wiring diagram

- A** Ignition switched circuits
- B** Lighting switched circuits
- C** Unswitched circuits

