BENTLEY MK.VI

SECTION B

SPARES AND TOOLS

CONTAINING TOOLS AND SPARE
PARTS SUPPLIED WITH EACH CAR.

TOOLS FOR REPAIR DEPOT USE
WILL BE LISTED IN A SEPARATE
SCHEDULE.

KEY TO CHASSIS NUMBERS

Used on			A,B,C, Series	
"	"	B-DA	All Chassis	
"	"	B-DZ	1-191	= F
"	"	B-DZ	193 onwards	= G
"	"		A,B,C,D,E,F,G,H,J,K,L,M	= H
"	"	B-NZ	2-290	
"	"	B-NZ	292 onwards	= J
"	"		A & B Series	
"	"	B-CF	2-234	= K
"	"	B-CF	236 onwards	= L

GROUP B1. SPARES AND TOOLS

Comprising

	REF. NO.	PART NO.	QUANTITY GROUP	QUANTITY ASS'LY	NOTES
BAR, tommy, .187" dia.	1	KB 6036	1		E
BAR, tommy, .250" dia.		KB 6037	1		E
BAR, tommy, .312" dia.		KB 6038	1		E
BAR, tommy, .406" dia.		RF 4381	1		
BRACE, wheel	2	RF 9084	1		
BULB, headlamp, 12v 48w. (home)	3	RF 4516	1		F
BULB, headlamp, 12v 48/48w. DC. (home)		RD 5296	1		G
BULB, headlamp, 12v 36w. DC. (All export except U.S.A & Europe)		RD 3970	1		
BULB, headlamp, 12v 36/36w. 3-pin cap (Export Europe)		RD 5330	1		F
BULB, headlamp, 12v 36w. (Export Europe except France)		RD 5329	1		G
BULB, headlamp, 12v 36/36w. (Export France)		RD 5330	1		G
BULB, sidelamp, 12v 3w.	4	RD 5085	1		
BULB, stop-tail 12v 24/6w (when no indexing pin is fitted)		RF 4517	1		
BULB, stop-tail 12v 18/6w (when no indexing pin is fitted)		RD 6602	1		
CAN, oil (as illustrated)	5	RF 3844	1		
CAN, oil (alternative type)		RF 6712	1		
CONDENSER, ignition	6	RD 5881	1		H
CONDENSER, ignition		RD 7774	1		J
GAUGES, feeler	7	RF 6616	1		
GAUGE, tyre pressure	8	RF 5279	1		
GUN, grease	9	RF 9081	1		
HANDLE, Dunlop Jack	10	RF 6018	1		
HANDLE, engine starting (home)	11	RE 18068	1		
HANDLE, engine starting (export bumpers)		RE 18067	1		
HOLDER, valve assembly	12	RF 5214	1		
JACK, bottle type, Dunlop	13	RF 6019	1		L
JACK, Bevelift		RF 3852	1		K
LEVER, drain plug	14	RF 5951	1		
LEVER, tyre, 9 ins. long	15	RF 5595	3		
LEVER, tyre, 18 ins. long		RF 4392	3		E
PAD, Bevelift jack foot		RF 5041	1		K
PLIERS	16	RF 5949	1		
PUMP, tyre, hand type	17	RF 9083	1		
SCREW DRIVER, (Black bakelite handle)	18	RF 5947	1		
SCREW DRIVER, (Hardwood handle)		RF 7227	1		
SPANNER, adjustable	19	RF 6613	1		
SPANNER, box, 5 BA and 3 BA	20	KB 6016	1		E
SPANNER, box, 2 BA and .250" dia., B.S.F.		KB 6017	1		E
SPANNER, box, .312" dia., and .375" dia., B.S.F.		KB 6018	1		E
SPANNER, box, .437" dia., and .500" dia., B.S.F.		RF 5939	1		
SPANNER, box, .750" dia., and .812" dia., B.S.F.		KB 6021	1		E
SPANNER, jaw, 2 BA	21	RF 5908	1		
SPANNER, jaw, .250" dia., B.S.F.		RF 5910	1		
SPANNER, jaw, .312" dia., B.S.F.		RF 5916	1		
SPANNER, jaw, 5 BA and 3 BA	22	RF 5906	1		
SPANNER, jaw, .312" dia., and .375" dia., B.S.F		RF 5912	1		
SPANNER, jaw, .437" dia., and .500" dia., B.S.F		RF 5914	1		
SPANNER, ignition, distributor with .020 feeler gauge	23	RF 6612	1		

GROUP B1. (Continued overleaf)

GROUP B1. SPARES AND TOOLS (Continued)

	REF. NO.	PART NO.	QUANTITY GROUP	QUANTITY ASS'LY	NOTES
SPANNER, inlet valve tappet	24	RF 5945		1	
SPANNER, exhaust valve tappet	25	RF 8406		1	
SPANNER, wheel disc		RF 3851		1	
SPARKING PLUG, Champion N.8	27	RE 4568		1	
SYRINGE	28	RF 9082		1	
TOOL, tyre valve	29	RF 6614		1	
TOOL, valve spring compressing, exhaust	30	RF 4385		1	E
TOOL, valve spring compressing, inlet	31	RF 4391		1	E

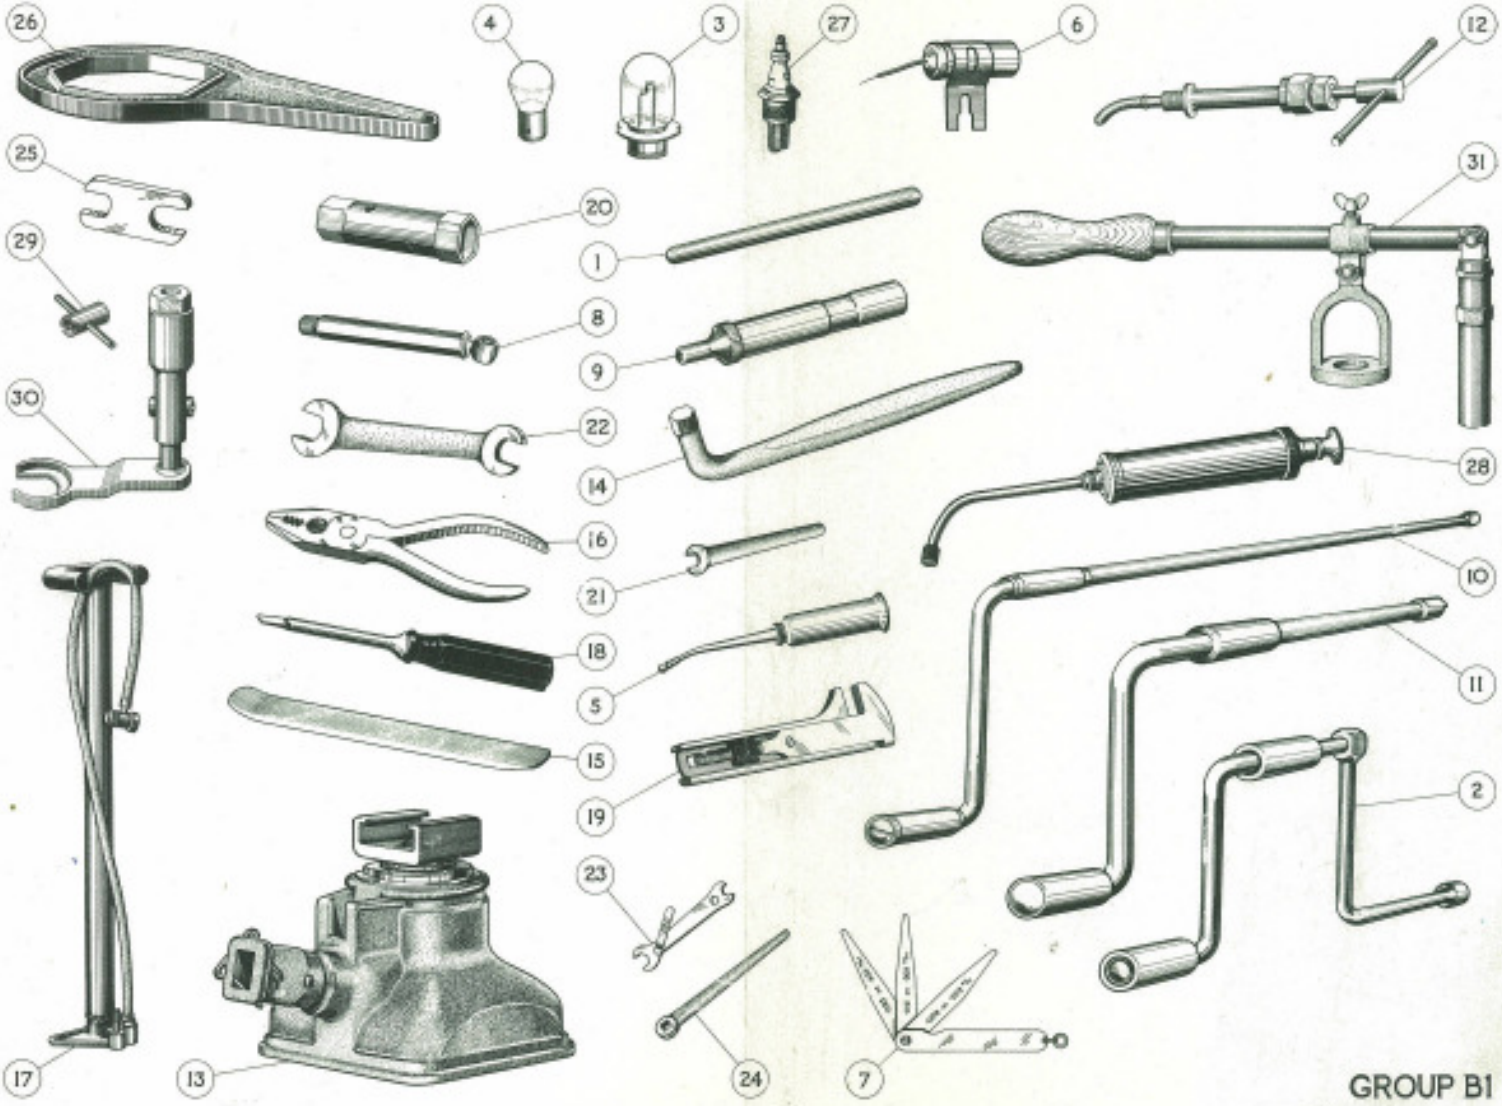
26
4
3
27
6
12
25
20
31
29
1
8
9
30
22
14
28
16
10
21
18
11
5
15
2
19
23
17
13
24
7

GROUP B1