





Window lifts and division glass lift

Contents	Pages					
	Silver Spirit Mulsanne	Silver Spur	Mulsanne Turbo	Bentley Eight	Bentley Turbo R	Corniche/ Continental
Cars other than those fitted with a rear windows isolation switch						
Right-hand drive cars						
Component location	M22-3	M22-3	M22-3	—	—	M22-3
Wiring diagram	M22-5	M22-5	M22-5	—	—	M22-5
Right-hand drive cars with the window lifts wired through the ignition system						
Component location	M22-3	M22-3	M22-3	—	—	M22-3
Wiring diagram	M22-7	M22-7	M22-7	—	—	M22-7
Left-hand drive cars						
Component location	M22-9	M22-9	M22-9	—	—	M22-9
Wiring diagram	M22-11	M22-11	M22-11	—	—	M22-11
Left-hand drive cars with the window lifts wired through the ignition system						
Component location	M22-9	M22-9	M22-9	—	—	M22-9
Wiring diagram	M22-13	M22-13	M22-13	—	—	M22-13
Cars fitted with a single pole rear windows isolation switch						
Right-hand drive cars						
Component location	—	—	—	—	—	M22-15
Wiring diagram	—	—	—	—	—	M22-17
Left-hand drive cars						
Component location	M22-19	M22-19	M22-19	—	—	M22-19 or M22-31
Wiring diagram	M22-21	M22-21	M22-21	—	—	M22-21 or M22-33
Cars fitted with a double pole rear windows isolation switch						
Right-hand drive cars						
Component location	M22-23	M22-23	M22-23	M22-23	M22-23	—
Wiring diagram	M22-25	M22-25	M22-25	M22-25	M22-25	—
Left-hand drive cars						
Component location	M22-27	M22-27	M22-27	M22-27	M22-27	—
Wiring diagram	M22-29	M22-29	M22-29	M22-29	M22-29	—
Division glass lift						
Component location	—	M22-35	—	—	—	—
Wiring diagram	—	M22-37	—	—	—	—

M22-2

From VIN *SCAZS0006GCX13860* (excluding Corniche/Continental) and with the exception of VIN *SCAZN0004FCH14000* to VIN *SCAZN0009FCH14025* inclusive, a new type of fuseboard is fitted incorporating Littell or Buss fuses (these fuses are not interchangeable with Bulgin type fuses).

Therefore when working to a wiring diagram or component location showing the earlier Bulgin type of fuse, reference must be made to the following table for its equivalent.

Circuits controlled	Bulgin fuse number	Littell or Buss fuse number and fuseboard identification	Fuse rating (amps)	Circuits controlled	Bulgin fuse number	Littell or Buss fuse number and fuseboard identification	Fuse rating (amps)
							
Cellular telephone when fitted	—	A1 - F2	4A	Rear window demister and mirror heaters	11	B4 - F3	20A
Cellular telephone when fitted	—	A2 - F2	10A	Reverse lamps, stoplamps, speed control, headlamp wash	10	B3 - F3	20A
Interior lamps	1	A6 - F2	10A	Direction indicators, headlamp flash, fuel door, horns control	14	B2 - F3	20A
Radio, panel illumination, ACU control	20	B1 - F2	10A	Cigar lighters, clock, aerial, fuel door	7	C4 - F3	20A
Radio amplifier when fitted	19	B2 - F2	10A	Engine cooling fan	2	C1 - F3	20A
Starter, ignition, fuel pump	27	B3 - F2	10A	Engine cooling fan	9	C1 - F3	20A
Instruments and warning lamps	28	B4 - F2	10A	Wipers and washers	5	B1 - F3	20A
ACU control	8	B5 - F2	10A	Spare	—	B6 - F3	20A
Spare	—	B6 - F2	10A	Fuel pump	13	B5 - F3	20A
L.H. Tail lamp	15	C1 - F2	10A	Horns	3	C3 - F3	20A
R.H. Tail lamp	22	C2 - F2	10A	Fog lamps when fitted	12	C6 - F3	20A
Parking lamps, number plate lamps, W.L. dim control	16	C3 - F2	10A	Air horns when fitted	4	C5 - F3	20A
L.H. Dip beam	24	C4 - F2	10A	Hazard warning	6	C2 - F3	20A
R.H. Dip beam	25	C5 - F2	10A				
Spare	—	C6 - F2	10A				
Spare	—	A6 - F3	20A				

For fuse identification refer to Section M1, General information, page M1-3.

Rolls-Royce

Silver Spirit – Silver Spur – Corniche – Camargue

Bentley

Mulsanne – Mulsanne Turbo – Turbo R – Continental

Chassis 1001 to 27998

Electrically Operated Window Lifts

Universal Schematic

Note: exact schematics vary dependent upon specific vehicle specifications, model years and country requirements







This schematic also applies to Rolls-Royce Silver Shadow and Bentley T-Series cars from Chassis SBH 13754

Window lifts









Right-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo),
and Corniche

Component location

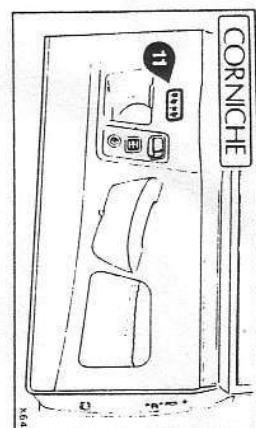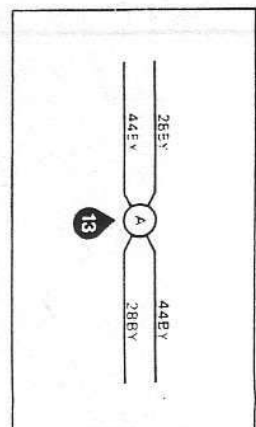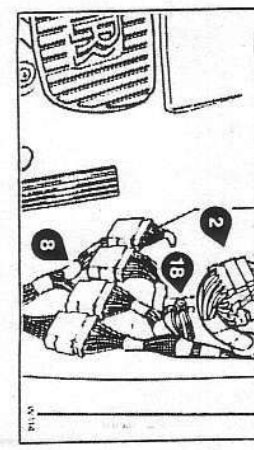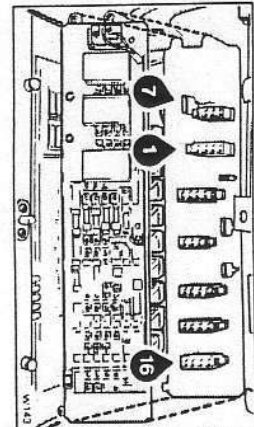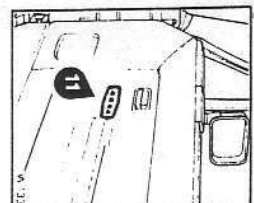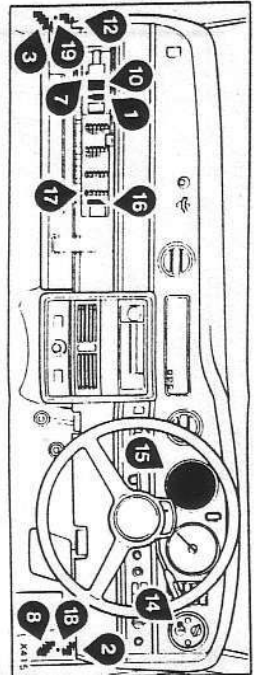

OPTIONAL EQUIPMENT		STANDARD EQUIPMENT	
<input type="checkbox"/>	ABS (Anti-lock Braking System)	<input type="checkbox"/>	16" Alloy Wheels
<input type="checkbox"/>	16" Alloy Wheels	<input type="checkbox"/>	18" Alloy Wheels
<input type="checkbox"/>	18" Alloy Wheels	<input type="checkbox"/>	20" Alloy Wheels
<input type="checkbox"/>	20" Alloy Wheels	<input type="checkbox"/>	22" Alloy Wheels
<input type="checkbox"/>	22" Alloy Wheels	<input type="checkbox"/>	24" Alloy Wheels
<input type="checkbox"/>	24" Alloy Wheels	<input type="checkbox"/>	26" Alloy Wheels
<input type="checkbox"/>	26" Alloy Wheels	<input type="checkbox"/>	28" Alloy Wheels
<input type="checkbox"/>	28" Alloy Wheels	<input type="checkbox"/>	30" Alloy Wheels
<input type="checkbox"/>	30" Alloy Wheels	<input type="checkbox"/>	32" Alloy Wheels
<input type="checkbox"/>	32" Alloy Wheels	<input type="checkbox"/>	34" Alloy Wheels
<input type="checkbox"/>	34" Alloy Wheels	<input type="checkbox"/>	36" Alloy Wheels
<input type="checkbox"/>	36" Alloy Wheels	<input type="checkbox"/>	38" Alloy Wheels
<input type="checkbox"/>	38" Alloy Wheels	<input type="checkbox"/>	40" Alloy Wheels
<input type="checkbox"/>	40" Alloy Wheels	<input type="checkbox"/>	42" Alloy Wheels
<input type="checkbox"/>	42" Alloy Wheels	<input type="checkbox"/>	44" Alloy Wheels
<input type="checkbox"/>	44" Alloy Wheels	<input type="checkbox"/>	46" Alloy Wheels
<input type="checkbox"/>	46" Alloy Wheels	<input type="checkbox"/>	48" Alloy Wheels
<input type="checkbox"/>	48" Alloy Wheels	<input type="checkbox"/>	50" Alloy Wheels
<input type="checkbox"/>	50" Alloy Wheels	<input type="checkbox"/>	52" Alloy Wheels
<input type="checkbox"/>	52" Alloy Wheels	<input type="checkbox"/>	54" Alloy Wheels
<input type="checkbox"/>	54" Alloy Wheels	<input type="checkbox"/>	56" Alloy Wheels
<input type="checkbox"/>	56" Alloy Wheels	<input type="checkbox"/>	58" Alloy Wheels
<input type="checkbox"/>	58" Alloy Wheels	<input type="checkbox"/>	60" Alloy Wheels
<input type="checkbox"/>	60" Alloy Wheels	<input type="checkbox"/>	62" Alloy Wheels
<input type="checkbox"/>	62" Alloy Wheels	<input type="checkbox"/>	64" Alloy Wheels
<input type="checkbox"/>	64" Alloy Wheels	<input type="checkbox"/>	66" Alloy Wheels
<input type="checkbox"/>	66" Alloy Wheels	<input type="checkbox"/>	68" Alloy Wheels
<input type="checkbox"/>	68" Alloy Wheels	<input type="checkbox"/>	70" Alloy Wheels
<input type="checkbox"/>	70" Alloy Wheels	<input type="checkbox"/>	72" Alloy Wheels
<input type="checkbox"/>	72" Alloy Wheels	<input type="checkbox"/>	74" Alloy Wheels
<input type="checkbox"/>	74" Alloy Wheels	<input type="checkbox"/>	76" Alloy Wheels
<input type="checkbox"/>	76" Alloy Wheels	<input type="checkbox"/>	78" Alloy Wheels
<input type="checkbox"/>	78" Alloy Wheels	<input type="checkbox"/>	80" Alloy Wheels
<input type="checkbox"/>	80" Alloy Wheels	<input type="checkbox"/>	82" Alloy Wheels
<input type="checkbox"/>	82" Alloy Wheels	<input type="checkbox"/>	84" Alloy Wheels
<input type="checkbox"/>	84" Alloy Wheels	<input type="checkbox"/>	86" Alloy Wheels
<input type="checkbox"/>	86" Alloy Wheels	<input type="checkbox"/>	88" Alloy Wheels
<input type="checkbox"/>	88" Alloy Wheels	<input type="checkbox"/>	90" Alloy Wheels
<input type="checkbox"/>	90" Alloy Wheels	<input type="checkbox"/>	92" Alloy Wheels
<input type="checkbox"/>	92" Alloy Wheels	<input type="checkbox"/>	94" Alloy Wheels
<input type="checkbox"/>	94" Alloy Wheels	<input type="checkbox"/>	96" Alloy Wheels
<input type="checkbox"/>	96" Alloy Wheels	<input type="checkbox"/>	98" Alloy Wheels
<input type="checkbox"/>	98" Alloy Wheels	<input type="checkbox"/>	100" Alloy Wheels

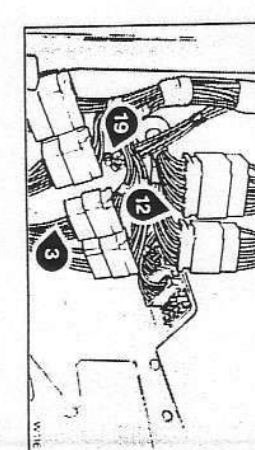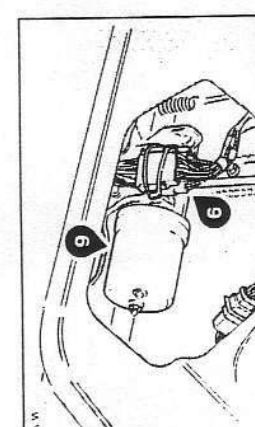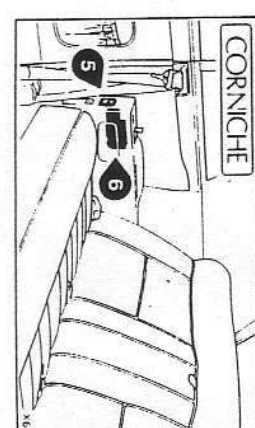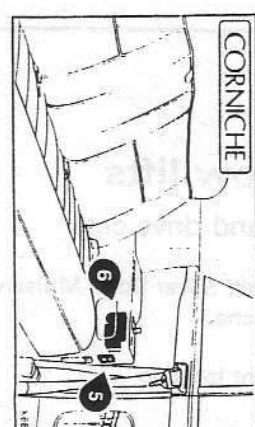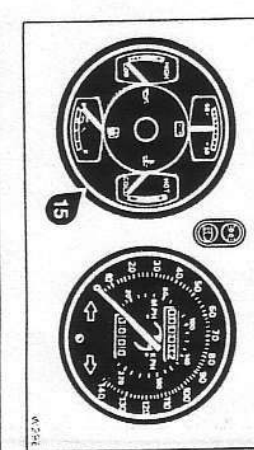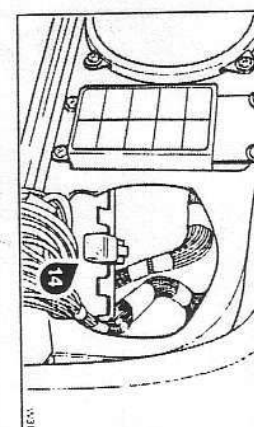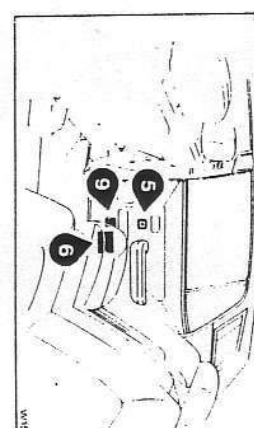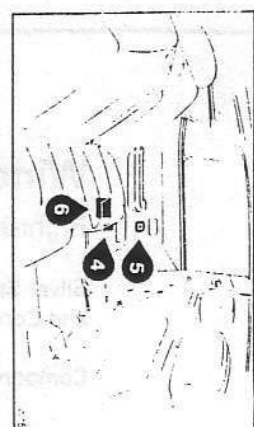

Window lifts

Right-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo),
and Corniche

Wiring diagram

For cars with the window lifts wired through the
ignition system refer to the wiring diagram on
page M22-7


Window lifts

Right-hand drive cars

**Silver Spirit, Silver Spur, Mulsanne (including Turbo),
and Corniche**

Wiring diagram

This wiring diagram is applicable to cars with the
window lifts wired through the ignition system

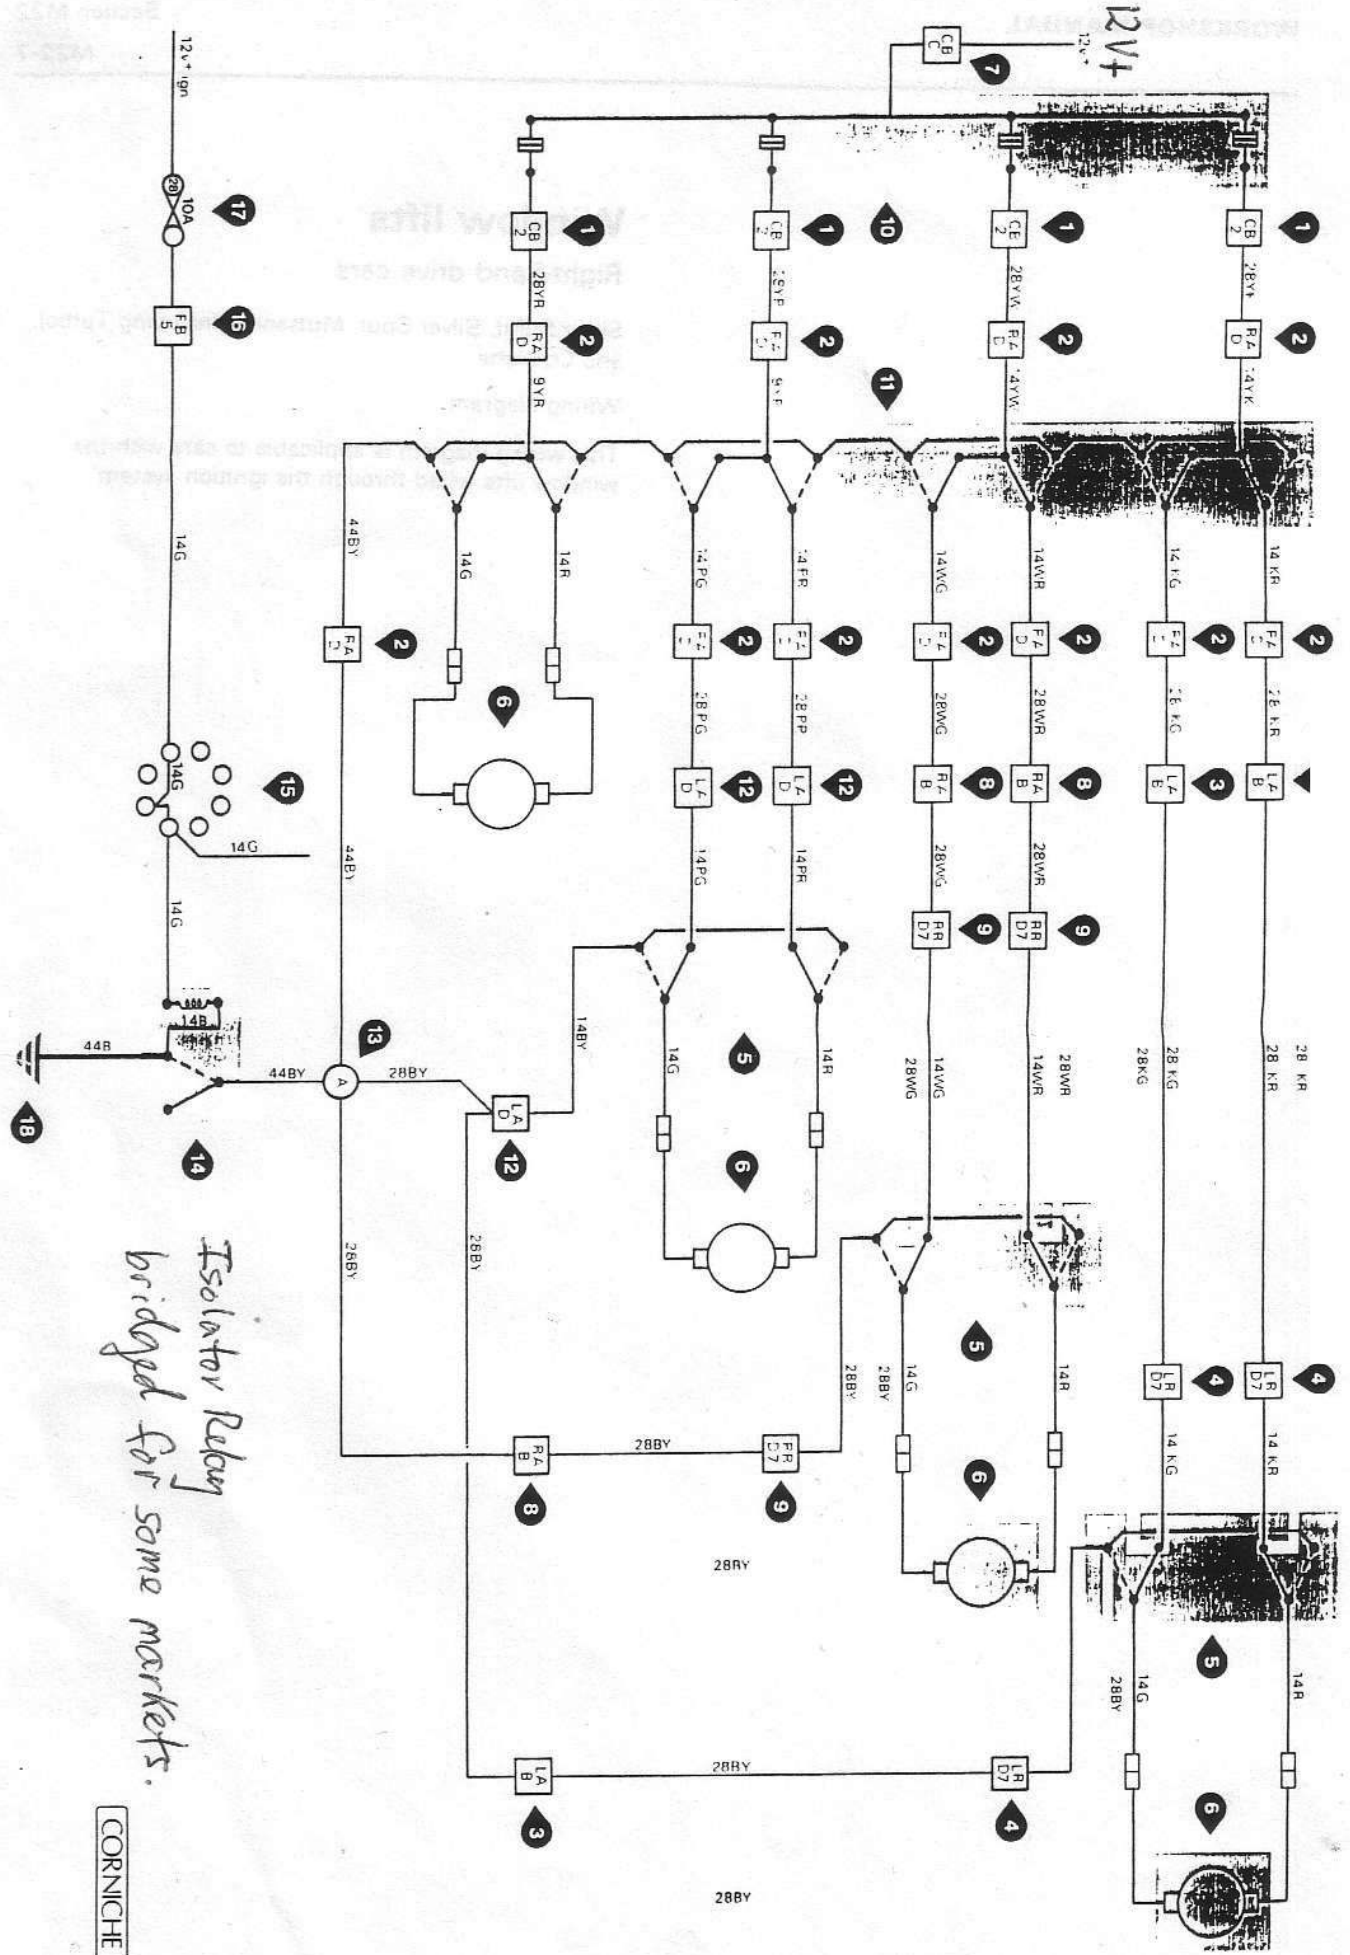

*Isolator Relay
bridged for some markets.*

CORNICHE

28BY

















12V+

Window lifts

Left-hand drive cars






Silver Spirit, Silver Spur, Mulsanne (including Turbo),
and Corniche

Component location

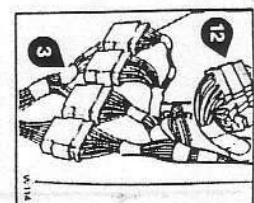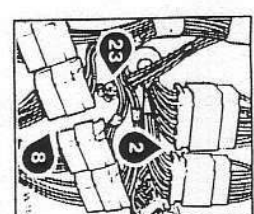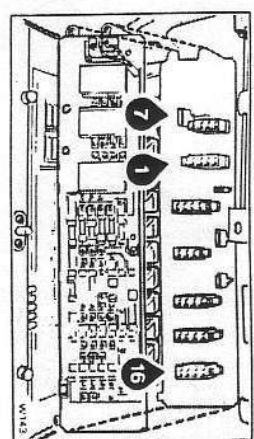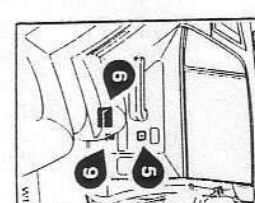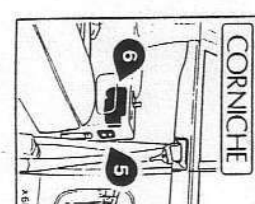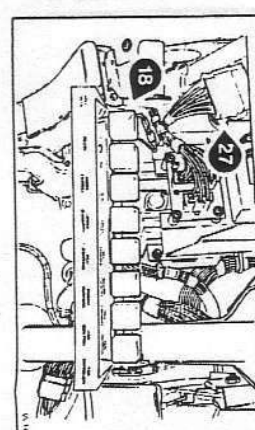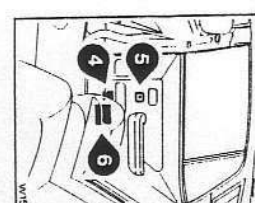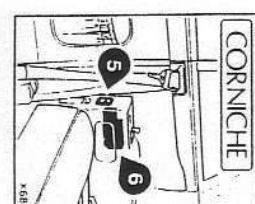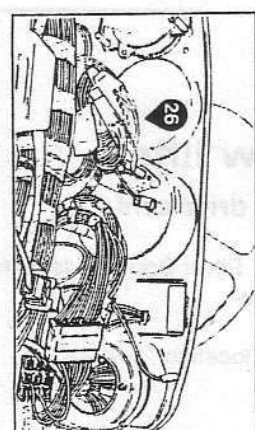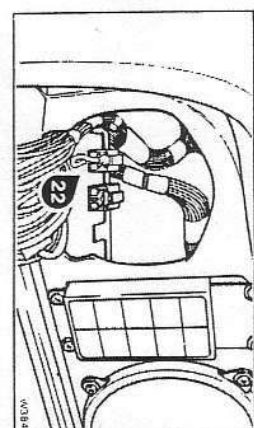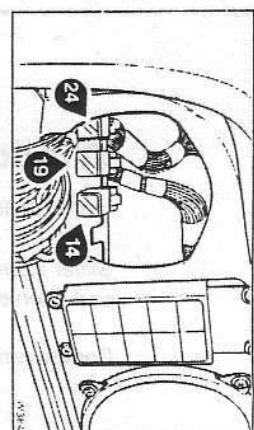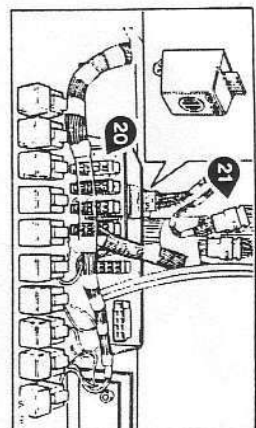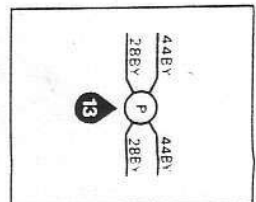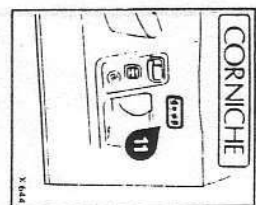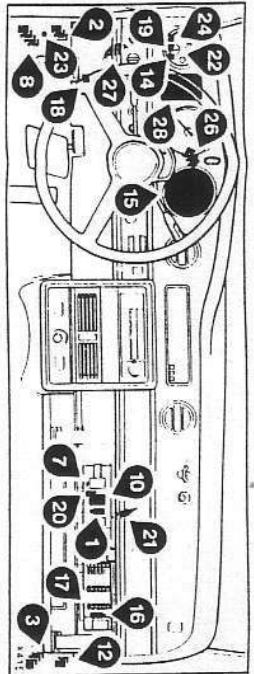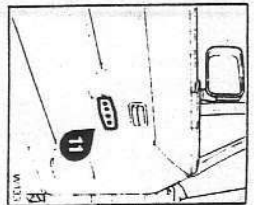

CORNICHE

DESCRIPTION	AMPERES	POSITION
1. 15A	15	1
2. 10A	10	2
3. 10A	10	3
4. 10A	10	4
5. 10A	10	5
6. 10A	10	6
7. 10A	10	7
8. 10A	10	8
9. 10A	10	9
10. 10A	10	10
11. 10A	10	11
12. 10A	10	12
13. 10A	10	13
14. 10A	10	14
15. 10A	10	15
16. 10A	10	16
17. 10A	10	17
18. 10A	10	18
19. 10A	10	19
20. 10A	10	20
21. 10A	10	21
22. 10A	10	22
23. 10A	10	23
24. 10A	10	24
25. 10A	10	25
26. 10A	10	26
27. 10A	10	27
28. 10A	10	28

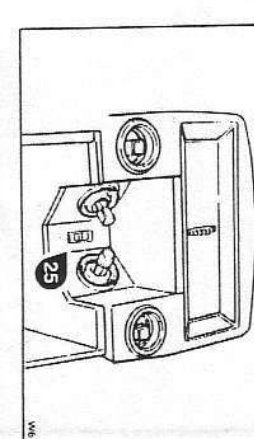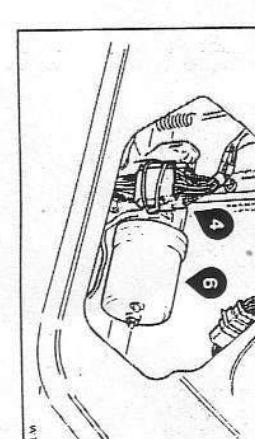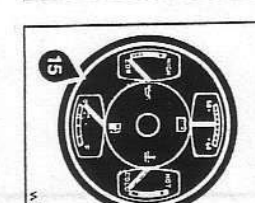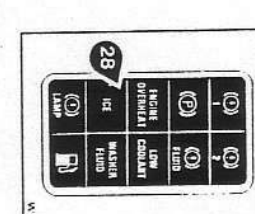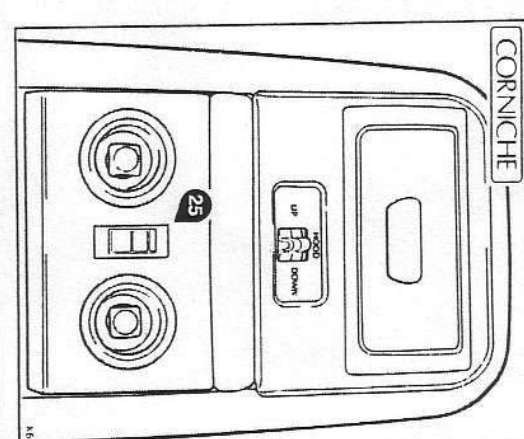

Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo),
and Corniche

Wiring diagram

This wiring diagram is applicable to cars with the
window lifts wired through the ignition system


Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo),
and Corniche

Wiring diagram

For cars with the window lifts wired through the
ignition system refer to the wiring diagram on
page M22-13

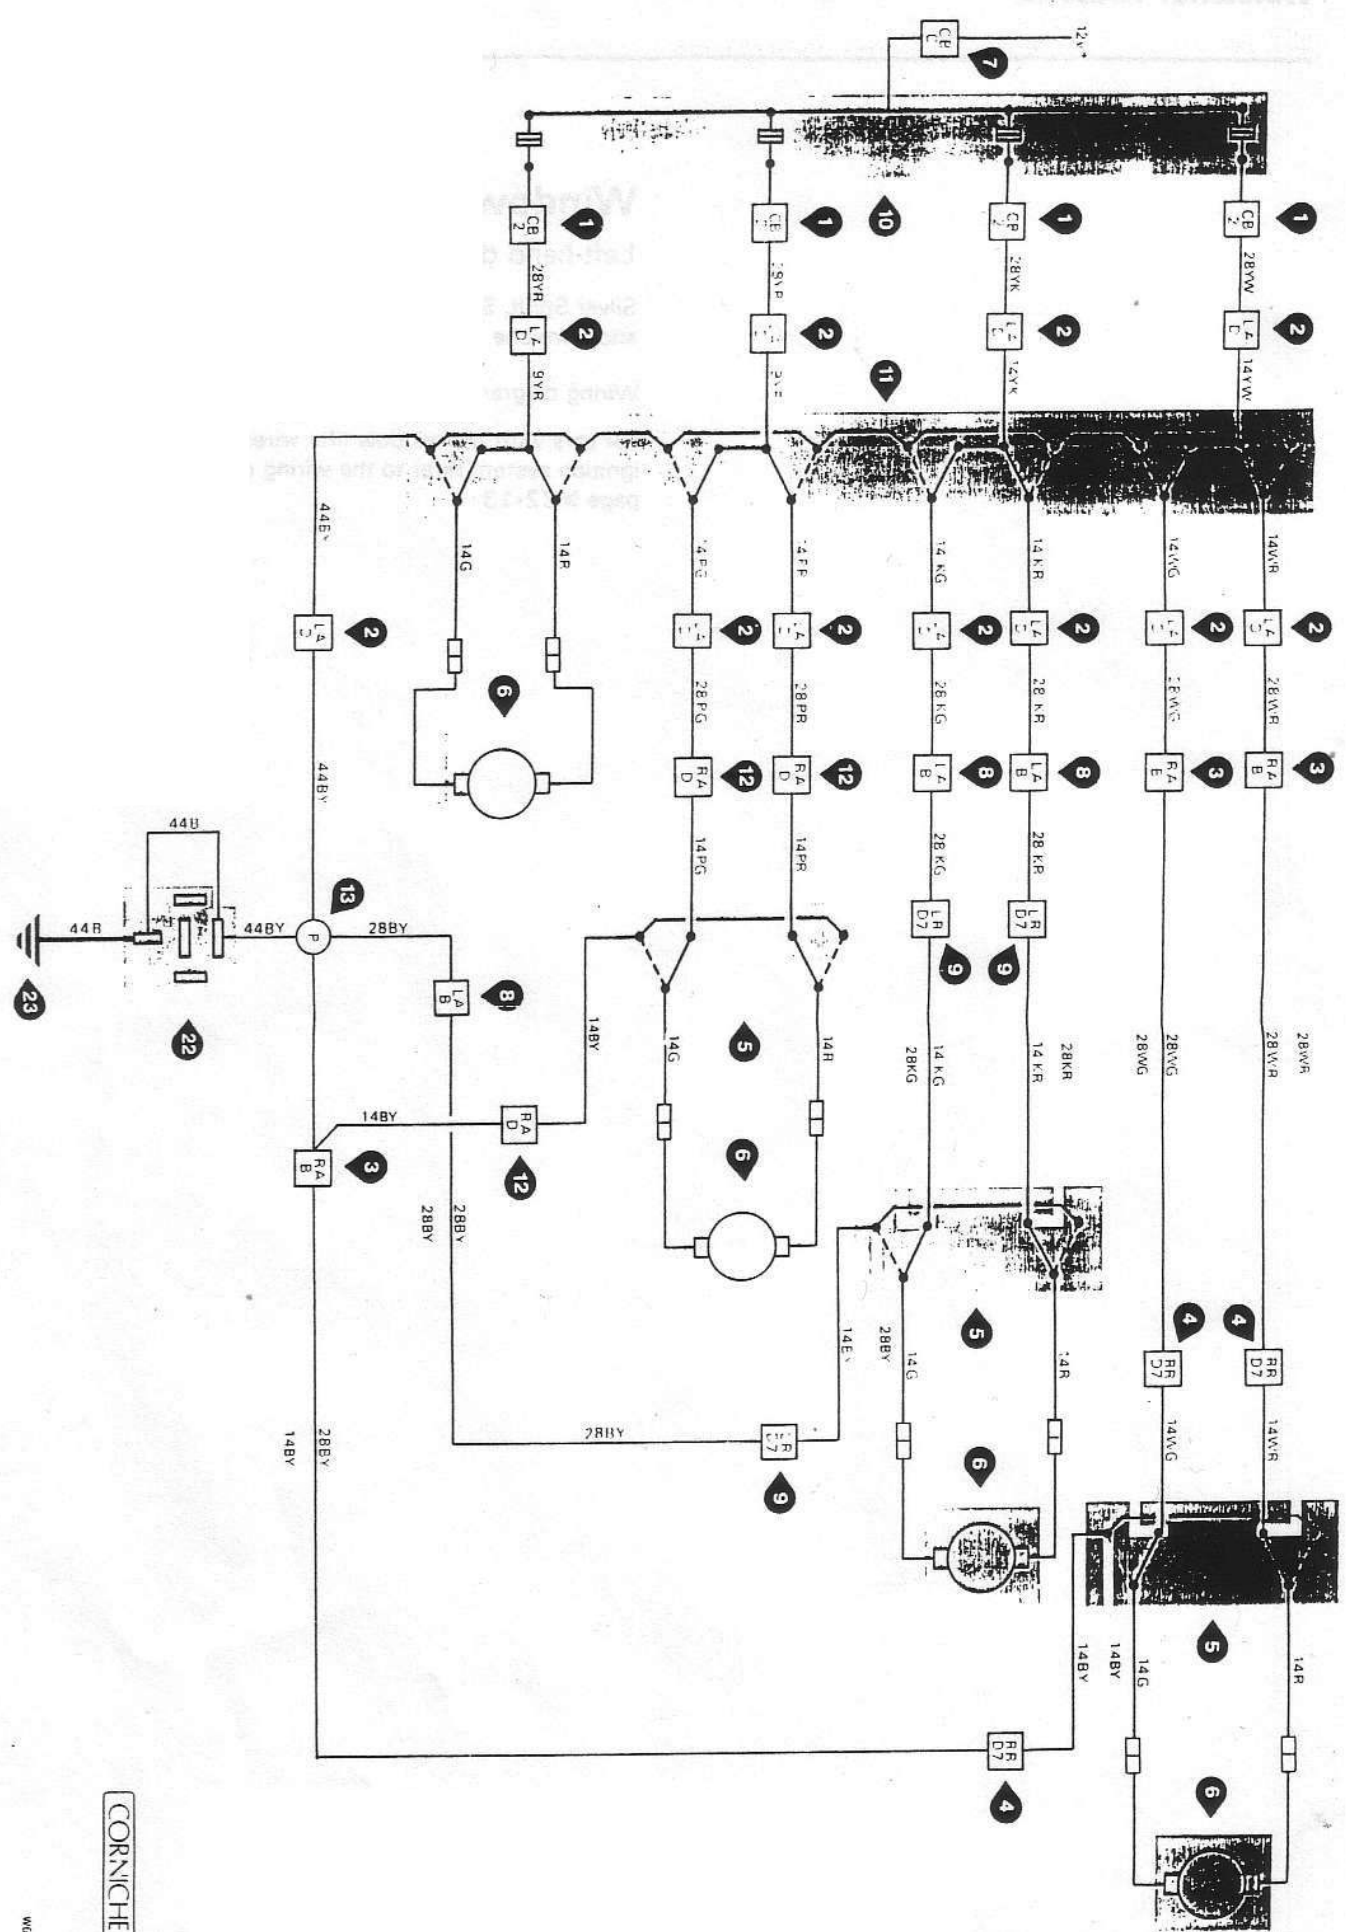


CORNICHE

WG31

Window lifts

Right-hand drive cars
Corniche/Continental

Component location

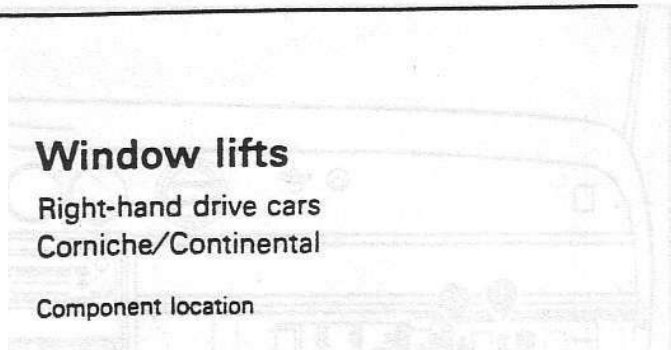

Window lifts

Right-hand drive cars
Corniche/Continental

Wiring diagram

This wiring diagram is applicable to cars fitted with a driver operated rear window isolation switch

Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo),
and Corniche

Component location


Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo),
and Corniche

Wiring diagram

This wiring diagram is applicable to cars fitted with a
driver operated rear window isolation switch

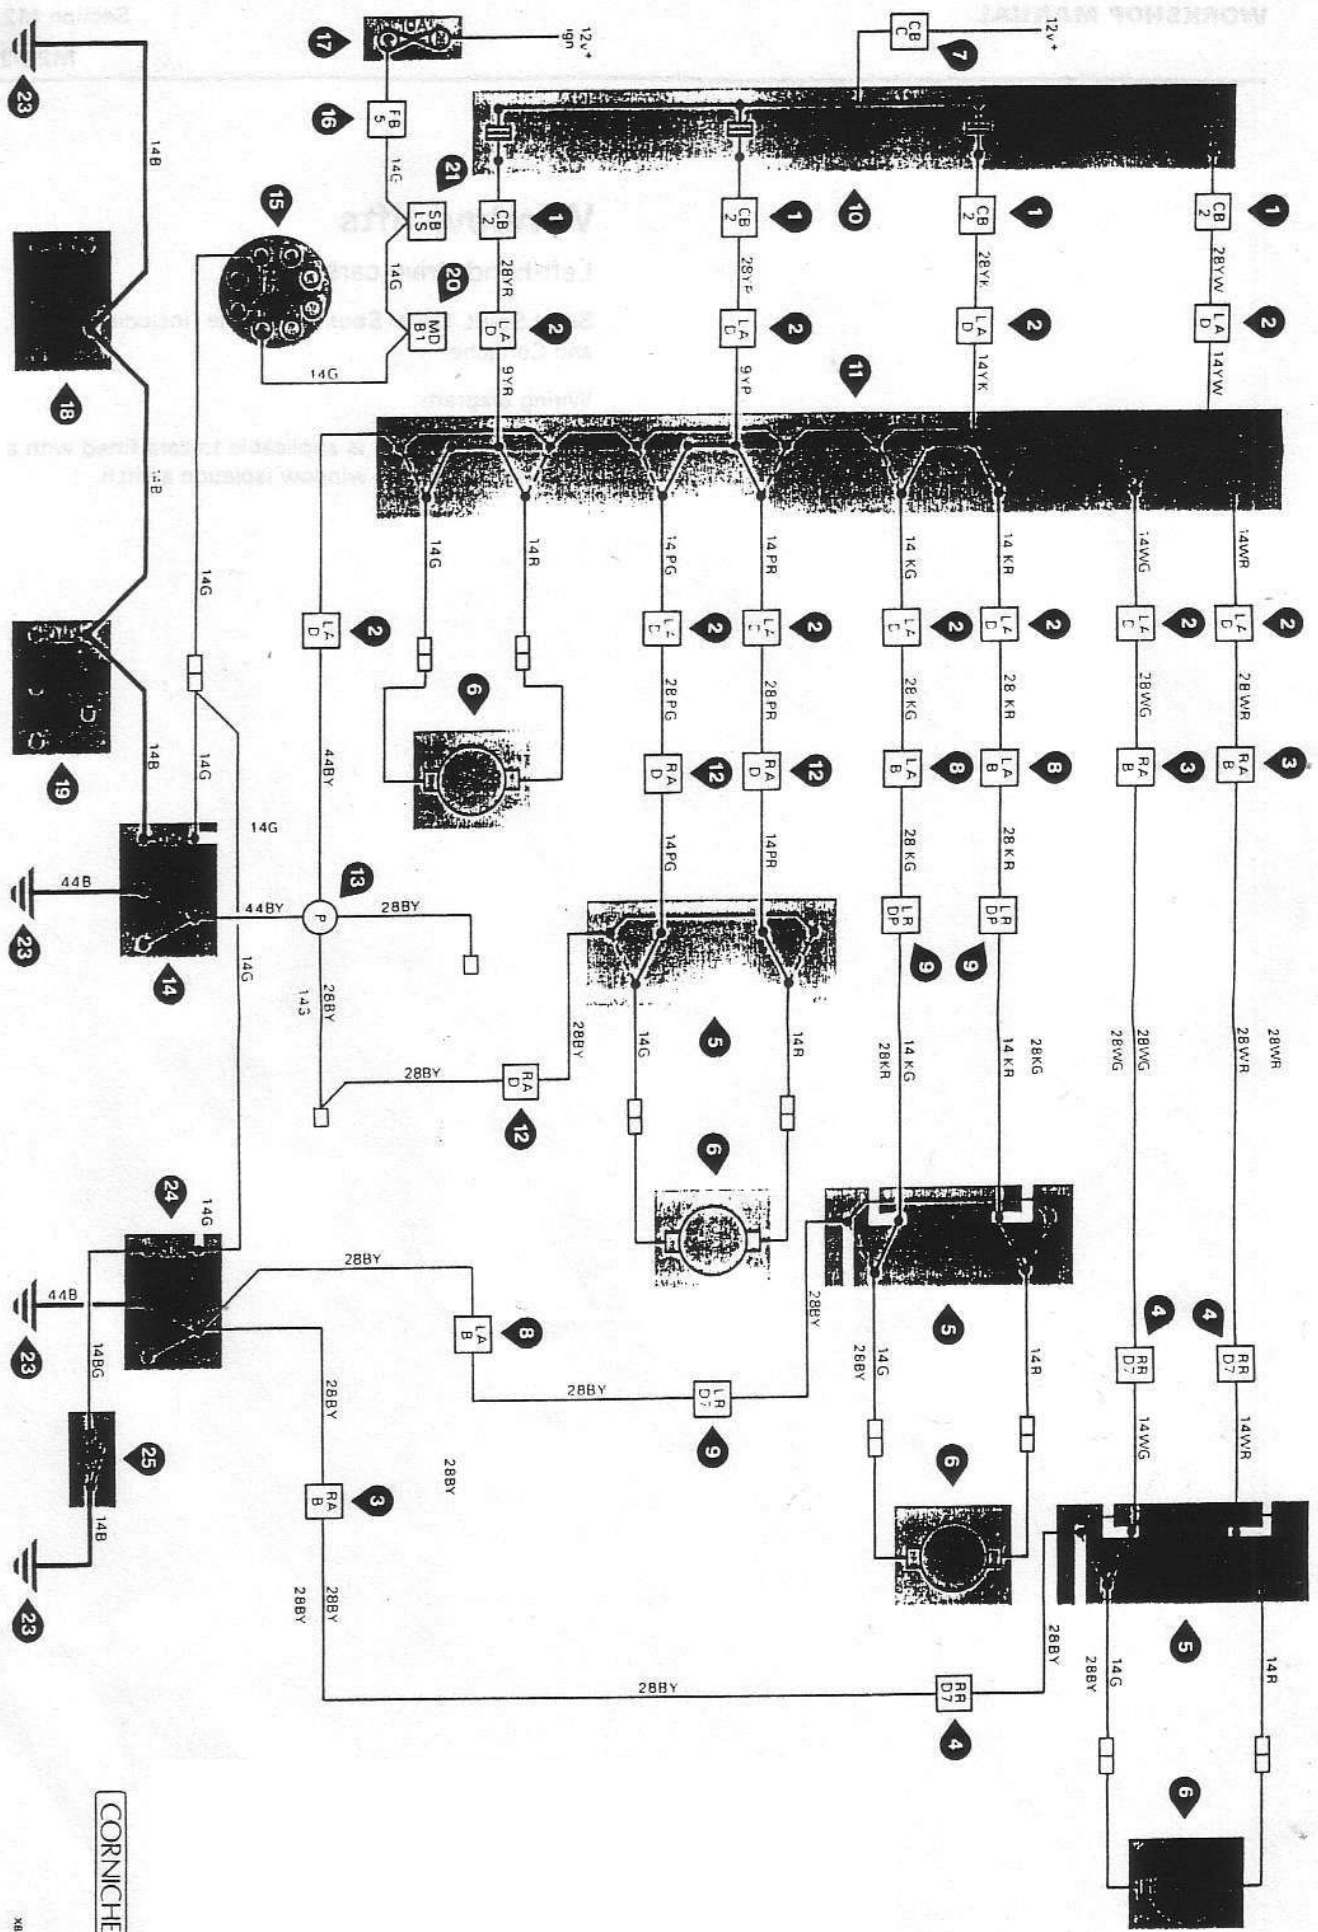

CORNICHE












X808

Window lifts

Right-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), Bentley Eight, and Bentley Turbo R

Component location

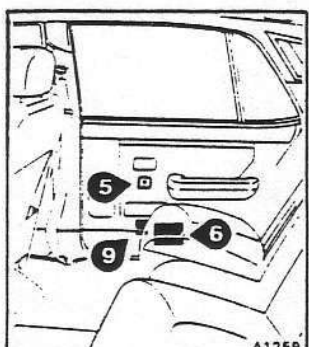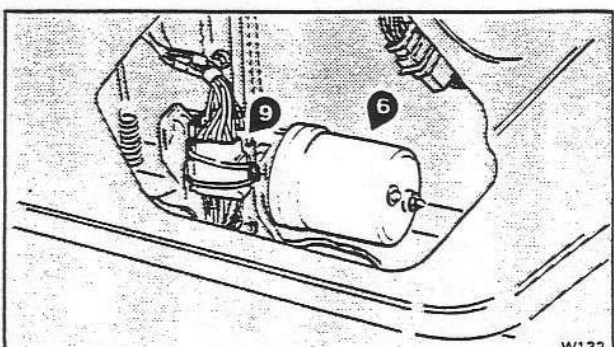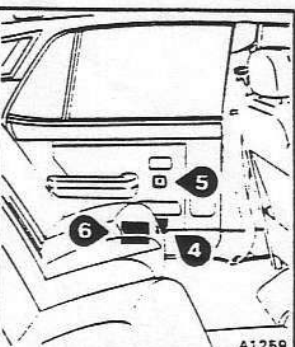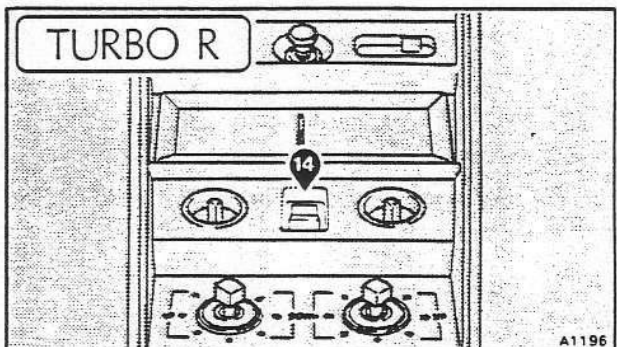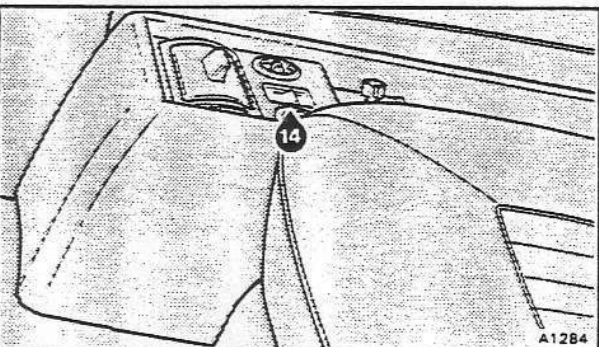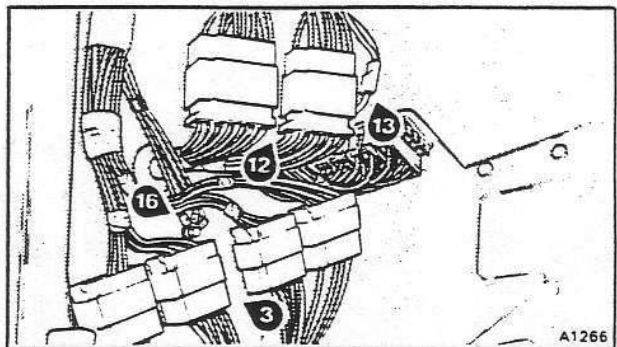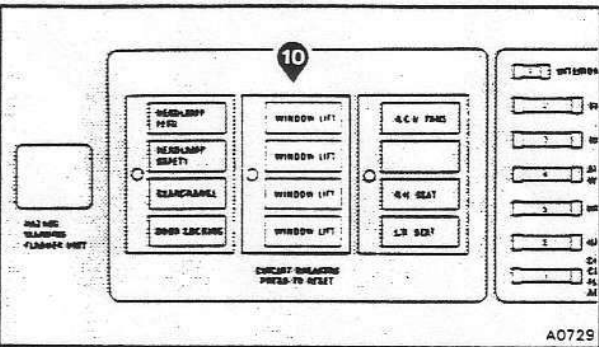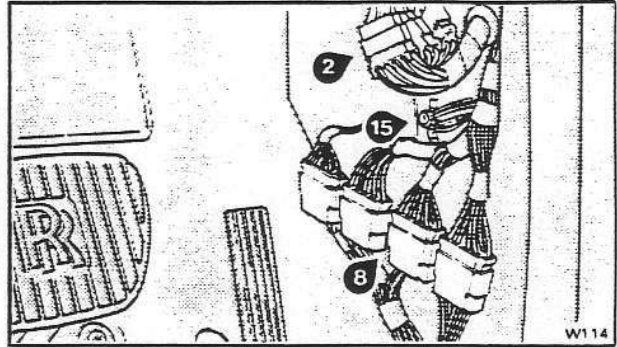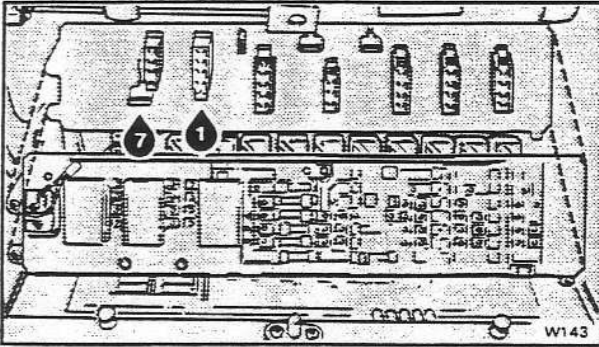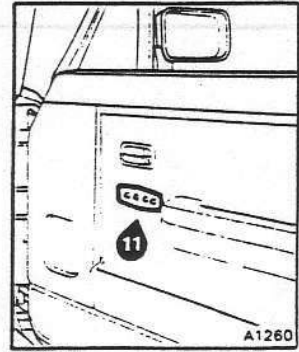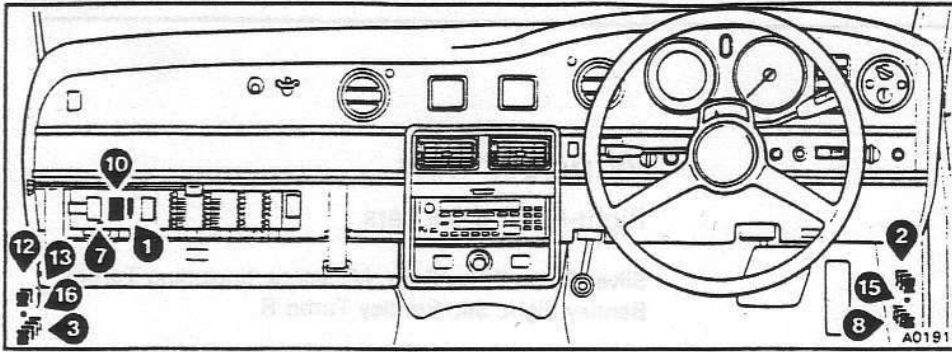


Window lifts

Right-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), Bentley Eight, and Bentley Turbo R

Wiring diagram

This wiring diagram is applicable to cars fitted with a driver operated rear window isolation switch

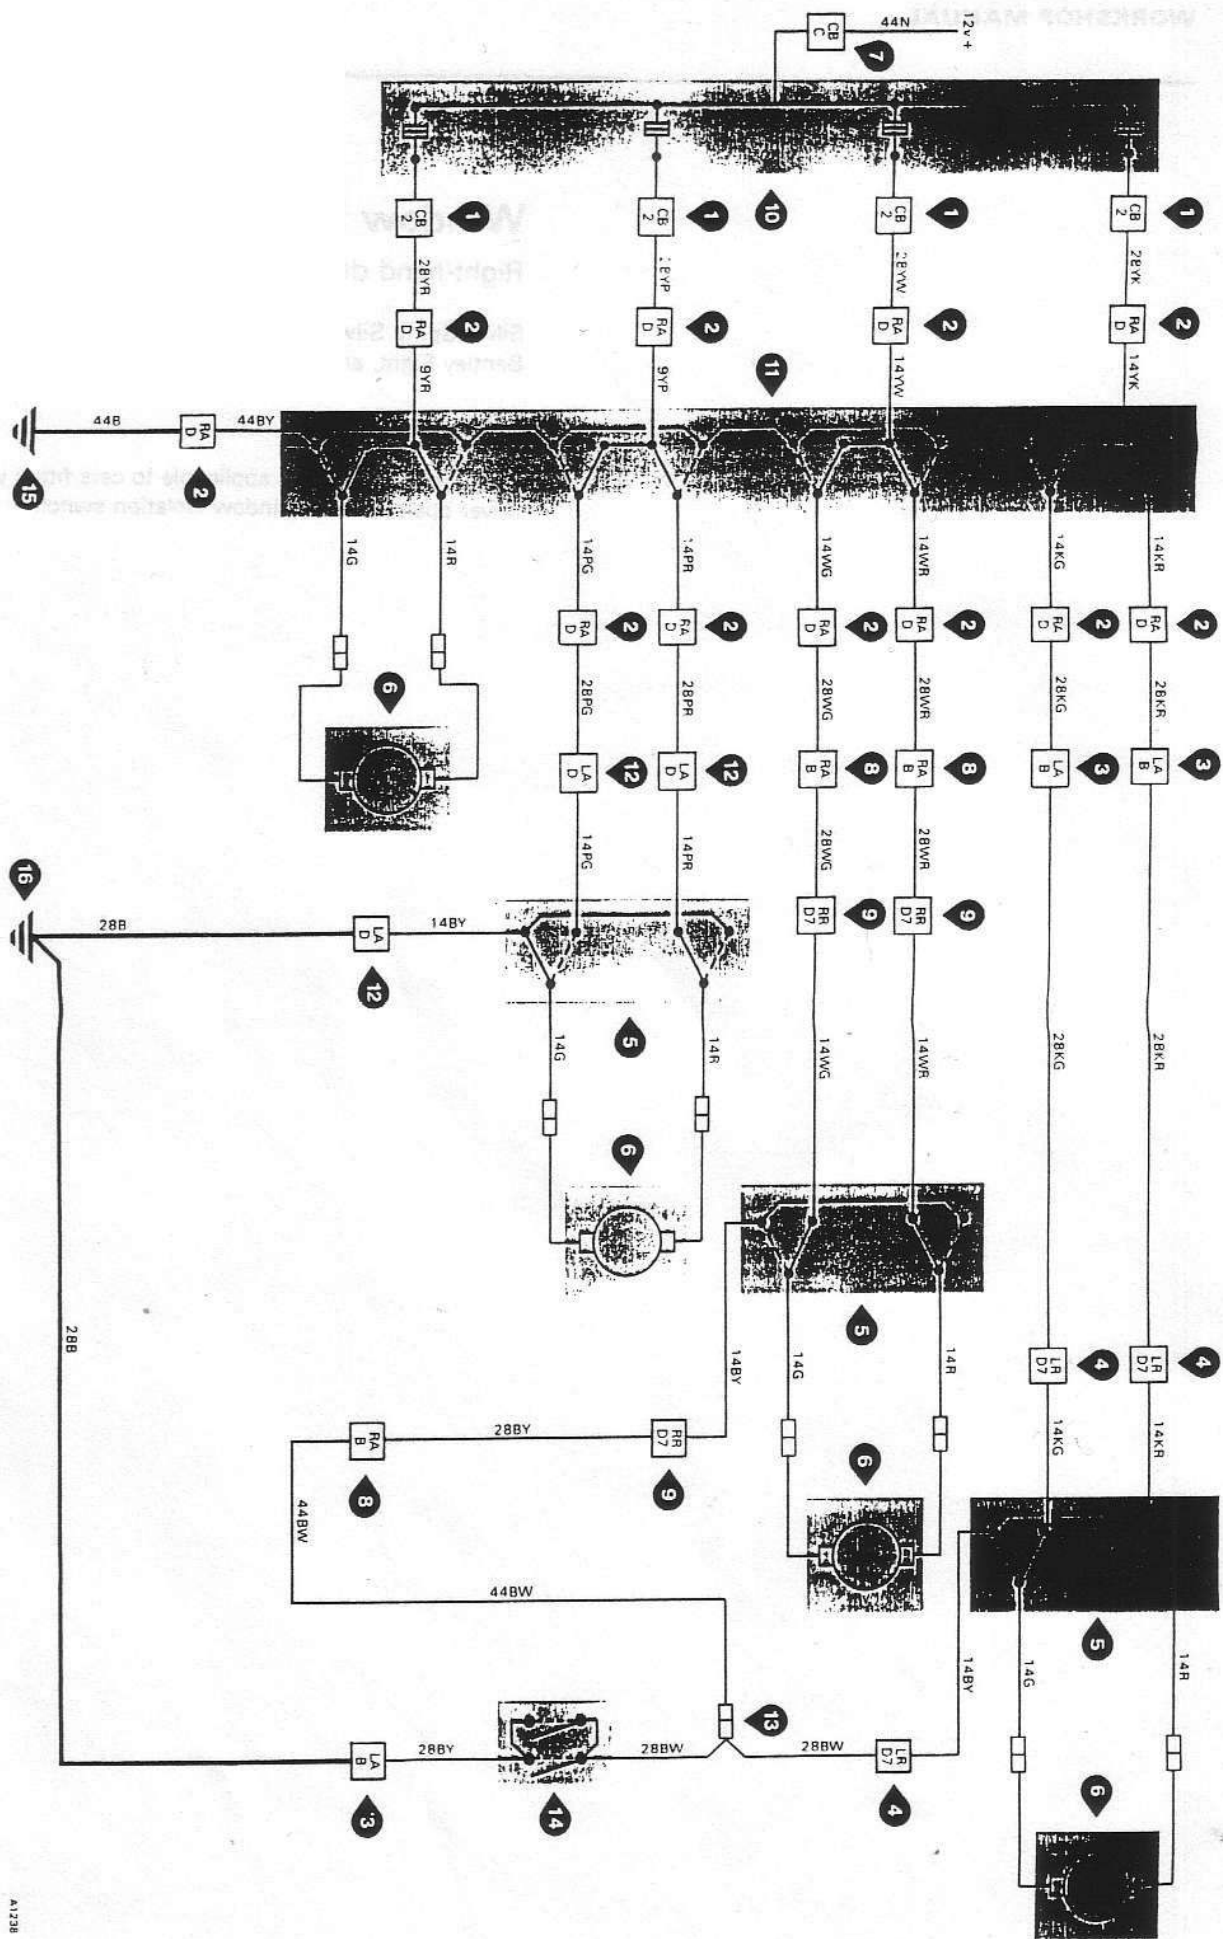

Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo),
Bentley Eight, and Bentley Turbo R

Component location


Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo),
Bentley Eight, and Bentley Turbo R

Wiring diagram

This wiring diagram is applicable to cars fitted with a
driver operated rear window isolation switch

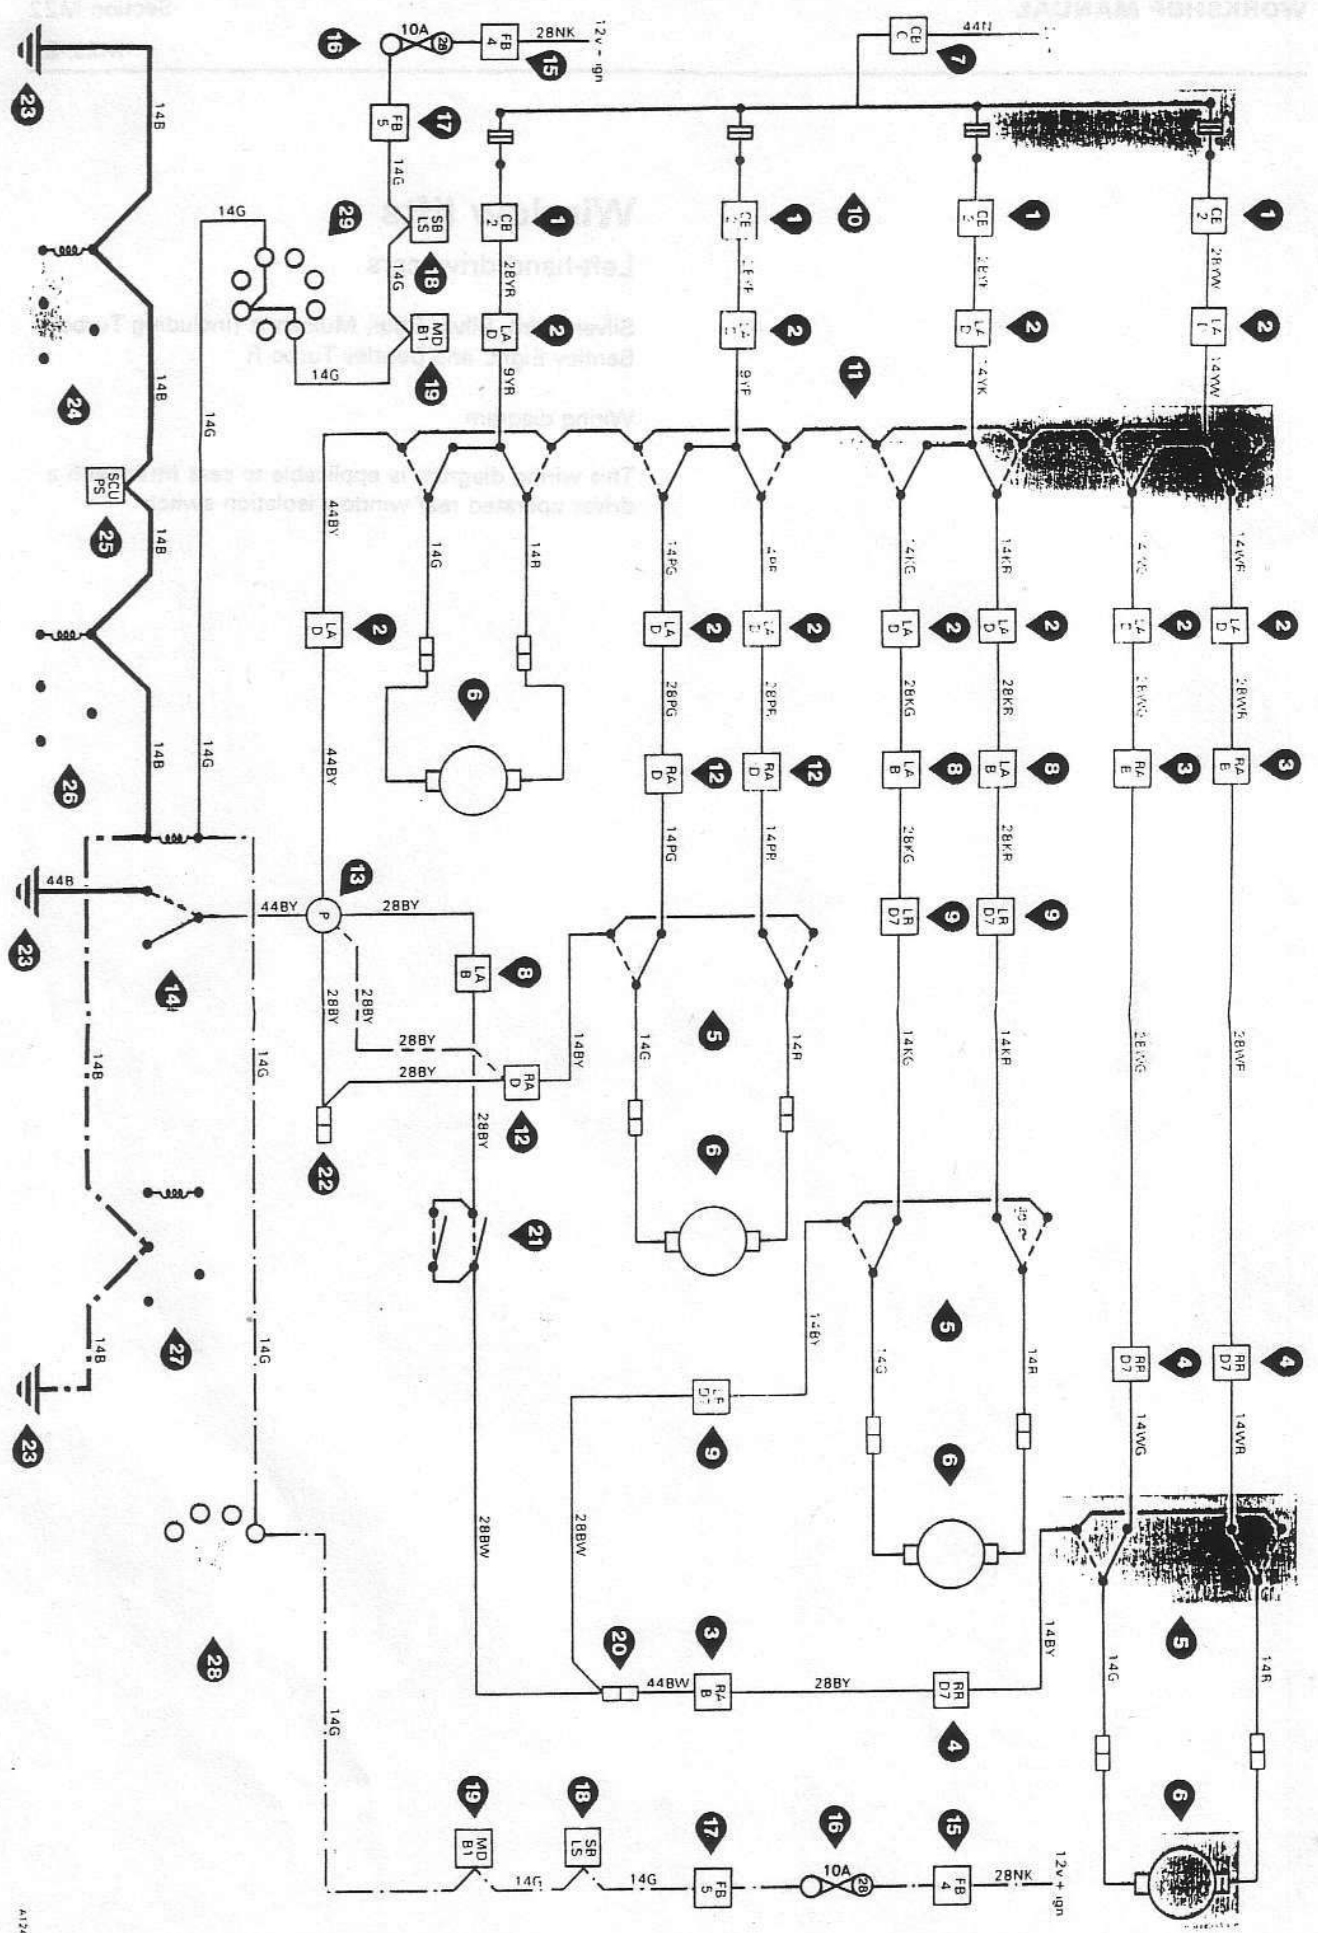

Window lifts

Left-hand drive cars
Corniche/Continental


Component location

Window lifts

Left-hand drive cars
Corniche/Continental

Wiring diagram


This wiring diagram is applicable to cars fitted with a driver operated rear window isolation switch

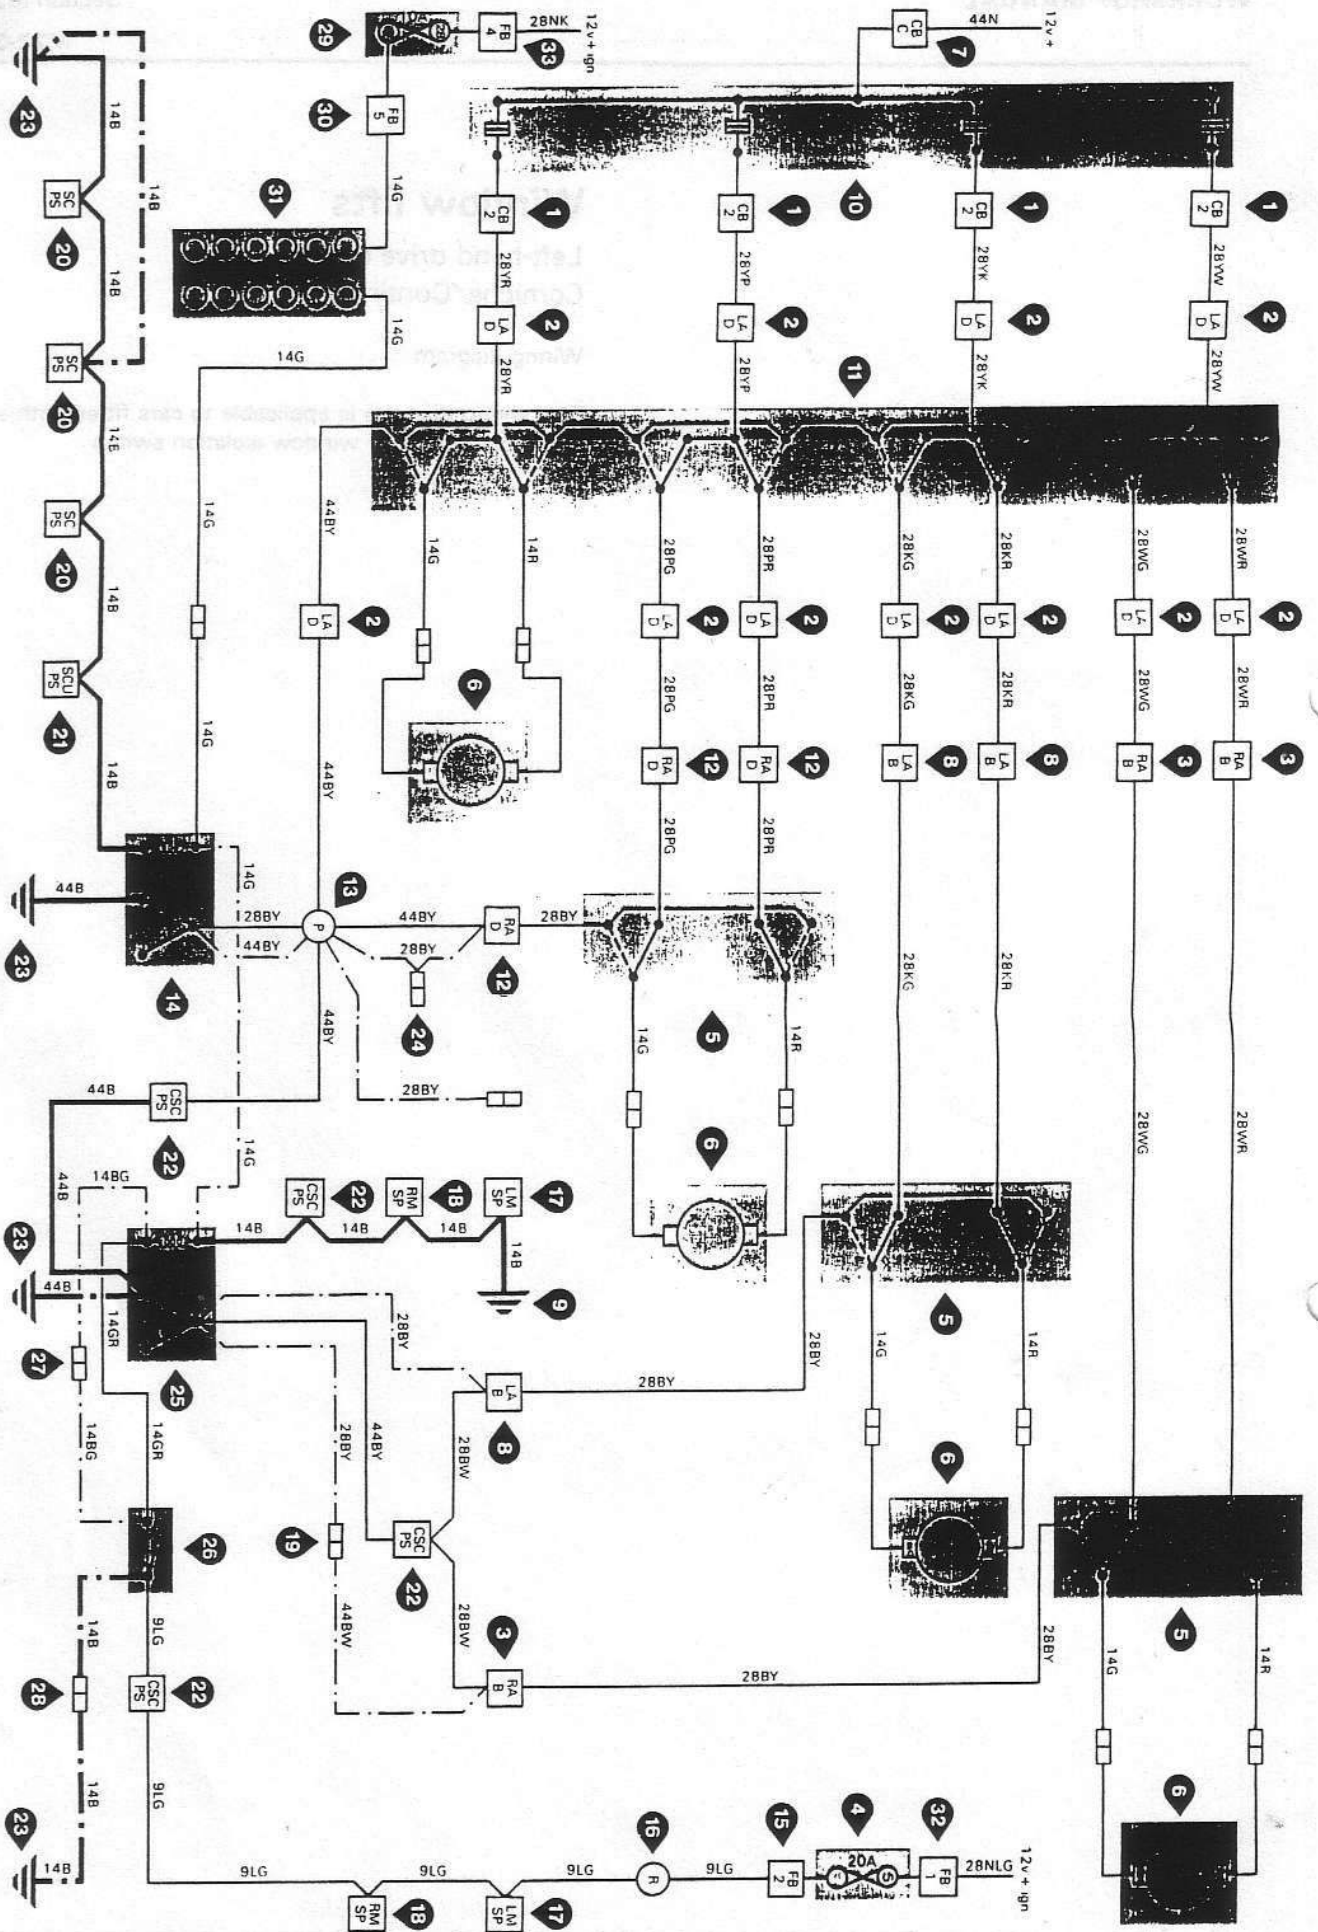

Division glass lift

Silver Spur cars with a centre division

Component location

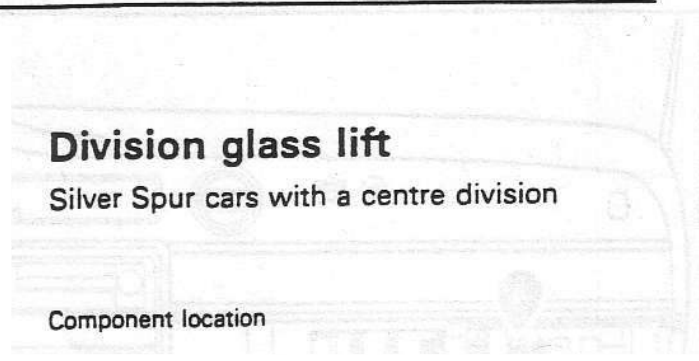

Division glass lift

Silver Spur cars with a centre division

Wiring diagram

