PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England

Ref.	Part No.	Description	No. off	Remarks
1	UD.8195	DUCT–Cross–Rear Compartment Ventilation	1	
2	UD.5125	DUCT–Cross–Demister–RH	1	
3	UB.2969	ASSEMBLY–Backing Plate–Intermediate Cross Duct	1	
4	UB.2970	BRACKET–Support–Cross Duct to Cross Support	1	
5	CS.30542/Z	SCREW–Binding Head–Bracket to Backing Plate	4	
6	CS.32044/Z	WASHER–Plain–Screw	4	
7	CS.30542/Z	SCREW–Binding Head–Support Bracket to Cross Support	2	
8	UA.2051/Z	WASHER–Plain–Screw	2	
9	CS.30980/Z	NUT–Screw	2	
10	UB.2972	ASSEMBLY–Support Bracket–Ventilating Drawer	1	
11	UD.5051	DRAWER–Ventilating–Intermediate Cross Duct	1	
12	UA.102/Z	BOLT–Support Bracket	4	
13	K.4407/Z	WASHER–Plain–Bolt	4	
14	UA.301/Z	NUT–Bolt	4	
15	UB.2049	ASSEMBLY–Heat Shield–Floor–Rear	1	
16	UB.2043	SHIELD–Heat–Rear	1	
17	UB.2040	PLATE–Support–Heat Shield	1	
18	UB.2041	BRACKET–Heat Shield	2	
19	UB.2048	SHIELD–Heat–Centre Floor	1	
20	UB.2045	SHIELD–Heat–Floor–'D' Post	1	
	UW.1660	MILLBOARD–Asbestos	1	
	UW.1661	MILLBOARD–Asbestos	1	
	UW.1662	WEBBING–Asbestos	1	
21	CS.31060/Z	SCREW–Heat Shields	88	
22	CS.31065/Z	SCREW–Heat Shields	11	
23	CS.31020/Z	SCREW–Heat Shields	6	
24	K.4404/Z	WASHER–Plain	17	
25	K.4401/Z	WASHER–Plain	2	
26	UB.2858	PANEL–Insulating–Roof–Front	2	
27	UB.2861	PANEL–Insulating–Roof–Rear	2	
28	UB.2479	PANEL–Insulating–Tonneau Side–Front	2	
29	UB.2480	PANEL–Insulating–Tonneau Side–Rear	2	
30	UR.3998	BOLT–Bumper to Frame	2	
31	UR.2993	ASSEMBLY–Rear Road Spring and Gaiter–RH–(1300 lbs.)	1	
32	UR.655	CLIP–Outer	2	
33	UR.656	CLIP–Inner	2	
34	UR.3022	ASSEMBLY–Rear Road Spring and Gaiter–LH–(1200 lbs.)	1	Right Hand Cars. Required for Colonial Type Suspension.
35	UR.655	CLIP–Outer	2	
36	UR.656	CLIP–Inner	2	
37	UR.5029	ASSEMBLY–Rear Road Spring and Gaiter–RH–(1400 lbs.)	1	
38	UR.5027	CLIP–Outer	2	
39	UR.5028	CLIP–Inner	2	
40	UR.3022	ASSEMBLY–Rear Road Spring and Gaiter–RH–(1200 lbs.)	1	Left Hand Cars. Required for Colonial Type Suspension.
41	UR.655	CLIP–Outer	2	
42	UR.656	CLIP–Inner	2	
43	UR.2993	ASSEMBLY–Rear Road Spring and Gaiter–LH–(1300 lbs.)	1	
44	UR.655	CLIP–Outer	2	
45	UR.656	CLIP–Inner	2	
The following items are common to each Spring Assembly :—				
46	KB.2028/R	RIVET–Spring Clip	4	
47	UR.1662	INTERLEAF	8	
48	UR.1173	BUSH–Front Eye	2	
49	UR.1301	BUSH	1	
50	UR.814	GAITER	2	
51	UR.2855	PLATE–Poundage–Gaiter	1	
52	CS.35080/Z	RIVET–Plate	2	
53	UR.3414	BOLT–'U'–(1300 lbs.)–RH	1	Right Hand Cars. Colonial Type Suspension.
54	UR.3415	BOLT–'U'–(1300 lbs.)–RH	1	
55	UR.3414	BOLT–'U'–(1400 lbs.)–RH	1	
56	UR.3415	BOLT–'U'–(1400 lbs.)–RH	1	
57	UR.1425	BOLT–'U'–(1200 lbs.)–RH	1	Left Hand Cars. Required for Colonial Type Suspension.
58	UR.1428	BOLT–'U'–(1200 lbs.)–RH	1	
59	UR.3414	BOLT–'U'–(1300 lbs.)–LH	2	
60	UR.3431	BRACKET–Mounting–HF Horn	1	Required when High Frequency Horns are fitted.
61	UA.102/Z	BOLT–Bracket	4	
62	UA.1251/Z	WASHER–Plain–Bolt	4	
63	UA.301/Z	NUT–Bolt	4	

Silver Cloud II—SZD.347 Onwards.


Bentley S.2—B.415.DV Onwards.

Items marked † are not supplied as individual parts

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

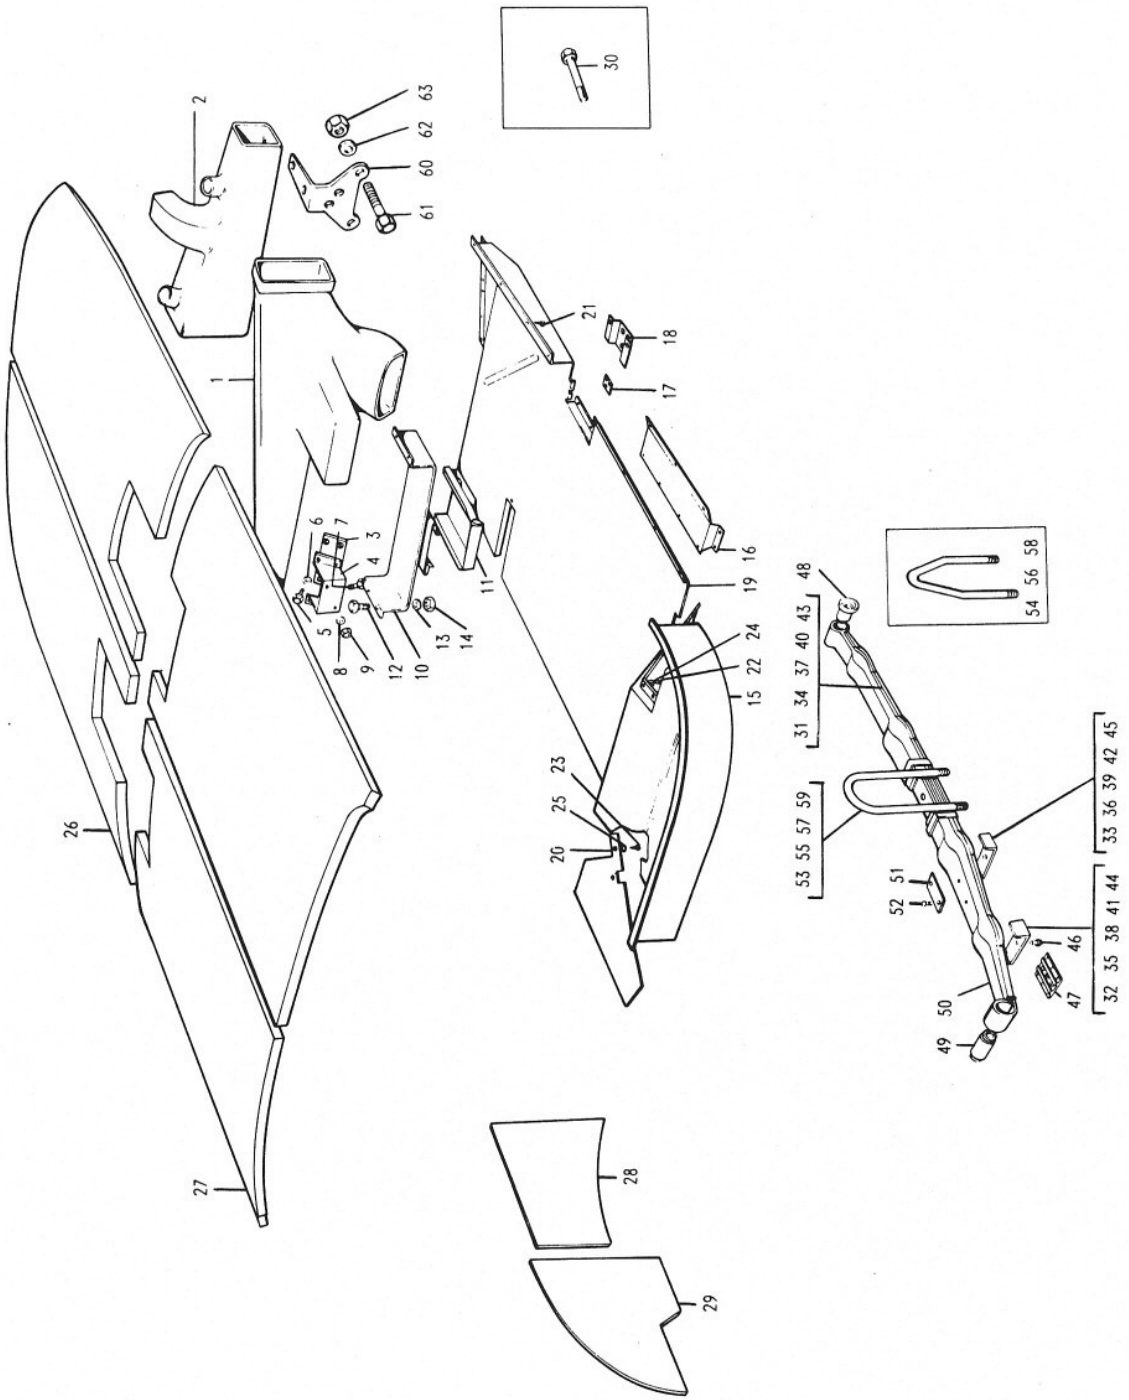


AIR CONDITIONING—UNDERWING REFRIGERATION—

BODY FITTINGS AND SPRINGS—
STANDARD CARS (Except U.S.A. and Canada)

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

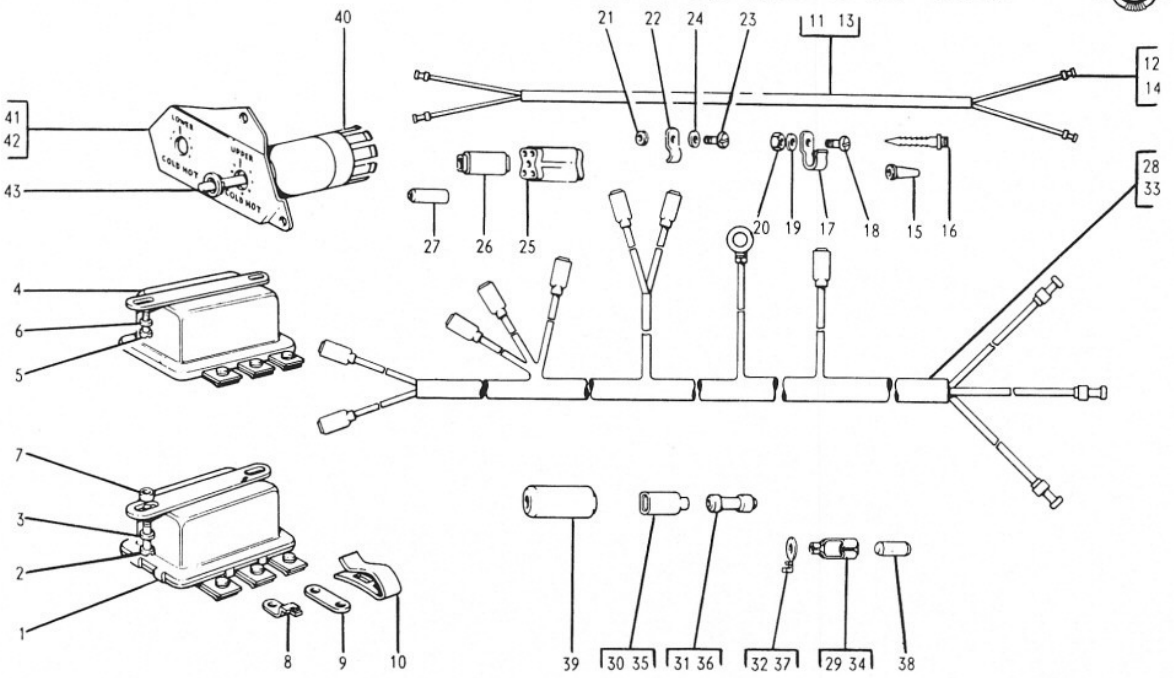

Ref.	Part No.	Description	No. off	Remarks
1	UD.6250	RELAY–Change Over–By-Pass Solenoid	1	
2	K.1907/Z	SCREW–Relay to Dash	2	
3	K.4404/Z	WASHER–Plain–Screw	2	
4	UD.4340	RELAY–Rear Window Demister	1	
5	K.1952/Z	SCREW–Relay	2	
6	K.4404/Z	WASHER–Plain–Screw	2	
7	UD.6118	PIECE–Distance–Relay	2	
8	UD.6147	BLADE–Terminal–Relays	13	
9	RD.3096	CONNECTOR–Fuse Box	1	
10	UD.2906	CLIP–Latching–"C" Loom	1	
11	UD.5145	ASSEMBLY–Cable–Therm Switch–Cross Duct	1	
12	UD.2141	NIPPLE	4	
13	UD.5146	ASSEMBLY–Cable–Therm Switch–Transfer Duct	1	
14	UD.2141	NIPPLE	4	
15	UD.5141	GROMMET–Cable–Therm Switch–Cross Duct	1	
16	UA.6002/R	CLIP–Cable–Dash Side	1	
17	UD 6097	CLIP–Cables to Sill	1	
18	CS.30542/Z	SCREW–Clip to Sill	1	
19	K.4452/Z	WASHER–Plain–Screw	1	
20	K.4006/Z	NUT–Screw	1	
21	RF.7127	GROMMET–Dash Side	1	
22	RD.6082	CLIP–Cable to Dash Side	1	
23	CS.30541/Z	SCREW–Clip to Dash Side	1	
24	K.9006/Z	WASHER–Spring–Screw	1	
25	RD.6932	CONNECTOR–Snap–5 way	1	
26	UD.1806	CONNECTOR–Double	1	
27	RD.7050	CONNECTOR–Single	4	
28	UD.5574	ASSEMBLY–Loom–Front End–LH Valance Plate to Facia	1	Left Hand Drive for Switzerland and Italy.
29	UD.6072	CONNECTOR–Lucar Receptacle	6	
30	UD.6119	SLEEVE–Connector	6	
31	UD.2141	NIPPLE	5	
32	RD.7990	EYE–Cable	1	
33	UD.5739	ASSEMBLY–Loom–Front End–LH Valance Plate to Facia	1	Not for Switzerland or Italy.
34	UD.6072	CONNECTOR–Lucar Receptacle	8	
35	UD.6119	SLEEVE–Connector	8	
36	UD.2141	NIPPLE	3	
37	RD.7990	EYE–Cable	1	
38	RD.7050	CONNECTOR–Single	8	
39	UD.1806	CONNECTOR–Double	1	
40	UD.4601	SWITCH–Ventilator	1	
41	UD.5073	ASSEMBLY–Picture Plate–A.C.U. Switch	1	
42	UD.5074	PLATE–Picture	1	
43	UD.1866	ESCUTCHEON	2	

SILVER CLOUD II—SRA.1, SPA.2 } To SZD.345 Incl.

BENTLEY S.2 —B.1.AA, B.2.AM } To B.413.DV Incl.


Items marked † are not supplied as individual parts

Printed in England.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

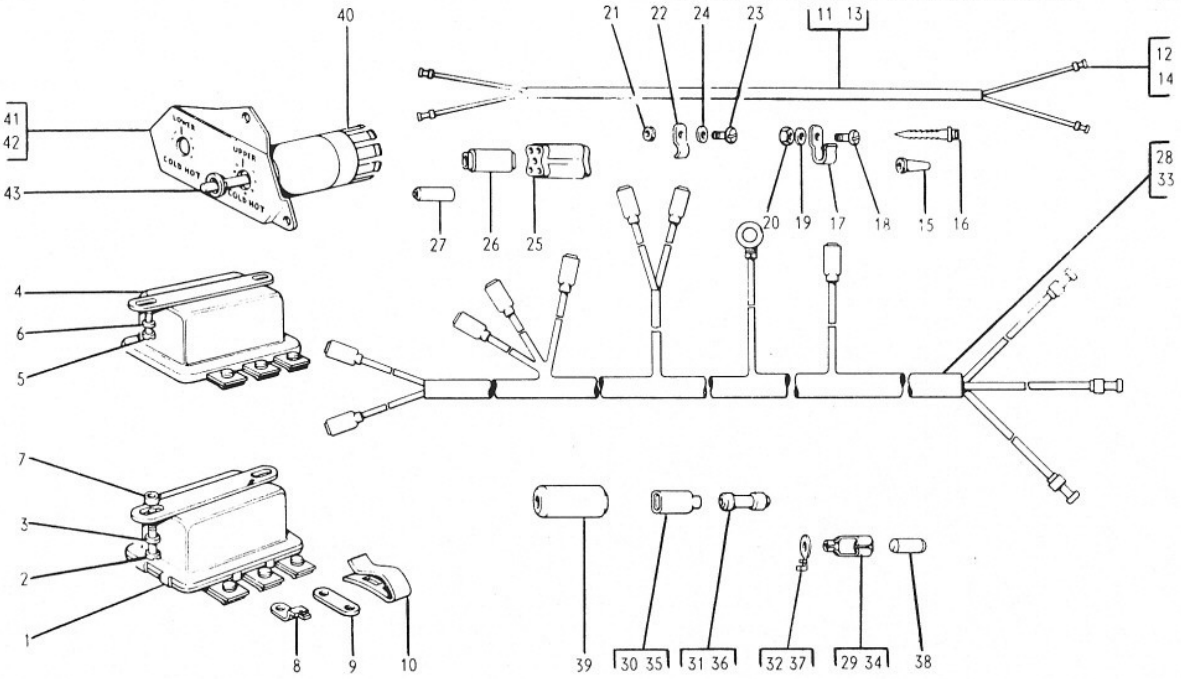

Ref.	Part No.	Description	No. off	Remarks
1	UD.6250	RELAY–Change Over–By–Pass Solenoid	1	
2	K.1907/Z	SCREW–Relay to Dash	2	
3	K.4404/Z	WASHER–Plain–Screw	2	
4	UD.4340	RELAY–Rear Window Demister	1	
5	K.1952/Z	SCREW–Relay	2	
6	K.4404/Z	WASHER–Plain–Screw	2	
7	UD.6118	PIECE–Distance–Relay	2	
8	UD.6147	BLADE–Terminal–Relays	13	
9	RD.3096	CONNECTOR–Fuse Box	1	
10	UD.2906	CLIP–Latching–"C" Loom	1	
11	UD.5145	ASSEMBLY–Cable–Therm Switch–Cross Duct	1	
12	UD.2141	NIPPLE	4	
13	UD.5146	ASSEMBLY–Cable–Therm Switch–Transfer Duct	1	
14	UD.2141	NIPPLE	4	
15	UD.5141	GROMMET–Cable–Therm Switch–Cross Duct	1	
16	UA.6002/R	CLIP–Cable–Dash Side	1	
17	UD.6097	CLIP–Cables to Sill	1	
18	CS.30542/Z	SCREW–Clip to Sill	1	
19	K.4452/Z	WASHER–Plain–Screw	1	
20	K.4006/Z	NUT–Screw	1	
21	RF.7127	GROMMET–Dash Side	1	
22	RD.6082	CLIP–Cable to Dash Side	1	
23	CS.30541/Z	SCREW–Clip to Dash Side	1	
24	K.9006/Z	WASHER–Spring–Screw	1	
25	RD.6932	CONNECTOR–Snap–5 Way	1	
26	UD.1806	CONNECTOR–Double	1	
27	RD.7050	CONNECTOR–Single	4	
28	UD.5574	ASSEMBLY–Loom–Front End–LH Valance Plate to Facia	1	Left Hand Drive Cars, for Switzerland and Italy.
29	UD.6072	CONNECTOR–Lucar Receptacle	6	
30	UD.6119	SLEEVE–Connector	6	
31	UD.2141	NIPPLE	5	
32	RD.7990	EYE–Cable	1	
33	UD.5739	ASSEMBLY–Loom–Front End–LH Valance Plate to Facia	1	Not for Switzerland or Italy.
34	UD.6072	CONNECTOR–Lucar Receptacle	8	
35	UD.6119	SLEEVE–Connector	8	
36	UD.2141	NIPPLE	3	
37	RD.7990	EYE–Cable	1	
38	RD.7050	CONNECTOR–Single	8	
39	UD.1806	CONNECTOR–Double	1	
40	UD.8012	SWITCH–Ventilator	1	
41	UD.5073	ASSEMBLY–Picture Plate–A.C.U. Switch	1	
42	UD.5074	PLATE–Picture	1	
43	UD.1866	ESCUTCHEON	2	

Items marked † are not supplied as individual parts

SILVER CLOUD II—SZD.347 Onwards.

BENTLEY S.2 —B.415.DV Onwards.

AIR CONDITIONING—REFRIGERATION—

COMPRESSOR—PIPES AND FITTINGS
(U.S.A. and Canada)

L.11.—Amendment 1.

CHASSIS No's :—

BENTLEY S.2— B 1 AA / B 2 AM } to B 149 CT Incl.
153
157 to 185 Incl.
189 to 215 Incl.
219 to 271 Incl.
275 to 283 Incl.
287 to 303 Incl.
307 to 361 Incl.
365
369 to 413 Incl.
417 to 445 Incl.
B 2 CU to 6 Incl
10 to 68 Incl.
74 to 170 Incl.
174 to 310 Incl.
314 to 338 Incl.
342 to 346 Incl.
350 to 362 Incl.
366 to 384 Incl.
388
392, 394
398 to 404 Incl.
408 to 464 Incl.
468 to 488 Incl.
492 to 496 Incl.
500 to 532 Incl.
538 to 568 Incl.

BENTLEY S.2 LWB— LBA 1 to 20 Incl.

BENTLEY CONTINENTAL S.2—BC 1 AR to BC 89 BY Incl.


SILVER CLOUD II—SPA 2 / SRA 1 } to SWC 76 Incl.
80 to 268 Incl.
272 to 308 Incl.
312 to 394 Incl.
398 to 472 Incl.
476, 484, 488
504 to 514 Incl.
518 to 556 Incl.
562 to 634 Incl.
640 to 650 Incl.
654 to 662 Incl.
666 to 676 Incl.
680 to 730 Incl.
SXC 3 to 7 Incl.
15 to 85 Incl.
91 to 143 Incl.
147
153 to 157 Incl.
161 to 211 Incl.
215 to 237 Incl.
241 to 257 Incl.
261 to 333 Incl.
337
341 to 357 Incl.
361 to 373 Incl.
377, 379
383 to 403 Incl
407 to 435 Incl.
439 to 453 Incl.
457 to 469 Incl.
473 to 489 Incl.
493 to 511 Incl.
515 to 545 Incl.
549 to 637 Incl.

SILVER CLOUD II LWB— LCA 1 to LCB 11 Incl.
16, 17
19 to 27 Incl.
29, 30
32 to 40 Incl.
42, 43, 47, 49, 51
54 to 72 Incl.
74 to 81 Incl.
83 to 86 Incl.
88, 89

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

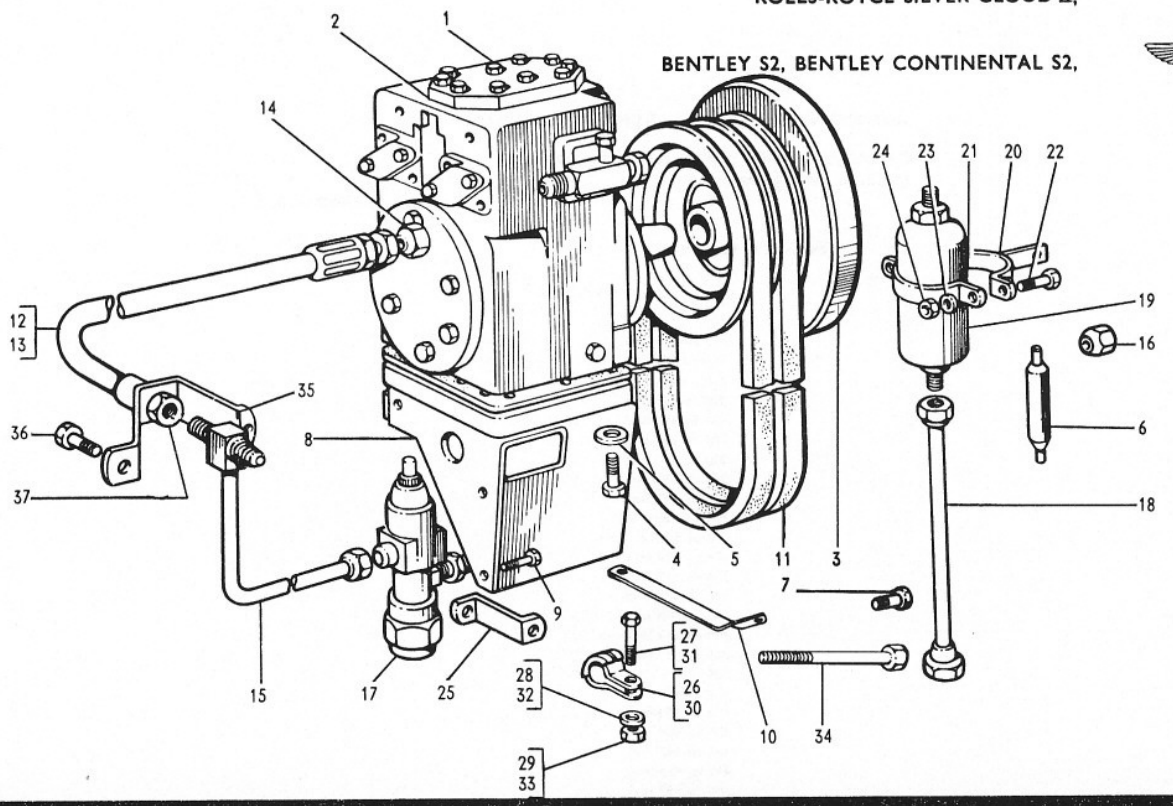

Ref.	Part No.	Description	No. off	Remarks
1	UE.7397	COMPRESSOR–Tecumseh	1	
2	UE.7272	JOINT–Compressor Crankcase	1	
	CD.1170	GASKET–Suction	1	
	CD.1166	KIT–Replacement–Gaskets	1	
	CD.1165	KIT–Replacement–Glass–Oil Sight	1	
	CD.1164	KIT–Replacement–Seals	1	
	CD.1167	KIT–Replacement–Valve Plate	1	
	CD.1168	TOOL–Service	1	
3	UE.5092	ASSEMBLY–Clutch–Eaton	1	
	CD.1174	BEARING–Journal	1	
	CD.1179	BOLT–Securing–Clutch Assembly	1	
	CD.1181	BRUSH–Gear Assembly	1	
	CD.1175	CIRCLIP–Large	1	
	CD.1176	CIRCLIP–Small	1	
	CD.1178	NUT–Lock–Adjusting Screw	3	
	CD.1173	PLATE–Clutch Assembly	1	
	CD.1177	SCREW–Adjusting Clutch	3	
	CD.1182	ASSEMBLY–Screw and Washer–Bearing Securing	1	
	CD.1180	WASHER–Securing Bolt	1	
	CD.1172	ASSEMBLY–Yoke	1	
4	UE.5650	SETSCREW–Compressor to Bracket	4	
5	UA.1253/Z	WASHER–Plain–Setscrew	3	
6	UD.4180	SLEEVE–Clutch Cable to Loom	1	
7	UA.106/Z	BOLT–Distance Piece–Brush Gear	2	
8	UE.5577	ASSEMBLY–Bracket–Compressor Mounting	1	
9	UA.154/Z	SETSCREW–Bracket to Cylinder Head	3	
10	UE.9082	STAY–Fridge Pump to Dynamo Mounting Bracket	1	
11	UE.5629	ASSEMBLY–V Belts–Crankshaft	1	
12	UD.5328	ASSEMBLY–Hose and Pipe–Compressor to 3 Way Junction	1	
13	UD.5341	ASSEMBLY–Flexible Hose	1	
14	UD.5229	ASSEMBLY–Pipe	1	
15	UD.5371	ASSEMBLY–Pipe–Solenoid Valve to Tee Junction	1	
16	UD.5358	NUT–Blanking–Flexible Hose	1	
17	UD.5707	VALVE–Solenoid–Danfos EVJ–6	1	
18	UD.5002	PIPE–Liquid–Receiver to Drier	1	
19	UD.4989	DRIER–Liquid Line–Dantos 23B–051	1	
20	UD.5224	ASSEMBLY–Clip–Top Half–Line Drier	1	
21	UD.5227	CLIP–Lower Half–Line Drier	1	
22	UA.101/Z	BOLT–Clip	2	
23	UA.1251/Z	WASHER–Plain–Bolt	2	
24	UA.301/Z	NUT–Bolt	2	
25	UD.5481	BRACKET–Support–Solenoid Valve to Valance Plate	1	
26	RE.16256	CLIP	1	
27	UA.1501/Z	BOLT–Clip	1	
28	UA.1251/Z	WASHER–Plain–Bolt	1	
29	K.4006/Z	NUT–Bolt	1	
30	RE.16256	CLIP–Control Valve–Suction Line	1	
31	UA.1501/Z	BOLT–Clip	1	
32	UA.4404/Z	WASHER–Plain–Bolt	1	
33	K.4006/Z	NUT–Bolt	1	
34	UR.3998	BOLT–Bumper to Frame	2	
35	UE.8078	BRACKET–Support–Flexible Hose	1	
36	UA.101/Z	SETSCREW–Bracket	2	
37	UE.8079	NUT–Bracket	1	

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

Printed in England.

AIR CONDITIONING—REFRIGERATION—

PIPES AND FITTINGS (U.S.A. and Canada)


L.11 1.—Amendment 1.

	CHASSIS No's.
SILVER CLOUD II—	SWC.78, 270, 310, 396, 474, 478, 480, 482, 486, 500, 502, 516, 558, 560, 636, 638, 652, 664, 678,. SXC.1, 9, 11, 87, 89, 145, 149, 151, 159, 213, 239, 259, 335, 339, 359, 375, 381, 405, 437, 455, 471, 491, 513, 547. 639 to SZD.345 Incl.
SILVER CLOUD II, LWB—	LCB.15, 18, 28, 31, 41, 44, 45, 46, 48, 50, 52, 53, 73, 82, 87. 90 to LCC.50 Incl.
BENTLEY S.2—	B.151.CT.155, 187, 217, 273, 285, 305, 363, 367, 415. B.8.CU.70, 72, 172, 312, 340, 348. 364, 386, 390, 396, 406, 466, 490, 498, 534, 536. 570 to B.413.DV Incl.
BENTLEY S.2, LWB—	LBA.21 to LBB.22 Incl.
BENTLEY CONTINENTAL S.2—	BC.90.BY Onwards

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

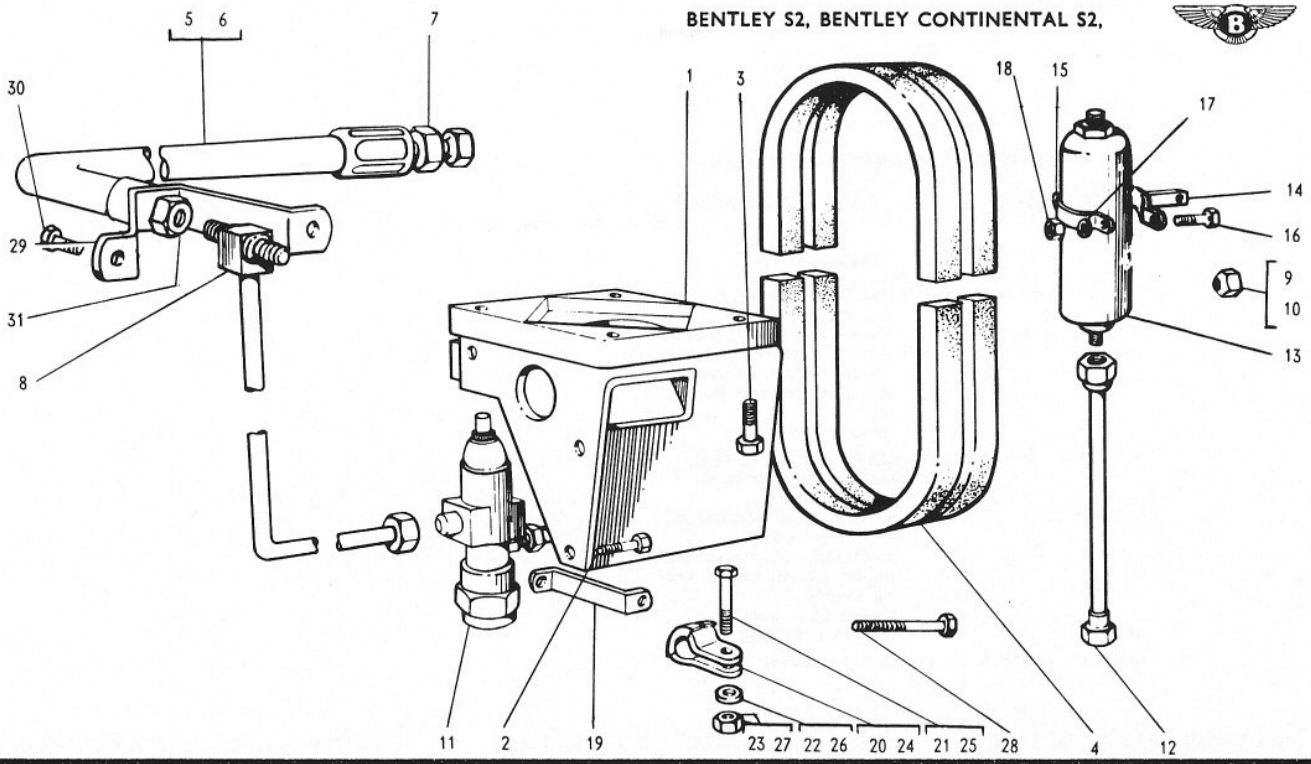

Ref.	Part No.	Description	No. off	Remarks	Ref.	Part No.	Description	No. off	Remarks
1	UE.8266	ASSEMBLY–Bracket–Compressor Mounting	1						
2	RE.22669	SETSCREW–Compressor to Bracket	4						
3	UA.154/Z	SETSCREW–Bracket to Cylinder Head	3						
4	UE.5629	ASSEMBLY–'V' Belts–Crankshaft	1						
5	UD.5328	ASSEMBLY–Hose and Pipe–Compressor to 3 Way Junction	1						
6	UD.5341	ASSEMBLY–Flexible Hose	1						
7	UD.5229	ASSEMBLY–Pipe	1						
8	UD.5371	ASSEMBLY–Pipe–Solenoid Valve to Tee Junction	1						
9	UD.5358	NUT–Blanking–Flexible Hose–Compressor	1						
10	UD.5658	NUT–Blanking–Valance Plate Junction	1						
11	UD.5707	VALVE–Solenoid–Danfos EVJ.6	1						
12	UD.5002	PIPE–Liquid–Receiver to Drier	1						
13	UD.4989	DRIER–Liquid Line–Danfos 23B–051	1						
14	UD.5224	ASSEMBLY–Clip–Top Half–Line Drier	1						
15	UD.5227	CLIP–Lower Half–Line Drier	1						
16	UA.101/Z	BOLT–Clip	2						
17	UA.1251/Z	WASHER–Plain–Bolt	2						
18	UA.301/Z	NUT–Bolt	2						
19	UD.5481	BRACKET–Support–Solenoid Valve to Valance Plate	1						
20	RE.16256	CLIP	1						
21	UA.1501/Z	BOLT–Clip	1						
22	UA.1251/Z	WASHER–Plain–Bolt	1						
23	K.4006/Z	NUT–Bolt	1						
24	RE.16256	CLIP–Control Valve–Suction Line	1						
25	UA.1501/Z	BOLT–Clip	1						
26	UA.4404/Z	WASHER–Plain–Bolt	1						
27	K.4006/Z	NUT–Bolt	1						
28	UR.3998	BOLT–Bumper to Frame	2						
29	UE.8078	BRACKET–Support–Flexible Hose	1						
30	UA.101/Z	SETSCREW–Bracket	2						
31	UE.8079	NUT–Bracket	1						


Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

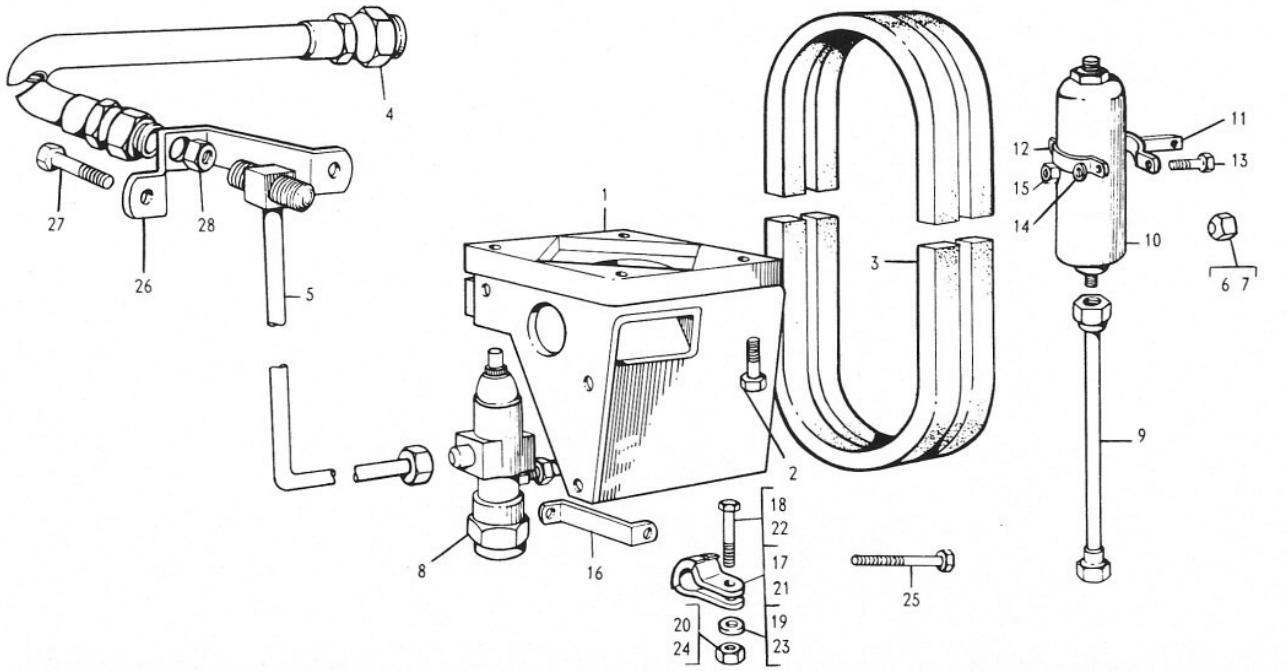

Ref.	Part No.	Description	No. off	Remarks	Ref.	Part No.	Description	No. off	Remarks
1	UE.8266	ASSEMBLY–Bracket–Compressor Mounting	1						
2	UA.154/Z	SETSCREW–Bracket to Cylinder Head	3						
3	UE.5629	ASSEMBLY–'V' Belt–Crankshaft	1						
4	UD.8061	HOSE–Flexible–Compressor to 3 Way Junction	1						
5	UD.5371	ASSEMBLY–Pipe–Solenoid Valve to Tee Junction	1						
6	UD.5203	NUT–Blanking–Compressor Pipe to Condenser	1						
7	UD.5658	NUT–Blanking–Valance Plate Junction	1						
8	UD.5707	VALVE–Solenoid–Danfoss EVJ–6	1						
9	UD.5002	PIPE–Liquid–Receiver to Drier	1						
10	UD.4989	DRIER–Liquid Line–Danfoss 23.B.051	1						
11	UD.5224	ASSEMBLY–Clip–Top Half–Line Drier	1						
12	UD.5227	CLIP–Lower Half–Line Drier	1						
13	UA.101/Z	BOLT–Clip	2						
14	UA.1251/Z	WASHER–Clip–Bolt	2						
15	UA.301/Z	NUT–Bolt	2						
16	UD.5481	BRACKET–Support–Solenoid Valve to Valance Plate	1						
17	RE.16256	CLIP	1						
18	UA.1501/Z	BOLT–Clip	1						
19	UA.1251/Z	WASHER–Plain–Bolt	1						
20	K.4006/Z	NUT–Bolt	1						
21	RE.16256	CLIP–Control Valve–Suction Line	1						
22	UA.1501/Z	BOLT–Clip	1						
23	K.4404/Z	WASHER–Plain–Bolt	1						
24	K.4006/Z	NUT–Bolt	1						
25	UR.3998	BOLT–Bumper to Frame	2						
26	UE.8078	BRACKET–Flexible Hose Support	1						
27	UA.101/Z	SETSCREW–Bracket	2						
28	UE.8079	NUT–Bracket–Flexible Hose	1						

Items marked † are not supplied as individual parts

Silver Cloud II—SZD.347 Onwards
Silver Cloud II, LWB—LCC.51 Onwards
Bentley S.2—B.415.DV Onwards
Bentley S.2, LWB—LBB.23 Onwards

AIR CONDITIONING—REFRIGERATION—

PIPES AND FITTINGS (U.S.A. and Canada)

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England

Ref.	Part No.	Description	No. off	Remarks
1	UE.8080	ASSEMBLY–Valance Plate–RH	1	Silver Cloud 123" W/Base Cars. Not Coachbuilt.
2	UE.8104	ASSEMBLY–Valance Plate–RH	1	Bentley 123" W/Base Cars. Not Coachbuilt.
3	UE.8105	ASSEMBLY–Valance Plate–RH	1	Bentley Coachbuilt Cars. Not Continental
4	UE.8376	ASSEMBLY–Valance Plate–RH	1	Continental.
5	UE.7807	ASSEMBLY–Valance Plate–RH	1	Silver Cloud. Coachbuilt Cars.
6	UE.7891	BRACKET–Buffer–RH Valance Plate to Engine	1	
7	UE.7892	BUFFER	1	
8	UA.101/Z	SETSCREW–Bracket to Valance Plate	2	
9	UA.1251/Z	WASHER–Plain–Setscrew	2	
10	UB.3362	ASSEMBLY–Panel–Centre–Dash	1	123" W/Base Cars. Not Coachbuilt.
11	UB.3364	ASSEMBLY–Panel–Centre–Dash	1	127" W/Base Cars. Not Coachbuilt Without Division.
12	UR.5252	ASSEMBLY–Panel–Centre–Dash	1	Coachbuilt Cars. Without Division.
13	UR.5275	ASSEMBLY–Inner Dash	1	123" W/Base Cars. Not Coachbuilt.
14	UR.5276	ASSEMBLY–Inner Dash	1	Coachbuilt Cars. Without Division.
15	UR.5278	ASSEMBLY–Inner Dash	1	127" W/Base Cars. Not Coachbuilt. Without Division
	UW.2193	SEAL–Plastic–Inner Dash	1	123" W/Base Cars.
	UW.2194	SEAL–Rubber–Inner Dash	1	Not Coachbuilt.
	UW.2195	SEAL–Plastic–Inner Dash	1	Coachbuilt Cars.
	UW.2196	SEAL–Rubber–Inner Dash	1	Without Division.
	UW.2199	SEAL–Plastic–Inner Dash	1	127" W/Base Cars.
	UW.2200	SEAL–Rubber–Inner Dash	1	Not Coachbuilt. Without Division.
16	UD.4340	RELAY–Rear Window Demister	1	
17	K.1952/Z	SCREW	2	
18	K.4404/Z	WASHER–Plain–Screw	2	
19	UD.6118	PIECE–Distance–Relay	2	
20	UD.2906	CLIP–Latching–'C' Loom	1	
21	UD.6147	BLADE–Terminal–Relay	5	
22	UB.2504	BOW–Roof–Rear	1	127" W/Base Cars.
23	UB.2505	BOW–Roof–'BC' Post	1	Not Coachbuilt.
24	UB.2858	PANEL–Insulating–Front	2	Not
25	UB.2861	PANEL–Insulating–Rear	2	Coachbuilt.
	UB.2862	STRIP–Insulating	1	127" W/Base Cars. Not Coachbuilt.
26	UB.2049	ASSEMBLY–Heat Shield–Rear	1	
27	UB.2040	PLATE–Support–Heat Shield	1	
28	UB.2041	BRACKET–Heat Shield–Floor	1	
29	UB.2043	SHIELD–Heat–Floor–Rear	1	
30	UB.2045	SHIELD–Heat–Floor	1	
31	UB.2048	SHIELD–Heat–Floor–Centre	1	123" W/Base Cars.
32	UB.2769	SHIELD–Heat–Floor–Centre	1	127" W/Base Cars.
33	CS.31060/Z	SCREW–Heat Shields	88	
34	CS.31065/Z	SCREW–Heat Shields	11	
35	CS.31020/Z	SCREW–Heat Shields	6	
36	K.4404/Z	WASHER–Plain	17	
37	K.4401/Z	WASHER–Plain	2	
	UW.1660	MILLBOARD–Asbestos	1	
	UW.1661	MILLBOARD–Asbestos	1	
	UW.1662	WEBBING–Asbestos	1	

Ref.	Part No.	Description	No. off	Remarks
38	UB.3377	ANGLE–Support–Trim Panel–RH	1	
39	UB.3378	ANGLE–Support–Trim Panel–LH	1	
40	UB.3381	ANGLE–Support–Trim Panel–Centre	1	
41	CS.31040/Z	SCREW–Support Angles	23	
42	UB.3380	ASSEMBLY–Support Bracket–Trim Panel	2	
43	CS.30541/Z	SCREW–Support Bracket to Angle	4	
44	CS.30602/Z	SCREW–Trim Board to Support Bracket	12	
45	CS.34324/E	WASHER–Cup–Screw	12	
46	CS.31203/SS	SCREW–Trim Board to Angle Support	22	
47	CS.34322/E	WASHER–Cup–Screw	22	
48	KC.170/Z	BOLT–Angle Support to Header Panel	13	Other than
49	K.4404/Z	WASHER–Plain–Bolt	13	Coachbuilt Cars.
50	K.4006/Z	NUT–Bolt	13	
51	UB.3356	PANEL–Parcel Shelf	1	
52	UW.2315	BOARD–Speaker–Parcel Shelf	1	
53	UD.5900	GRILLE–Speaker Board	1	
54	CS.31363/Z	SCREW–Speaker Board to Parcel Shelf	2	Without Division.
55	UD.5902	CUSHION–Loud Speaker to Outlet Hose	1	
56	CS.31605/Z	SCREW–Speaker to Board	4	
57	UW.2191	ASSEMBLY–Anti-Drum Panel–Parcel Tray–Inner	2	
58	UW.2189	PANEL–Parcel Tray	1	Without Division.
59	UW.2379	PANEL–Parcel Tray	1	With Division. 123" W/Base Cars. Not Coachbuilt.
60	UW.2205	PANEL–Parcel Tray	1	Without Division.
61	UW.2380	PANEL–Parcel Tray	1	With Division. 127" W/Base Cars. Not Coachbuilt.
62	UB.2418	ASSEMBLY–Trim–Header Panel–Luggage Compartment	1	
63	UB.2479	INSULATION–Tonneau Side–Front	2	
64	UB.2480	INSULATION–Tonneau Side–Rear	2	
	UW.1815	PANEL–Rear Wheelarch–LH	1	
	UW.1816	PANEL–Rear Wheelarch–RH	1	
65	UW.2203	PANEL–Centre–Boot Trim	1	
66	UB.3361	PANEL–Luggage Floor	1	127" W/Base Cars.
67	UB.3357	PANEL–Luggage Floor	1	123" W/Base Cars.
68	UW.2212	ASSEMBLY–Side Panel–Boot Trim–LH	1	Other than
69	UW.2213	PANEL	1	Coachbuilt
70	UW.2214	DOOR–Access	1	Cars.
71	UW.2215	HINGE–Access Door	1	
	RB.7015	FASTENER	1	
72	CS.30563/SS	SCREW–C/Sunk–Hinge to Panel	3	
73	CS.34336/E	WASHER–Cup–Screw	3	
74	K.4404/Z	WASHER–Plain–Screw	3	
75	K.4006/Z	NUT–Screw	3	
76	K.2604/E	SCREW–C/Sunk–Fastener to Panel	1	
77	K.4401/Z	WASHER–Plain–Screw	1	
78	K.4003/Z	NUT–Screw	1	
79	UW.2202	PANEL–Side–Boot Trim–RH	1	
80	UB.3376	ANGLE–Support–Trim Panels	1	
	UW.2209	PANEL–Boot Floor–Haircord	1	

Silver Cloud II —From SRA1
—From SPA2
Silver Cloud II LWB—From LCA1
Bentley S2 —From B1AA
—From B2AM
Bentley S2 LWB—From LBA1
Bentley Continental S2—From BC1AR

Items marked † are not supplied as individual parts


AIR CONDITIONING—REFRIGERATION—

BODY AND ELECTRICAL FITTINGS
(U.S.A. and Canada)

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

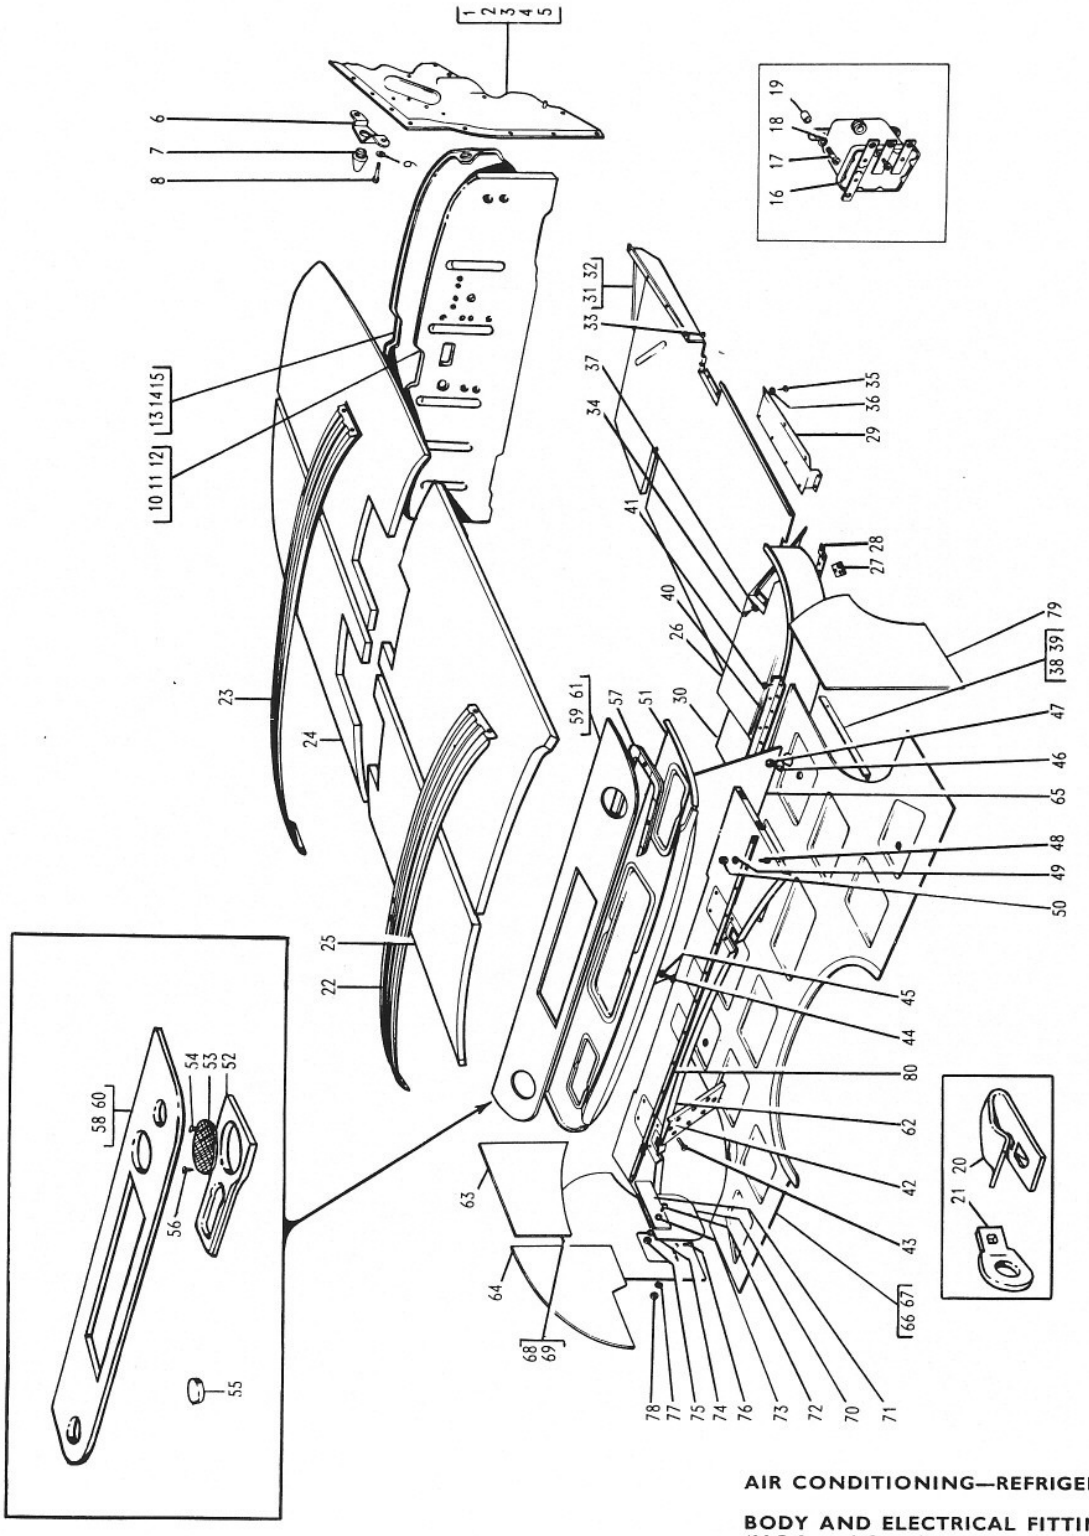


AIR CONDITIONING—REFRIGERATION

BODY AND ELECTRICAL FITTINGS
(U.S.A. and Canada)

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

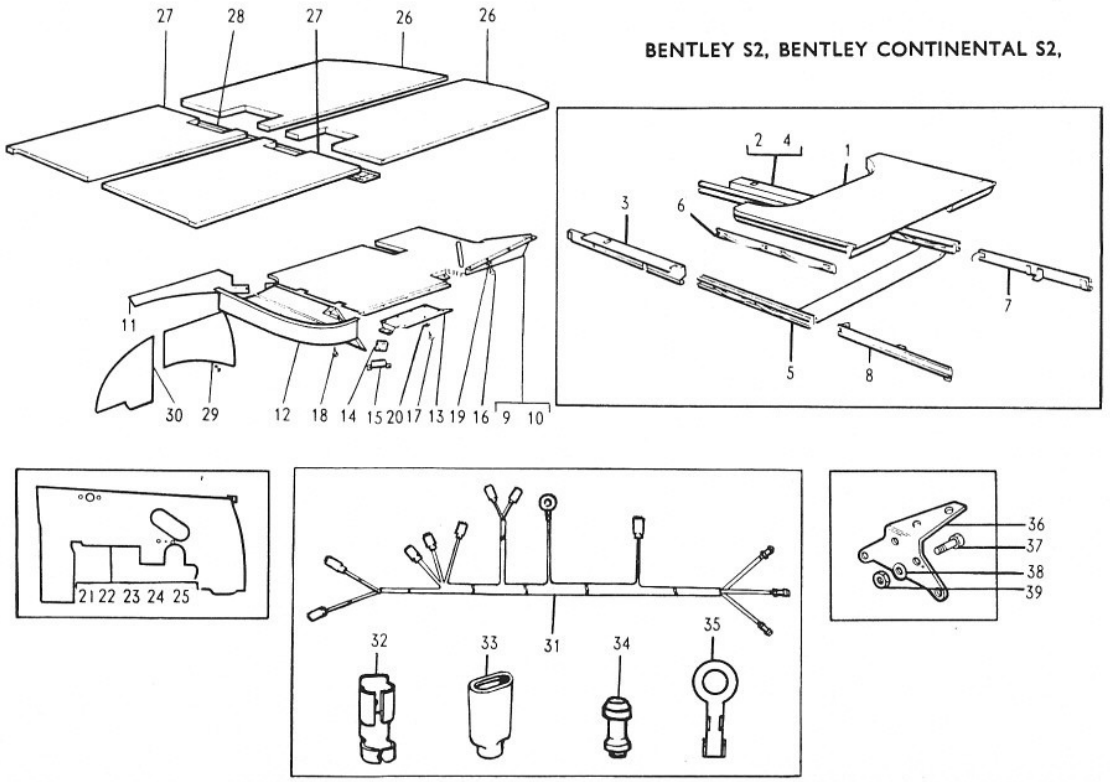

Ref.	Part No.	Description	No. off	Remarks
1	UW.2136	ASSEMBLY–Picnic Tray	1	
2	UB.2956	ASSEMBLY–Runners and Channel	1	
3	UB.4035	ASSEMBLY–Channel–Runner–LH	1	
4	UB.4034	ASSEMBLY–Channel–Runner–RH	1	
5	UB.2955	ASSEMBLY–Runner–Inner	1	
6	UB.1275	ASSEMBLY–Runner–Centre	2	
7	UB.1278	ASSEMBLY–Runner–Outer–RH	1	
8	UB.1282	ASSEMBLY–Runner–Outer–LH	1	
9	UB.2048	SHIELD–Heat–Centre Floor	1	123" W/Base Cars.
10	UB.2769	SHIELD–Heat–Centre Floor	1	127" W/Base Cars.
11	UB.2045	SHIELD–Heat–Floor 'D' Post	1	
12	UB.2049	ASSEMBLY–Heat Shield–Floor Rear	1	
13	UB.2043	SHIELD–Heat–Rear	1	
14	UB.2040	PLATE–Support–Heat Shield	1	
15	UB.2041	BRACKET–Heat Shield	2	
	UW.1660	MILLBOARD–Asbestos	1	
	UW.1661	MILLBOARD–Asbestos	1	
	UW.1662	WEBBING–Asbestos	1	
16	CS.31060/Z	SCREW–Heat Shields	88	
17	CS.31065/Z	SCREW–Heat Shields	11	
18	CS.31020/Z	SCREW–Heat Shields	6	
19	K.4404/Z	WASHER–Plain	17	
20	K.4401/Z	WASHER–Plain	2	
21	UE.7807	ASSEMBLY–Valance Plate–RH	1	Silver Cloud 127" W/Base Cars, also 123" W/Base Coachbuilt Cars.
22	UE.8105	ASSEMBLY–Valance Plate–RH	1	Bentley 127" W/Base Cars, also 123" W/Base Coachbuilt Cars. Not Continental.
23	UE.8080	ASSEMBLY–Valance Plate–RH	1	Silver Cloud 123" W/Base Cars Not Coachbuilt.
24	UE.8104	ASSEMBLY–Valance Plate–RH	1	Bentley 123" W/Base Cars Not Coachbuilt.
25	UE.8376	ASSEMBLY–Valance Plate–RH	1	Continental.
26	UB.2858	PANEL–Insulating–Roof–Front	2	
27	UB.2861	PANEL–Insulating–Roof–Rear	2	
28	UB.2862	PANEL–Insulating–Roof–Centre	1	127" W/Base Cars.
29	UB.2479	PANEL–Insulating–Tonneau Side–Front	2	
30	UB.2480	PANEL–Insulating–Tonneau Side–Rear	2	
31	UD.5739	ASSEMBLY–Loom–LH Valance Plate to Facia	1	
32	UD.6072	CONNECTOR–Lucar	8	
33	UD.6119	SLEEVE–Lucar Connector	8	
34	UD.2141	NIPPLE	3	
35	RD.7990	EYE–Cable	1	
36	UR.3431	BRACKET–Mounting–HF Horn	1	Required when High Frequency Horns are fitted.
37	UA.102/Z	BOLT–Mounting Bracket	4	
38	UA.1251/Z	WASHER–Plain–Bolt	4	
39	UA.301/Z	NUT–Bolt	4	

Silver Cloud II —From SRA1
—From SPA2
Silver Cloud II LWB—From LCA1
Bentley S2 —From B1AA
—From B2AM
Bentley S2 LWB—From LBA1
Bentley Continental S2—From BCIAR

Items marked † are not supplied as individual parts

AIR CONDITIONING—

PART REFRIGERATION—BODY FITTINGS
(All Non-Refrigerated Cars for U.S.A.)

Printed in England.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UE.8266	ASSEMBLY–Bracket–Compressor Mounting	1	
2	UA.154/Z	SETSCREW–Bracket to Cylinder Head	3	
3	UE.9547	ASSEMBLY–Compressor	1	
4	UE.8268	COMPRESSOR–York Type A.209	1	
5	UE.9528	STUD–Stepped–Cable Clip	1	
6	CD.1787	VALVE–Service	1	
7	CD.1788	VALVE–Service	1	
8	CD.1789	GASKET–Service Valve	2	
9	CD.1790	GASKET–Top Head to Valve Plate	1	
10	CD.1796	ASSEMBLY–Valve	2	
11	CD.1798	GASKET–Valve Plates	1	
12	CD.1802	SEAL–Crankshaft	1	
13	CD.1801	GASKET–Seal Plate	1	
14	CD.1805	RING–'O'–Cover Plate	1	
15	CD.1806	GASKET–Bottom Plate	1	
16	CD.1807	RING–'O'–Oil Screw	1	
17	UD.3364	CLIP–Cable–Compressor Clutch	1	
18	K.4404/Z	WASHER–Plain–Stud–Compressor	1	
19	K.4006/Z	NUT–Stud–Compressor	1	
20	UE.9509	ASSEMBLY–Clutch and Pulley	1	
21	RE.22669	SETSCREW–Compressor to Bracket	4	
22	UA.1253/Z	WASHER–Plain	3	
23	UD.4180	SLEEVE–Clutch Cable to Loom	1	
24	UA.106/Z	BOLT–Distance Piece–Brush Gear	2	
25	UE.5629	ASSEMBLY–'V' Belts–Crankshaft	1	
26	UD.5328	ASSEMBLY–Hose and Pipe–Compressor to 3 Way Junction	1	
27	UD.5341	ASSEMBLY–Flexible Hose	1	
28	UD.5229	ASSEMBLY–Pipe	1	
29	UD.5371	ASSEMBLY–Pipe–Solenoid Valve to Tee Junction	1	
30	UD.5707	VALVE–Solenoid–Danfos EVJ–6	1	
31	UD.5002	PIPE–Receiver to Drier	1	
32	UD.4989	DRIER–Liquid Line–Danfos 23B.051	1	
33	UD.5224	ASSEMBLY–Clip–Top Half–Line Drier	1	
34	UD.5227	CLIP–Lower Half–Line Drier	1	
35	UA.101/Z	BOLT–Clip	2	
36	UA.1251/Z	WASHER–Plain–Bolt	2	
37	UA.301/Z	NUT–Bolt	2	
38	UD.5481	BRACKET–Support–Solenoid Valve to Valance Plate	1	
39	RE.16256	CLIP	1	
40	UA.1501/Z	BOLT–Clip	1	
41	UA.1251/Z	WASHER–Plain–Bolt	1	
42	K.4006/Z	NUT–Bolt	1	
43	RE.16256	CLIP–Control Valve to Suction Line	1	
44	UA.1501/Z	BOLT–Clip	1	
45	K.4404/Z	WASHER–Plain–Bolt	1	
46	K.4006/Z	NUT–Bolt	1	
47	UR.3998	BOLT–Bumper to Frame	2	
48	UD.5683	ASSEMBLY–Pipe–Suction–Tee Piece–Manifold Pipe	1	
49	UE.8078	BRACKET–Support–Flexible Hose	1	
50	UA.101/Z	SETSCREW–Flexible Hose Support	2	
51	UE.8079	NUT–Flexible Hose Support	1	
52	UD.5649	KIT–"Clardy"–Air Conditioning	1	
53	UD.5635	BLOWER TEMPERATURE SWITCH, HARNESS and RESISTANCES	1	
54	UD.5636	RESISTANCE–Blower	2	
55	UD.5648	UNIT	1	
56	UD.5644	HOSE–Flexible–Evaporator to 3 Way Junction	1	
57	UD.5645	HOSE–Flexible–Evaporator to Receiver	1	
58	UD.5650	CLIP–Hose–American Type	1	
59	UD.5641	CLIP–Hose	2	
60	UD.5642	CLIP–Hose	2	
61	UD.5638	EYE–Liquid–"Allin"	1	
62	UD.5639	ELBOW–Union Nut	1	
63	UD.5640	ELBOW–Union Nut	2	
64	UD.5643	PLATE–Retainer–Inlet Duct	1	
65	UD.5646	GRILLE–Louvred	1	
66	UD.5647	DUCT–Flexible	2	
67	UD.5637	VENT–Air Directional	2	
68	CS.31046/Z	SCREW–Binding Head	9	
69	CS.31065/Z	SCREW–Binding Head	1	
70	CS.31061/Z	SCREW–Binding Head	6	
71	CS.31080/Z	SCREW–Binding Head	4	
72	CS.31042/Z	SCREW–Binding Head	2	
73	UA.7861/Z	SCREW–Binding Head	2	
74	UD.3167	SEAL–Drain–Evaporator	2	
75	UD.5689	BRACKET–Upper–Fridge Unit Support	2	
	UW.1662	WEBBING–Asbestos	1	
		REFRIGERANT–Arcton 6–3 to 3¼ lbs.		} Alternative
		REFRIGERANT–Freon 12–3 to 3¼ lbs.		
		REFRIGERANT–Icscon 122–3 to 3¼ lbs.		

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

Printed in England

AIR CONDITIONING—TEXAS BOOT REFRIGERATION—UNIT AND COMPRESSOR

L.14.—Amendment 2.

CHASSIS No's.


SILVER CLOUD II—	From SRA.1 / From SPA.2 } to SZD.257 Incl. SZD.261, 263.
SILVER CLOUD II, LWB—	From LCA.1 to LCC.43 Incl.
BENTLEY S.2—	From B.1.AA / From B.2.AM } to B.391 Incl.
BENTLEY S.2, LWB—	From LBA.1 to LBB.18 Incl.
BENTLEY CONTINENTAL S.2—	From BC.1.AR

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England.

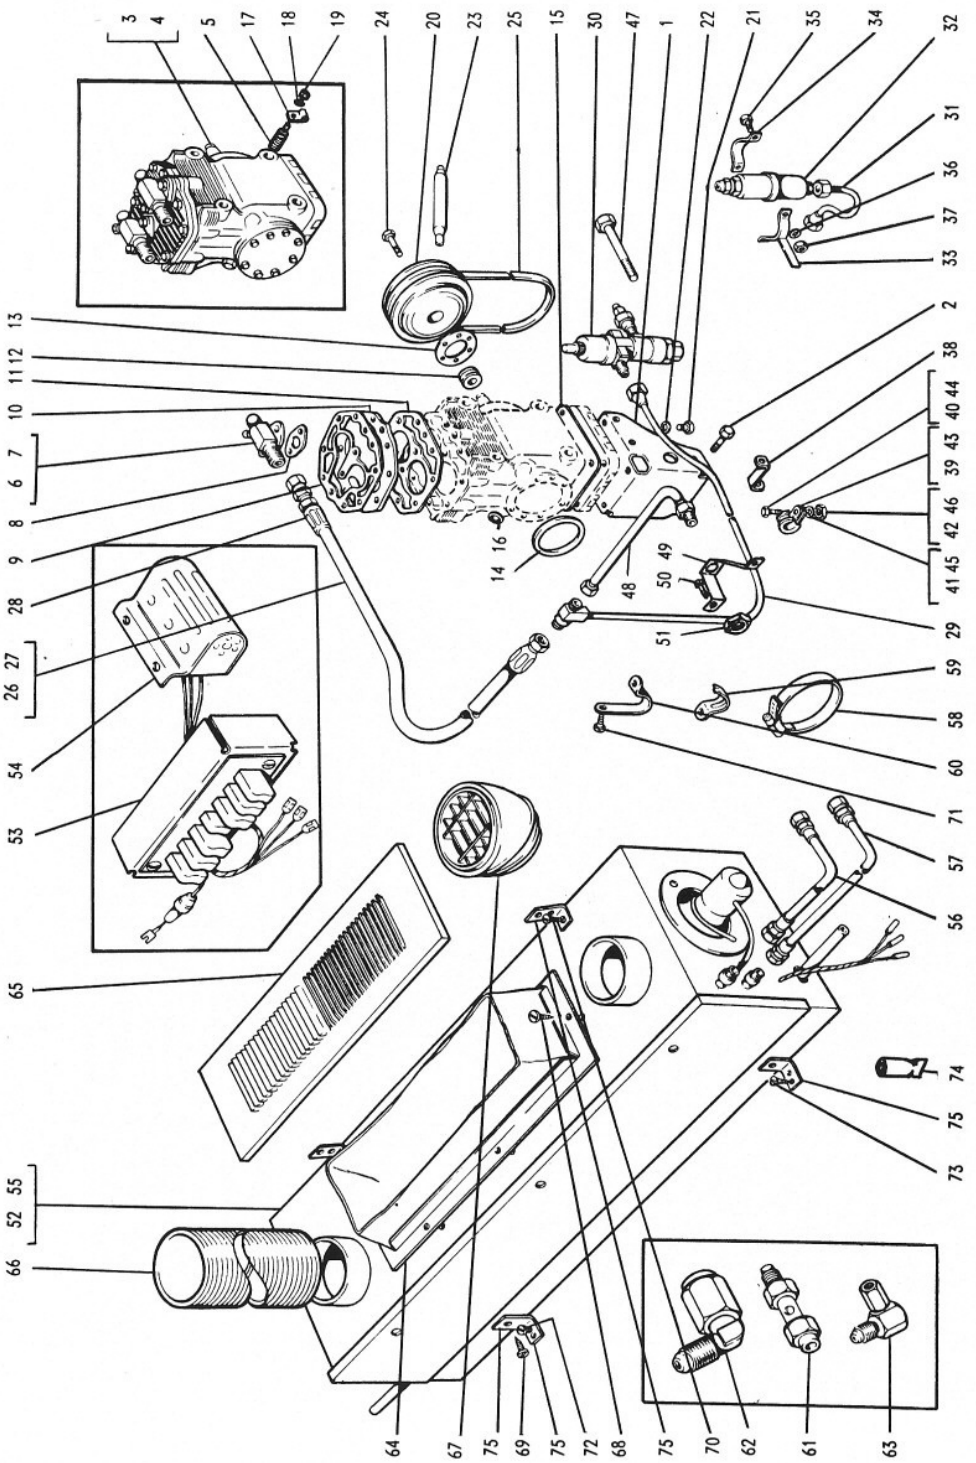

AIR CONDITIONING—TEXAS BOOT REFRIGERATION—

UNIT AND COMPRESSOR

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UE.8266	ASSEMBLY–Bracket–Compressor Mounting	1	
2	UA.154/Z	SETSCREW–Bracket to Cylinder Head	3	
3	UE.9547	ASSEMBLY–Compressor	1	
4	UE.8268	COMPRESSOR–York Type A.209	1	
5	UE.9528	STUD–Stepped–Cable Clip	1	
6	CD.1787	VALVE–Service	1	
7	CD.1788	VALVE–Service	1	
8	CD.1789	GASKET–Service Valve	2	
9	CD.1790	GASKET–Top Head to Valve Plate	1	
10	CD.1796	ASSEMBLY–Valve	2	
11	CD.1798	GASKET–Valve Plates	1	
12	CD.1802	SEAL–Crankshaft	1	
13	CD.1801	GASKET–Seal Plate	1	
14	CD.1805	RING–'O'–Cover Plate	1	
15	CD.1806	GASKET–Bottom Plate	1	
16	CD.1807	RING–'O'–Oil Screw	1	
17	UD.3364	CLIP–Cable–Compressor Clutch	1	
18	K.4404/Z	WASHER–Plain–Stud–Compressor	1	
19	K.4006/Z	NUT–Stud–Compressor	1	
20	UE.9509	ASSEMBLY–Pulley and Clutch	1	
21	RE.22669	SETSCREW–Compressor to Bracket	4	
22	UA.1253/Z	WASHER–Plain	3	
23	UD.4180	SLEEVE–Clutch Cable to Loom	1	
24	UA.106/Z	BOLT–Distance Piece–Brush Gear	2	
25	UE.5629	ASSEMBLY–'V' Belts –Crankshaft	1	
26	UD.5328	ASSEMBLY–Hose and Pipe–Compressor to 3 Way Junction	1	
27	UD.5341	ASSEMBLY–Flexible Hose	1	
28	UD.5229	ASSEMBLY–Pipe	1	
29	UD.5371	ASSEMBLY–Pipe–Solenoid Valve to Tee Junction	1	
30	UD.5707	VALVE–Solenoid–Danfoss EVJ–6	1	
31	UD.8194	PIPE–Sight Glass to Drier	1	
32	UD.4989	DRIER–Liquid Line–Danfoss 23 B.051	1	
33	UD.8189	ASSEMBLY–Clip–Top Half–Line Drier	1	
34	UD.5227	CLIP–Lower Half	1	
35	UA.101/Z	BOLT–Clip	2	
36	UA.1251/Z	WASHER–Plain–Bolt	2	
37	UA.301/Z	NUT–Bolt	2	
38	UD.5481	BRACKET–Support–Solenoid Valve to Valance Plate	1	
39	RE.16256	CLIP	1	
40	UA.1501/Z	BOLT–Clip	1	
41	UA.1251/Z	WASHER–Plain–Bolt	1	
42	K.4006/Z	NUT–Bolt	1	
43	RE.16256	CLIP–Control Valve to Suction Line	1	
44	UA.1501/Z	BOLT–Clip	1	
45	K.4404/Z	WASHER–Plain–Bolt	1	
46	K.4006/Z	NUT–Bolt	1	
47	UR.3998	BOLT–Bumper to Frame	2	
48	UD.5683	ASSEMBLY–Pipe–Suction–Tee Piece–Manifold Pipe	1	
49	UE.8078	BRACKET–Support–Flexible Hose	1	
50	UA.101/Z	SETSCREW–Flexible Hose Support	2	
51	UE.8079	NUT–Flexible Hose Support	1	
52	UD.5649	KIT–"Clardy"–Air Conditioning	1	
53	UD.5635	BLOWER–TEMPERATURE SWITCH–HARNESS AND RESISTANCES	1	
54	UD.5636	RESISTANCE–Blower	2	
55	UD.5648	UNIT	1	
56	UD.5644	HOSE–Flexible–Evaporator to 3 Way Junction	1	
57	UD.5645	HOSE–Flexible–Evaporator to Receiver	1	
58	UD.5650	CLIP–Hose–American Type	1	
59	UD.5641	CLIP–Hose	2	
60	UD.5642	CLIP–Hose	2	
61	UD.5638	EYE–Liquid–"Allin"	1	
62	UD.5639	ELBOW–Union Nut	1	
63	UD.5640	ELBOW–Union Nut	2	
64	UD.5643	PLATE–Retainer–Inlet Duct	1	
65	UD.5646	GRILLE–Louvred	1	
66	UD.5647	DUCT–Flexible	2	
67	UD.5637	VENT–Directional	2	
68	CS.31046/Z	SCREW–Binding Head	9	
69	CS.31065/Z	SCREW–Binding Head	1	
70	CS.31061/Z	SCREW–Binding Head	6	
71	CS.31080/Z	SCREW–Binding Head	4	
72	CS.31042/Z	SCREW–Binding Head	2	
73	UA.7861/Z	SCREW–Binding Head	2	
74	UD.3167	SEAL–Drain–Evaporator	2	
75	UD.5689	BRACKET–Upper–Fridge Unit Support	2	
	UW.1662	WEBBING–Asbestos	1	
		REFRIGERANT–Arcton 6–3 to 3¼ lbs.		Alternative.
		REFRIGERANT–Freon 12–3 to 3¼ lbs.		Alternative.
		REFRIGERANT–Icseon 122–3 to 3¼ lbs.		Alternative.

Silver Cloud II—SZD.259
SZD.265 to 345 Incl.
Silver Cloud II, LWB—LCC.44 to 50 Incl.
Bentley S.2—B.393.DV to 413 Incl.
Bentley S.2, LWB—LBB.19 to 22 Incl.

Items marked † are not supplied as individual parts


AIR CONDITIONING—TEXAS BOOT REFRIGERATION—UNIT AND COMPRESSOR

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England.

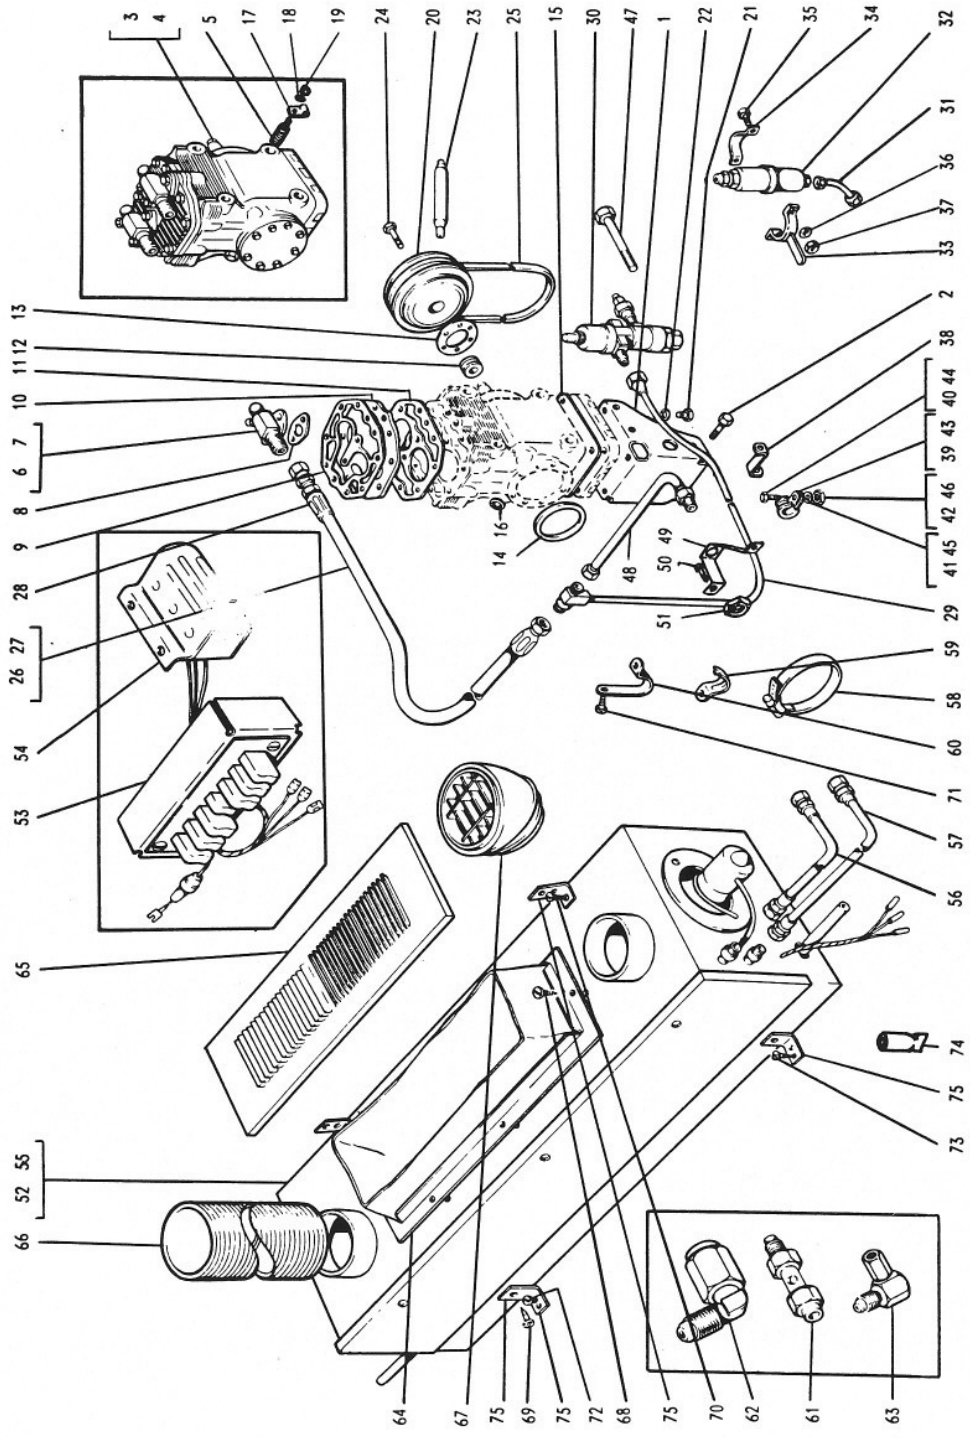

AIR CONDITIONING—TEXAS BOOT REFRIGERATION—
UNIT AND COMPRESSOR

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UE.8266	ASSEMBLY–Bracket–Compressor Mounting	1	
2	UA.154/Z	SETSCREW–Bracket to Cylinder Head	3	
3	UE.9547	ASSEMBLY–Compressor	1	
4	UE.8268	COMPRESSOR–York Type A.209	1	
5	UE.9528	STUD–Stepped–Cable Clip	1	
6	CD.1787	VALVE–Service	1	
7	CD.1788	VALVE–Service	1	
8	CD.1789	GASKET–Service Valve	2	
9	CD.1790	GASKET–Top Head to Valve Plate	1	
10	CD.1796	ASSEMBLY–Valve	2	
11	CD.1798	GASKET–Valve Plates	1	
12	CD.1802	SEAL–Crankshaft	1	
13	CD.1801	GASKET–Seal Plate	1	
14	CD.1805	RING–'O'–Cover Plate	1	
15	CD.1806	GASKET–Bottom Plate	1	
16	CD.1807	RING–'O'–Oil Screw	1	
17	UD.3364	CLIP–Cable–Compressor Clutch	1	
18	K.4404/Z	WASHER–Plain–Stud–Compressor	1	
19	K.4006/Z	NUT–Stud–Compressor	1	
20	UE.9509	ASSEMBLY–Pulley and Clutch	1	
21	RE.22669	SETSCREW–Compressor to Bracket	4	
22	UA.1253/Z	WASHER–Plain	3	
23	UD.4180	SLEEVE–Clutch Cable to Loom	1	
24	UA.106/Z	BOLT–Distance Piece–Brush Gear	2	
25	UE.5629	ASSEMBLY–'V' Belts –Crankshaft	1	
26	UD.8061	HOSE–Flexible–Compressor to 3 Way Junction	1	
27	UD.5371	ASSEMBLY–Pipe–Solenoid Valve to Tee Junction	1	
28	UD.5707	VALVE–Solenoid–Danfoss EVJ–6	1	
29	UD.8194	PIPE–Sight Glass to Drier	1	
30	UD.4989	DRIER–Liquid Line–Danfoss 23 B.051	1	
31	UD.8189	ASSEMBLY–Clip–Top Half–Line Drier	1	
32	UD.5227	CLIP–Lower Half	1	
33	UA.101/Z	BOLT–Clip	2	
34	UA.1251/Z	WASHER–Plain–Bolt	2	
35	UA.301/Z	NUT–Bolt	2	
36	UD.5481	BRACKET–Support–Solenoid Valve to Valance Plate	1	
37	RE.16256	CLIP	1	
38	UA.1501/Z	BOLT–Clip	1	
39	UA.1251/Z	WASHER–Plain–Bolt	1	
40	K.4006/Z	NUT–Bolt	1	
41	RE.16256	CLIP–Control Valve to Suction Line	1	
42	UA.1501/Z	BOLT–Clip	1	
43	K.4404/Z	WASHER–Plain–Bolt	1	
44	K.4006/Z	NUT–Bolt	1	
45	UR.3998	BOLT–Bumper to Frame	2	
46	UD.5683	ASSEMBLY–Pipe–Suction–Tee Piece–Manifold Pipe	1	
47	UE.8078	BRACKET–Support–Flexible Hose	1	
48	UA.101/Z	SETSCREW–Flexible Hose Support	2	
49	UE.8079	NUT–Flexible Hose Support	1	
50	UD.5649	KIT–"Clardy"–Air Conditioning	1	
51	UD.5635	BLOWER–TEMPERATURE SWITCH–HARNESS AND RESISTANCES	1	
52	UD.5636	RESISTANCE–Blower	2	
53	UD.5648	UNIT	1	
54	UD.5729	HOSE–Evaporator to 3 Way Junction	1	
55	UD.5727	HOSE–Evaporator to Receiver	1	
56	UD.5650	CLIP–Hose–American Type	1	
57	UD.5641	CLIP–Hose	2	
58	UD.5642	CLIP–Hose	2	
59	UD.5638	EYE–Liquid–"Allin"	1	
60	UD.5639	ELBOW–Union Nut	1	
61	UD.5640	ELBOW–Union Nut	2	
62	UD.5643	PLATE–Retainer–Inlet Duct	1	
63	UD.5646	GRILLE–Louvred	1	
64	UD.5647	DUCT–Flexible	2	
65	UD.5637	VENT–Directional	2	
66	CS.31046/Z	SCREW–Binding Head	9	
67	CS.31065/Z	SCREW–Binding Head	1	
68	CS.31061/Z	SCREW–Binding Head	6	
69	CS.31080/Z	SCREW–Binding Head	4	
70	CS.31042/Z	SCREW–Binding Head	2	
71	UA.7861/Z	SCREW–Binding Head	2	
72	UD.3167	SEAL–Drain–Evaporator	2	
73	UD.5689	BRACKET–Upper–Fridge Unit Support	2	
74	UW.1662	WEBBING–Asbestos	1	
		REFRIGERANT–Arcton 6–3 to 3½ lbs.		} Alternative.
		REFRIGERANT–Freon 12–3 to 3½ lbs.		
		REFRIGERANT–Icseon 122–3 to 3½ lbs.		

Items marked † are not supplied as individual parts

Silver Cloud II—SZD.347 Onwards.

Silver Cloud II, LWB—LCC.51 Onwards.


Bentley S.2—B.415.DV Onwards.

Bentley S.2, LWB—LBB.23 Onwards.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

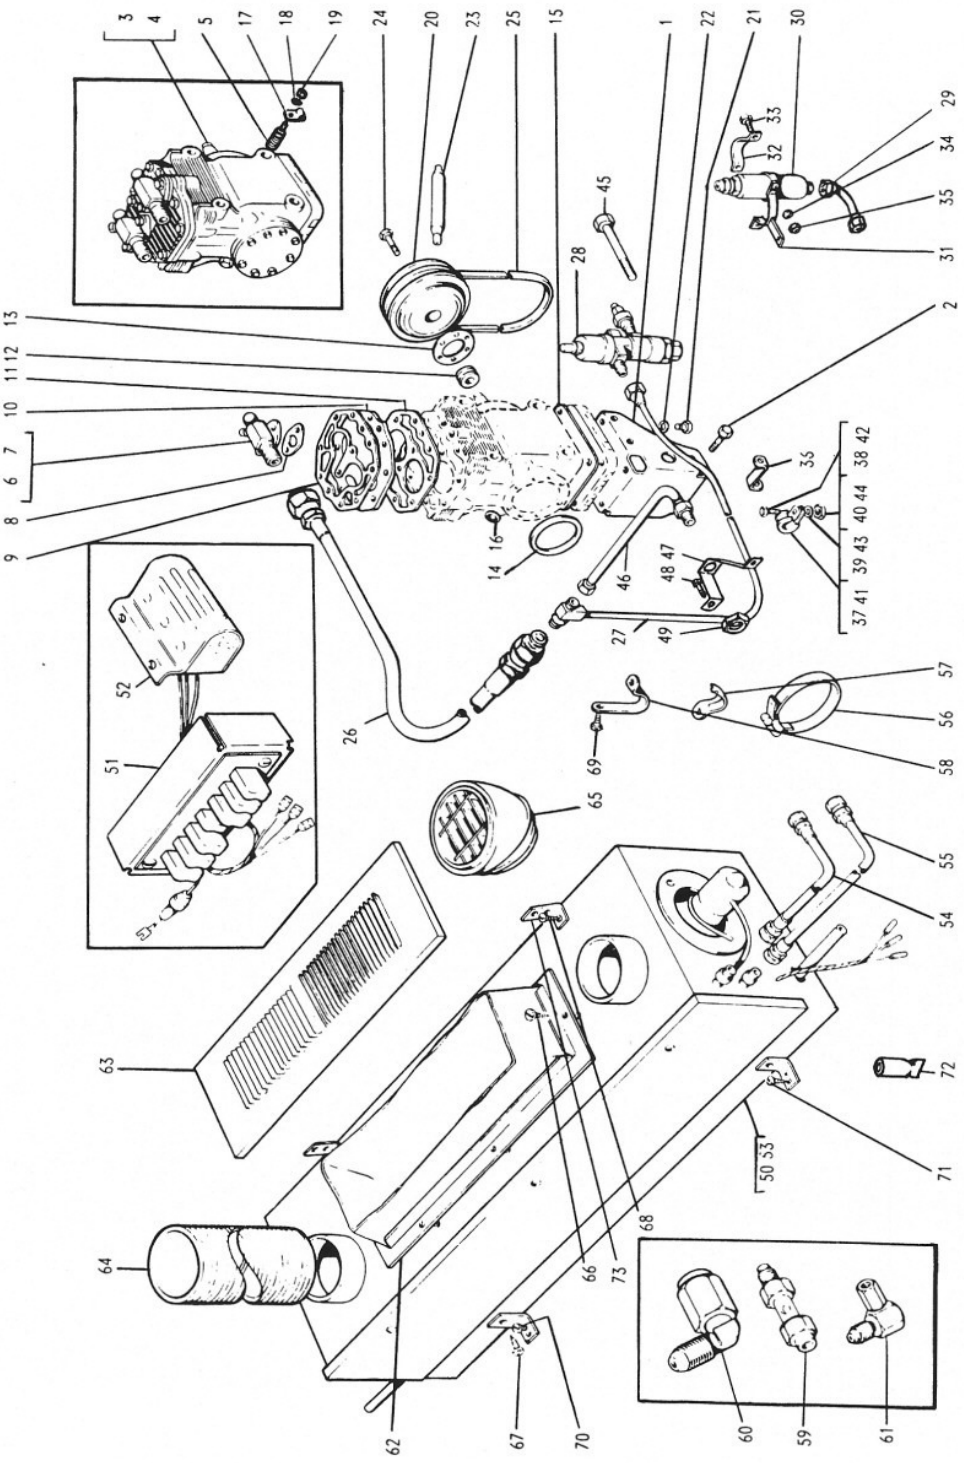

AIR CONDITIONING—TEXAS BOOT REFRIGERATION—
UNIT AND COMPRESSOR

AIR CONDITIONING—TEXAS BOOT REFRIGERATION—
BODY AND ELECTRICAL FITTINGS

L.15.—Amendment 2.

CHASSIS No's.

SILVER CLOUD II—	From SRA.1 / From SPA 2 } To SWC.730 Incl.
SILVER CLOUD II, LWB—	From LCA.1 to LCB.46 Incl. 49, 50, 51, 53, 55, 56, 57, 59, 60, 61, 62, 65 to 72 Incl. 76, 78, 80, 81, 83, 84, 85, 87, 88, 90.
BENTLEY S.2—	From B.1.AA / From B.2.AM } To B.445.CT Incl. B.28.CU.120.554.
BENTLEY S.2, LWB—	From LBA.1 to 22 Incl. 24, 26.
BENTLEY CONTINENTAL S.2—	From BC.1.AR to BC.33.CZ Incl. 35 to 37 Incl. 39, 42, 43, 46, 48, 49, 51, 52. 54 to 65 Incl. 69.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England

Ref.	Part No.	Description	No. off	Remarks
1	UE.8080	ASSEMBLY–Valance Plate–RH	1	Silver Cloud 123" W/Base Cars. Not Coachbuilt.
2	UE.8104	ASSEMBLY–Valance Plate–RH	1	Bentley 123" W/Base Cars. Not Coachbuilt.
3	UE.8105	ASSEMBLY–Valance Plate–RH	1	Bentley 123" W/Base Coachbuilt Cars. Not Continental. Also 127" W/Base Cars.
4	UE.7807	ASSEMBLY–Valance Plate–RH	1	Silver Cloud 123" W/Base Coachbuilt Cars. also 127" W/Base Cars.
5	UE.8376	ASSEMBLY–Valance Plate–RH	1	Continental.
6	UE.7891	BRACKET–Buffer–RH Valance Plate to Engine	1	
7	UE.7892	BUFFER	1	
8	UA.101/Z	SETSCREW–Bracket to Valance Plate	2	
9	UA.1251/Z	WASHER–Plain–Setscrew	2	
10	UD.5360	GROMMET–Compressor Pipe to Evaporator	1	
11	UB.3362	ASSEMBLY–Panel–Centre–Dash	1	123" W/Base Cars Not Coachbuilt.
12	UB.3364	ASSEMBLY–Panel–Centre–Dash	1	127" W/Base Cars Not Coachbuilt. Without Division
13	UR.5252	ASSEMBLY–Panel–Centre–Dash	1	Coachbuilt Cars, without Division.
14	UB.3371	ASSEMBLY–Channel Support–Dash	1	LH Cars. Not Coachbuilt. Without Division
15	UB.3372	ASSEMBLY–Channel Support–Dash	1	RH Cars. Not Coachbuilt. Without Division
16	CS.30541/Z	SCREW–Channel Support to Dash	2	
17	K.4404/Z	WASHER–Plain–Screw	2	
18	UR.5275	ASSEMBLY–Inner Dash	1	123" W/Base Cars Not Coachbuilt.
19	UR.5276	ASSEMBLY–Inner Dash	1	Coachbuilt Cars. without Division
20	UR.5278	ASSEMBLY–Inner Dash	1	127" W/Base Cars Not Coachbuilt. Without Division
	UW.2193	SEAL–Plastic–Inner Dash	1	123" W/Base Cars Not Coachbuilt.
	UW.2194	SEAL–Rubber–Inner Dash	1	
	UW.2195	SEAL–Plastic–Inner Dash	1	Coachbuilt Cars without Division.
	UW.2196	SEAL–Rubber–Inner Dash	1	
	UW.2199	SEAL–Plastic–Inner Dash	1	127" W/Base Cars
	UW.2200	SEAL–Rubber–Inner Dash	1	Not Coachbuilt. Without Division
21	UW.2216	ASSEMBLY–Facia Board	1	RH 127" W/Base Cars without Division. Not Coachbuilt.
22	UW.2217	ASSEMBLY–Facia Board	1	LH 127" W/Base Cars without Division. Not Coachbuilt.
23	UR.1169	ASSEMBLY–Switch–On/Off	1	
24	UR.1369	DOLLY–Switch	1	Coachbuilt Cars.
25	UR.1368	ESCUTCHEON	1	
26	UD.5691	LIGHT–Warning–Compressor	1	
27	UD.6250	RELAY–Change Over–Lamp Protector	1	123" W/Base Coachbuilt Cars. also 127" W/Base Cars.
28	UR.3431	BRACKET–Mounting–HF Horn	1	Required when
29	UA.102/Z	BOLT–Bracket	4	High Frequency
30	UA.1251/Z	WASHER–Plain–Bolt	4	Horns are
31	UA.301/Z	NUT–Bolt	4	fitted.
32	UD.5434	LOOM–Engine	1	
33	RD.3690	EYE–Cable	4	
34	RD.6081	EYE–Cable	3	
35	UD.6072	CONNECTOR	3	
36	RD.3533	EYE–Cable	1	
37	RD.7990	EYE–Cable	1	Coachbuilt
38	RD.3406	EYE–Cable	1	Cars.
39	UD.2751	EYE–Cable	1	
40	RD.7589	SLEEVE–Cable Eye	11	123"W/Base Cars.
41	RD.7589	SLEEVE–Cable Eye	9	127" W/Base Cars.
42	UD.6119	SLEEVE–Flat Terminal	5	123" W/Base Cars.
43	UD.6119	SLEEVE–Flat Terminal	3	127" W/Base Cars.
44	UD.5686	ASSEMBLY–Link Lead–Switch to Fuse	1	
45	UD.2141	NIPPLE	1	
46	UR.2083	EYE–Cable	1	
47	UD.5687	ASSEMBLY–Link Lead–Switch to Rear Window Demister	1	123" W/Base Coachbuilt Cars, also 127" W/Base Cars.
48	UR.2083	EYE–Cable	1	
49	UD.6072	CONNECTOR–Lucar	1	
50	UD.6119	SLEEVE–Lucar Connector	1	
51	UD.1806	CONNECTOR–Snap–2 Way	1	
52	UD.2141	NIPPLE–Snap	2	
53	UD.4340	RELAY–Rear Window Demister	1	123" W/Base Cars. Not Coachbuilt.
54	K.1952/Z	SCREW	2	
55	K.4404/Z	WASHER–Plain–Screw	2	
56	UD.6118	PIECE–Distance	2	
57	K.1952/Z	SCREW–Blower Resistances	4	
58	K.4404/Z	WASHER–Plain–Screw	4	
59	RF.6611	GROMMET	2	
60	UD.5688	ASSEMBLY–Link Lead–Switch to Rear Window Demister	1	123" W/Base Cars. Not Coachbuilt.
61	UD.6072	CONNECTOR–Lucar	1	
62	UD.6119	SLEEVE–Lucar Connector	1	
63	UB.2504	BOW–Roof–Rear	1	127" W/Base Cars. Not Coachbuilt.
64	UB.2505	BOW–Roof–"B.C." Post	1	
65	UB.2858	PANEL–Insulating–Front	2	Not
66	UB.2861	PANEL–Insulating–Rear	2	Coachbuilt.
	UB.2862	STRIP–Insulating–Roof	1	127" W/Base Cars. Not Coachbuilt.
67	UB.2049	ASSEMBLY–Heat Shield–Rear	1	
68	UB.2040	PLATE–Support–Heat Shield	1	
69	UB.2041	BRACKET–Heat Shield–Floor	1	
70	UB.2043	SHIELD–Heat–Floor–Rear	1	
71	UB.2045	SHIELD–Heat–Floor	1	
72	UB.2048	SHIELD–Heat–Floor–Centre	1	123" W/Base Cars.
73	UB.2769	SHIELD–Heat–Floor–Centre	1	127" W/Base Cars.
74	CS.31060/Z	SCREW–Heat Shields	88	
75	CS.31065/Z	SCREW–Heat Shields	11	
76	CS.31020/Z	SCREW–Heat Shields	6	
77	K.4404/Z	WASHER–Plain	17	
78	K.4401/Z	WASHER–Plain	2	
	UW.1660	MILLBOARD–Asbestos	1	
	UW.1661	MILLBOARD–Asbestos	1	
	UW.1662	WEBBING–Asbestos	1	

Items marked † are not supplied as individual parts

PARTS LIST

Printed in England

Ref.	Part No.	Description	No. off	Remarks
79	UB.3377	ANGLE–Support–Trim Panel–RH	1	
80	UB.3378	ANGLE–Support–Trim Panel–LH	1	
81	UB.3381	ANGLE–Support–Trim Panel–Centre	1	
82	CS.31040/Z	SCREW–Support Angle	23	
83	UB.3380	ASSEMBLY–Support Bracket–Trim Panel	2	
84	CS.30541/Z	SCREW–Support Bracket to Angle	4	
85	CS.30602/Z	SCREW–Trim Board to Support Bracket	12	
86	CS.34324/Z	WASHER–Cup–Screw	12	Other than Coachbuilt Cars.
87	CS.31203/SS	SCREW–Trim Board to Angle Support	22	Other than Coachbuilt Cars.
88	CS.34322/E	WASHER–Cup–Screw	22	Other than Coachbuilt Cars.
89	KC.1702/Z	BOLT–Angle Support to Header Panel	13	
90	K.4404/Z	WASHER–Plain–Bolt	13	
91	K.4406/Z	NUT–Bolt	13	
92	UB.3356	PANEL–Parcel Shelf	1	
93	UW.2191	ASSEMBLY–Anti-Drum Panel–Parcel Tray–Inner	2	
94	UW.2183	PANEL–Anti-Drum–Parcel Shelf	2	
95	UW.2189	PANEL–Parcel Tray	1	123" W/Base Cars. Not Coachbuilt.
96	UW.2205	PANEL–Parcel Tray	1	127" W/Base Cars. Not Coachbuilt.
97	UB.2418	ASSEMBLY–Trim Header Panel–Luggage Compartment	1	
98	UB.2479	INSULATION–Tonneau Side–Front	2	
99	UB.2480	INSULATION–Tonneau Side–Rear	2	
	UW.1815	PANEL–Rear Wheelarch–LH	1	
	UW.1816	PANEL–Rear Wheelarch–RH	1	
100	UW 1841	PANEL–Centre–Boot Trim	1	
101	UB.3361	PANEL–Luggage Floor	1	127" W/Base Cars.
102	UB.3357	PANEL–Luggage Floor	1	123" W/Base Cars.
103	UW.2212	ASSEMBLY–Side Panel–Boot Trim–LH	1	Other than Coachbuilt Cars.
104	UW.2213	PANEL	1	Other than Coachbuilt Cars.
105	UW.2214	DOOR–Access	1	Other than Coachbuilt Cars.
106	UW.2215	HINGE–Access Door	1	Other than Coachbuilt Cars.
	RB.7015	FASTENER	1	Other than Coachbuilt Cars.
107	CS.30563/S	SCREW–C/Sunk–Hinge to Panel	3	Other than Coachbuilt Cars.
108	CS.34336/E	WASHER–Cup–Screw	3	Other than Coachbuilt Cars.
109	K.4404/Z	WASHER–Plain–Screw	3	Other than Coachbuilt Cars.
110	K.4006/Z	NUT–Screw	3	Other than Coachbuilt Cars.
111	K.2604/E	SCREW–C/Sunk–Fastener to Panel	1	Other than Coachbuilt Cars.
112	K.4401/Z	WASHER–Plain–Screw	1	Other than Coachbuilt Cars.
113	K.4003/Z	NUT–Screw	1	Other than Coachbuilt Cars.
114	UW.2202	PANEL–Side–Boot Trim–RH	1	Other than Coachbuilt Cars.
115	UB.3376	ANGLE–Support–Trim Panels	1	Other than Coachbuilt Cars.
	UW.2209	PANEL–Boot Floor–Haircord	1	
116	UD.6110	GROMMET–Flexible Hose to Boot Floor	1	

Ref.	Part No.	Description	No. off	Remarks

FOR CHASSIS NUMBERS SEE OVERLEAF


Items marked † are not supplied as individual parts

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England.

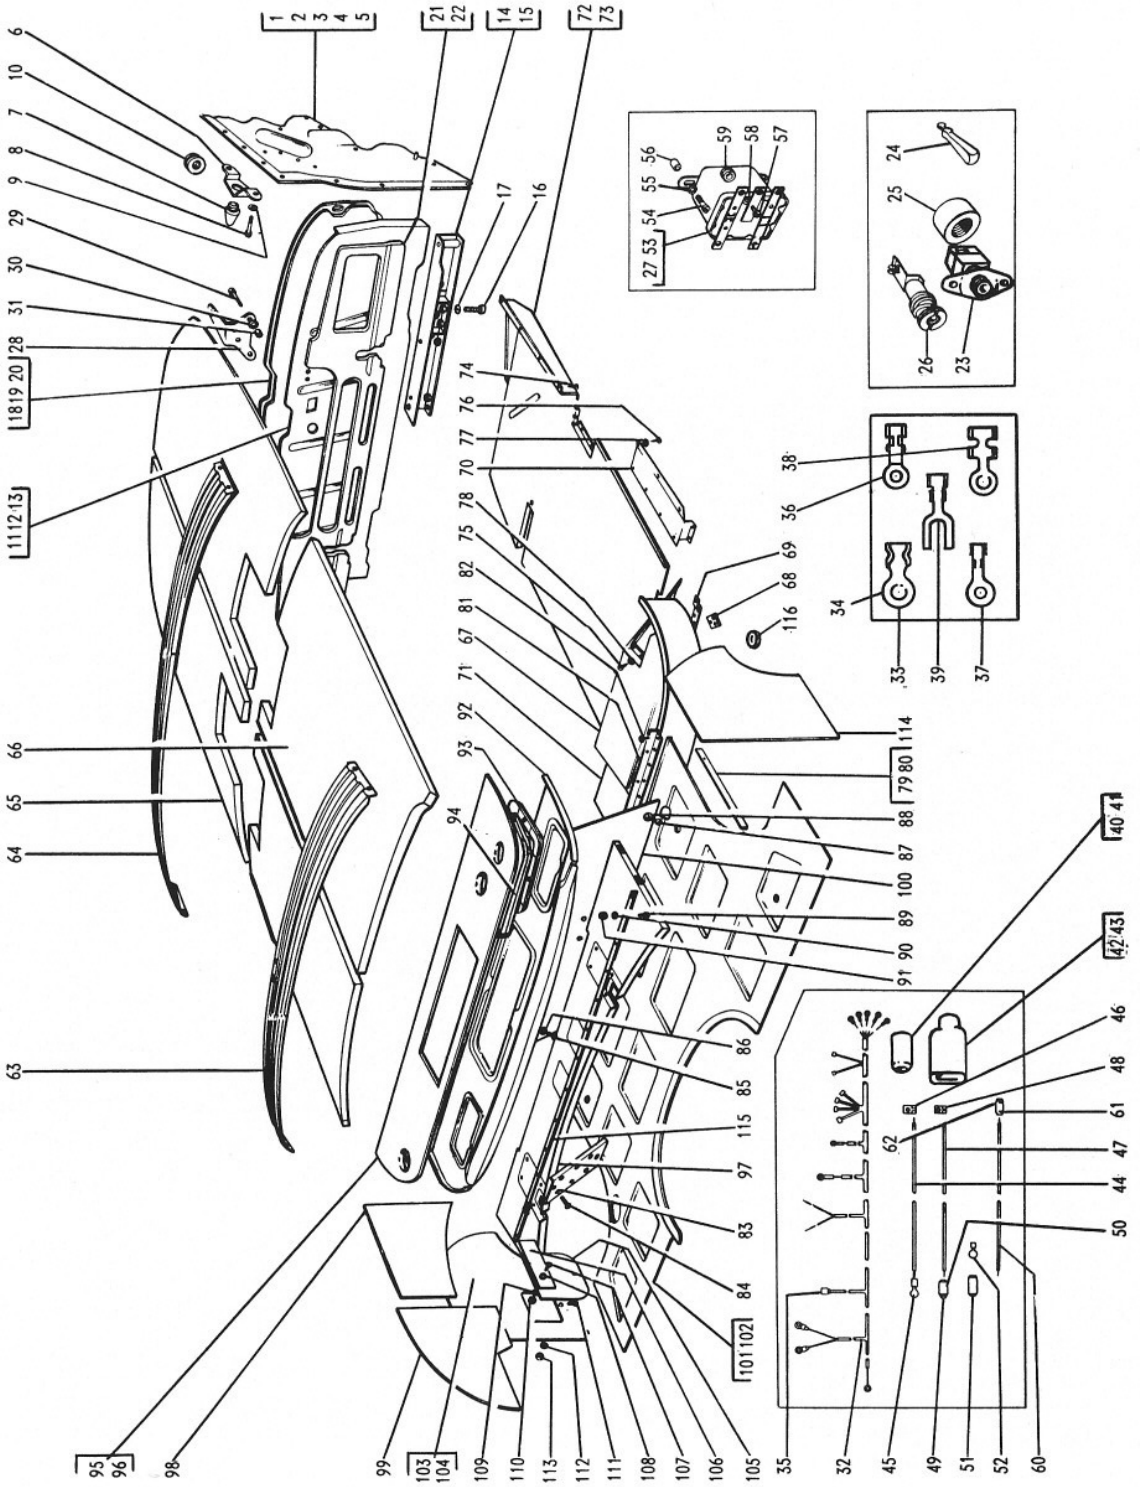

AIR CONDITIONING—TEXAS BOOT REFRIGERATION—

BODY AND ELECTRICAL FITTINGS

AIR CONDITIONING—TEXAS BOOT REFRIGERATION—BODY AND ELECTRICAL FITTINGS

L.15/1.

CHASSIS No's.

SILVER CLOUD II—	SXC.1 to SZD.345 Incl.
SILVER CLOUD II, LWB—	LCB.47, 48, 52, 54, 58, 63, 64, 73, 74, 75, 77, 79, 82, 86, 89. 91 to LCC.7 Incl. LCC.9 to 22 Incl. 24 to 45 Incl.
BENTLEY S.2—	B.2.CU to 26 Incl. 30 to 118 Incl. 122 to 552 Incl. 556 to B.413.DV Incl.
BENTLEY S.2, LWB—	LBA.23, 25. LBB.1 to 18 Incl.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UE.8080	ASSEMBLY-Valance Plate-RH	1	Silver Cloud 123" W/Base Cars. Not Coachbuilt.
2	UE.8104	ASSEMBLY-Valance Plate-RH	1	Bentley 123" W/Base Cars. Not Coachbuilt.
3	UE.8105	ASSEMBLY-Valance Plate-RH	1	Bentley 123" W/Base Coachbuilt Cars. Not Continental. Also 127" W/Base Cars.
4	UE.7807	ASSEMBLY-Valance Plate-RH	1	Silver Cloud 123" W/Base Coachbuilt Cars. also 127" W/Base Cars.
5	UE.8376	ASSEMBLY-Valance Plate-RH	1	Continental.
6	UE.7891	BRACKET-Buffer-RH Valance Plate to Engine	1	
7	UE.7892	BUFFER	1	
8	UA.101 Z	SETSCREW-Bracket to Valance Plate	2	
9	UA.1251 Z	WASHER-Plain-Setscrew	2	
10	UD.5360	GROMMET-Compressor Pipe to Evaporator	1	
11	UB.3362	ASSEMBLY-Panel-Centre-Dash	1	123" W/Base Cars. Not Coachbuilt.
12	UB.3364	ASSEMBLY-Panel-Centre-Dash	1	127" W/Base Cars. Not Coachbuilt.
13	UR.5252	ASSEMBLY-Panel-Centre-Dash	1	Without Division. Coachbuilt Cars, without Division.
14	UB.3371	ASSEMBLY-Channel Support-Dash	1	LH Cars. Not Coachbuilt.
15	UB.3372	ASSEMBLY-Channel Support-Dash	1	Without Division. RH Cars. Not Coachbuilt. Without Division.
16	CS.30541/Z	SCREW-Channel Support to Dash	2	
17	K.4404/Z	WASHER-Plain-Screw	2	
18	UR.5275	ASSEMBLY-Inner Dash	1	123" W/Base Cars. Not Coachbuilt.
19	UR.5276	ASSEMBLY-Inner Dash	1	Coachbuilt Cars, without Division.
20	UR.5278	ASSEMBLY-Inner Dash	1	127" W/Base Cars. Not Coachbuilt. Without Division.
	UW.2193	SEAL-Plastic-Inner Dash	1	123" W/Base Cars.
	UW.2194	SEAL-Rubber-Inner Dash	1	Not Coachbuilt.
	UW.2195	SEAL-Plastic-Inner Dash	1	Coachbuilt Cars,
	UW.2196	SEAL-Rubber-Inner Dash	1	without Division.
	UW.2199	SEAL-Plastic-Inner Dash	1	127" W/Base Cars.
	UW.2200	SEAL-Rubber-Inner Dash	1	Not Coachbuilt. Without Division.
21	UW.2216	ASSEMBLY-Facia Board	1	RH Cars.
22	UW.2217	ASSEMBLY-Facia Board	1	LH Cars.
				127" W/Base Cars without Division. Not Coachbuilt.
23	UR.1169	ASSEMBLY-Switch-On/Off	1	
24	UR.1369	DOLLY-Switch	1	Coachbuilt
25	UR.1368	ESCUTCHEON	1	Cars.
26	UD.5691	LIGHT-Warning-Compressor	1	
27	UD.6250	RELAY-Change Over-Lamp Protector	1	123" W/Base Coachbuilt Cars, also 127" W/Base Cars.
28	UR.3431	BRACKET-Mounting-H.F. Horn	1	Required when
29	UA.102/Z	BOLT-Bracket	4	High Frequency
30	UA.1251/Z	WASHER-Plain-Bolt	4	Horns are
31	UA.301/Z	NUT-Bolt	4	Fitted.

Ref.	Part No.	Description	No. off	Remarks
32	UD.5434	LOOM-Engine	1	
33	RD.3690	EYE-Cable	4	
34	RD.6081	EYE-Cable	3	
35	UD.6072	CONNECTOR	3	
36	RD.3533	EYE-Cable	1	
37	RD.7990	EYE-Cable	1	
38	RD.3406	EYE-Cable	1	
39	UD.2751	EYE-Cable	1	Coachbuilt Cars.
40	RD.7589	SLEEVE-Cable Eye	11	123" W/Base, Cars.
41	RD.7589	SLEEVE-Cable Eye	9	127" W/Base Cars.
42	UD.6119	SLEEVE-Flat Terminal	5	123" W/Base Cars.
43	UD.6119	SLEEVE-Flat Terminal	3	127" W/Base Cars.
44	UD.5686	ASSEMBLY-Link Lead-Switch to Fuse	1	
45	UD.2141	NIPPLE	1	
46	UR.2083	EYE-Cable	1	
47	UD.5687	ASSEMBLY-Link Lead-Switch to Rear Window Demister	1	123" W/Base Coachbuilt Cars,
48	UR.2083	EYE-Cable	1	also 127" W/Base
49	UD.6072	CONNECTOR-Lucar	1	Cars.
50	UD.6119	SLEEVE-Lucar Connector	1	
51	UD.1806	CONNECTOR-Snap-2 Way	1	
52	UD.2141	NIPPLE-Snap	2	
53	UD.4340	RELAY-Rear Window Demister	1	123" W/Base Cars. Not Coachbuilt.
54	K.1952/Z	SCREW	2	
55	K.4404/Z	WASHER-Plain-Screw	2	
56	UD.6118	PIECE-Distance	2	
57	K.1952/Z	SCREW-Blower Resistances	4	
58	K.4404/Z	WASHER-Plain-Screw	4	
59	RF.6611	GROMMET	2	
60	UD.5688	ASSEMBLY-Link Lead-Switch to Rear Window Demister	1	123" W/Base Cars.
61	UD.6072	CONNECTOR-Lucar	1	Not Coachbuilt.
62	UD.6119	SLEEVE-Lucar Connector	1	
63	UB.2504	BOW-Roof-Rear	1	127" W/Base Cars.
64	UB.2505	BOW-Roof-"BC" Post	1	Not Coachbuilt.
65	UB.2858	PANEL-Insulating-Front	2	Not
66	UB.2861	PANEL-Insulating-Rear	2	Coachbuilt.
	UB.2862	STRIP-Insulating-Roof	1	127" W/Base Cars. Not Coachbuilt.
67	UB.2049	ASSEMBLY-Heat Shield-Rear	1	
68	UB.2040	PLATE-Support-Heat Shield	1	
69	UB.2041	BRACKET-Heat Shield-Floor	1	
70	UB.2043	SHIELD-Heat-Floor-Rear	1	
71	UB.2045	SHIELD-Heat-Floor	1	
72	UB.2048	SHIELD-Heat-Floor-Centre	1	123" W/Base Cars.
73	UB.2769	SHIELD-Heat-Floor-Centre	1	127" W/Base Cars.
74	CS.31060/Z	SCREW-Heat Shields	88	
75	CS.31065/Z	SCREW-Heat Shields	11	
76	CS.31020/Z	SCREW-Heat Shields	6	
77	K.4404/Z	WASHER-Plain	17	
78	K.4401/Z	WASHER-Plain	2	
	UW.1660	MILLBOARD-Asbestos	1	
	UW.1661	MILLBOARD-Asbestos	1	
	UW.1662	WEBBING-Asbestos	1	
79	UB.3377	ANGLE-Support-Trim Panel-RH	1	
80	UB.3378	ANGLE-Support-Trim Panel-LH	1	
81	UB.3381	ANGLE-Support-Trim Panel-Centre	1	
82	CS.31040/Z	SCREW-Support Angle	23	
83	UB.3380	ASSEMBLY-Support Angle-Trim Panel	2	
84	CS.30541/Z	SCREW-Support Bracket to Angle	4	
85	CS.30602/Z	SCREW-Trim Board to Support Bracket	12	
86	CS.34324/Z	WASHER-Cup-Screw	12	Other than
87	CS.31203/SS	SCREW-Trim Board to Angle Support	22	Coachbuilt Cars.
88	CS.34322/E	WASHER-Cup-Screw	22	
89	KC.170/Z	BOLT-Angle Support to Header Panel	13	
90	K.4404/Z	WASHER-Plain-Bolt	13	
91	K.4406/Z	NUT-Bolt	13	
92	UB.3356	PANEL-Parcel Shelf	1	
93	UW.2191	ASSEMBLY-Anti-Drum Panel-Parcel Tray-Inner	2	

Items marked † are not supplied as individual parts

AIR CONDITIONING—TEXAS BOOT REFRIGERATION—BODY AND ELECTRICAL FITTINGS

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
94	UW.2189	PANEL–Parcel Tray	1	Without Division.
95	UW.2379	PANEL–Parcel Tray	1	With Division. 123" W/Base Cars. Not Coachbuilt.
96	UW.2205	PANEL–Parcel Tray	1	Without Division.
97	UW.2380	PANEL–Parcel Tray	1	With Division. 127" W/Base Cars. Not Coachbuilt.
98	UW.2315	BOARD–Speaker–Parcel Shelf	1	
99	CS.31605/Z	SCREW–Speaker to Board	4	
100	UD.5902	CUSHION–Loud Speaker to Outlet Hose	1	Without Division.
101	UD.5900	GRILLE–Speaker Board	1	
102	CS.31363/Z	SCREW–Speaker Board to Parcel Shelf	2	
103	UB.2418	ASSEMBLY–Trim Header Panel–Luggage Compartment	1	
104	UB.2479	INSULATION–Tonneau Side–Front	2	
105	UB.2480	INSULATION–Tonneau Side–Rear	2	
	UW.1815	PANEL–Rear Wheelarch–LH	1	
	UW.1816	PANEL–Rear Wheelarch–RH	1	
106	UW.1841	PANEL–Centre–Boot Trim	1	
107	UB.3361	PANEL–Luggage Floor	1	127" W/Base Cars.
108	UB.3357	PANEL–Luggage Floor	1	123" W/Base Cars.
109	UW.2212	ASSEMBLY–Side Panel–Boot Trim–LH	1	
110	UW.2213	PANEL	1	Other than
111	UW.2214	DOOR–Access	1	Coachbuilt Cars.
112	UW.2215	HINGE–Access Door	1	
	RB.7015	FASTENER	1	
113	CS.30563/SS	SCREW–c/Sunk–Hinge to Panel	3	
114	CS.34336/E	WASHER–Cup–Screw	3	
115	K.4404/Z	WASHER–Plain–Screw	3	
116	K.4006/Z	NUT–Screw	3	
117	K.2604/E	SCREW–c/Sunk–Fastener to Panel	1	
118	K.4401/Z	WASHER–Plain–Screw	1	
119	K.4003/Z	NUT–Screw	1	
120	UW.2202	PANEL–Side–Boot Trim–RH	1	
121	UB.3376	ANGLE–Support–Trim Panels	1	
	UW.2209	PANEL–Boot Floor–Haircord	1	
122	UD.6110	GROMMET–Flexible Hose to Boot Floor	1	

Ref.	Part No.	Description	No. off	Remarks


Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

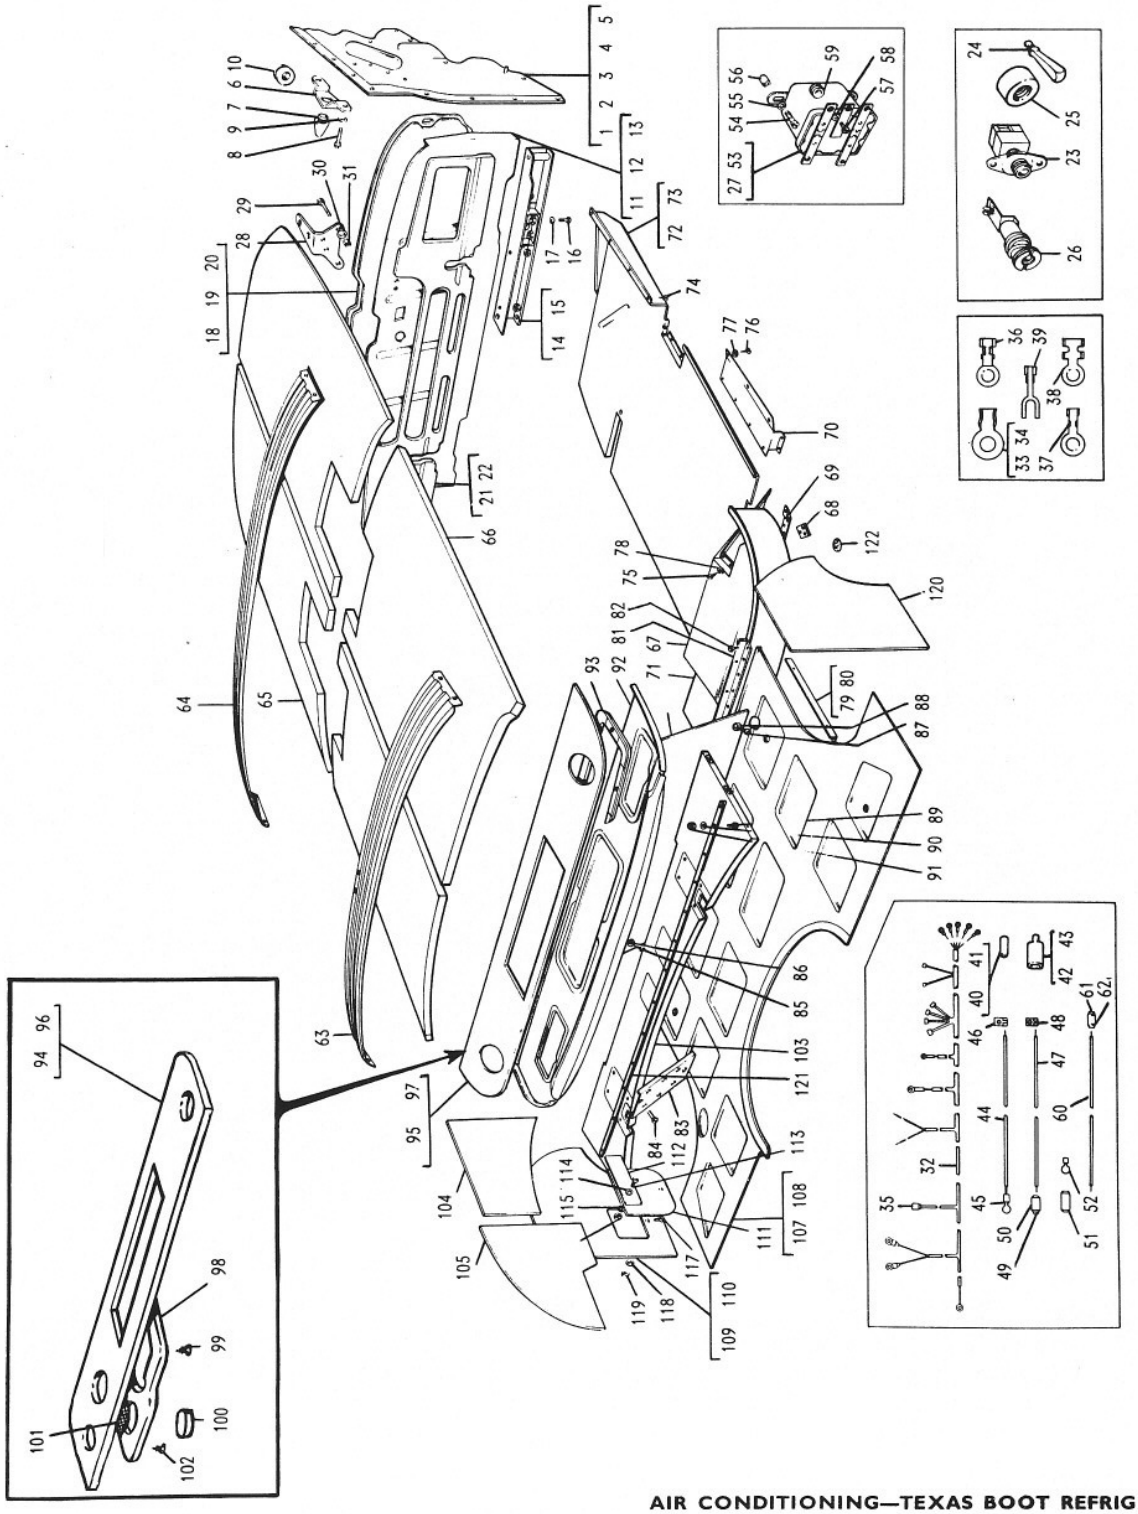

AIR CONDITIONING—TEXAS BOOT REFRIGERATION—
BODY AND ELECTRICAL FITTINGS

AIR CONDITIONING—TEXAS BOOT REFRIGERATION—BODY AND ELECTRICAL FITTINGS

L.15/2.

CHASSIS No's.

SILVER CLOUD II—	SZD.347 Onwards.
SILVER CLOUD II, LWB—	LCC.8, 23. 46 Onwards.
BENTLEY S.2—	B.415.DV Onwards.
BENTLEY S.2, LWB—	LBB.19 Onwards.
BENTLEY CONTINENTAL S.2—	BC.34.CZ. 38, 40, 41, 44, 45, 47, 50, 53, 66, 67, 68. 70 Onwards.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UE.8080	ASSEMBLY–Valance Plate–RH	1	Silver Cloud 123" W/Base Cars. Not Coachbuilt.
2	UE.8104	ASSEMBLY–Valance Plate–RH	1	Bentley 123" W/Base Cars. Not Coachbuilt.
3	UE.8105	ASSEMBLY–Valance Plate–RH	1	Bentley 123" W/Base Coachbuilt Cars. Not Continental. Also 127" W/Base Cars.
4	UE.7807	ASSEMBLY–Valance Plate–RH	1	Silver Cloud 123" W/Base Coachbuilt Cars, also 127" W/Base Cars.
5	UE.8376	ASSEMBLY–Valance Plate–RH	1	Continental.
6	UE.7891	BRACKET–Buffer–RH Valance Plate to Engine	1	
7	UE.7892	BUFFER	1	
8	UA.101/Z	SETSCREW–Bracket to Valance Plate	2	
9	UA.1251/Z	WASHER–Plain–Setscrew	2	
10	UD.5360	GROMMET–Compressor Pipe to Evaporator	1	
11	UB.3362	ASSEMBLY–Panel–Centre–Dash	1	123" W/Base Cars. Not Coachbuilt.
12	UB.3364	ASSEMBLY–Panel–Centre–Dash	1	127" W/Base Cars. Not Coachbuilt. Without Division.
13	UR.5252	ASSEMBLY–Panel–Centre–Dash	1	Coachbuilt Cars, without Division.
14	UB.3371	ASSEMBLY–Channel Support–Dash	1	LH Cars. Not Coachbuilt. Without Division.
15	UB.3372	ASSEMBLY–Channel Support–Dash	1	RH Cars. Not Coachbuilt. Without Division.
16	CS.30541/Z	SCREW–Channel Support to Dash	2	
17	K.4404/Z	WASHER–Plain–Screw	2	
18	UR.5275	ASSEMBLY–Inner Dash	1	123" W/Base Cars. Not Coachbuilt.
19	UR.5276	ASSEMBLY–Inner Dash	1	Coachbuilt Cars, without Division.
20	UR.5278	ASSEMBLY–Inner Dash	1	127" W/Base Cars. Not Coachbuilt. Without Division.
	UW.2193	SEAL–Plastic–Inner Dash	1	123" W/Base Cars.
	UW.2194	SEAL–Rubber–Inner Dash	1	Not Coachbuilt.
	UW.2195	SEAL–Plastic–Inner Dash	1	Coachbuilt Cars,
	UW.2196	SEAL–Rubber–Inner Dash	1	without Division.
	UW.2199	SEAL–Plastic–Inner Dash	1	127" W/Base Cars.
	UW.2200	SEAL–Rubber–Inner Dash	1	Not Coachbuilt. Without Division.
21	UB.3515	ASSEMBLY–Channel Support–Dash–RH	1	RH Cars.
22	UB.3524	ASSEMBLY–Cubby Box–RH	1	
23	UB.3516	ASSEMBLY–Channel Support–Dash–LH	1	LH Cars.
24	UB.3525	ASSEMBLY–Cubby Box–LH	1	
25	UB.3520	ASSEMBLY–Angle–Upper–Cubby Box	1	127" W/Base Cars. Not Coachbuilt.
26	UW.2216	ASSEMBLY–Facia Board	1	RH Cars.
27	UW.2217	ASSEMBLY–Facia Board	1	LH Cars.
				127" W/Base Cars without Division. Not Coachbuilt.
28	UR.1169	ASSEMBLY–Switch–On/Off	1	
29	UR.1369	DOLLY–Switch	1	
30	UR.1368	ESCUTCHEON	1	Coachbuilt
31	UD.5691	LIGHT–Warning–Compressor	1	Cars.
32	UD.5873	PLATE–Fixing–Warning Light–Compressor	1	
33	UD.6250	RELAY–Change Over–Lamp Protector	1	123" W/Base Coachbuilt Cars, also 127" W/Base Cars.
34	UR.3431	BRACKET–Mounting–H.F. Horn	1	Required when
35	UA.102/Z	BOLT–Bracket	4	High Frequency
36	UA.1251/Z	WASHER–Plain–Bolt	4	Horns are
37	UA.301/Z	NUT–Bolt	4	Fitted.
38	UD.5434	LOOM–Engine	1	
39	RD.3690	EYE–Cable	4	
40	RD.6081	EYE–Cable	3	
41	UD.6072	CONNECTOR	3	
42	RD.3533	EYE–Cable	1	
43	RD.7990	EYE–Cable	1	
44	RD.3406	EYE–Cable	1	
45	UD.2751	EYE–Cable	1	Coachbuilt Cars.
46	RD.7589	SLEEVE–Cable Eye	11	123" W/Base Cars.
47	RD.7589	SLEEVE–Cable Eye	9	127" W/Base Cars.
48	UD.6119	SLEEVE–Flat Terminal	5	123" W/Base Cars.
49	UD.6119	SLEEVE–Flat Terminal	3	127" W/Base Cars.
50	UD.5686	ASSEMBLY–Link Lead–Switch to Fuse	1	
51	UD.2141	NIPPLE	1	
52	UR.2083	EYE–Cable	1	
53	UD.5687	ASSEMBLY–Link Lead–Switch to Rear Window Demister	1	123" W/Base Coachbuilt Cars, also 127" W/Base Cars.
54	UR.2083	EYE–Cable	1	
55	UD.6072	CONNECTOR–Lucar	1	
56	UD.6119	SLEEVE–Lucar Connector	1	
57	UD.1806	CONNECTOR–Snap–2 Way	1	
58	UD.2141	NIPPLE–Snap	2	
59	UD.4340	RELAY–Rear Window Demister	1	123" W/Base Cars. Not Coachbuilt.
60	K.1952/Z	SCREW	2	
61	K.4404/Z	WASHER–Plain–Screw	2	
62	UD.6118	PIECE–Distance	2	
63	K.1952/Z	SCREW–Blower Resistances	4	
64	K.4404/Z	WASHER–Plain–Screw	4	
65	RF.6611	GROMMET	2	
66	UD.5688	ASSEMBLY–Link Lead–Switch to Rear Window Demister	1	123" W/Base Cars.
67	UD.6072	CONNECTOR–Lucar	1	Not Coachbuilt.
68	UD.6119	SLEEVE–Lucar Connector	1	
69	UB.2504	BOW–Roof–Rear	1	127" W/Base Cars.
70	UB.2505	BOW–Roof–"BC" Post	1	Not Coachbuilt.
71	UB.2858	PANEL–Insulating–Front	2	Not
72	UB.2861	PANEL–Insulating–Rear	2	Coachbuilt.
	UB.2862	STRIP–Insulating–Roof	1	127" W/Base Cars. Not Coachbuilt.
73	UB.2049	ASSEMBLY–Heat Shield–Rear	1	
74	UB.2040	PLATE–Support–Heat Shield	1	
75	UB.2041	BRACKET–Heat Shield–Floor	1	
76	UB.2043	SHIELD–Heat–Floor–Rear	1	
77	UB.2045	SHIELD–Heat–Floor	1	
78	UB.2048	SHIELD–Heat–Floor–Centre	1	123" W/Base Cars.
79	UB.2769	SHIELD–Heat–Floor–Centre	1	127" W/Base Cars.
80	CS.31060/Z	SCREW–Heat Shields	88	
81	CS.31065/Z	SCREW–Heat Shields	11	
82	CS.31020/Z	SCREW–Heat Shields	6	
83	K.4404/Z	WASHER–Plain	17	
84	K.4401/Z	WASHER–Plain	2	
	UW.1660	MILLBOARD–Asbestos	1	
	UW.1661	MILLBOARD–Asbestos	1	
	UW.1662	WEBBING–Asbestos	1	

Items marked † are not supplied as individual parts

PARTS LIST

Ref.	Part No.	Description	No. off	Remarks
85	UB.3377	ANGLE–Support–Trim Panel–RH	1	
86	UB.3378	ANGLE–Support–Trim Panel–LH	1	
87	UB.3381	ANGLE–Support–Trim Panel–Centre	1	
88	CS.31040/Z	SCREW–Support Angle	23	
89	UB.3380	ASSEMBLY–Support Angle–Trim Panel	2	
90	CS.30541/Z	SCREW–Support Bracket to Angle	4	
91	CS.30602/Z	SCREW–Trim Board to Support Bracket	12	
92	CS.34324/Z	WASHER–Cup–Screw	12	Other than
93	CS.31203/SS	SCREW–Trim Board to Angle Support	22	Coachbuilt Cars.
94	CS.34322/E	WASHER–Cup–Screw	22	
95	KC.170/Z	BOLT–Angle Support to Header Panel	13	
96	K.4404/Z	WASHER–Plain–Bolt	13	
97	K.4406/Z	NUT–Bolt	13	
98	UB.3356	PANEL–Parcel Shelf	1	
99	UW.2191	ASSEMBLY–Anti-Drum Panel–Parcel Tray–Inner	2	
100	UW.2189	PANEL–Parcel Tray	1	Without Division.
101	UW.2379	PANEL–Parcel Tray	1	With Division. 123" W/Base Cars. Not Coachbuilt.
102	UW.2205	PANEL–Parcel Tray	1	Without Division.
103	UW.2380	PANEL–Parcel Tray	1	With Division. 127" W/Base Cars. Not Coachbuilt.
104	UW.2315	BOARD–Speaker–Parcel Shelf	1	
105	CS.31605/Z	SCREW–Speaker to Board	4	
106	UD.5902	CUSHION–Loud Speaker to Outlet Hose	1	Without Division.
107	UD.5900	GRILLE–Speaker Board	1	
108	CS.31363/Z	SCREW–Speaker Board to Parcel Shelf	2	
109	UB.2418	ASSEMBLY–Trim Header Panel–Luggage Compartment	1	
110	UB.2479	INSULATION–Tonneau Side–Front	2	
111	UB.2480	INSULATION–Tonneau Side–Rear	2	
	UW.1815	PANEL–Rear Wheelarch–LH	1	
	UW.1816	PANEL–Rear Wheelarch–RH	1	
112	UW.1841	PANEL–Centre–Boot Trim	1	
113	UB.3361	PANEL–Luggage Floor	1	127" W/Base Cars.
114	UB.3357	PANEL–Luggage Floor	1	123" W/Base Cars.
115	UW.2212	ASSEMBLY–Side Panel–Boot Trim–LH	1	
116	UW.2213	PANEL	1	Other than
117	UW.2214	DOOR–Access	1	Coachbuilt Cars.
118	UW.2215	HINGE–Access Door	1	
	RB.7015	FASTENER	1	
119	CS.30563/SS	SCREW–C/Sunk–Hinge to Panel	3	
120	CS.34336/E	WASHER–Cup–Screw	3	
121	K.4404/Z	WASHER–Plain–Screw	3	
122	K.4006/Z	NUT–Screw	3	
123	K.2604/E	SCREW–C/Sunk–Fastener to Panel	1	
124	K.4401/Z	WASHER–Plain–Screw	1	
125	K.4003/Z	NUT–Screw	1	
126	UW.2202	PANEL–Side–Boot Trim–RH	1	
127	UB.3376	ANGLE–Support–Trim Panels	1	
	UW.2209	PANEL–Boot Floor–Haircord	1	
128	UD.6110	GROMMET–Flexible Hose to Boot Floor	1	


FOR CHASSIS NUMBERS SEE OVERLEAF

Items marked † are not supplied as individual parts

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

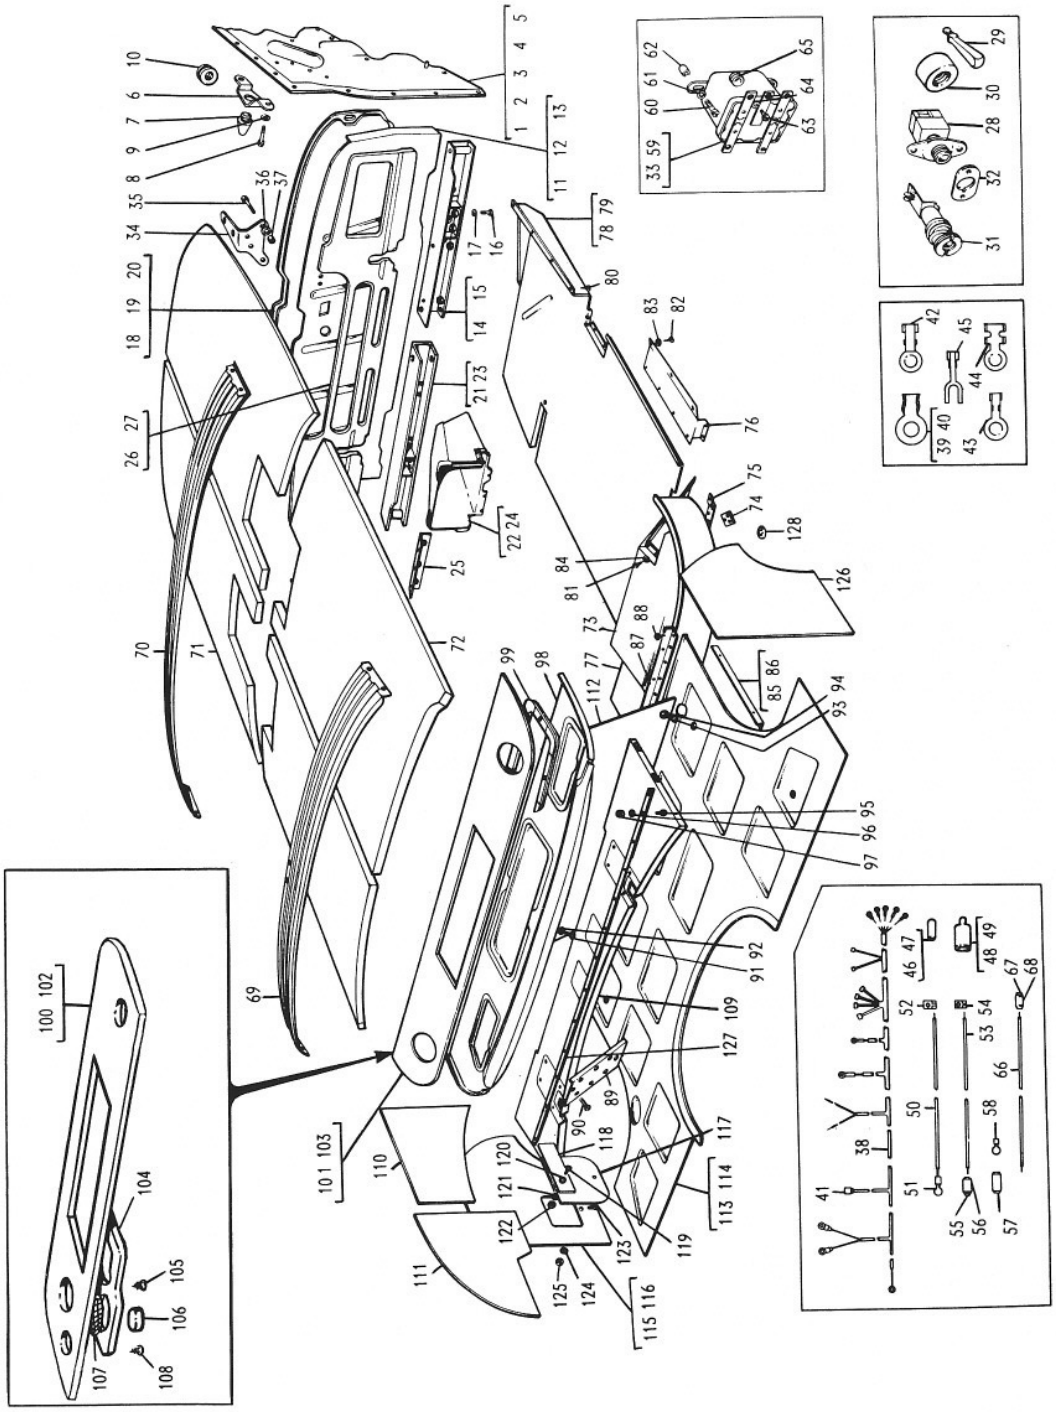

AIR CONDITIONING—TEXAS BOOT REFRIGERATION—

BODY AND ELECTRICAL FITTINGS

AIR CONDITIONING—BOOT REFRIGERATION—UNIT AND COMPRESSOR

L.16.—Amendment 2.

CHASSIS No's :—

BENTLEY S.2— B 1 AA / B 2 AM to B 149 CT Incl.
153
157 to 185 Incl.
189 to 215 Incl.
219 to 271 Incl.
275 to 283 Incl.
287 to 303 Incl.
307 to 361 Incl.
365
369 to 413 Incl.
417 to 445 Incl.
B 2 CU to 6 Incl.
10 to 68 Incl.
74 to 170 Incl.
174 to 310 Incl.
314 to 338 Incl.
342 to 346 Incl.
350 to 362 Incl.
366 to 384 Incl.
388
392, 394
398 to 404 Incl.
408 to 464 Incl.
468 to 488 Incl.
492 to 496 Incl.
500 to 532 Incl.
538 to 568 Incl.

BENTLEY S.2 LWB— LBA 1 to 20 Incl.

BENTLEY CONTINENTAL S.2—BC 1 AR to BC 89 BY Incl.

SILVER CLOUD II—SPA 2 / SRA 1 to SWC 76 Incl.
80 to 268 Incl.
272 to 308 Incl.
312 to 394 Incl.
398 to 472 Incl.
476, 484, 488
504 to 514 Incl.
518 to 556 Incl.
562 to 634 Incl.
640 to 650 Incl.
654 to 662 Incl.
666 to 676 Incl.
680 to 730 Incl.
SXC 3 to 7 Incl.
15 to 85 Incl.
91 to 143 Incl.
147
153 to 157 Incl.
161 to 211 Incl.
215 to 237 Incl.
241 to 257 Incl.
261 to 333 Incl.
337
341 to 357 Incl.
361 to 373 Incl.
377, 379
383 to 403 Incl.
407 to 435 Incl.
439 to 453 Incl.
457 to 469 Incl.
473 to 489 Incl.
493 to 511 Incl.
515 to 545 Incl.
549 to 637 Incl.

SILVER CLOUD II LWB— LCA 1 to LCB 11 Incl.
16, 17
19 to 27 Incl.
29, 30
32 to 40 Incl.
42, 43, 47, 49, 51
54 to 72 Incl.
74 to 81 Incl.
83 to 86 Incl.
88, 89

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UE.5577	ASSEMBLY–Bracket–Compressor Mounting	1	
2	UA.154/Z	SETSCREW–Bracket to Cylinder Head	3	
3	UE.7397	COMPRESSOR–Tecumseh	1	
4	UE.7272	GASKET–Compressor Crankcase	1	
	CD.1170	GASKET–Suction	1	
	CD.1166	KIT–Replacement–Gaskets	1	
	CD.1165	KIT–Replacement–Glass–Oil Sight	1	
	CD.1164	KIT–Replacement–Seals	1	
	CD.1167	KIT–Replacement–Valve Plate	1	
	CD.1168	TOOL–Service	1	
5	UE.5092	ASSEMBLY–Pulley and Clutch	1	
	CD.1174	BEARING–Journal	1	
	CD.1179	BOLT–Securing–Clutch Assembly	1	
	CD.1181	BRUSH–Gear Assembly	1	
	CD.1175	CIRCLIP–Large	1	
	CD.1176	CIRCLIP–Small	1	
	CD.1178	NUT–Lock–Adjusting Screw	3	
	CD.1173	PLATE–Clutch Assembly	1	
	CD.1177	SCREW–Adjusting Clutch	3	
	CD.1182	ASSEMBLY–Screw and Washer–Bearing Securing	1	
	CD.1180	WASHER–Securing Bolt	1	
	CD.1172	ASSEMBLY–Yoke	1	
6	UE.5650	SETSCREW–Compressor to Bracket	4	
7	UA.1253/Z	WASHER–Plain–Setscrew	3	
8	UE.9082	STAY–Fridge Pump to Dynamo Mounting Bracket	1	
9	UD.4180	SLEEVE–Clutch Cable to Loom	1	
10	UA.106/Z	BOLT–Distance Piece–Brush Gear–Compressor	2	
11	UE.5629	ASSEMBLY–'V' Belts–Crankshaft	1	
12	UD.5328	ASSEMBLY–Hose and Pipe–Compressor to 3 way Junction	1	
13	UD.5341	ASSEMBLY–Flexible Hose	1	
14	UD.5229	ASSEMBLY–Pipe	1	
15	UD.5440	ASSEMBLY–Pipe–Control Valve to Suction Line	1	
16	UD.5036	VALVE–Control–Danfoss	1	
17	UD.5481	BRACKET–Support–Control Valve to Valance Plate	1	
18	RE.19626	CLIP	1	
19	UA.1501/Z	BOLT	1	
20	UA.1251/Z	WASHER–Plain–Bolt	1	
21	K.4006/Z	NUT–Bolt	1	
22	UD.5442	ASSEMBLY–Pipe–Suction–Tee Piece–Manifold Pipe	1	
23	UD.5683	ASSEMBLY–Pipe–Suction–Tee Piece–Manifold Pipe	1	123" W/Base Not Coachbuilt Car
24	UE.8078	BRACKET–Support–Flexible Hose	1	
25	UA.101/Z	SETSCREW–Bracket to Valance Plate	2	
26	UE.8079	NUT–Flexible Hose Support	1	
27	UD.1614	GROMMET–Pipe to Valance Plate	1	
28	UD.5441	ASSEMBLY–Pipe–Liquid–Sill to Receiver	1	
29	UD.4154	ASSEMBLY–Pipe–Liquid and Suction	1	
30	UD.4152	ASSEMBLY–Connection	2	
31	UD.4151	PIPE–Liquid	1	
32	UD.4330	HOSE–Suction	1	
33	UD.4150	UNION–Liquid Pipe	2	
34	UD.5391	ASSEMBLY–Servicing Valve	1	
35	UD.5393	ASSEMBLY–Body	1	
36	UD.5392	ASSEMBLY–Body	1	
37	UD.4015	UNION	1	
38	UD.4550	WASHER–Joint–Union	2	
39	UD.5397	PIPE–Liquid–Solenoid to Servicing Valve	1	
40	UD.5396	PIPE–Liquid–Servicing Valve to Filter Drier	1	
41	UD.4989	DRIER–Filter–Danfoss	1	
42	UD.6159	UNION–Swivel	1	
43	UD.6175	VALVE–Solenoid–Danfoss	1	
44	UD.5401	BRACKET–Support–Solenoid Valve	1	
45	RE.16256	CLIP–Inlet to Solenoid Valve Pipe	2	
46	RE.19626	CLIP–Control Valve–Suction Line	1	
47	UA.1501/Z	BOLT–Clip	3	
48	K.4404/Z	WASHER–Plain–Bolt	3	
49	K.4006/Z	NUT–Bolt	2	
50	UR.1734	CLIP–Phial to Suction Line	3	
51	UB.2650	SEAL–Floor	1	
52	UB.2651	PLATE–Retaining–Floor Seal	1	
53	CS.31041/Z	SCREW–Retaining Plate	8	
54	K.4446/Z	WASHER–Plain–Screw	8	
55	UD.4274	CLIP–Manifold Pipe	8	
56	UA.102/Z	BOLT–Clip	8	
57	UA.1251/Z	WASHER–Plain–Bolt	8	
58	UA.301/Z	NUT–Bolt	8	
59	UD.4253	PIPE–Suction–Evaporator to Expansion Valve	1	
60	UD.4185	VALVE–Expansion–Evaporator	1	
61	UD.4206	CLIP–Expansion Valve	1	
62	UD.4207	BRACKET–Clip–Expansion Valve	1	
63	UA.102/Z	BOLT–Clip and Bracket	2	
64	UA.1251/Z	WASHER–Plain–Bolt	2	
65	UA.301/Z	NUT–Bolt	2	
66	UD.4205	CLIP–Suction Pipe–Evaporator	1	
67	UD.4207	BRACKET–Clip–Suction Pipe	1	
68	UA.102/Z	BOLT–Clip and Bracket	2	
69	UA.1251/Z	WASHER–Plain–Bolt	2	
70	UA.301/Z	NUT–Bolt	2	
71	UB.2365	ASSEMBLY–Mounting Channel–Evaporator Unit	2	
72	CS.30541/Z	SCREW–Channel Mounting	8	
73	UA.6101/Z	WASHER–Plain–Screw	8	
74	K.4006/Z	NUT–Screw	8	
75	UD.3499	BRACKET–Evaporator–Rear–LH	1	
76	UD.3500	BRACKET–Evaporator–Rear–RH	1	
77	UD.3505	BRACKET–Evaporator–Front–LH	1	
78	UD.3506	BRACKET–Evaporator–Front–RH	1	
79	UA.4251/Z	SCREW–Bracket–Front	4	
80	UA.102/Z	SETSCREW–Bracket–Front	4	
81	UA.6102/Z	WASHER–Plain–Setscrew	4	
82	UA.102/Z	SETSCREW–Bracket–Rear	8	
83	UA.6102/Z	WASHER–Plain–Setscrew	8	
84	UD.4163	ASSEMBLY–Blower Unit–LH	1	
85	UD.3503	BRACKET–Support–Inner	1	
86	UD.3504	BRACKET–Support–Outer	1	
87	UD.2141	NIPPLE–Motor Cable	1	
88	RD.7990	EYE–Cable	1	
89	RD.7589	SLEEVE–Cable Eye	1	
90	UD.4162	ASSEMBLY–Blower Unit–RH	1	
91	UD.3502	BRACKET–Support–Outer	1	
92	UD.3501	BRACKET–Support–Inner	1	
93	UD.2141	NIPPLE–Motor Cable	1	
94	RD.7990	EYE–Cable	1	
95	RD.7589	SLEEVE–Cable Eye	1	
96	UD.4226	BRACKET–Support–Inner Bracket–RH	1	
97	UD.4228	BRACKET–Support–Inner Bracket–LH	1	
98	UD.4227	PIECE–Distance–Outer Bracket	2	
99	UA.102/Z	BOLT–Blower Unit Mounting	2	
100	UA.104/Z	BOLT–Blower Unit Mounting	2	
101	UA.103/Z	BOLT–Blower Unit Mounting	4	
102	UA.6102/Z	WASHER–Plain	12	
103	UA.301/Z	NUT	4	
104	UD.4155	DUCT–Blower to Evaporator	2	
105	UD.4124	EVAPORATOR	1	
106	UD.4978	SWITCH–Thermostat	1	
107	CS.31041/Z	SCREW–Self Tapping–Thermostat	3	
108	UD.5399	DUCT–Outlet	1	
109	CS.31041/Z	SCREW–Outlet Duct to Evaporator	12	
110	UD.4157	SLEEVE–Duct to Blower Motor	2	
111	UD.4161	DUCT–Motor to Parcel Shelf	2	
112	UD.4159	SEAL–Outlet Duct to Parcel Shelf	2	
113	UD.4156	PLATE–Clamping–Seal	2	
114	CS.31041/Z	SCREW–Clamping Plate	8	
115	UD.4158	PLATE–Blanking–Parcel Shelf	2	
116	CS.31020/Z	SCREW–Blanking Plate	4	
117	RB.7370	SCREW–Duct to Parcel Shelf	6	
118	UD.4248	ASSEMBLY–Duct–Outlet	2	
119	UD.4223	ASSEMBLY–Shaft–Deflector	2	
120	UD.4208	FLAP–Deflector–Outlet Duct	2	
121	KB.7753/Z	SCREW–Flap	4	
122	K.4401/Z	WASHER–Plain–Screw	8	
123	K.4152/Z	NUT–Screw	4	
124	UD.4212	SPRING–Deflector Shaft	2	

Items marked † are not supplied as individual parts

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
125	UD.3490	DUCT–Inlet–Evaporator	1	
126	UD.3489	ASSEMBLY–Clamping Plate–Inlet Duct	1	
127	CS.30564/Z	SCREW–Anti-Drum Panel–Inner	8	
128	UD.5123	ASSEMBLY–Filter and Frame	1	
129	UD.3375	GRILLE–Inlet	2	
130	CS.32401/R	TACK–Inlet Duct to Anti-Drum Panel	16	
		REFRIGERANT–Freon 12–6 lbs.		} Alternatives.
		REFRIGERANT–Arcton 6–6 lbs.		
		REFRIGERANT–Icseon 122–6 lbs.		


Ref.	Part No.	Description	No. off	Remarks

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

Printed in England

PARTS LIST

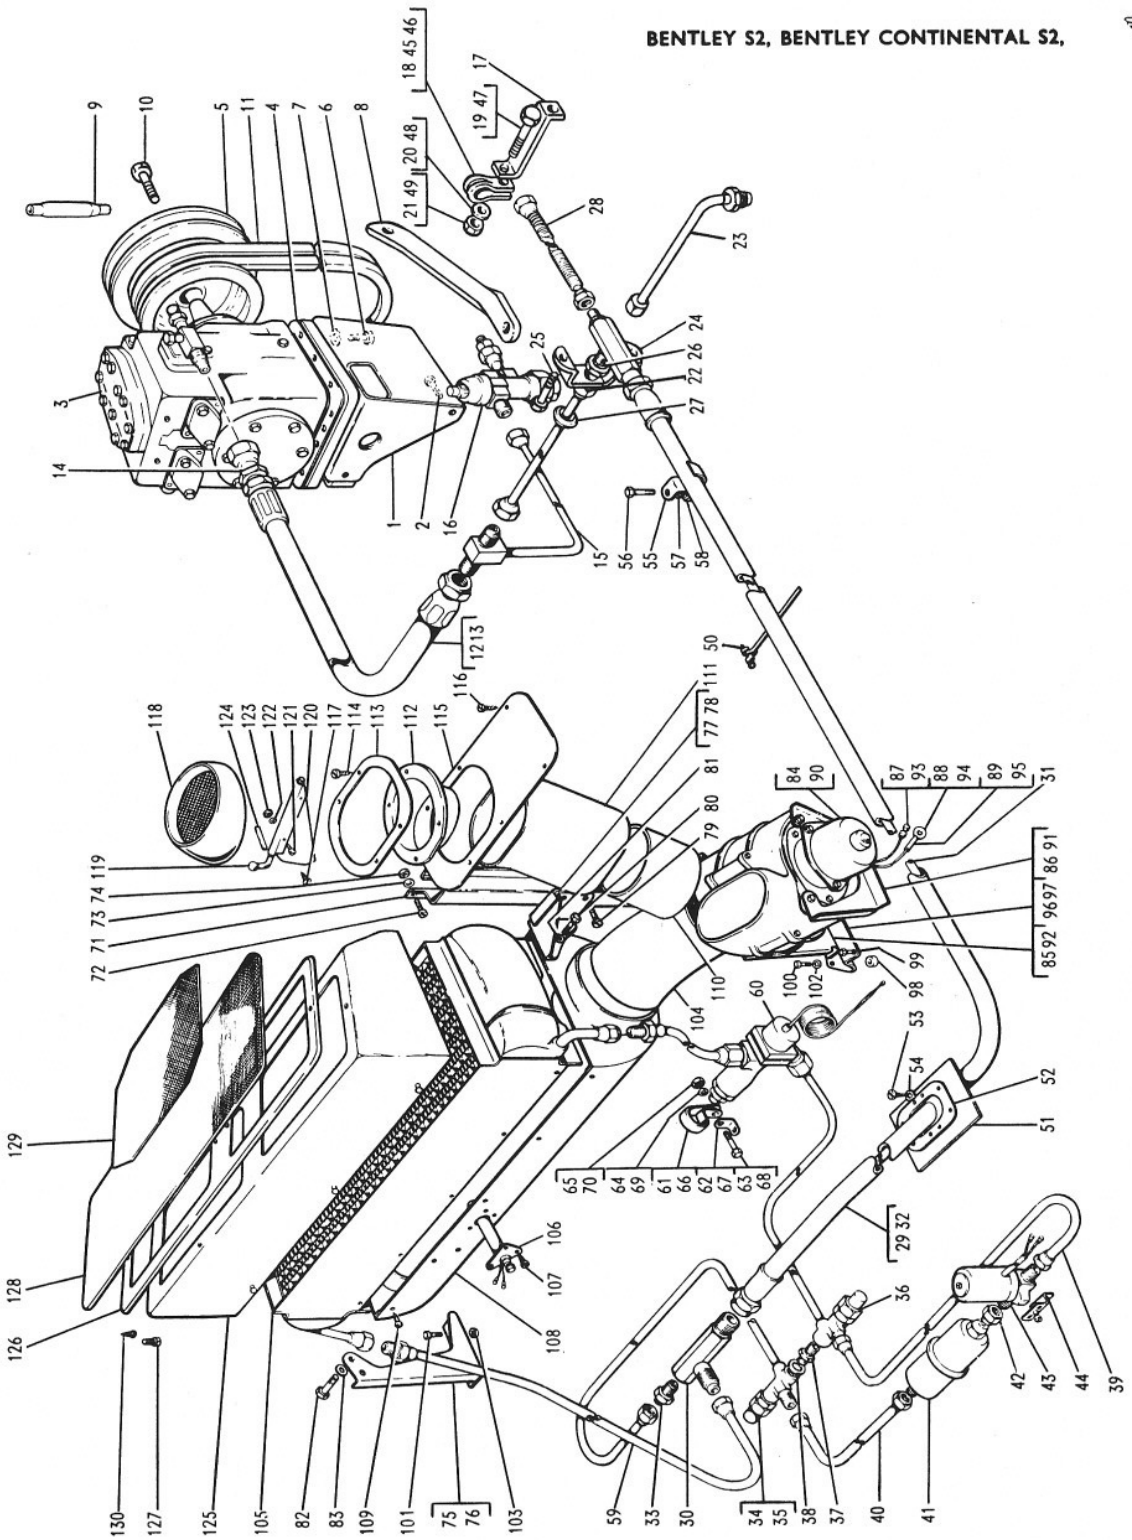
18 45 46
17
19 47
20 48
21 49
28
23
9
10
5
11
4
7
6
8
25
24
26
22
27
3
14
1
2
16
15
56
55
57
58
12 13
116
50
111
118
124
123
122
121
120
117
114
113
112
115
77 78
81
80
79
84
90
87
93
88
94
89
95
31
119
74
73
71
72
85 92
96 97
86 91
99
98
102
100
110
104
60
53
54
52
51
129
65
70
64
69
61
66
62
67
63
68
29 32
106
107
128
126
108
36
42
43
44
39
130
127
125
105
82
83
109
101
75
76
103
59
33
30
34
35
38
37
40
41

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UE.8266	ASSEMBLY–Bracket–Compressor Mounting	1	
2	UA.154/Z	SETSCREW–Bracket to Cylinder Head	3	
3	UE.9547	ASSEMBLY–Compressor	1	
4	UE.8268	COMPRESSOR–York Type A.209	1	
5	UE.9528	STUD–Stepped–Cable Clip	1	
6	CD.1787	VALVE–Service	1	
7	CD.1788	VALVE–Service	1	
8	CD.1789	GASKET–Service Valve	2	
9	CD.1790	GASKET–Top Head to Valve Plate	1	
10	CD.1796	ASSEMBLY–Valve	2	
11	CD.1798	GASKET–Valve Plate	1	
12	CD.1802	SEAL–Crankshaft	1	Not required on Cars destined for U.S.A. and Canada.
13	CD.1801	GASKET–Seal Plate	1	
14	CD.1805	RING–'O'–Cover Plate	1	
15	CD.1806	GASKET–Bottom Plate	1	
16	CD.1807	RING–'O'–Oil Screw	1	
17	UE.9509	ASSEMBLY–Clutch–Electro–Lock Type 28A.	1	
18	UD.5406	CONNECTOR–Compressor	1	
19	UD.6119	SLEEVE–Connector	1	
20	UD.6074	BLADE–Lucar	1	
21	UD.3364	CLIP–Compressor Clutch Cable	1	
22	K.4404/Z	WASHER–Plain–Stud–Cable Clip	1	
23	K.4006/Z	NUT–Stud–Cable Clip	1	
24	RE.22669	SETSCREW–Compressor to Bracket	4	
25	UA.1253/Z	WASHER–Plain–Setscrew	3	
26	UA.106/Z	BOLT–Distance Piece–Brush Gear–Compressor	2	
27	UE.5629	ASSEMBLY–'V' Belts–Crankshaft	1	
28	UD.5328	ASSEMBLY–Hose and Pipe–Compressor to 3 Way Junction	1	
29	UD.5341	ASSEMBLY–Flexible Hose	1	
30	UD.5229	ASSEMBLY–Pipe	1	
31	UD.5440	ASSEMBLY–Pipe–Control Valve to Suction Line	1	
32	UD.5036	VALVE–Control–Danfoss	1	
33	UD.5481	BRACKET–Support–Control Valve to Valance Plate	1	
34	RE.19626	CLIP	1	
35	UA.1501/Z	BOLT	1	
36	UA.1251/Z	WASHER–Plain–Bolt	1	
37	K.4006/Z	NUT–Bolt	1	
38	UD.5442	ASSEMBLY–Pipe–Suction–Tee Piece–Manifold Pipe	1	
39	UD.5683	ASSEMBLY–Pipe–Suction–Tee Piece–Manifold Pipe	1	123" W/Base Not Coachbuilt
40	UE.8078	BRACKET–Support–Flexible Hose	1	
41	UA.101/Z	SETSCREW–Bracket to Valance Plate	2	
42	UE.8079	NUT–Flexible Hose Support	1	
43	UD.1614	GROMMET–Pipe to Valance Plate	1	
44	UD.5441	ASSEMBLY–Pipe–Liquid–Sill to Receiver	1	
45	UD.4154	ASSEMBLY–Pipe–Liquid and Suction	1	
46	UD.4152	ASSEMBLY–Connection	2	
47	UD.4151	PIPE–Liquid	1	
48	UD.4330	HOSE–Suction	1	
49	UD.4150	UNION–Liquid Pipe	2	
50	UD.5391	ASSEMBLY–Servicing Valve	1	
51	UD.5393	ASSEMBLY–Body	1	
52	UD.5392	ASSEMBLY–Body	1	
53	UD.4015	UNION	1	
54	UD.4550	WASHER–Joint–Union	2	
55	UD.5397	PIPE–Liquid–Solenoid to Servicing Valve	1	
56	UD.5396	PIPE–Liquid–Servicing Valve to Filter Drier	1	
57	UD.4989	DRIER–Filter–Danfoss	1	
58	UD.6159	UNION–Swivel	1	
59	UD.6175	VALVE–Solenoid–Danfoss	1	
60	UD.5401	BRACKET–Support–Solenoid Valve	1	
61	RE.16256	CLIP–Inlet to Solenoid Valve Pipe	2	
62	RE.19626	CLIP–Control Valve–Suction Line	1	
63	UA.1501/Z	BOLT–Clip	3	
64	K.4404/Z	WASHER–Plain–Bolt	3	
65	K.4006/Z	NUT–Bolt	2	
66	UR.1734	CLIP–Phial to Suction Line	3	
67	UB.2650	SEAL–Floor	1	
68	UB.2651	PLATE–Retaining–Floor Seal	1	
69	CS.31041/Z	SCREW–Retaining Plate	8	
70	K.4446/Z	WASHER–Plain–Screw	8	
71	UD.4274	CLIP–Manifold Pipe	8	
72	UA.102/Z	BOLT–Clip	8	
73	UA.1251/Z	WASHER–Plain–Bolt	8	
74	UA.301/Z	NUT–Bolt	8	
75	UD.4253	PIPE–Suction–Evaporator to Expansion Valve	1	
76	UD.4185	VALVE–Expansion–Evaporator	1	
77	UD.4206	CLIP–Expansion Valve	1	
78	UD.4207	BRACKET–Clip–Expansion Valve	1	
79	UA.102/Z	BOLT–Clip and Bracket	2	
80	UA.1251/Z	WASHER–Plain–Bolt	2	
81	UA.301/Z	NUT–Bolt	2	
82	UD.4205	CLIP–Suction Pipe–Evaporator	1	
83	UD.4207	BRACKET–Clip–Suction Pipe	1	
84	UA.102/Z	BOLT–Clip and Bracket	2	
85	UA.1251/Z	WASHER–Plain–Bolt	2	
86	UA.301/Z	NUT–Bolt	2	
87	UD.2365	ASSEMBLY–Mounting Channel–Evaporator Unit	2	
88	CS.30541/Z	SCREW–Channel Mounting	8	
89	UA.6101/Z	WASHER–Plain–Screw	8	
90	K.4006/Z	NUT–Screw	8	
91	UD.3499	BRACKET–Evaporator–Rear–LH	1	
92	UD.3500	BRACKET–Evaporator–Rear–RH	1	
93	UD.3505	BRACKET–Evaporator–Front–LH	1	
94	UD.3506	BRACKET–Evaporator–Front–RH	1	
95	UA.4251/Z	SCREW–Bracket–Front	4	
96	UA.102/Z	SETSCREW–Bracket–Front	4	
97	UA.6102/Z	WASHER–Plain–Setscrew	4	
98	UA.102/Z	SETSCREW–Bracket–Rear	8	
99	UA.6102/Z	WASHER–Plain–Setscrew	8	
100	UD.4163	ASSEMBLY–Blower Unit–LH	1	
101	UD.3503	BRACKET–Support–Inner	1	
102	UD.3504	BRACKET–Support–Outer	1	
103	UD.2141	NIPPLE–Motor Cable	1	
104	RD.7990	EYE–Cable	1	
105	RD.7589	SLEEVE–Cable Eye	1	
106	UD.4162	ASSEMBLY–Blower Unit–RH	1	
107	UD.3502	BRACKET–Support–Outer	1	
108	UD.3501	BRACKET–Support–Inner	1	
109	UD.2141	NIPPLE–Motor Cable	1	
110	RD.7990	EYE–Cable	1	
111	RD.7589	SLEEVE–Cable Eye	1	
112	UD.4226	BRACKET–Support–Inner Bracket–RH	1	
113	UD.4228	BRACKET–Support–Inner Bracket–LH	1	
114	UD.4227	PIECE–Distance–Outer Bracket	2	
115	UA.102/Z	BOLT–Blower Unit Mounting	2	
116	UA.104/Z	BOLT–Blower Unit Mounting	2	
117	UA.103/Z	BOLT–Blower Unit Mounting	4	
118	UA.6102/Z	WASHER–Plain	12	
119	UA.301/Z	NUT	4	
120	UD.4155	DUCT–Blower to Evaporator	2	
121	UD.4124	EVAPORATOR	1	
122	UD.4978	SWITCH–Thermostat	1	
123	CS.30141/Z	SCREW–Self Tapping–Thermostat	3	
124	UD.5399	DUCT–Outlet	1	
125	CS.31041/Z	SCREW–Outlet Duct to Evaporator	12	
126	UD.4157	SLEEVE–Duct to Blower Motor	2	
127	UD.4161	DUCT–Motor to Parcel Shelf	2	
128	UD.4159	SEAL–Outlet Duct to Parcel Shelf	2	
129	UD.4156	PLATE–Clamping–Seal	2	
130	CS.31041/Z	SCREW–Clamping Plate	8	
131	UD.4158	PLATE–Blanking–Parcel Shelf	2	
132	CS.31020/Z	SCREW–Blanking Plate	4	
133	RB.7370	SCREW–Duct to Parcel Shelf	6	
134	UD.4248	ASSEMBLY–Duct–Outlet	2	
135	UD.4223	ASSEMBLY–Shaft–Deflector	2	
136	UD.4208	FLAP–Deflector–Outlet Duct	2	
137	KB.7753/Z	SCREW–Flap	4	
138	K.4401/Z	WASHER–Plain–Screw	8	
139	K.4152/Z	NUT–Screw	4	
140	UD.4212	SPRING–Deflector Shaft	2	
141	UD.3490	DUCT–Inlet–Evaporator	1	

Items marked † are not supplied as individual parts

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
142	UD.3489	ASSEMBLY–Clamping Plate–Inlet Duct	1	
143	CS.30564/Z	SCREW–Anti-Drum Panel–Inner	8	
144	UD.5123	ASSEMBLY–Filter and Frame	1	
145	UD.3375	GRILLE–Inlet	2	
146	CS.32401/R	TACK–Inlet Duct to Anti-Drum Panel	16	
		REFRIGERANT–Arcton 6–6 lbs.		} Alternatives.
		REFRIGERANT–Freon 12–6 lbs.		
		REFRIGERANT–Icseon 122–6 lbs.		

Ref.	Part No.	Description	No. off	Remarks


Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

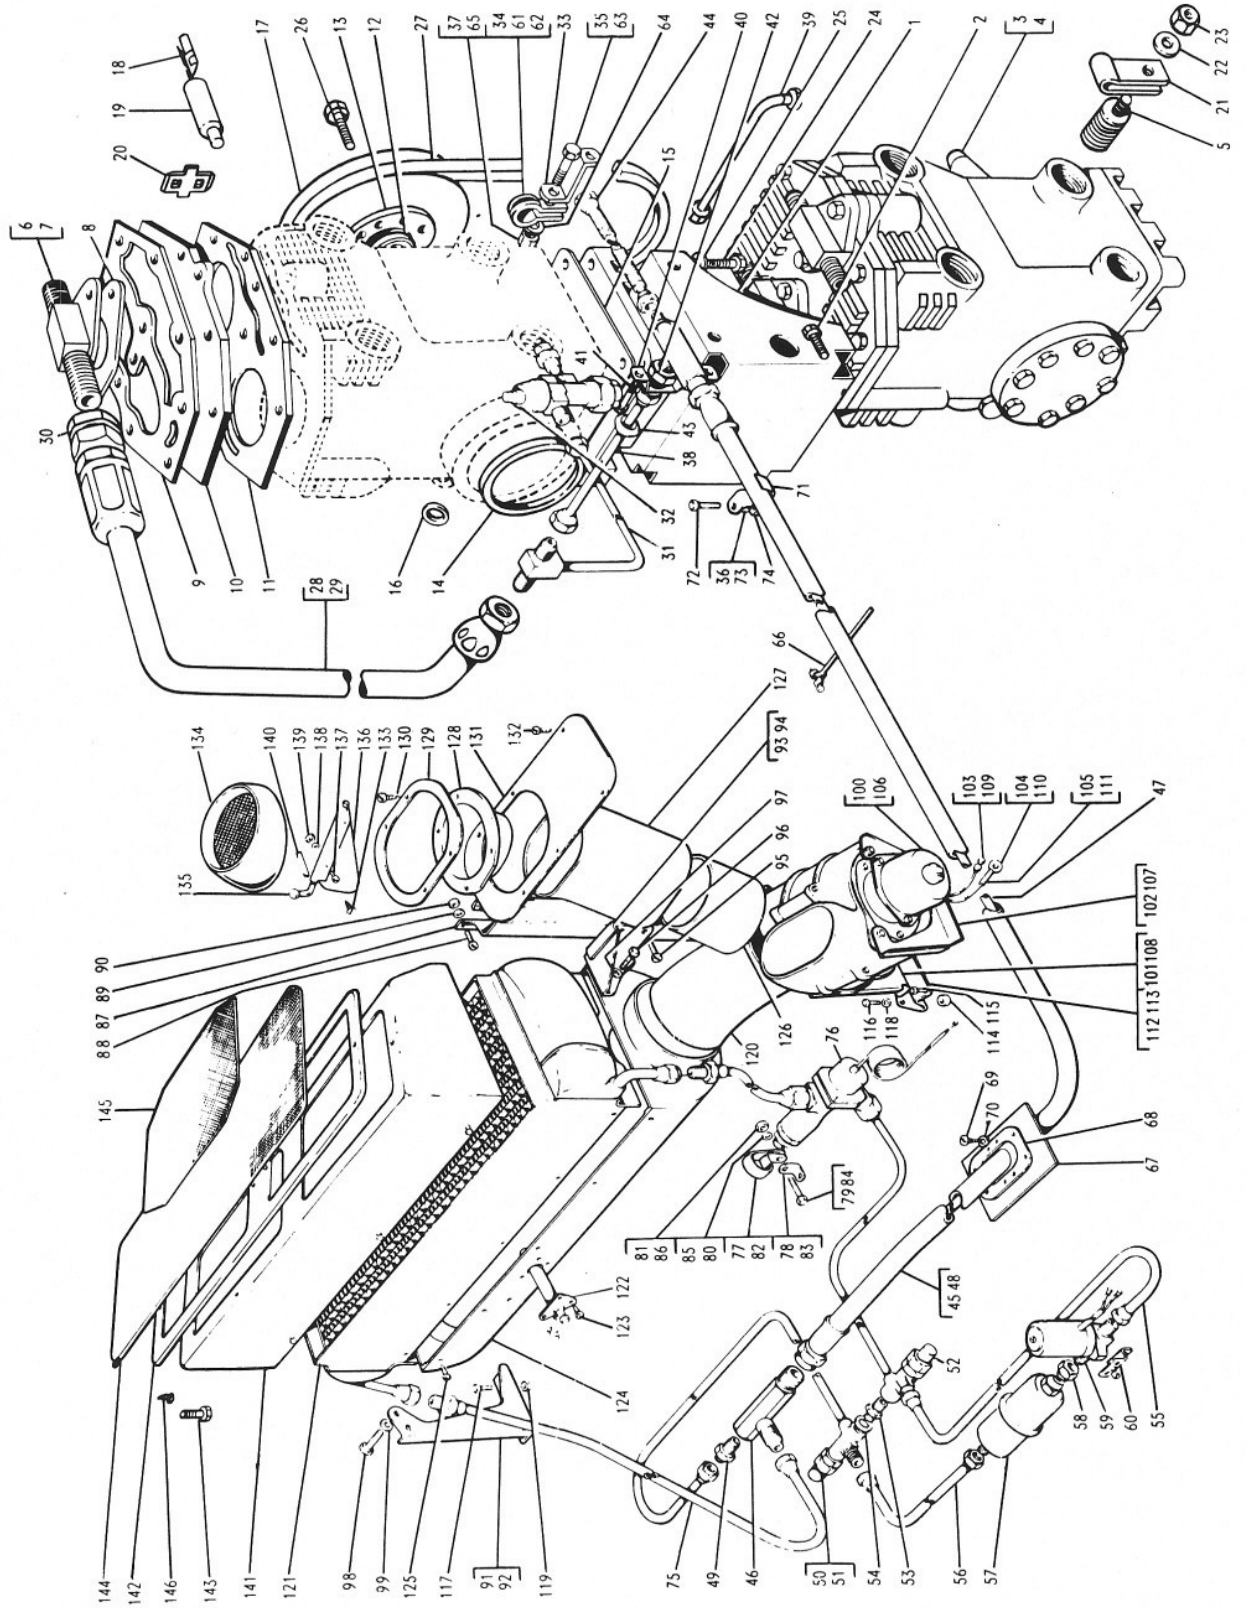

AIR CONDITIONING—BOOT REFRIGERATION—
UNIT AND COMPRESSOR

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UE.8266	ASSEMBLY–Bracket–Compressor Mounting	1	
2	UA.154/Z	SETSCREW–Bracket to Cylinder Head	3	
3	UE.9547	ASSEMBLY–Compressor	1	
4	UE.8268	COMPRESSOR–York Type A.209	1	
5	UE.9528	STUD–Stepped–Cable Clip	1	
6	CD.1787	VALVE–Service	1	
7	CD.1788	VALVE–Service	1	
8	CD.1789	GASKET–Service Valve	2	
9	CD.1790	GASKET–Top Head to Valve Plate	1	
10	CD.1796	ASSEMBLY–Valve	2	
11	CD.1798	GASKET–Valve Plate	1	
12	CD.1802	SEAL–Crankshaft	1	Not required
13	CD.1801	GASKET–Seal Plate	1	on Cars
14	CD.1805	RING–'O'–Cover Plate	1	destined for
15	CD.1806	GASKET–Bottom Plate	1	U.S.A. and Canada.
16	CD.1807	RING–'O'–Oil Screw	1	
17	UE.9509	ASSEMBLY–Clutch–Electro–Lock Type 28A.	1	
18	UD.5406	CONNECTOR–Compressor	1	
19	UD.6119	SLEEVE–Connector	1	
20	UD.6074	BLADE–Lucar	1	
21	UD.3364	CLIP–Compressor Clutch Cable	1	
22	K.4404/Z	WASHER–Plain–Stud–Cable Clip	1	
23	K.4006/Z	NUT–Stud–Cable Clip	1	
24	RE.22669	SETSCREW–Compressor to Bracket	4	
25	UA.1253/Z	WASHER–Plain–Setscrew	3	
26	UA.106/Z	BOLT–Distance Piece–Brush Gear–Compressor	2	
27	UE.5629	ASSEMBLY–'V' Belts–Crankshaft	1	
28	UD.8061	HOSE–Flexible–Compressor to 3 way Junction	1	
29	UD.5742	ASSEMBLY–Pipe–Control Valve to Suction Line	1	
30	UD.5036	VALVE–Control–Danfoss	1	
31	UD.5481	BRACKET–Support–Control Valve to Valance Plate	1	
32	RE.19626	CLIP	1	
33	UA.1501/Z	BOLT	1	
34	UA.1251/Z	WASHER–Plain–Bolt	1	
35	K.4006/Z	NUT–Bolt	1	
36	UD.5683	ASSEMBLY–Pipe–Suction–Tee Piece–Manifold Pipe	1	123" W/Base Not Coachbuilt Car
37	UE.8078	BRACKET–Support–Flexible Hose	1	
38	UA.101/Z	SETSCREW–Bracket to Valance Plate	2	
39	UE.8079	NUT–Flexible Hose Support	1	
40	UD.1614	GROMMET–Pipe to Valance	1	
41	UD.5441	ASSEMBLY–Pipe–Liquid–Sill to Receiver	1	
42	UD.5727	HOSE–Flexible–Receiver to Evaporator	1	
43	UD.5729	HOSE–Flexible–Evaporator to Tee Junction	1	
44	UD.1803	STRAP–Hose	2	
45	UD.8270	CLIP–Hose	3	
46	UA.102/Z	SCREW–Clip	3	
47	UA.1251/Z	WASHER–Plain–Screw	3	
48	UA.301/Z	NUT–Screw	3	
49	UD.4150	UNION	1	
50	UD.4904	UNION	1	
51	UD.5391	ASSEMBLY–Servicing Valve	1	
52	UD.5393	ASSEMBLY–Body	1	
53	UD.5392	ASSEMBLY–Body	1	
54	UD.4015	UNION	1	
55	UD.4550	WASHER–Joint–Union	2	
56	UD.4150	UNION–Hose to Servicing Valve	1	
57	UD.5397	PIPE–Liquid–Solenoid to Servicing Valve	1	
58	UD.5396	PIPE–Liquid–Servicing Valve to Filter Drier	1	
59	UD.4989	DRIER–Filter–Danfoss	1	
60	UD.6159	UNION–Swivel	1	
61	UD.6175	VALVE–Solenoid–Danfoss	1	
62	UD.5401	BRACKET–Support–Solenoid Valve	1	
63	RE.16256	CLIP–Inlet to Solenoid Valve Pipe	2	
64	RE.19626	CLIP–Control Valve–Suction Line	1	
65	UA.1501/Z	BOLT–Clip	3	
66	K.4404/Z	WASHER–Plain–Bolt	3	
67	K.4006/Z	NUT–Bolt	3	
68	UR.1734	CLIP–Phial to Suction Line	3	
69	UB.2650	SEAL–Floor	1	
70	UB.2651	PLATE–Retaining–Floor Seal	1	
71	CS.31041/Z	SCREW–Retaining Plate	8	
72	K.4446/Z	WASHER–Plain–Screw	8	
73	UD.4274	CLIP–Manifold Pipe	8	
74	UA.102/Z	BOLT–Clip	8	
75	UA.1251/Z	WASHER–Plain–Bolt	8	
76	UA.301/Z	NUT–Bolt	8	
77	UD.4185	VALVE–Expansion–Evaporator	1	
78	UD.4206	CLIP–Expansion Valve	1	
79	UD.4207	BRACKET–Clip–Expansion Valve	1	
80	UA.102/Z	BOLT–Clip and Bracket	2	
81	UA.1251/Z	WASHER–Plain–Bolt	2	
82	UA.301/Z	NUT–Bolt	2	
83	UD.4206	CLIP–Suction Pipe–Evaporator	2	127" W/Base Cars.
84	UD.4904	UNION	1	127" W/Base Cars.
85	UD.4150	UNION	1	127" W/Base Cars.
86	UD.4207	BRACKET–Clip–Suction Pipe	1	
87	UA.102/Z	BOLT–Clip and Bracket	2	
88	UA.1251/Z	WASHER–Plain–Bolt	2	
89	UA.301/Z	NUT–Bolt	2	
90	UB.2365	ASSEMBLY–Mounting Channel–Evaporator Unit	2	
91	CS.30541/Z	SCREW–Channel Mounting	8	
92	UA.6101/Z	WASHER–Plain–Screw	8	
93	K.4006/Z	NUT–Screw	8	
94	UD.3499	BRACKET–Evaporator –Rear–LH	1	
95	UD.3500	BRACKET–Evaporator–Rear–RH	1	
96	UD.3505	BRACKET–Evaporator–Front–LH	1	
97	UD.3506	BRACKET–Evaporator–Front–RH	1	
98	UA.4251/Z	SCREW–Bracket–Front	4	
99	UA.102/Z	SETSCREW–Bracket–Front	4	
100	UA.6102/Z	WASHER–Plain–Setscrew	4	
101	UA.102/Z	SETSCREW–Bracket–Rear	8	
102	UA.6102/Z	WASHER–Plain–Setscrew	8	
103	UD.4163	ASSEMBLY–Blower Unit–LH	1	
104	UD.3503	BRACKET–Support–Inner	1	
105	UD.3504	BRACKET–Support–Outer	1	
106	UD.2141	NIPPLE–Motor Cable	1	
107	RD.7990	EYE–Cable	1	
108	RD.7589	SLEEVE–Cable Eye	1	
109	UD.4162	ASSEMBLY–Blower Unit–RH	1	
110	UD.3502	BRACKET–Support–Outer	1	
111	UD.3501	BRACKET–Support–Inner	1	
112	UD.2141	NIPPLE–Motor Cable	1	
113	RD.7990	EYE–Cable	1	
114	RD.7589	SLEEVE–Cable Eye	1	
115	UD.4226	BRACKET–Support–Inner Bracket–RH	1	
116	UD.4228	BRACKET–Support–Inner Bracket–LH	1	
117	UD.4227	PIECE–Distance–Outer Bracket	2	
118	UA.102/Z	BOLT–Blower Unit Mounting	2	
119	UA.104/Z	BOLT–Blower Unit Mounting	2	
120	UA.103/Z	BOLT–Blower Unit Mounting	4	
121	UA.6102/Z	WASHER–Plain	12	
122	UA.301/Z	NUT	4	
123	UD.4155	DUCT–Blower to Evaporator	2	
124	UD.4124	EVAPORATOR	1	
125	UD.4978	SWITCH–Thermostat	1	
126	CS.31041/Z	SCREW–Self Tapping–Thermostat	3	
127	UD.5399	DUCT–Outlet	1	
128	CS.31041/Z	SCREW–Outlet Duct to Evaporator	12	
129	UD.4157	SLEEVE–Duct to Blower Motor	2	
130	UD.4161	DUCT–Motor to Parcel Shelf	2	
131	UD.4159	SEAL–Outlet Duct to Parcel Shelf	2	
132	UD.4156	PLATE–Clamping–Seal	2	
133	CS.31041/Z	SCREW–Clamping Plate	8	
134	UD.4158	PLATE–Blanking–Parcel Shelf	2	
135	CS.31020/Z	SCREW–Blanking Plate	4	
136	RB.7370	SCREW–Duct to Parcel Shelf	6	
137	UD.4248	ASSEMBLY–Duct–Outlet	2	
138	UD.4223	ASSEMBLY–Shaft–Deflector	2	
139	UD.4208	FLAP–Deflector–Outlet Duct	2	
140	KB.7753/Z	SCREW–Flap	4	
141	K.4401/Z	WASHER–Plain–Screw	8	
142	K.4152/Z	NUT–Screw	4	
143	UD.4212	SPRING–Deflector Shaft	2	

Items marked † are not supplied as individual parts

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
144	UD.3490	DUCT–Inlet–Evaporator	1	
145	UD.3489	ASSEMBLY–Clamping Plate–Inlet Duct	1	
146	CS.30564/Z	SCREW–Anti-Drum Panel–Inner	8	
147	UD.5123	ASSEMBLY–Filter and Frame	1	
148	UD.3375	GRILLE–Inlet	2	
149	CS.32401/R	TACK–Inlet Duct to Anti-Drum Panel	16	
		REFRIGERANT–Freon 12–6 lbs.		} Alternative.
		REFRIGERANT–Arcton 6–6 lbs.		
		REFRIGERANT–Icseon 122–6 lbs.		

Ref.	Part No.	Description	No. off	Remarks

Items marked † are not supplied as individual parts


Silver Cloud II— SZD.347 Onwards.
Silver Cloud II, LWB—LCC.51 Onwards.

Bentley S.2— B.415.DV Onwards.
Bentley S.2, LWB— LBB.23 Onwards.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

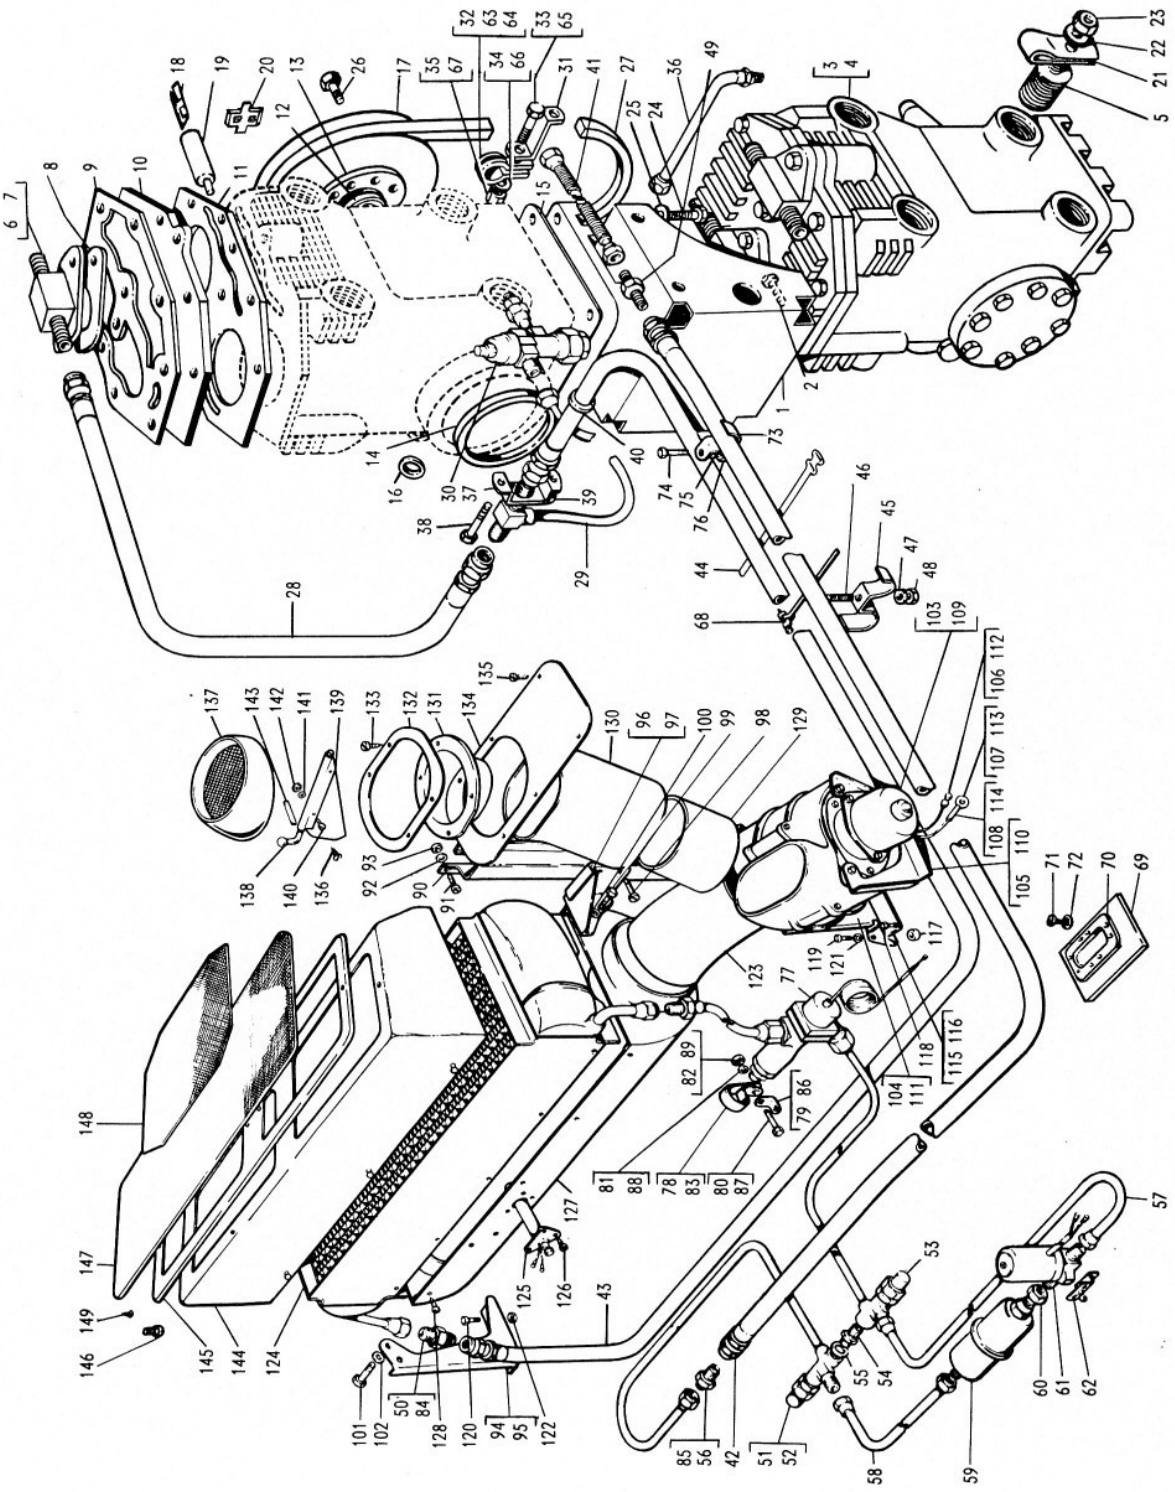

AIR CONDITIONING—BOOT REFRIGERATION—
UNIT AND COMPRESSOR

AIR CONDITIONING—BOOT REFRIGERATION—
BODY FITTINGS

L.17.—Amendment 2.

CHASSIS No's.

SILVER CLOUD II	From SRA.1
	From SPA.2
SILVER CLOUD II, LWB—	From LCA.1 to LCB.46 Incl.
	49, 50, 51, 53, 55,
	56, 57, 60, 61, 62,
	65 to 72 Incl.
	76, 78, 80, 81, 83,
	84, 85, 87, 88, 90.
BENTLEY S.2—	From B.1.AA
	From B.2.AM
BENTLEY S.2, LWB—	From LBA.1 to 22 Incl.
	24, 26.
BENTLEY CONTINENTAL S.2—	From BC.1.AR

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England

Ref.	Part No.	Description	No. off	Remarks
	UB.2654	BODY (Less Doors)	1	123" W/Base Cars, not Coachbuilt, also 127" W/Base Park Ward Cars.
1	UE.7807	ASSEMBLY–Valance Plate–RH	1	Silver Cloud
2	UE.8105	ASSEMBLY–Valance Plate–RH	1	Bentley Not Continental.
3	UE.8376	ASSEMBLY–Valance Plate–RH	1	Continental.
4	UE.7891	BRACKET–Buffer–RH Valance Plate to Engine	1	
5	UE.7892	BUFFER	1	
6	UA.101/Z	SETSCREW–Bracket	2	
7	UA.1251/Z	WASHER–Plain	2	
8	UD.5360	GROMMET–Compressor Pipe to Evaporator	1	
9	UR.3998	BOLT–Bumper to Frame	2	
10	UB.3027	PANEL–Centre–Dash	1	127" W/Base Park Ward Cars.
11	UB.3026	PANEL–Centre–Dash	1	123" W/Base Cars not Coachbuilt, also 127" W/Base Cars without Division.
12	UR.5200	ASSEMBLY–Panel–Centre–Dash	1	127" W/Base Coachbuilt Cars.
13	UR.5253	PANEL–Inner Dash	1	127" W/Base Cars.
	UR.5254	SEAL–Plastic	1	Without
	UR.5255	SEAL–Rubber	1	Division.
14	UR.5711	ASSEMBLY–Panel–Inner Dash	1	123" W/Base Cars,
	UW.2625	SEAL–Plastic	1	Not
	UW.2626	SEAL–Rubber	1	Coachbuilt.
15	UD.2227	BRACKET–Mounting–Switch	1	123" W/Base Cars,
16	CS.34241/Z	SCREW–Mounting Bracket	3	also 127" W/Base Cars, without Division.
17	UR.3981	FELT–Centre–Dashboard	1	123" W/Base Cars, not Coachbuilt also 127" W/Base Park Ward Cars.
18	UW.2185	BOARD–Secondary–RH	1	RH Cars.
19	UW.2186	BOARD–Secondary–LH	1	LH Cars. 127" W/Base Cars without Division.
	UB.2655	PANEL–Sill–RH	1	123" W/Base Cars, not Coachbuilt also 127" W/Base Park Ward Cars.
20	UD.2961	BRACKET–Mounting–Fuel/Oil Switch	1	
21	CS.31333/Z	SCREW–Bracket	2	
22	UD.3553	SWITCH–3 Speed Blower	1	
23	UD.3450	PLATE–Adaptor–Switch	1	
24	UD.3462	ASSEMBLY–Picture Plate–Switch	1	
25	UD.3449	PLATE–Picture	1	
26	UD.1866	ESCUTCHEON	1	
27	UD.4700	KNOB–Switch	1	
28	UB.2504	BOW–Roof–Rear	1	123" W/Base Cars, not Coachbuilt also 127" W/Base Park Ward Cars.
29	UB.2505	BOW–Roof–'BC' Post	1	
30	UB.2473	PANEL–Insulating–Front	2	
31	UB.2476	PANEL–Insulating–Rear	2	
32	UB.2862	STRIP–Insulating–Roof	1	127" W/Base Cars. Not Coachbuilt.
33	UB.2049	ASSEMBLY–Heat Shield–Rear	1	
34	UB.2040	PLATE–Support–Heat Shield	1	
35	UB.2041	BRACKET–Heat Shield–Floor	2	
36	UB.2043	SHIELD–Heat–Floor–Rear	1	
37	UB.2045	SHIELD–Heat–Floor	1	
38	UB.2048	SHIELD–Heat–Floor–Centre	1	123" W/Base Cars. Not Coachbuilt.
39	UB.2769	SHIELD–Heat–Floor–Centre	1	127" W/Base Cars.
40	CS.31060/Z	SCREW–Heat Shields	88	
41	CS.31065/Z	SCREW–Heat Shields	11	
42	CS.31020/Z	SCREW–Heat Shields	6	
43	K.4404/Z	WASHER–Plain	17	
44	K.4401/Z	WASHER–Plain	2	
	UW.1660	MILLBOARD–Asbestos	1	
	UW.1661	MILLBOARD–Asbestos	1	
	UW.1662	WEBBING–Asbestos	1	
	UB.2367	ASSEMBLY–Rear End	1	123" W/Base Cars, not Coachbuilt also 127" W/Base Park Ward Cars.
45	UB.2647	PANEL–Parcel Shelf	1	127" W/Base Park Ward Cars.
46	UB.3544	ASSEMBLY–Parcel Shelf	1	
47	UW.2384	BOARD–Speaker–Parcel Shelf	1	
48	UD.5900	GRILLE–Speaker Board	1	123" W/Base Cars.
49	CS.31363/Z	SCREW–Speaker Board to Parcel Shelf	2	Not Coachbuilt.
50	CS.31605/Z	SCREW–Speaker to Board	4	
51	UW.2609	PANEL–Parcel Tray	1	
52	UW.1950	PANEL–Parcel Tray	1	127" W/Base Cars. Not Coachbuilt.
53	UW.1779	ASSEMBLY–Anti-Drum Panel–Parcel Tray–Inner	2	
54	UW.1946	PACKING–Depression–Parcel Tray	2	
55	UB.2479	INSULATION–Tonneau Side–Front	2	
56	UB.2480	INSULATION–Tonneau Side–Rear	2	
57	UB.2649	PANEL–Luggage Floor	1	123" W/Base Cars, not Coachbuilt also 127" W/Base Park Ward Cars.
58	UD.3167	SEAL–Drain	4	
59	UB.2507	ANGLE–Support–Trim Panel–Boot Floor	1	
60	CS.31040/Z	SCREW–Support Angle	23	
61	UB.2588	ASSEMBLY–Support Bracket–Trim Panel	2	
62	CS.30541/Z	SCREW–Support Bracket to Angle	4	
63	KC.170/Z	BOLT–Angle Support to Header Panel	13	
64	K.4404/Z	WASHER–Plain–Bolt	13	
65	K.4006/Z	NUT–Bolt	13	
66	UB.2418	ASSEMBLY–Trim–Header Panel–Luggage Compartment	1	
67	UW.1788	BOARD–Trim–Evaporator Unit–RH	1	
68	UW.2015	BOARD–Trim–Evaporator Unit–LH	1	
69	UB.2591	ANGLE–Trim Board	1	
70	CS.30602/SS	SCREW–Trim Board to Support Bracket	12	
71	CS.34324/E	WASHER–Cup–Screw	12	
72	CS.31203/SS	SCREW–Trim Board to Angle Support	22	
73	CS.34322/E	WASHER–Cup–Screw	22	
74	UW.1841	BOARD–Trim–Evaporator Unit	1	
75	UB.2590	INSULATION–Trim Board	1	
	UW.1815	PANEL–Rear–Wheelarch–LH	1	
	UW.1816	PANEL–Rear–Wheelarch–RH	1	
76	UB.2790	CURTAIN–Anti-Splash	1	
77	UB.2791	WIRE–Curtain	1	

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF


AIR CONDITIONING—BOOT REFRIGERATION—

BODY FITTINGS—

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

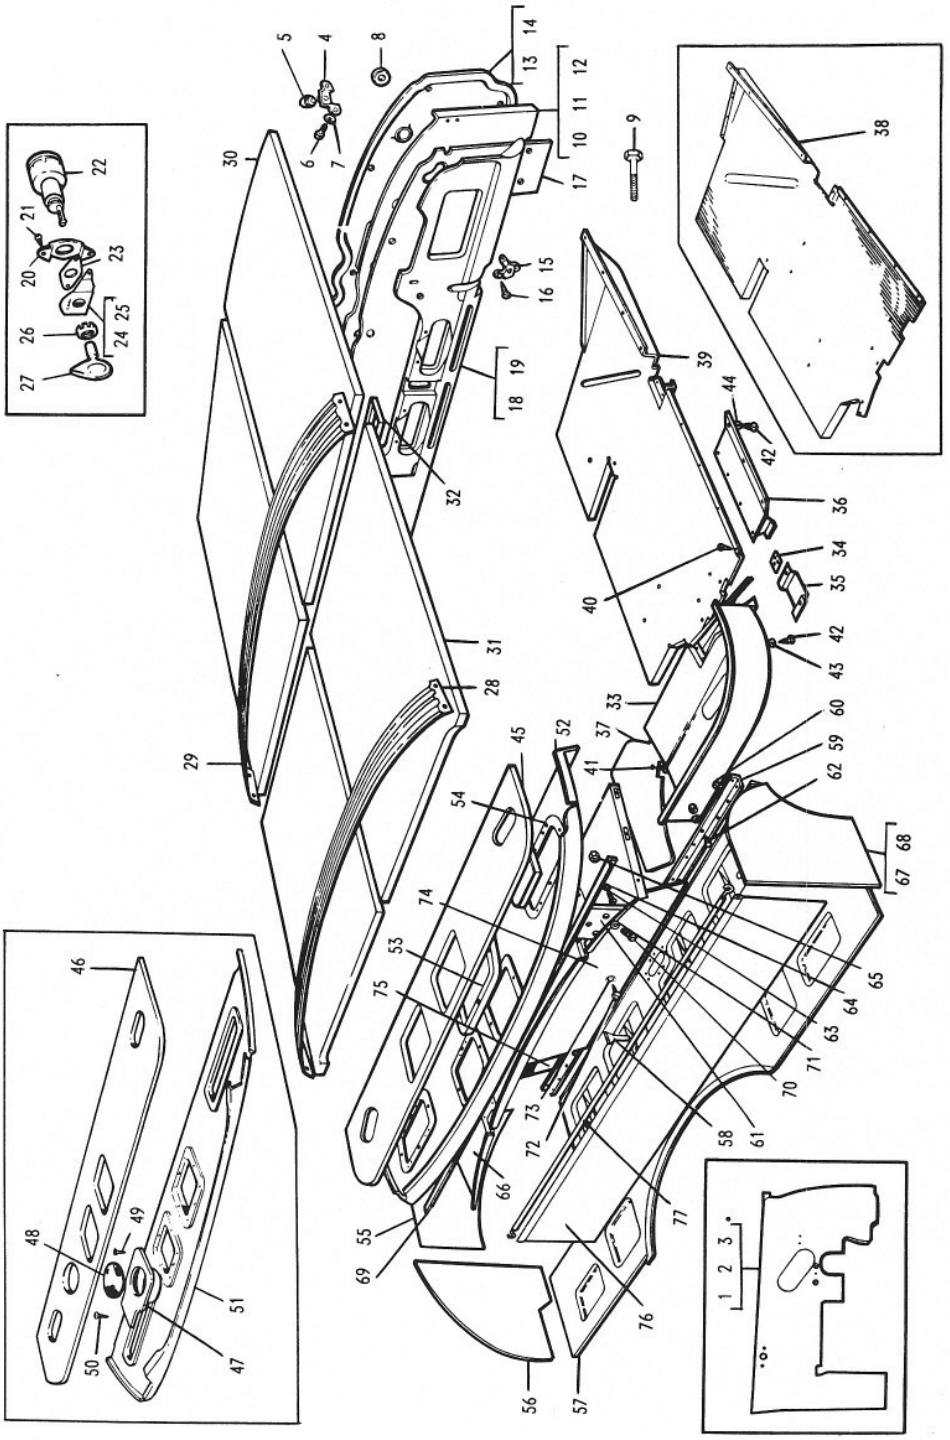

AIR CONDITIONING—BOOT REFRIGERATION—

BODY FITTINGS—

AIR CONDITIONING—BOOT REFRIGERATION—
BODY FITTINGS

L.17/1.

CHASSIS No's.

SILVER CLOUD II—	From SRA.1 From SPA.2
SILVER CLOUD II, LWB—	LCB. 47, 48, 52, 54, 58, 59, 63, 64, 73, 74, 75, 77, 79, 82, 86, 89, 91 Onwards.
BENTLEY S.2—	From B.1.AA From B.2.AM
BENTLEY S.2, LWB—	LBA.23, 25. LBB.1 Onwards.
BENTLEY CONTINENTAL S.2—	From BC.1.AR

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
	UB.2654	BODY–(Less Doors)	1	123" W/Base Cars not Coachbuilt, also 127" W/Base Park Ward Cars.
1	UE.7807	ASSEMBLY–Valance Plate–RH	1	Silver Cloud
2	UE.8105	ASSEMBLY–Valance Plate–RH	1	Bentley Not Continental.
3	UE.8376	ASSEMBLY–Valance Plate–RH	1	Continental.
4	UE.7891	BRACKET–Buffer–RH Valance Plate to Engine	1	
5	UE.7892	BUFFER	1	
6	UA.101/Z	SETSCREW–Bracket	2	
7	UA.1251/Z	WASHER–Plain	2	
8	UD.5360	GROMMET–Compressor Pipe to Evaporator	1	
9	UR.3998	BOLT–Bumper to Frame	2	
10	UB.3027	PANEL–Centre–Dash	1	127" W/Base Park Ward Cars.
11	UB.3026	PANEL–Centre–Dash	1	123" W/Base Cars not Coachbuilt, also 127" W/Base Cars without Division.
12	UR.5200	ASSEMBLY–Panel–Centre–Dash	1	127" W/Base Coachbuilt Cars.
13	UR.5253	PANEL–Inner Dash	1	127" W/Base Cars.
	UR.5254	SEAL–Plastic	1	Without
	UR.5255	SEAL–Rubber	1	Division.
14	UR.5711	ASSEMBLY–Panel–Inner Dash	1	123" W/Base Cars.
	UW.2625	SEAL–Plastic	1	Not
	UW.2626	SEAL–Rubber	1	Coachbuilt.
15	UD.2227	BRACKET–Mounting–Switch	1	123" W/Base Cars,
16	CS.34241/Z	SCREW–Mounting Bracket	3	also 127" W/Base Cars without Division.
17	UR.3981	FELT–Centre–Dashboard	1	123" W/Base Cars, not Coachbuilt also 127" W/Base Park Ward Cars.
18	UW.2185	BOARD–Secondary–RH	1	RH Cars.
19	UW.2186	BOARD–Secondary–LH	1	LH Cars.
				127" W/Base Cars without Division.
	UB.2655	PANEL–Sill–RH	1	123" W/Base Cars, not Coachbuilt also 127" W/Base Park Ward Cars.
20	UD.2961	BRACKET–Mounting–Fuel/Oil Switch	1	
21	CS.31333/Z	SCREW–Bracket	2	
22	UD.3553	SWITCH–3 Speed Blower	1	
23	UD.3450	PLATE–Adaptor–Switch	1	
24	UD.3462	ASSEMBLY–Picture Plate–Switch	1	
25	UD.3449	PLATE–Picture	1	
26	UD.1866	ESCUTCHEON	1	
27	UD.4700	KNOB–Switch	1	
28	UB.2504	BOW–Roof–Rear	1	123" W/Base Cars,
29	UB.2505	BOW–Roof–'BC' Post	1	not Coachbuilt also 127" W/Base Park Ward Cars.
30	UB.2473	PANEL–Insulating–Front	2	
31	UB.2476	PANEL–Insulating–Rear	2	
32	UB.2862	STRIP–Insulating–Roof	1	127" W/Base Cars. Not Coachbuilt.
33	UB.2049	ASSEMBLY–Heat Shield–Rear	1	
34	UB.2040	PLATE–Support–Heat Shield	1	
35	UB.2041	BRACKET–Heat Shield–Floor	2	
36	UB.2043	SHIELD–Heat–Floor–Rear	1	
37	UB.2045	SHIELD–Heat–Floor	1	
38	UB.2048	SHIELD–Heat–Floor–Centre	1	123" W/Base Cars. Not Coachbuilt.
39	UB.2769	SHIELD–Heat–Floor–Centre	1	127" W/Base Cars.
40	CS.31060/Z	SCREW–Heat Shields	88	
41	CS.31065/Z	SCREW–Heat Shields	11	
42	CS.31020/Z	SCREW–Heat Shields	6	
43	K.4404/Z	WASHER–Plain	17	
44	K.4401/Z	WASHER–Plain	2	
	UW.1660	MILLBOARD–Asbestos	1	
	UW.1661	MILLBOARD–Asbestos	1	
	UW.1662	WEBBING–Asbestos	1	
	UB.2367	ASSEMBLY–Rear End	1	123" W/Base Cars, not Coachbuilt also 127" W/Base Park Ward Cars.
45	UB.2647	PANEL–Parcel Shelf	1	127" W/Base Park Ward Cars, with Division.
46	UB.3544	ASSEMBLY–Parcel Shelf	1	123" W/Base Cars, not Coachbuilt also 127" W/Base Park Ward Cars, without Division.
47	UW.2384	BOARD–Speaker–Parcel Shelf	1	123" W/Base Cars,
48	UD.5900	GRILLE–Speaker Board	1	also 127" W/Base
49	CS.31363/Z	SCREW–Speaker Board to Parcel Shelf	2	Cars without
50	CS.31605/Z	SCREW–Speaker to Board	4	Division.
				Not Coachbuilt.
51	UW.2609	PANEL–Parcel Tray	1	123" W/Base Cars.
				Not Coachbuilt.
52	UW.1950	PANEL–Parcel Tray	1	With Division.
53	UW.2316	PANEL–Parcel Tray	1	Without Division.
				127" W/Base Cars'. not Coachbuilt.
54	UW.1779	ASSEMBLY–Anti-Drum Panel–Parcel Tray–Inner	2	
55	UW.1946	PACKING–Depression–Parcel Tray	2	
56	UB.2479	INSULATION–Tonneau Side–Front	2	
57	UB.2480	INSULATION–Tonneau Side–Rear	2	
58	UB.2649	PANEL–Luggage Floor	1	123" W/Base Cars, not Coachbuilt also 127" W/Base Park Ward Cars.
59	UD.3167	SEAL–Drain	4	
60	UB.2507	ANGLE–Support–Trim Panel–Boot Floor	1	
61	CS.31040/Z	SCREW–Support Angle	23	
62	UB.2588	ASSEMBLY–Support Bracket–Trim Panel	2	
63	CS.30541/Z	SCREW–Support Bracket to Angle	4	
64	KC.170/Z	BOLT–Angle Support to Header Panel	13	
65	K.4404/Z	WASHER–Plain–Bolt	13	
66	K.4006/Z	NUT–Bolt	13	
67	UB.2418	ASSEMBLY–Trim–Header Panel–Luggage Compartment	1	
68	UW.1788	BOARD–Trim–Evaporator Unit–RH	1	
69	UW.2015	BOARD–Trim–Evaporator Unit–LH	1	
70	UB.2591	ANGLE–Trim Board	1	
71	CS.30602/SS	SCREW–Trim Board to Support Bracket	12	
72	CS.34324/E	WASHER–Cup–Screw	22	
73	CS.31203/SS	SCREW–Trim Board to Angle Support	22	
74	CS.34322/E	WASHER–Cup–Screw	22	
75	UW.1841	BOARD–Trim–Evaporator Unit	1	
76	UB.2590	INSULATION–Trim Board	1	
	UW.1815	PANEL–Rear–Wheelarch–LH	1	
	UW.1816	PANEL–Rear–Wheelarch–RH	1	
77	UB.2790	CURTAIN–Anti-Splash	1	
78	UB.2791	WIRE–Curtain	1	


Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

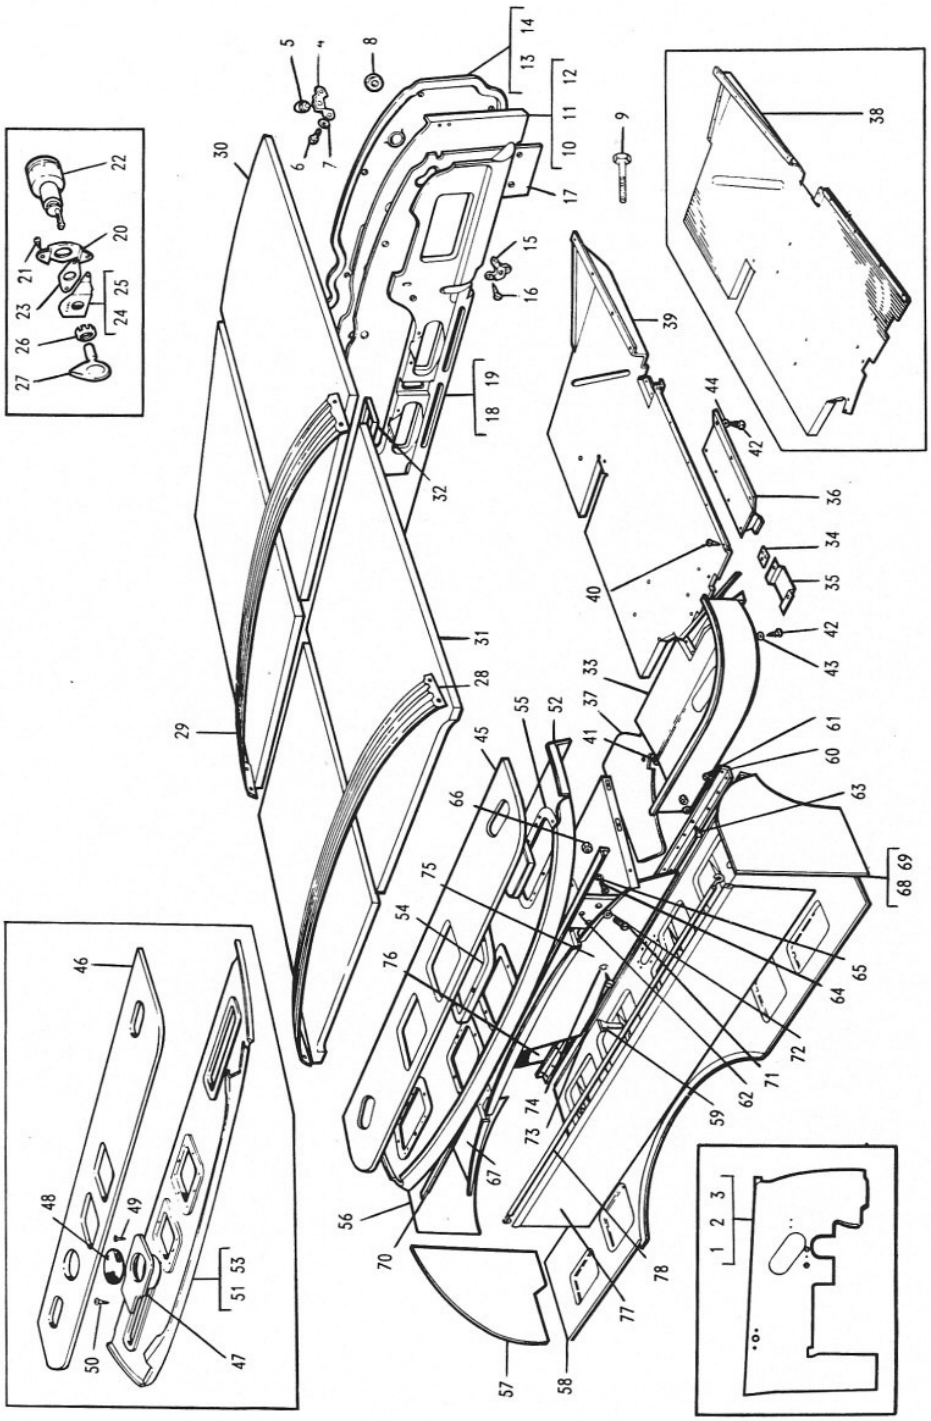

AIR CONDITIONING—BOOT REFRIGERATION—
BODY FITTINGS

AIR CONDITIONING—BOOT REFRIGERATION—

ELECTRICAL

L.18.—Amendment 1.

CHASSIS No's.

SILVER CLOUD II—	From SRA.1 From SPA.2
SILVER CLOUD II, LWB—	From LCA.1 to LCC.45 Incl.
BENTLEY S.2—	From B.1.AA From B.2.AM
BENTLEY S.2, LWB—	From LBA.1 to LBB.18 Incl.
BENTLEY CONTINENTAL S.2—	From BC.1.AR

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UD.5654	ASSEMBLY–Loom–Fridge Switch to Dash	1	Right Hand Drive Cars.
2	RF.6611	GROMMET	1	
3	UD.1568	GROMMET	1	
4	UD.2141	CONNECTOR–Snap	1	
5	UD.2142	CONNECTOR–Snap	4	
6	RD.3690	EYE–Cable	5	
7	UD.6072	CONNECTOR–Lucar	2	
8	UD.6119	SLEEVE–Lucar–Connector	2	
9	RD.7589	SLEEVE–Cable Eye	5	
10	UD.5656	ASSEMBLY–Loom–Extension Switch to Dash	1	123" W/Base Cars not Coachbuilt, also 127" W/Base Cars without Division.
11	RD.7589	SLEEVE–Cable Eye	5	
12	UD.1498	EYE–Cable	5	
13	UD.2141	CONNECTOR–Snap	1	
14	UD.2142	CONNECTOR–Snap	4	
15	UD.5655	ASSEMBLY–Loom–Fridge Switch to Dash	1	Left Hand Drive Cars.
16	RF.6611	GROMMET	1	
17	UD.1568	GROMMET	1	
18	UD.2141	CONNECTOR–Snap	1	
19	UD.2142	CONNECTOR–Snap	4	
20	RD.3690	EYE–Cable	5	
21	UD.6072	CONNECTOR–Lucar	2	
22	UD.6119	SLEEVE–Lucar Connector	2	
23	RD.7589	SLEEVE–Cable Eye	5	
24	UD.1807	CONNECTOR–3 Way	1	
25	RD.7050	CONNECTOR–Single	2	
26	UD.5429	ASSEMBLY–Loom–Division	1	127" W/Base Cars with Division. Coachbuilt.
27	RD.3690	EYE–Cable	9	
28	UD.1334	EYE–Cable	4	
29	UD.2295	EYE–Cable	1	
30	UD.2141	CONNECTOR–Snap	1	
31	UD.6072	CONNECTOR–Lucar	4	
32	UD.6119	SLEEVE–Lucar Connector	4	
33	RD.7589	SLEEVE–Cable Eye	13	
34	UD.5408	ASSEMBLY–Loom–Division	1	127" W/Base Cars with Division. Not Coachbuilt.
35	UD.6072	CONNECTOR–Lucar	6	
36	RD.3690	EYE–Cable	9	
37	UD.2142	NIPPLE	6	
38	UD.2141	NIPPLE	7	
39	RD.7990	EYE–Cable	1	
40	UD.6119	SLEEVE–Lucar Connector	6	
41	RD.7589	SLEEVE–Cable Eye	10	
42	UD.1614	GROMMET	1	
43	UD.1878	STIFFENER	1	
44	RD.7050	CONNECTOR	5	
45	UD.5342	CLIP–Cable–Division	2	
46	UD.8306	ASSEMBLY–Loom–Rear	1	123" W/Base Cars. Not Coachbuilt.
47	RD.3690	EYE–Cable	6	
48	RD.6081	EYE–Cable	1	
49	UD.2295	EYE–Cable	8	
50	RD.3344	EYE–Cable	1	
51	RD.7589	SLEEVE–Cable Eye	16	
52	UD.2141	NIPPLE	5	
53	UD.2142	NIPPLE	1	
54	UD.6072	CONNECTOR–Lucar	14	
55	UD.6119	SLEEVE–Lucar Connector	14	
56	UD.1878	PIECE–Stiffening	1	
57	UD.5352	ASSEMBLY–Loom–Rear	1	127" W/Base Cars. Not Coachbuilt.
58	RD.3690	EYE–Cable	6	
59	RD.6081	EYE–Cable	1	
60	UD.2141	NIPPLE	4	
61	UD.2142	NIPPLE	1	
62	UD.2295	EYE–Cable	8	
63	UD.6072	CONNECTOR–Lucar	13	
64	RD.3344	EYE–Cable	1	
65	RD.7589	SLEEVE–Cable Eye	16	
66	UD.6119	SLEEVE–Lucar Connector	13	
67	UD.1878	PIECE–Stiffening	1	
68	UD.4140	ASSEMBLY–Cable–Blower Motor	1	Other than Coachbuilt Cars.
69	UD.2141	NIPPLE	2	
70	RD.7050	CONNECTOR–Nipple	2	
71	RD.3096	CONNECTOR–Fuse Box	1	
72	UD.2906	CLIP–Latching–'C' Loom	1	
73	UD.4340	RELAY–Rear Window Demister–Fridge	1	
74	K.1952/Z	SCREW	2	
75	K.4404/Z	WASHER–Plain–Screw	2	
76	UD.6118	PIECE–Distance–Relay	2	
77	UR.3431	BRACKET–Mounting–Horn	1	Required when High Frequency Horns are fitted.
78	UA.102/Z	BOLT–Bracket	4	
79	UA.1251/Z	WASHER–Plain–Bolt	4	
80	UA.301/Z	NUT–Bolt	4	
81	UD.4340	RELAY–Rear Window Demister	1	
82	K.1907/Z	SCREW–Relay to Dash	2	
83	K.4404/Z	WASHER–Plain–Screw	2	
84	UD.5324	CABLE–Earth Relay	1	
85	RD.6081	EYE–Cable	1	
86	UD.6072	CONNECTOR–Lucar	1	
87	RD.7589	SLEEVE–Cable Eye	1	
88	UD.6119	SLEEVE–Lucar Connector	1	
89	UD.6147	BLADE–Terminal–Relay	6	
90	RD.5401	BOX–Fuse–Blower Motor	1	
91	K.1716/Z	SCREW–Fuse Box to Dashboard	2	
92	K.9003/Z	WASHER–Spring–Screw	2	
93	RD.5402	FUSE–Cartridge	2	
94	UD.5434	ASSEMBLY–Loom–Engine	1	127" W/Base Coachbuilt Cars.
95	RD.3690	EYE–Cable	4	
96	RD.6081	EYE–Cable	3	
97	UD.6072	CONNECTOR	3	
98	RD.3533	EYE–Cable	1	
99	RD.7990	EYE–Cable	1	
100	RD.3406	EYE–Cable	1	
101	UD.2751	EYE–Cable	1	
102	RD.7589	SLEEVE–Cable Eye	11	
103	UD.6119	SLEEVE–Connector	3	
104	UD.1123	ASSEMBLY–Base–Resistance	1	
105	UD.4672	ASSEMBLY–Frame–Resistance	2	
106	UD.4293	PIECE–Distance	2	
107	UD.4292	SCREW–Unit to Base	2	
108	K.4446/Z	WASHER–Plain–Screw	2	
109	K.1810/Z	SCREW–Unit Mounting	2	
110	K.4446/Z	WASHER–Plain–Screw	2	
111	UD.1123	ASSEMBLY–Base–Resistance	1	
112	UD.4673	ASSEMBLY–Frame–Resistance	2	
113	K.1826/Z	SCREW–Unit to Base	2	
114	K.4446/Z	WASHER–Plain–Screw	2	
115	K.1810/Z	SCREW–Unit Mounting	2	
116	K.4446/Z	WASHER–Plain–Screw	2	


Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

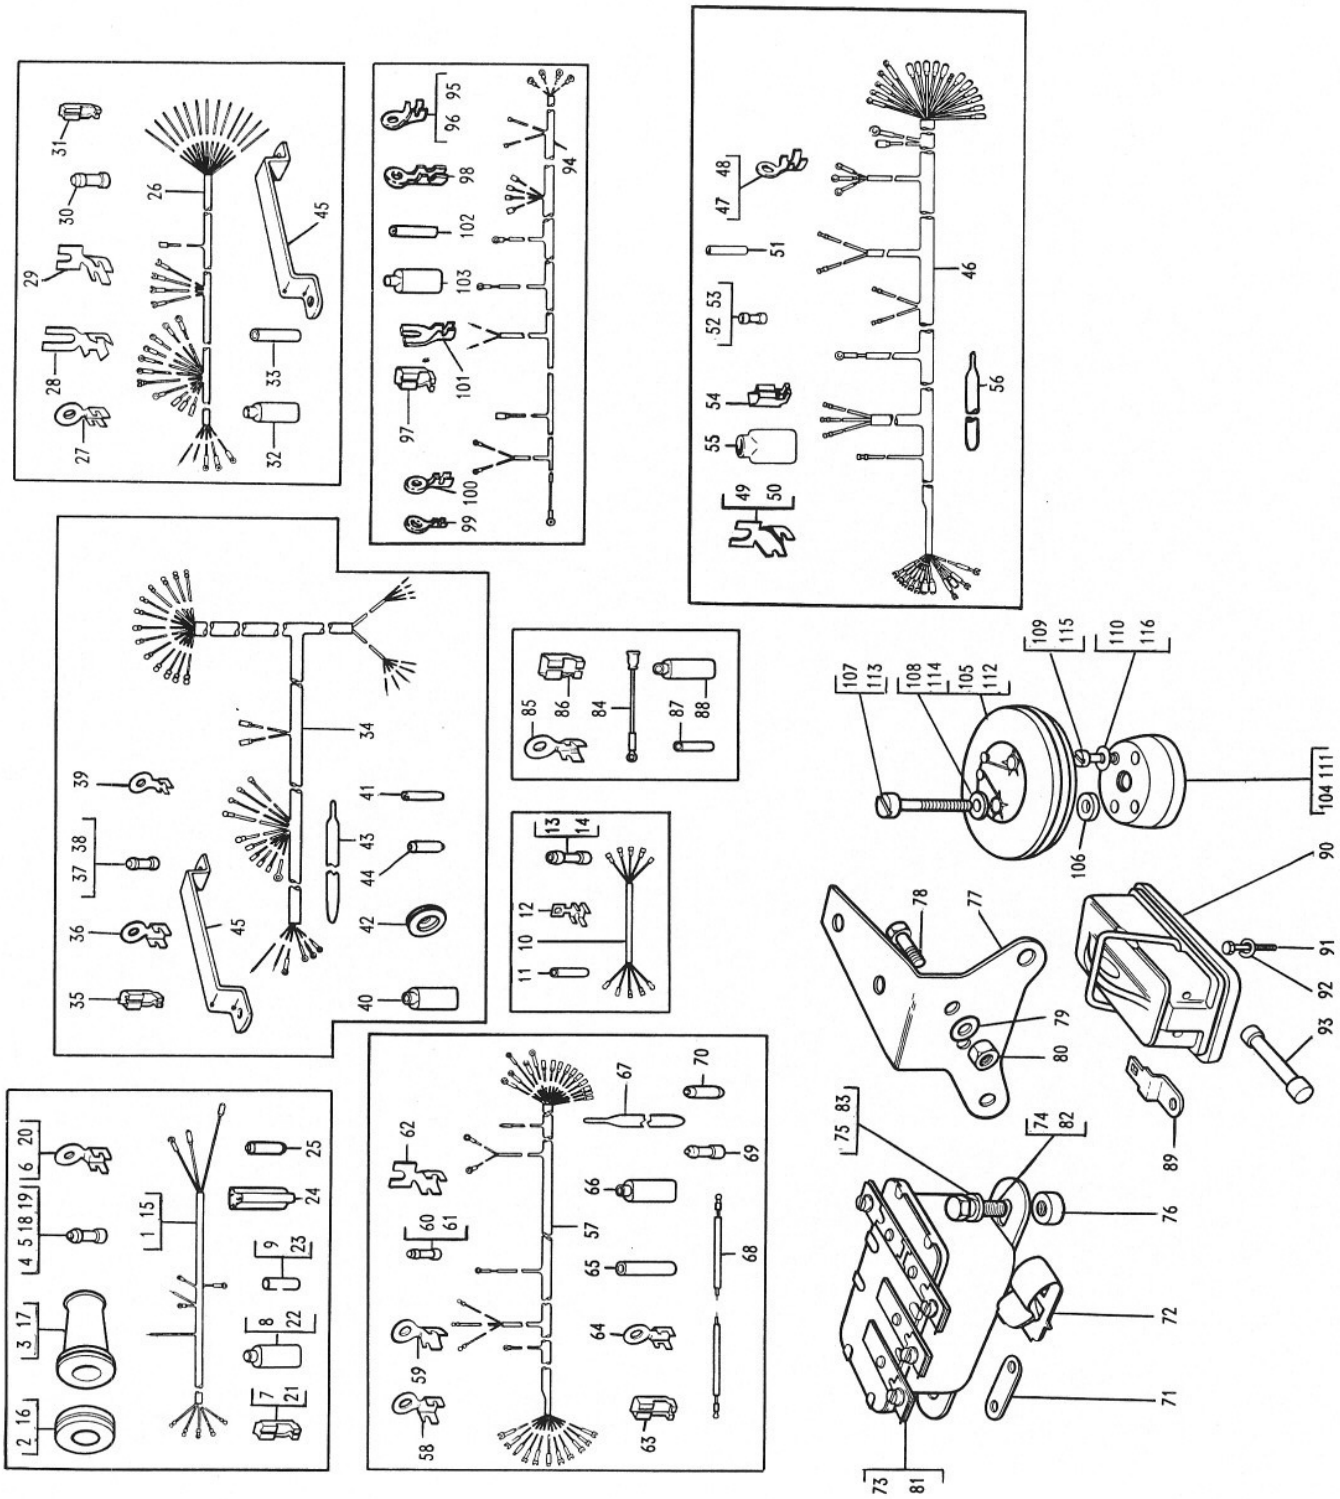

AIR CONDITIONING—BOOT REFRIGERATION—

ELECTRICAL

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UD.5654	ASSEMBLY–Loom–Fridge Switch to Dash	1	Right Hand Drive Cars.
2	RF.6611	GROMMET	1	
3	UD.1568	GROMMET	1	
4	UD.2141	CONNECTOR–Snap	1	
5	UD.2142	CONNECTOR–Snap	4	
6	RD.3690	EYE–Cable	5	
7	UD.6072	CONNECTOR–Lucar	2	
8	UD.6119	SLEEVE–Lucar	2	
9	RD.7589	SLEEVE–Cable Eye	5	
10	UD.5656	ASSEMBLY–Loom–Extension Switch to Dash	1	
11	RD.7589	SLEEVE–Cable Eye	5	123" W/Base Cars not Coachbuilt, also 127" W/Base Cars without Division.
12	UD.1498	EYE–Cable	5	
13	UD.2141	CONNECTOR–Snap	1	
14	UD.2142	CONNECTOR–Snap	4	
15	UD.5655	ASSEMBLY–Loom–Fridge Switch to Dash	1	
16	RF.6611	GROMMET	1	
17	UD.1568	GROMMET	1	
18	UD.2141	CONNECTOR–Snap	1	
19	UD.2142	CONNECTOR–Snap	4	Left Hand Drive Cars.
20	RD.3690	EYE–Cable	5	
21	UD.6072	CONNECTOR–Lucar	2	
22	UD.6119	SLEEVE–Lucar Connector	2	
23	RD.7589	SLEEVE–Cable Eye	5	
24	UD.1807	CONNECTOR–3 Way	1	
25	RD.7050	CONNECTOR–Single	2	
26	UD.5429	ASSEMBLY–Loom–Division	1	127" W/Base Cars with Division. Coachbuilt.
27	RD.3690	EYE–Cable	9	
28	UD.1334	EYE–Cable	4	
29	UD.2295	EYE–Cable	1	
30	UD.2141	CONNECTOR–Snap	1	
31	UD.6072	CONNECTOR–Lucar	4	
32	UD.6119	SLEEVE–Lucar Connector	4	
33	RD.7589	SLEEVE–Cable Eye	13	
34	UD.5408	ASSEMBLY–Loom–Division	1	
35	UD.6072	CONNECTOR–Lucar	6	
36	RD.3690	EYE–Cable	9	
37	UD.2142	NIPPLE	6	
38	UD.2141	NIPPLE	7	127" W/Base Cars with Division. Not Coachbuilt.
39	RD.7990	EYE–Cable	1	
40	UD.6119	SLEEVE–Lucar Connector	6	
41	RD.7589	SLEEVE–Cable Eye	10	
42	UD.1614	GROMMET	1	
43	UD.1878	STIFFENER	1	
44	RD.7050	CONNECTOR	5	
45	UD.5342	CLIP–Cable–Division	2	
46	UD.8306	ASSEMBLY–Loom–Rear	1	123" W/Base Cars. Not Coachbuilt.
47	RD.3690	EYE–Cable	6	
48	RD.6081	EYE–Cable	1	
49	UD.2295	EYE–Cable	8	
50	RD.3344	EYE–Cable	1	
51	RD.7589	SLEEVE–Cable Eye	16	
52	UD.2141	NIPPLE	5	
53	UD.2142	NIPPLE	1	
54	UD.6072	CONNECTOR–Lucar	14	
55	UD.6119	SLEEVE–Lucar Connector	14	
56	UD.1878	PIECE–Stiffening	1	
57	UD.4140	ASSEMBLY–Cable–Blower Motor	1	Other than Coachbuilt Cars.
58	UD.2141	NIPPLE	2	
59	RD.7050	CONNECTOR–Nipple	2	
60	RD.3096	CONNECTOR–Fuse Box	1	
61	UD.2906	CLIP–Latching–'C' Loom	1	
62	UD.4340	RELAY–Rear Window Demister–Fridge	1	
63	K.1952/Z	SCREW	2	
64	K.4404/Z	WASHER–Plain–Screw	2	
65	UD.6118	PIECE–Distance–Relay	2	
66	UR.3431	BRACKET–Mounting–Horn	1	Required when High Frequency Horns are Fitted.
67	UA.102/Z	BOLT–Bracket	4	
68	UA.1251/Z	WASHER–Plain–Bolt	4	
69	UA.301/Z	NUT–Bolt	4	
70	UD.4340	RELAY–Rear Window Demister	1	
71	K.1907/Z	SCREW–Relay to Dash	2	
72	K.4404/Z	WASHER–Plain–Screw	2	
73	UD.5324	CABLE–Earth Relay	1	
74	RD.6081	EYE–Cable	1	
75	UD.6072	CONNECTOR–Lucar	1	
76	RD.7589	SLEEVE–Cable Eye	1	
77	UD.6119	SLEEVE–Lucar Connector	1	
78	UD.6147	BLADE–Terminal–Relay	6	
79	RD.5401	BOX–Fuse–Blower Motor	1	
80	K.1716/Z	SCREW–Fuse Box to Dashboard	2	
81	K.9003/Z	WASHER–Spring–Screw	2	
82	RD.5402	FUSE–Cartridge	2	
83	UD.5434	ASSEMBLY–Loom–Engine	1	127" W/Base Coachbuilt Cars.
84	RD.3690	EYE–Cable	4	
85	RD.6081	EYE–Cable	3	
86	UD.6072	CONNECTOR	3	
87	RD.3533	EYE–Cable	1	
88	RD.7990	EYE–Cable	1	
89	RD.3406	EYE–Cable	1	
90	UD.2751	EYE–Cable	1	
91	RD.7589	SLEEVE–Cable Eye	11	
92	UD.6119	SLEEVE–Connector	3	
93	UD.1123	ASSEMBLY–Base–Resistance	1	
94	UD.4672	ASSEMBLY–Frame–Resistance	2	
95	UD.4293	PIECE–Distance	2	
96	UD.4292	SCREW–Unit to Base	2	
97	K.4446/Z	WASHER–Plain–Screw	2	
98	K.1810/Z	SCREW–Unit Mounting	2	
99	K.4446/Z	WASHER–Plain–Screw	2	
100	UD.1123	ASSEMBLY–Base–Resistance	1	
101	UD.4673	ASSEMBLY–Frame–Resistance	2	
102	K.1826/Z	SCREW–Unit to Base	2	
103	K.4446/Z	WASHER–Plain–Screw	2	
104	K.1810/Z	SCREW–Unit Mounting	2	
105	K.4446/Z	WASHER–Plain–Screw	2	

Silver Cloud II—From SRA.1
From SPA.2

Bentley S.2—From B.1.AA
From B.2.AM

Silver Cloud II, LWB—From LCC.46 Onwards

Bentley S.2, LWB—From LBB.19 Onwards.


Bentley Continental S.2—From BC.1.AR

Items marked † are not supplied as individual parts

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

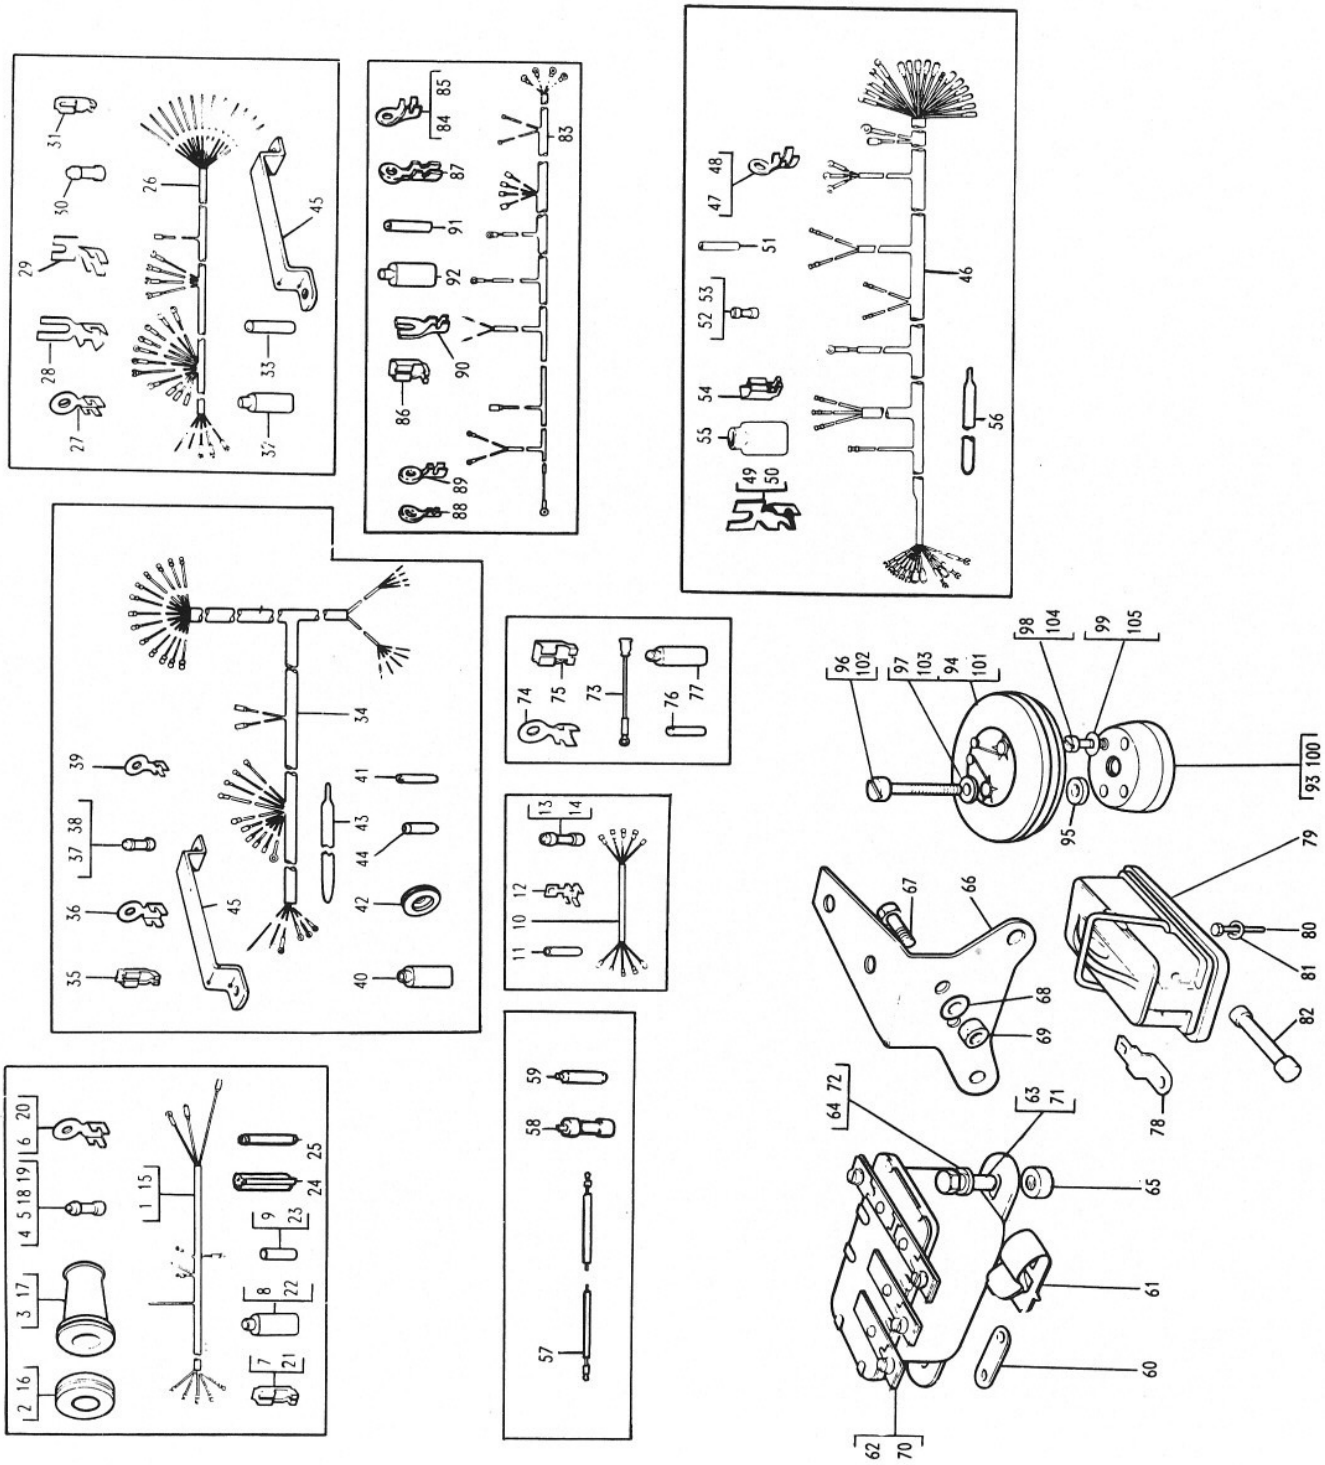

AIR CONDITIONING—BOOT REFRIGERATION—


ELECTRICAL

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England.

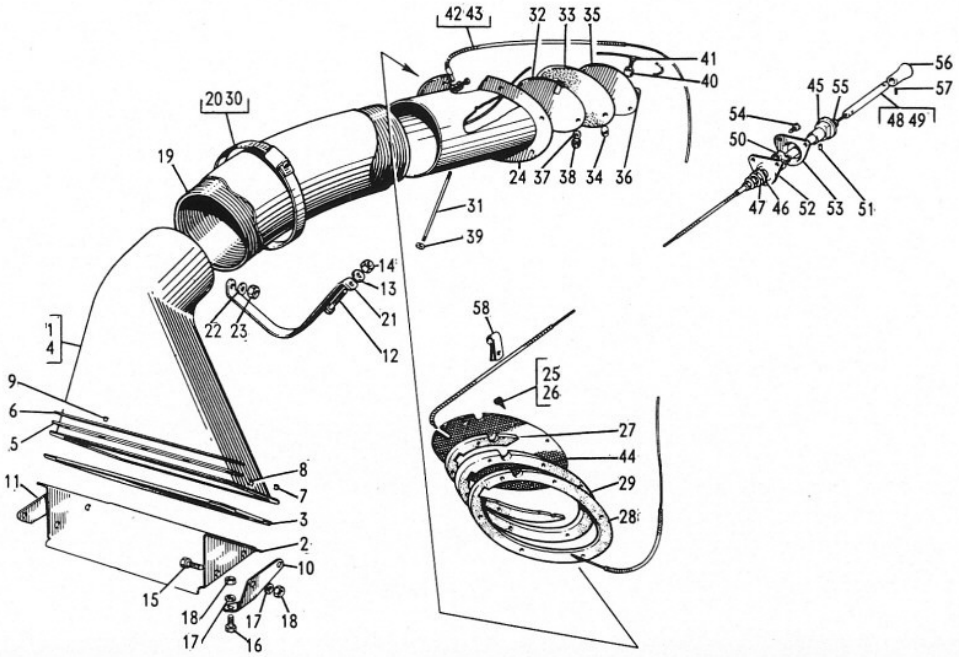

Ref.	Part No.	Description	No. off	Remarks
1	UG.5999	ASSEMBLY–Front Intake–Fresh Air–LH	1	
2	UD.1597	INTAKE–Front	1	
3	UD.2468	FILTER–Intake	1	
4	UD.5906	DUCT–Intake	1	
5	UD.1175	STRIP–Trapping	1	
6	UD.1176	STRIP–Sealing	1	
7	UD.2463	RIVET–Filter	5	
8	KB.13870/Z	RIVET–Filter	6	
9	UD.2467	RIVET–Filter	5	
10	UD.1596	BRACKET–Support–Intake–Outer	1	
11	UD.1595	BRACKET–Support–Intake–Inner	1	
12	UA.102/Z	BOLT–Support Bracket to Wing Stay	1	
13	UA.1251/Z	WASHER–Plain–Bolt	1	
14	UA.301/Z	NUT–Bolt	1	
15	UA.102/Z	BOLT–Support Bracket	6	
16	UA.103/Z	BOLT–Support Bracket	1	
17	UA.1251/Z	WASHER–Plain–Bolt	8	
18	UA.301/Z	NUT–Bolt	7	
19	UD.8080	TUBE–Flexible–Copex	1	
	UD.8024	POLYURATHENE	1	
20	RE.5601	CLIP–Jubilee	1	
21	UD.5953	CLIP–Intake to Wing Stay	1	
22	K.4404/Z	WASHER–Plain–Clip to Valance Plate	1	
23	K.4307/Z	NUT–Clip to Valance Plate	1	
24	UD.5912	ASSEMBLY–Duct–Fresh Air Intake–Front Compartment	1	
25	CS.31062/Z	SCREW–Sheet Metal–Duct to Side Panel	2	
26	CS.31064/Z	SCREW–Sheet Metal–Duct to Side Panel	4	
27	UD.5901	PIECE–Packing–Duct to Side Panel	1	Required on Cars, with Depression in LH Side Panel.
28	UD.5916	SEAL–Duct to Side Panel	1	
29	UD.8006	SEAL–Duct to Side Panel	1	Required on Cars without Depression in LH Side Panel.
30	RE.5601	CLIP–Jubilee	1	
31	UD.5913	PIVOT–Flap–Intake Duct	1	
32	UD.5944	ASSEMBLY–Plate–Pivot Bracket–Butterfly	1	
33	UD.5947	SEAL–Butterfly Valve	1	
34	UD.5915	PIECE–Distance–Seal	2	
35	UD.5943	ASSEMBLY–Plate and Cable Bracket–Butterfly	1	
36	CS.30542/Z	SCREW–Binding Head–Butterfly Valve	2	
37	K.4404/Z	WASHER–Plain–Screw	2	
38	K.4307/Z	NUT–Screw	2	
39	K.4401/Z	WASHER–Plain–Flap Pivot	4	
40	UD.5973	NIPPLE–Solderless–Cable	1	
41	UD.5387	SCREW–Socket Head–Cable	2	
42	UD.5949	ASSEMBLY–Cable–LH	1	Left Hand Cars.
43	UD.5950	ASSEMBLY–Cable–RH	1	Right Hand Cars.
44	UD.5945	GRILLE–Outlet	1	
45	UD.8067	GUIDE–Control Slide	1	
46	UA.1254/Z	WASHER–Plain–Control Guide	1	
47	UA.354/Z	NUT–Control Guide	1	
48	UD.5951	ASSEMBLY–Control Slide–LH	1	Left Hand Cars.
49	UD.5952	ASSEMBLY–Control Slide–RH	1	Right Hand Cars.
50	UD.3653	CLIP–Spring–Control Slide	1	
51	UD.3651	PLUNGER–Locating	1	
52	UD.5908	PLATE–Mounting–Control	1	
53	UD.5909	PLATE–Mounting–Control	1	
54	CS.31060/Z	SCREW–Mounting Plate	2	
55	UD.5402	BUFFER–Knob–Control	1	
56	UD.5956	KNOB–Control	1	
57	UD.5387	SCREW–Control Knob	1	
58	UD.3364	CLIP–Control Cable	3	Right Hand Cars.

Items marked † are not supplied as individual parts

Silver Cloud II—SXC.1 Onwards

Bentley S.2—B.2.CU Onwards

SECTION M

FRAME.

Containing :—

Group 1. Framemakers Assembly.

„ 2. Frame Fittings.

„ 3. Exhaust Fittings.

„ 4. Undersheets.

FRAME—

FRAME MAKERS ASSEMBLY

M.1.—Amendment 1.

CHASSIS No's.

SILVER CLOUD II—	From—	SPA.1 / SRA.2 to SYD.48 Incl.; SYD.52 to 62 Incl.
SILVER CLOUD II. LWB	From—	LCA.1
BENTLEY S.2	From—	B.1.AA / B.2.AM to B.502.CU Incl.
BENTLEY S.2 LWB—	From—	LBA.1
BENTLEY CONTINENTAL S.2—	From—	BC.1.AR to BC.2.CZ Incl.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England

Ref.	Part No.	Description	No. off	Remarks
1	UR.4650	FRAME MAKERS ASSEMBLY	1	123" W/Base Cars not Park Ward Continental, or Coachbuilt Cars for Mulliner, J. Young and Hooper.
2	UR.4994	FRAME MAKERS ASSEMBLY	1	Park Ward Continental Cars.
3	UR.4706	FRAME MAKERS ASSEMBLY	1	127" W/Base Cars.
4	UR.4743	FRAME MAKERS ASSEMBLY	1	All Drophead Cars, except Park Ward Continental. All Coachbuilt Saloons for Mulliner, J. Young and Hooper.
5	UR.4993	FRAME MAKERS ASSEMBLY	1	Park Ward Drophead Continental Cars.
6	UR.4794	† ASSEMBLY–Front Pan	1	
7	UR.1586	STUD	1	
8	UR.2462	STUD	4	
9	UR.3534	PLATE–Support–Forward–Shock Damper	2	
10	UR.3326	PLATE–Support–Rear–Shock Damper	2	
11	UR.2452	BRACKET–Centre–Steering Lever	1	
12	UR.2496	PLATE–Side–Inner–Bumper–Support Bracket	2	
13	UR.2501	TUBE–Distance–Bumper Support Bracket	4	
14	UR.2495	PLATE–Top–Bumper Support Bracket	2	
15	UR.2497	PLATE–Side–Outer–Right Hand Support Bracket	1	
16	UR.2498	PLATE–Side–Outer–Left Hand Support Bracket	1	
17	UR.2499	PLATE–Bottom–Right Hand Support Bracket	1	
18	UR.2500	PLATE–Bottom–Left Hand Support Bracket	1	
19	UR.2503	STIFFENER–Outer–Support Bracket	2	
20	UR.2502	STIFFENER–Inner–Support Bracket	2	
21	UR.2567	STRIP–Tapping–Support Bracket	6	
22	UR.4725	PLATE–Support–Long–Horn Column	1	
23	UR.4726	PLATE–Support–Short–Horn Column	1	
24	UR.1230	ASSEMBLY–Bracket–Mounting–Petrol Pump	1	
25	UR.1287	ASSEMBLY–Plate–Attachment–Undersheet	2	
26	UR.2164	CLIP–Wiring	3	
27	UR.4975	PLATE–Support–Bellcrank Pivot	1	
28	UR.2566	PLATE–End Cover–Top–Front	1	
29	UR.365	PLATE–End Cover–Rear	1	
30	UR.363	TUBE–Distance–Rear	2	
31	UR.1432	TUBE–Anchorage–Brake Pedal Shaft	1	
32	UR.3168	BRACKET–Mounting–Stop Lamp Switch	1	
33	UR.2460	STUD–Support Stay–Undersheet	1	
34	UR.2462	STUD	18	
35	UR.2463	STUD–Long	11	
36	UR.2461	STUD–5 Way Junction	2	
37	UR.1510	BRACKET–Battery Earth Cable	1	
38	UR.2035	PLATE–Number	1	
39	UR.2462	STUD–Fulcrum Lever Stay	1	
40	UR.1287	ASSEMBLY–Plate–Attachment–Undersheet	2	
41	UR.2164	CLIP–Wiring	3	
42	UR.954	PLATE–Support–Bellcrank Pivot	1	
43	UR.2564	PLATE–End Cover–Top–Front	1	
44	UR.365	PLATE–End Cover–Rear	1	
45	UR.363	TUBE–Distance	2	
46	UR.1432	TUBE–Anchorage–Brake Pedal Shaft	1	
47	UR.2460	STUD	1	
48	UR.2461	STUD	3	
49	UR.2462	STUD	5	
50	UR.2035	PLATE–Number	1	
51	UR.2329	PLATE–Chassis Clip	1	
52	UR.4221	BRACKET–Mounting Arm–Steering Box–Front–LH	1	
53	UR.4222	BRACKET–Mounting Arm–Steering Box–Front–RH	1	
54	UR.4589	BRACKET–Engine Mounting–Front	2	
55	UR.4588	BRACKET–Engine Mounting–Front	2	
56	UR.4252	ASSEMBLY–Support Bracket–Steering Box–RH	1	
57	UR.4253	ASSEMBLY–Support Bracket–Steering Box–LH	1	
58	UR.4620	BRACKET–Rear–Engine Mounting–LH	1	
59	UR.4748	ASSEMBLY–Bracket–Rear Engine Mounting–RH	1	
60	UR.3583	CLIP–Support–Cable–Battery to Starter Solenoid Switch	1	
61	UR.4746	CLIP–Support–Cable–Battery to Solenoid Switch	1	
62	UR.4747	CLIP–Support–Cable–Battery to Solenoid Switch	1	
63	UR.4167	BRACKET–Control Linkage–LH	1	
64	UR.4619	BRACKET–Support–Fulcrum Lever–RH	1	
65	UR.805	BRACKET–Support–Gear Change–Operating Tube	1	
66	UR.4024	PLATE–Support–Brake–Bellcrank Lever–Lower	2	
67	UR.4025	PLATE–Support–Brake–Bellcrank Lever–Upper	2	
68	UR.6034	ASSEMBLY–Bracket–No. 1 Body Mounting–RH	1	123" W/Base Cars.
69	UR.6026	CHANNEL–Bottom–No. 1 Body Mounting Bracket –RH	1	
70	UR.5129	ASSEMBLY–Bracket–No. 1 Body Mounting–RH	1	127 W/Base Cars.
71	UR.4938	BRACKET–Mounting–Supplementary–RH	1	Coachbuilt Drophead Cars. Coachbuilt Saloons for Mulliner, J. Young and Hooper.
72	UR.1410	ASSEMBLY–Bracket–No. 1 Body Mounting–LH	1	
73	UR.1416	CHANNEL–Bottom–No. 1 Body Mounting Bracket–LH	1	
74	UR.4939	BRACKET–Mounting–Supplementary–LH	1	Coachbuilt Drophead Cars. Coachbuilt Saloons for Mulliner, J. Young and Hooper.
75	UR.4797	BRACKET–Mounting–Blower Unit–ACU	2	
76	UR.4696	ASSEMBLY–Plate–Attachment–Undersheet	1	
77	UR.1287	ASSEMBLY–Plate–Attachment–Undersheet	2	
78	UR.4931	ASSEMBLY–Plate–Attachment–Equaliser Tube	1	
79	UR.2857	PLATE–Support–Master Cylinder–Inner	1	
80	UR.201	PLATE–Centre	2	
81	UR.891	PLATE–Support–Adjustable On Stop	1	
82	UR.654	BRACKET–Anchor–Intermediate Hand Brake Linkage	1	
83	UR.1209	BRACKET–Off Stop	1	
84	UR.2887	PLATE–Attachment–Outer Support Plate–Rear	1	
85	UR.2829	BRACKET–Spring Attachment	1	
86	UR.2888	PLATE–Attachment–Outer Support Plate–Front	1	

Items marked † are not supplied as individual parts

FRAME—

FRAME MAKERS ASSEMBLY

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England

Ref.	Part No.	Description	No. off	Remarks
87	UR.4761	BRACKET–No. 2 Body Mounting–LH	1	
88	UR.6032	PLATE–Rear–No. 2 Body Mounting–RH	1	
89	UR.6033	PLATE–Front–No. 2 Body Mounting–RH	1	
90	UR.986	BRACKET–Body Mounting–Centre–RH	1	
91	UR.987	BRACKET–Body Mounting–Centre–LH	1	
92	UR.1206	ASSEMBLY–Bracket–Support–Prop. Shaft Centre Bearing	1	
93	UR.1649	ASSEMBLY–Side Plate–No. 3 Body Mounting Bracket	2	
94	UR.1650	ASSEMBLY–Side Plate–No. 3 Body Mounting Bracket	2	
95	UR.3305	BRACKET–Tie–No. 3 Body Mounting	4	
96	UR.4843	ASSEMBLY–Bracket–Front Anchorage–Rear Spring–LH	1	
97	UR.2462	STUD	2	
98	UR.4844	ASSEMBLY–Bracket–Front Anchorage–Rear Spring–RH	1	
99	UR.3439	BRACKET–Suspension Strip–Exhaust	1	
100	UR.1404	BRACKET–Mounting–Longitudinal 'Z' Bar	1	123" W/Base Cars.
101	UR.3798	BRACKET–Mounting–Longitudinal 'Z' Bar	1	127" W/Base Cars.
102	UR.4155	BRACKET–Mounting–Transverse 'Z' Bar	1	
103	UR.1020	HOUSING–Bump Rubber	2	
104	UR.1642	PLATE–Side–No. 4 Body Mounting Bracket–Front–RH	1	
105	UR.1640	PLATE–Side–No. 4 Body Mounting Bracket–Rear–RH	1	
106	UR.1639	PLATE–Side–No. 4 Body Mounting Bracket–Rear–LH	1	
107	UR.1641	PLATE–Side–No. 4 Body Mounting Bracket–Front–LH	1	
108	UR.482	ASSEMBLY–2nd Crossmember	1	123" W/Base Cars.
109	UR.480	† CROSSMEMBER–2nd–Front Half	1	123" W/Base Cars.
110	UR.481	† CROSSMEMBER–2nd–Rear Half	1	123" W/Base Cars.
111	UR.1210	BRACKET–Support–Exhaust Pipe	1	123" W/Base Cars.
112	UR.1207	BRACKET–Support–Petrol Tank	2	123" W/Base Cars.
113	UR.851	BRACKET–Attachment–Filter	1	123" W/Base Cars.
114	UR.2462	STUD	4	123" W/Base Cars.
115	UR.2164	CLIP–Wiring	7	123" W/Base Cars.
116	UR.4081	BRACKET–Earthing Strip	1	123" W/Base Cars.
117	UR.4941	ASSEMBLY–2nd Crossmember	1	127" W/Base Cars.
118	UR.3808	† CROSSMEMBER–2nd–Front Half	1	127" W/Base Cars.
119	UR.3909	† CROSSMEMBER–2nd–Rear Half	1	127" W/Base Cars.
120	UR.1210	BRACKET–Support–Exhaust Pipe	1	127" W/Base Cars.
121	UR.1207	BRACKET–Support–Petrol Tank	1	127" W/Base Cars.
122	UR.851	BRACKET–Attachment–Filter	1	127" W/Base Cars.
123	UR.2462	STUD	4	127" W/Base Cars.
124	UR.2164	CLIP–Wiring	7	127" W/Base Cars.
125	UR.4081	BRACKET–Earthing Strip	1	127" W/Base Cars.
126	UR.2463	STUD–Clip–Petrol Pipe	1	127" W/Base Cars.
127	UR.219	BRACKET–Rear Shackle	2	
128	UR.336	BRACKET–Support–Rear Shoe–Petrol Tank	4	
129	UR.350	ASSEMBLY–Carrier–Battery	1	
130	UR.323	PLATE–Stiffener–Sidemember to Battery Carrier	1	
131	UR.322	PLATE–Support–Sidemember to Battery Carrier	1	
132	UR.1022	BRACKET–Support–Rear Damper–Outer–RH	1	
133	UR.1023	BRACKET–Support–Rear Damper–Outer–LH	1	
134	UR.1651	ASSEMBLY–Support Plate–Rear Damper–Inner–RH	1	
135	UR.1652	ASSEMBLY–Support Plate–Rear Damper–Inner–LH	1	
136	UR.4780	PLATE–Reinforcement–Damper Mounting–Rear	2	
137	UR.2789	BRACKET–Brake Hose Support	1	
138	UR.1645	PLATE–Side–No. 6 Body Mounting Bracket–Rear–LH	1	
139	UR.1646	PLATE–Side–No. 6 Body Mounring Bracket–Rear–RH	1	
140	UR.1647	PLATE–Side–No. 6 Body Mounting Bracket–Forward–LH	1	
141	UR.1648	PLATE–Side–No. 6 Body Mounting Bracket–Forward–RH	1	
142	UR.2771	WASHER–Plug–Sidemember	2	
143	UR.2272	PLUG–Sidemember	2	
144	UR.1211	BRACKET–Support–Tail Pipe	1	
145	UR.1029	BRACKET–Rebound–LH	1	
146	UR.1076	BRACKET–Rebound–RH	1	
147	UR.1632	BRACKET–No. 5 Body Mounting–LH	1	
148	UR.1633	BRACKET–No. 5 Body Mounting–RH	1	
149	UR.982	BRACKET–Body Mounting–Rear–Centre	1	
150	UR.215	ASSEMBLY–Rear Cross Member–Tubular	1	123" W/Base Cars.
151	UR.3806	ASSEMBLY–Rear Cross Member–Tubular	1	127" W/Base Cars


Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

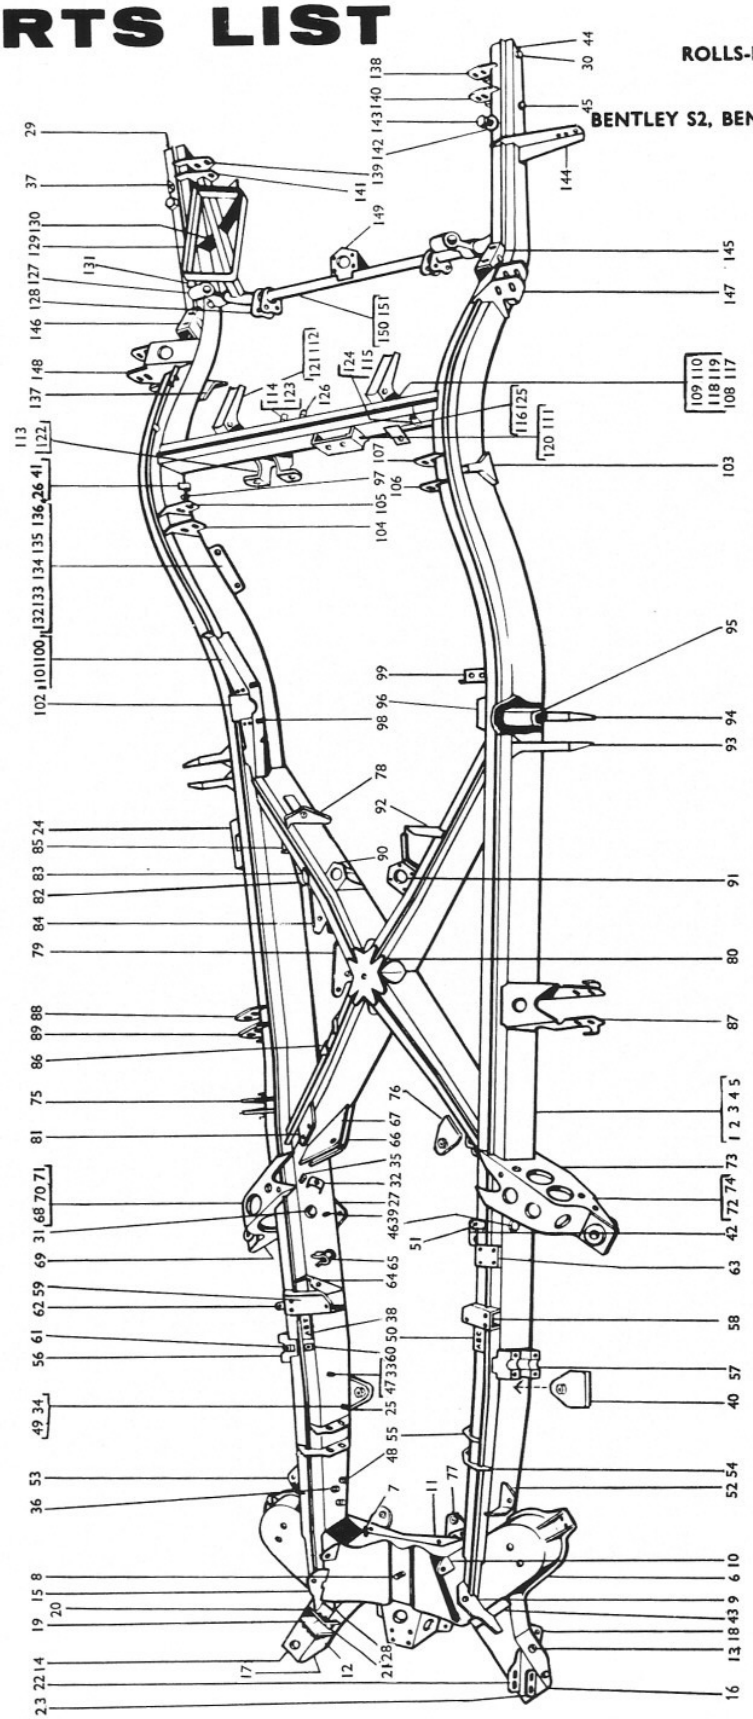

FRAME—

FRAME MAKERS ASSEMBLY

FRAME—

FRAME MAKERS ASSEMBLY

M.1/1.

SILVER CLOUD II—	From—	SYD.50 64 Onwards.
SILVER CLOUD II LWB—	From—	LCA.1 Onwards.
BENTLEY S.2—	From—	B.504.CU Onwards.
BENTLEY S.2 LWB—	From—	LBA.1 Onwards.
BENTLEY CONTINENTAL S.2—	From—	BC.4.CZ Onwards.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UR.4650	FRAME MAKERS ASSEMBLY	1	123" W/Base Cars not Park Ward Continental, or Coachbuilt Cars for Mulliner, J. Young and Hooper.
2	UR.4994	FRAME MAKERS ASSEMBLY	1	Park Ward Continental Cars.
3	UR.4706	FRAME MAKERS ASSEMBLY	1	127" W/Base Cars.
4	UR.4743	FRAME MAKERS ASSEMBLY	1	All Drophead Cars, except Park Ward Continental. All Coachbuilt Saloons for Mulliner, J. Young and Hooper.
5	UR.4993	FRAME MAKERS ASSEMBLY	1	Park Ward Drophead Continental Cars.
6	UR.4794	† ASSEMBLY–Front Pan	1	
7	UR.1586	STUD	1	
8	UR.2462	STUD	4	
9	UR.3534	PLATE–Support–Forward–Shock Damper	2	
10	UR.3326	PLATE–Support–Rear–Shock Damper	2	
11	UR.2452	BRACKET–Centre–Steering Lever	1	
12	UR.2496	PLATE–Side–Inner–Bumper Support Bracket	2	
13	UR.2501	TUBE–Distance–Bumper Support Bracket	4	
14	UR.2495	PLATE–Top–Bumper Support Bracket	2	
15	UR.2497	PLATE–Side–Outer–Right Hand Support Bracket	1	
16	UR.2498	PLATE–Side–Outer–Left Hand Support Bracket	1	
17	UR.2499	PLATE–Bottom–Right Hand Support Bracket	1	
18	UR.2500	PLATE–Bottom–Left Hand Support Bracket	1	
19	UR.2503	STIFFENER–Outer–Support Bracket	2	
20	UR.2502	STIFFENER–Inner–Support Bracket	2	
21	UR.2567	STRIP–Tapping–Support Bracket	6	
22	UR.4725	PLATE–Support–Long–Horn Column	1	
23	UR.4726	PLATE–Support–Short–Horn Column	1	
24	UR.1230	ASSEMBLY–Bracket–Mounting–Petrol Pump	1	
25	UR.1287	ASSEMBLY–Plate–Attachment–Undersheet	2	
26	UR.2164	CLIP–Wiring	3	
27	UR.4975	PLATE–Support–Bellcrank Pivot	1	
28	UR.2566	PLATE–End Cover–Top–Front	1	
29	UR.365	PLATE–End Cover–Rear	1	
30	UR.363	TUBE–Distance–Rear	2	
31	UR.1432	TUBE–Anchorage–Brake Pedal Shaft	1	
32	UR.3168	BRACKET–Mounting–Stop Lamp Switch	1	
33	UR.2460	STUD–Support Stay–Undersheet	1	
34	UR.2462	STUD	18	
35	UR.2463	STUD–Long	11	
36	UR.2461	STUD–5 Way Junction	2	
37	UR.1510	BRACKET–Battery Earth Cable	1	
38	UR.2035	PLATE–Number	1	
39	UR.2462	STUD–Fulcrum Lever Stay	1	
40	UR.1287	ASSEMBLY–Plate–Attachment–Undersheet	2	
41	UR.2164	CLIP–Wiring	3	
42	UR.954	PLATE–Support–Bellcrank Pivot	1	
43	UR.2564	PLATE–End Cover–Top–Front	1	
44	UR.365	PLATE–End Cover–Rear	1	
45	UR.363	TUBE–Distance	2	
46	UR.1432	TUBE–Anchorage–Brake Pedal Shaft	1	
47	UR.2460	STUD	1	
48	UR.2461	STUD	3	
49	UR.2462	STUD	5	
50	UR.2035	PLATE–Number	1	
51	UR.2329	PLATE–Chassis Clip	1	
52	UR.4221	BRACKET–Mounting Arm–Steering Box–Front–LH	1	
53	UR.4222	BRACKET–Mounting Arm–Steering Box–Front–RH	1	
54	UR.4589	BRACKET–Engine Mounting–Front	2	
55	UR.4588	BRACKET–Engine Mounting–Front	2	
56	UR.4252	ASSEMBLY–Support Bracket–Steering Box–RH	1	
57	UR.4990	BRACKET–Undersheet–Front	1	123" W/Base Cars.
58	UR.4253	ASSEMBLY–Support Bracket–Steering Box–LH	1	
59	UR.4620	BRACKET–Rear–Engine Mounting–LH	1	
60	UR.4748	ASSEMBLY–Bracket–Rear Engine Mounting–RH	1	
61	UR.3583	CLIP–Support–Cable–Battery to Starter Solenoid Switch	1	
62	UR.4746	CLIP–Support–Cable–Battery to Solenoid Switch	1	
63	UR.4747	CLIP–Support–Cable–Battery to Solenoid Switch	1	
64	UR.4167	BRACKET–Control Linkage–LH	1	
65	UR.4619	BRACKET–Support–Fulcrum Lever–RH	1	
66	UR.805	BRACKET–Support–Gear Change–Operating Tube	1	
67	UR.4024	PLATE–Support–Brake–Bellcrank Lever–Lower	2	
68	UR.4025	PLATE–Support–Brake–Bellcrank Lever–Upper	2	
69	UR.4991	BRACKET–Undersheet–Rear	3	123" W/Base Cars.
70	UR.6034	ASSEMBLY–Bracket–No. 1 Body Mounting–RH	1	123" W/Base Cars.
71	UR.6026	CHANNEL–Bottom–No. 1 Body Mounting–RH	1	
72	UR.5129	ASSEMBLY–Bracket–No. 1 Body Mounting–RH	1	127" W/Base Cars.
73	UR.4938	BRACKET–Mounting–Supplementary–RH	1	Coachbuilt Drophead Cars. Coachbuilt Saloons for Mulliner, J. Young and Hooper.
74	UR.1410	ASSEMBLY–Bracket–No. 1 Body Mounting–LH	1	
75	UR.1416	CHANNEL–Bottom–No. 1 Body Mounting Bracket–LH	1	
76	UR.4939	BRACKET–Mounting–Supplementary–LH	1	Coachbuilt Drophead Cars. Coachbuilt Saloons for Mulliner, J. Young and Hooper.
77	UR.4797	BRACKET–Mounting–Blower Unit–ACU	2	
78	UR.4696	ASSEMBLY–Plate–Attachment–Undersheet	1	
79	UR.1297	ASSEMBLY–Plate–Attachment–Undersheet	2	
80	UR.4931	ASSEMBLY–Plate–Attachment–Equaliser Tube	1	
91	UR.2857	PLATE–Support–Master Cylinder–Inner	1	
82	UR.201	PLATE–Centre	2	
83	UR.891	PLATE–Support–Adjustable On Stop	1	
84	UR.654	BRACKET–Anchor–Intermediate Hand Brake Linkage	1	
85	UR.1209	BRACKET–Off Stop	1	
86	UR.2887	PLATE–Attachment–Outer Support Plate–Rear	1	

Items marked † are not supplied as individual parts

FRAME—

FRAME MAKERS ASSEMBLY

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
87	UR.2829	BRACKET–Spring Attachment	1	
88	UR.2888	PLATE–Attachment–Outer Support Plate–Front	1	
89	UR.4761	BRACKET–No. 2 Body Mounting–LH	1	
90	UR.6032	PLATE–Rear–No. 2 Body Mounting–RH	1	
91	UR.6033	PLATE–Front–No. 2 Body Mounting–RH	1	
92	UR.986	BRACKET–Body Mounting–Centre–RH	1	
93	UR.987	BRACKET–Body Mounting–Centre–LH	1	
94	UR.1206	ASSEMBLY–Bracket–Support–Prop. Shaft Centre Bearing	1	
95	UR.1649	ASSEMBLY–Side Plate–No. 3 Body Mounting Bracket	2	
96	UR.1650	ASSEMBLY–Side Plate–No. 3 Body Mounting Bracket	2	
97	UR.3305	BRACKET–Tie–No. 3 Body Mounting	4	
98	UR.4843	ASSEMBLY–Bracket–Front Anchorage–Rear Spring–LH	1	
99	UR.2462	STUD	2	
100	UR.4844	ASSEMBLY–Bracket–Front Anchorage–Rear Spring–RH	1	
101	UR.3439	BRACKET–Suspension Strip–Exhaust	1	
102	UR.1404	BRACKET–Mounting–Longitudinal 'Z' Bar	1	123" W/Base Cars.
103	UR.3798	BRACKET–Mounting–Longitudinal 'Z' Bar	1	127" W/Base Cars.
104	UR.4155	BRACKET–Mounting–Transverse 'Z' Bar	1	
105	UR.1020	HOUSING–Bump Rubber	2	
106	UR.1642	PLATE–Side–No. 4 Body Mounting Bracket–Front–RH	1	
107	UR.1640	PLATE–Side–No. 4 Body Mounting Bracket–Rear–RH	1	
108	UR.1639	PLATE–Side–No. 4 Body Mounting Bracket–Rear–LH	1	
109	UR.1641	PLATE–Side–No. 4 Body Mounting Bracket–Front–LH	1	
110	UR.482	ASSEMBLY–2nd Crossmember	1	123" W/Base Cars.
111	UR.480	† CROSSMEMBER–2nd–Front Half	1	
112	UR.481	† CROSSMEMBER–2nd–Rear Half	1	
113	UR.1210	BRACKET–Support–Exhaust Pipe	1	
114	UR.1207	BRACKET–Support–Petrol Tank	2	
115	UR.851	BRACKET–Attachment–Filter	1	
116	UR.2462	STUD	4	
117	UR.2164	CLIP–Wiring	7	
118	UR.4081	BRACKET–Earthing Strip	1	
119	UR.4941	ASSEMBLY–2nd Crossmember	1	127" W/Base Cars.
120	UR.3808	† CROSSMEMBER–2nd–Front Half	1	
121	UR.3909	† CROSSMEMBER–2nd–Rear Half	1	
122	UR.1210	BRACKET–Support–Exhaust Pipe	1	
123	UR.1207	BRACKET–Support–Petrol Tank	1	
124	UR.851	BRACKET–Attachment–Filter	1	
125	UR.2462	STUD	4	
126	UR.2164	CLIP–Wiring	7	
127	UR.4081	BRACKET–Earthing Strip	1	
128	UR.2463	STUD–Clip–Petrol Pipe	1	
129	UR.219	BRACKET–Rear Shackle	2	
130	UR.336	BRACKET–Support–Rear Shoe–Petrol Tank	4	
131	UR.350	ASSEMBLY–Carrier–Battery	1	
132	UR.323	PLATE–Stiffener–Sidemember to Battery Carrier	1	
133	UR.322	PLATE–Support–Sidemember to Battery Carrier	1	
134	UR.1022	BRACKET–Support–Rear Damper–Outer–RH	1	
135	UR.1023	BRACKET–Support–Rear Damper–Outer–LH	1	
136	UR.1651	ASSEMBLY–Support Plate–Rear Damper–Inner–RH	1	
137	UR.1652	ASSEMBLY–Support Plate–Rear Damper–Inner–LH	1	
138	UR.4780	PLATE–Reinforcement–Damper Mounting–Rear	2	
139	UR.2789	BRACKET–Brake Hose Support	1	
140	UR.1645	PLATE–Side–No. 6 Body Mounting Bracket–Rear–LH	1	
141	UR.1646	PLATE–Side–No. 6 Body Mounting Bracket–Rear–RH	1	
142	UR.1647	PLATE–Side–No. 6 Body Mounting Bracket–Forward–LH	1	
143	UR.1648	PLATE–Side–No. 6 Body Mounting Bracket–Forward–RH	1	
144	UR.2771	WASHER–Plug–Sidemember	2	
145	UR.2272	PLUG–Sidemember	2	
146	UR.1211	BRACKET–Support–Tail Pipe	1	
147	UR.1029	BRACKET–Rebound–LH	1	
148	UR.1076	BRACKET–Rebound–RH	1	
149	UR.1632	BRACKET–No. 5 Body Mounting–LH	1	
150	UR.1633	BRACKET–No. 5 Body Mounting–RH	1	
151	UR.982	BRACKET–Body Mounting–Rear–Centre	1	
152	UR.215	ASSEMBLY–Rear Cross Member–Tubular	1	123" W/Base Cars.
153	UR.3806	ASSEMBLY–Rear Cross Member–Tubular	1	127" W/Base Cars.


Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

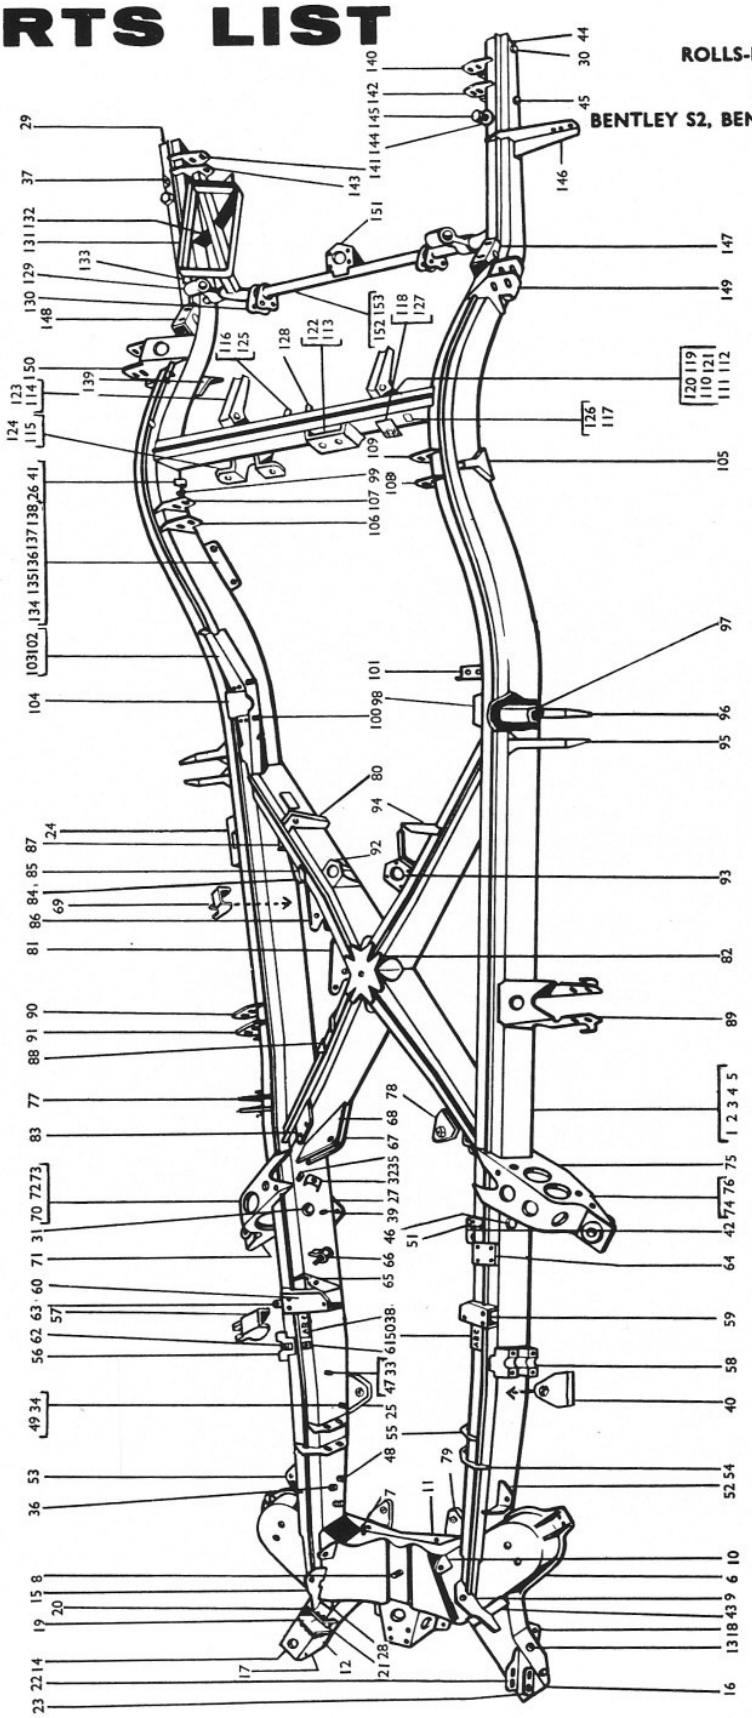

FRAME—

FRAME MAKERS ASSEMBLY

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England

Ref.	Part No.	Description	No. off	Remarks
1	UR.4935	CHANNEL–Cross–Receiver–Cooling	1	Continental Cars.
2	UR.5203	CHANNEL–Cross–Receiver–Cooling	1	Other than Continental Cars.
3	UA.157/Z	BOLT–Cross Channel	2	
4	UA.6103/Z	WASHER–Plain–Bolt	4	
5	UA.302/Z	NUT–Bolt	2	
6	UA.6103/Z	WASHER–Plain–Packing–Cross Channel to Backing Plate	As required.	
7	UR.635	PLATE–Backing–LH–Anti Roll Bar	1	Continental Cars.
8	UR.2623	PLATE–Backing–LH–Anti Roll Bar	1	Other than Continental Cars.
9	UR.2622	PLATE–Backing–RH–Anti Roll Bar	1	
10	UR.1069	PLATE–Spreader–Radiator Mounting Bracket		As required for Radiator Packing Purposes.
11	UE.1032	BOLT–Radiator	1	
12	UA.1255/Z	WASHER–Plain–Bolt	1	
13	UA.355/Z	NUT–Bolt	1	
14	UA.104/Z	BOLT–Radiator Mounting and Spreader Plate	4	
15	UA.1251/Z	WASHER–Plain–Bolt	4	
16	UA.301/Z	NUT–Bolt	4	
17	UR.2626	ASSEMBLY–Bracket–Horn Mounting	1	
18	UA.155/Z	BOLT–Bracket	4	Other than Continental Cars.
19	UA.6103/Z	WASHER–Plain–Bolt	8	
20	UA.302/Z	NUT–Bolt	4	
21	UR.3369	BRACKET–Mounting–H.F. Horn	2	Required when High Frequency Horns are fitted.
22	UA.102/Z	BOLT–Bracket	4	
23	UA.1251/Z	WASHER–Plain–Bolt	4	
24	UA.301/Z	NUT–Bolt	4	
25	UR.4594	ASSEMBLY–Crossmember–Front Engine Mounting	1	
26	UR.4652	BOLT–Crossmember	4	
27	UA.6111/Z	WASHER–Plain–Bolt	16	
28	UA.305/Z	NUT–Bolt	4	
29	UR.4602	ASSEMBLY–Crossmember–Front Engine Mounting	1	
30	UR.4607	ASSEMBLY–Bracket–Front Engine Mounting–RH	1	
31	UR.4609	ASSEMBLY–Bracket–Front Engine Mounting–LH	1	
32	UA.153/Z	BOLT–Bracket to Engine Crossmember	4	
33	UA.1252/Z	WASHER–Plain–Bolt	4	
34	UA.302/Z	NUT–Bolt	4	
35	UR.4639	ASSEMBLY–Block–Engine Mounting	1	
36	UA.152/Z	SETSCREW–Mounting Block	4	
37	UA.1252/Z	WASHER–Plain–Setscrew	4	
38	UR.4618	ASSEMBLY–Bracket–Clutch Casing–RH	1	
39	UA.154/Z	SETSCREW–Bracket to Clutch Casing–RH	2	
40	UA.1252/Z	WASHER–Plain–Setscrew	2	
41	UR.3476	ASSEMBLY–Block–Engine Mounting	1	
42	UR.4615	ASSEMBLY–Plate–Bottom–Engine Mounting	1	
43	UR.4612	PLATE–Top–Engine Mounting	1	
44	UA.153/Z	BOLT–Mounting Block–Front	3	
45	UA.1252/Z	WASHER–Plain–Bolt	3	
46	UA.302/Z	NUT–Bolt	3	
47	UA.155/Z	SETSCREW–Mounting Block–RH	1	
48	UA.1252/Z	WASHER–Plain–Setscrew	1	
49	UR.4623	ASSEMBLY–Bracket–Clutch Casing–LH	1	
50	UA.255/Z	SETSCREW–Bracket to Clutch Casing–LH	2	
51	UA.1254/Z	WASHER–Plain–Setscrew	2	
52	UR.4615	ASSEMBLY–Plate–Bottom–Engine Mounting	1	
53	UR.4612	PLATE–Top–Engine Mounting	1	
54	UR.3476	ASSEMBLY–Block–Engine Mounting	1	
55	UA.154/Z	BOLT–Mounting Block–Rear	3	
56	UA.155/Z	BOLT–Mounting Block–Rear	1	
57	UA.1252/Z	WASHER–Plain–Bolt	4	
58	UA.302/Z	NUT–Bolt	4	
59	UR.3941	STOP–Bump–Front Suspension	2	
60	UR.3939	HOUSING Bump Stop	2	
61	RF.8708	PIECE–Packing–Bump Stop	2	Alternative.
62	UR.4767	PIECE–Packing–Bump Stop	2	
63	UA.1251/Z	WASHER–Plain–Bump Stop	4	
64	UA.301/Z	NUT–Bump Stop	4	
65	UR.3167	ON STOP–Adjustable	1	
66	UA.204/Z	BOLT–On Stop	2	
67	UA.6104/Z	WASHER–Plain–Bolt	4	
68	RE.22430	NUT–Bolt	2	
69	UR.1072	ASSEMBLY–Jacking Bracket	2	Not required on Wider Bodied Cars.
70	UR.1002	BOLT–Jacking Bracket	4	
71	UA.1253/Z	WASHER–Plain–Bolt	4	
72	RE.22430	NUT–Lock–Bolt	4	
73	UA.253/Z	BOLT–Jacking Bracket	4	Not required on Wider Bodied Cars.
74	UA.1254/Z	WASHER–Plain–Bolt	4	
75	UA.354/Z	NUT–Lock–Bolt	4	
76	UR.4007	ASSEMBLY–Jacking Bracket–LH	1	
77	UR.4006	ASSEMBLY–Jacking Bracket–RH	1	
78	UR.2735	ASSEMBLY–Jacking Bracket	2	Required on Wider Bodied Cars.
79	UA.272/Z	BOLT–Jacking Bracket	2	
80	UA.1254/Z	WASHER–Plain–Bolt	2	
81	UR.2781	WASHER–Shim–Jacking Bracket	2	
82	UA.354/Z	NUT–Bolt	2	
83	UR.3048	STONEGUARD–Petrol Pump	1	Not required on cars fitted with A.C.U.
84	K.4404/Z	WASHER–Plain–Stoneguard	4	
85	UA.1252/Z	WASHER–Plain–Stoneguard	4	
86	K.4006/Z	NUT–Stoneguard	4	
87	UD.2136	GROMMET–Blanking–Frame	2	
88	UR.3138	STAY–Fulcrum Lever	1	RH Cars.
89	UA.1251/Z	WASHER–Plain–Stay	1	
90	K.4404/Z	WASHER–Plain–Stay	1	
91	K.4006/Z	NUT–Stay	1	

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

FRAME—

FRAME FITTINGS—

M.2.—Amendment 1.

CHASSIS No's.


SILVER CLOUD II—	SPA.1 / SRA.2 to SYD.44 Incl.
SILVER CLOUD II LWB—	LCA.1 to LCB.85 Incl. LCB.91, 92.
BENTLEY S.2—	B.1 AA / B.2 AM to B.426 CU Incl. 430 to 478 Incl. 482, 576, 582, 588, 592.
BENTLEY S.2 LWB—	LBA.1 to LBB.2 Incl. LBB.7
BENTLEY CONTINENTAL S.2—	BC.1 AR to BC.99 BY Incl.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England.

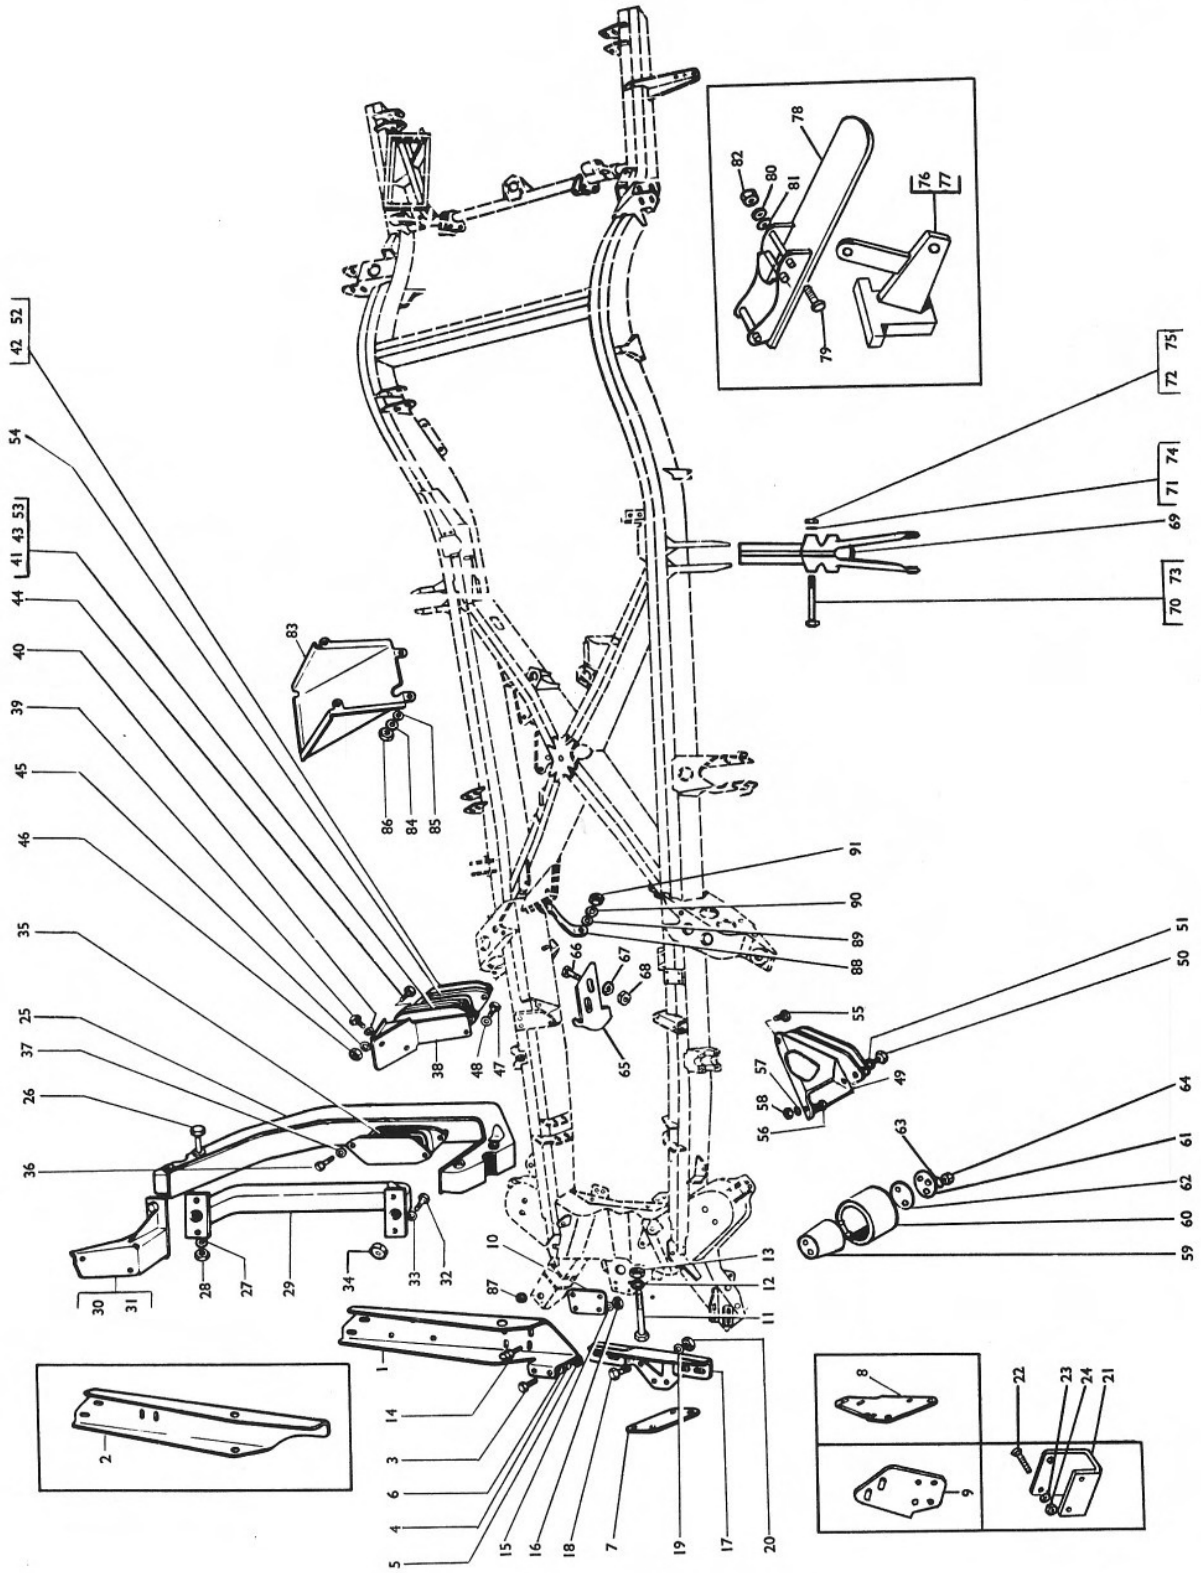

FRAME—

FRAME FITTINGS.

FRAME—

FRAME FITTINGS

	CHASSIS No's.
SILVER CLOUD II—	SYD.46 Onwards.
SILVER CLOUD II LWB—	LCB.86 to 90 Incl. LCB.93 Onwards.
BENTLEY S.2—	B.428.CU 480 484 to 574 Incl. 578, 580, 584, 586, 590 594 to 604 Onwards.
BENTLEY S.2 LWB—	LBB.3 to 6 Incl. 8 Onwards.
BENTLEY CONTINENTAL S.2—	BC.100.BY Onwards.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UR.4935	CHANNEL–Cross–Receiver–Cooling	1	Continental Cars.
2	UR.5203	CHANNEL–Cross–Receiver–Cooling	1	Other than Continental Cars.
3	UA.157/Z	BOLT–Cross Channel	2	
4	UA.6103/Z	WASHER–Plain–Bolt	4	
5	UA.302/Z	NUT–Bolt	2	
6	UA.6103/Z	WASHER–Plain–Packing–Cross Channel to Backing Plate	As required.	
7	UR.635	PLATE–Backing–LH–Anti Roll Bar	1	Continental Cars.
8	UR.2623	PLATE–Backing–LH–Anti Roll Bar	1	Other than Continental Cars.
9	UR.2622	PLATE–Backing–RH–Anti Roll Bar	1	
10	UR.1069	PLATE–Spreader–Radiator Mounting Bracket		As required for Radiator Packing Purposes.
11	UE.1032	BOLT–Radiator	1	
12	UA.1255/Z	WASHER–Plain–Bolt	1	
13	UA.355/Z	NUT–Bolt	1	
14	UA.104/Z	BOLT–Radiator Mounting and Spreader Plate	4	
15	UA.1251/Z	WASHER–Plain–Bolt	4	
16	UA.301/Z	NUT–Bolt	4	
17	UR.2626	ASSEMBLY–Bracket–Horn Mounting	1	
18	UA.155/Z	BOLT–Bracket	4	Other than Continental Cars.
19	UA.6103/Z	WASHER–Plain–Bolt	8	
20	UA.302/Z	NUT–Bolt	4	
21	UR.3369	BRACKET–Mounting–H.F. Horn	2	Required when High Frequency Horns are fitted.
22	UA.102/Z	BOLT–Bracket	4	
23	UA.1251/Z	WASHER–Plain–Bolt	4	
24	UA.301/Z	NUT–Bolt	4	
25	UR.4594	ASSEMBLY–Crossmember–Front Engine Mounting	1	
26	UR.4652	BOLT–Crossmember	4	
27	UA.6111/Z	WASHER–Plain–Bolt	16	
28	UA.305/Z	NUT–Bolt	4	
29	UR.4602	ASSEMBLY–Crossmember–Front Engine Mounting	1	
30	UR.4607	ASSEMBLY–Bracket–Front Engine Mounting–RH	1	
31	UR.4609	ASSEMBLY–Bracket–Front Engine Mounting–LH	1	
32	UA.153/Z	BOLT–Bracket to Engine Crossmember	4	
33	UA.1252/Z	WASHER–Plain–Bolt	4	
34	UA.302/Z	NUT–Bolt	4	
35	UR.4639	ASSEMBLY–Block–Engine Mounting	1	
36	UA.152/Z	SETSCREW–Mounting Block	4	
37	UA.1252/Z	WASHER–Plain–Setscrew	4	
38	UR.4618	ASSEMBLY–Bracket–Clutch Casing–RH	1	
39	UA.154/Z	SETSCREW–Bracket to Clutch Casing–RH	2	
40	UA.1252/Z	WASHER–Plain–Setscrew	2	
41	UR.3476	ASSEMBLY–Block–Engine Mounting	1	
42	UR.4615	ASSEMBLY–Plate–Bottom–Engine Mounting	1	
43	UR.4612	PLATE–Top–Engine Mounting	1	
44	UA.153/Z	BOLT–Mounting Block–Front	3	
45	UA.1252/Z	WASHER–Plain–Bolt	3	
46	UA.302/Z	NUT–Bolt	3	
47	UA.155/Z	SETSCREW–Mounting Block–RH	1	
48	UA.1252/Z	WASHER–Plain–Setscrew	1	
49	UE.8350	ASSEMBLY–Bracket–Rear Engine Mounting–LH	1	
50	UA.255/Z	SETSCREW–Bracket to Clutch Casing–LH	2	
51	UA.1254/Z	WASHER–Plain–Setscrew	2	
52	UR.4615	ASSEMBLY–Plate–Bottom–Engine Mounting	1	
53	UR.4612	PLATE–Top–Engine Mounting	1	
54	UR.3476	ASSEMBLY–Block–Engine Mounting	1	
55	UA.154/Z	BOLT–Mounting Block–Rear	3	
56	UA.155/Z	BOLT–Mounting Block–Rear	1	
57	UA.1252/Z	WASHER–Plain–Bolt	4	
58	UA.302/Z	NUT–Bolt	4	
59	UR.3941	STOP–Bump–Front Suspension	2	
60	UR.3939	HOUSING Bump Stop	2	
61	RF.8708	PIECE–Packing–Bump Stop	2	Alternative.
62	UR.4767	PIECE–Packing–Bump Stop	2	
63	UA.1251/Z	WASHER–Plain–Bump Stop	4	
64	UA.301/Z	NUT–Bump Stop	4	
65	UR.3167	ON STOP–Adjustable	1	
66	UA.204/Z	BOLT–On Stop	2	
67	UA.6104/Z	WASHER–Plain–Bolt	4	
68	RE.22430	NUT–Bolt	2	
69	UR.1072	ASSEMBLY–Jacking Bracket	2	Not required on Wider Bodied Cars.
70	UR.1002	BOLT–Jacking Bracket	4	
71	UA.1253/Z	WASHER–Plain–Bolt	4	
72	RE.22430	NUT–Lock–Bolt	4	
73	UA.253/Z	BOLT–Jacking Bracket	4	Not required on Wider Bodied Cars.
74	UA.1254/Z	WASHER–Plain–Bolt	4	
75	UA.354/Z	NUT–Lock–Bolt	4	
76	UR.4007	ASSEMBLY–Jacking Bracket–LH	1	
77	UR.4006	ASSEMBLY–Jacking Bracket–RH	1	
78	UR.2735	ASSEMBLY–Jacking Bracket	2	Required on Wider Bodied Cars.
79	UA.272/Z	BOLT–Jacking Bracket	2	
80	UA.1254/Z	WASHER–Plain–Bolt	2	
81	UR.2781	WASHER–Shim–Jacking Bracket	2	
82	UA.354/Z	NUT–Bolt	2	
83	UR.3048	STONEGUARD–Petrol Pump	1	Not required on cars fitted with A.C.U.
84	K.4404/Z	WASHER–Plain–Stoneguard	4	
85	UA.1252/Z	WASHER–Plain–Stoneguard	4	
86	K.4006/Z	NUT–Stoneguard	4	
87	UD.2136	GROMMET–Blanking–Frame	2	
88	UR.3138	STAY–Fulcrum Lever	1	
89	UA.1251/Z	WASHER–Plain–Stay	1	RH Cars.
90	K.4404/Z	WASHER–Plain–Stay	1	
91	K.4006/Z	NUT–Stay	1	

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF


FRAME—

FRAME FITTINGS

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

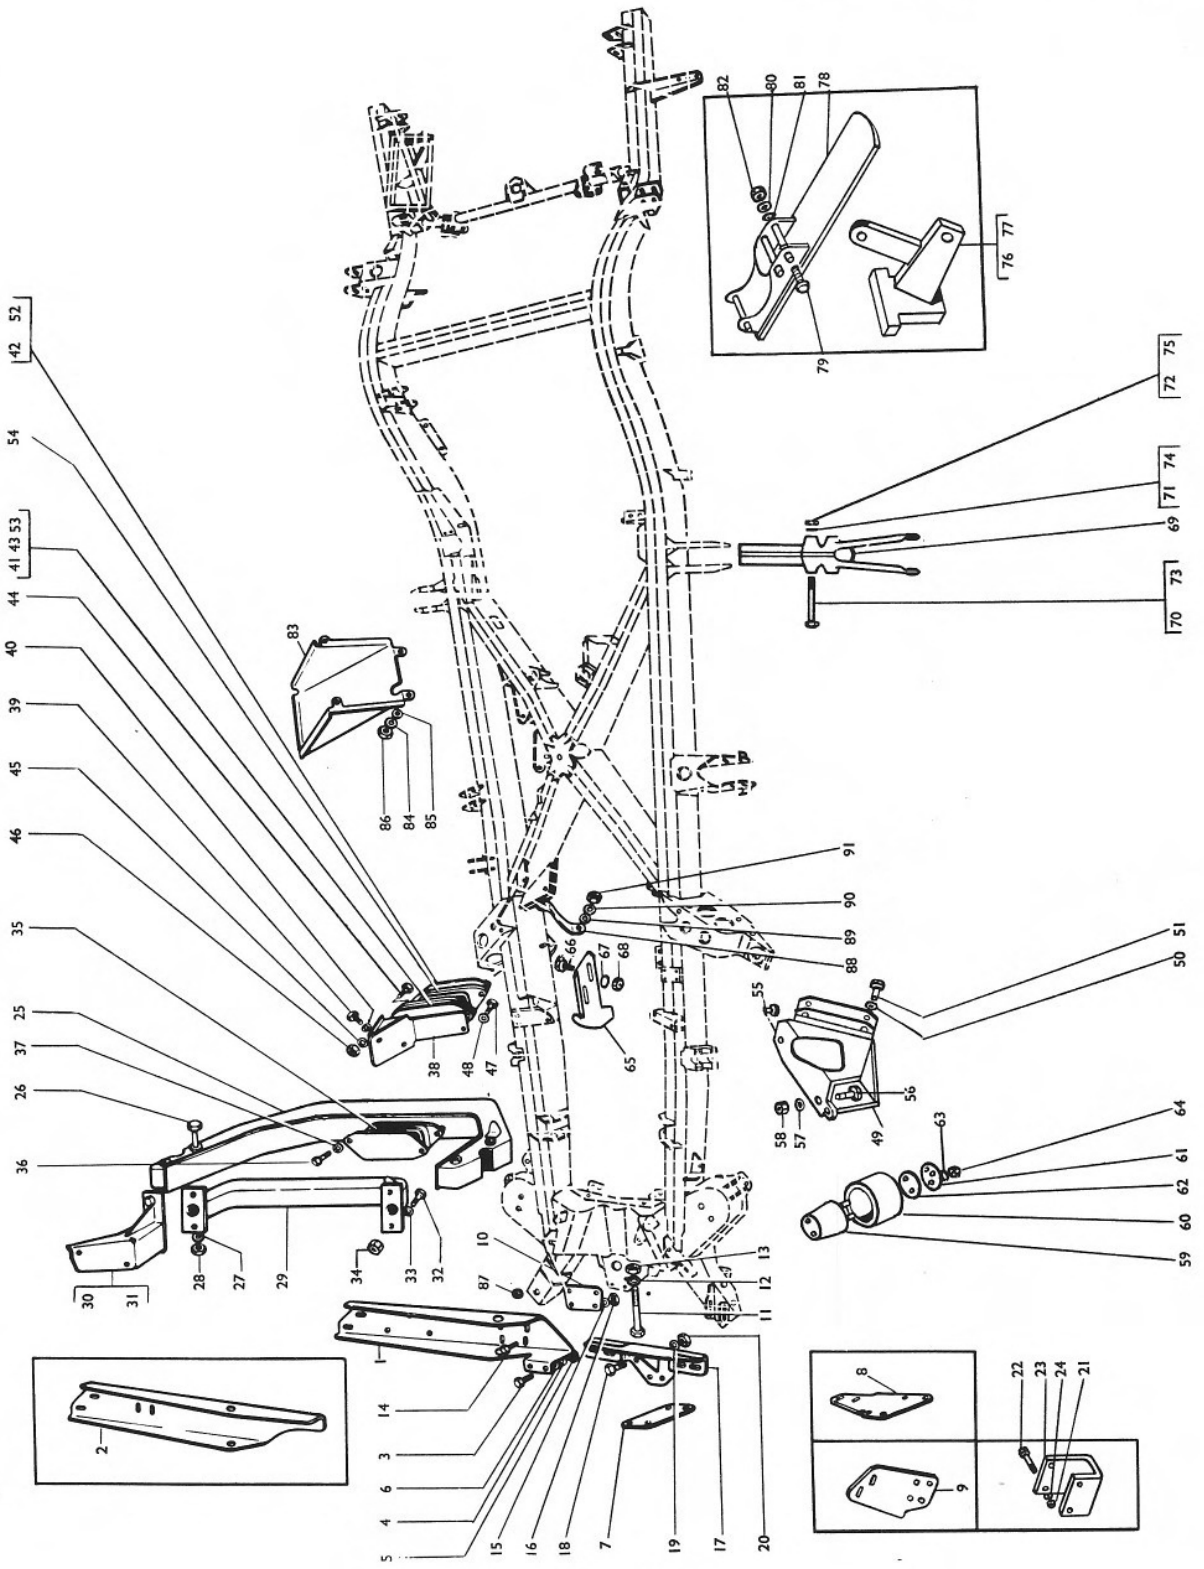

FRAME—

FRAME FITTINGS.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UE.5612	MANIFOLD–Exhaust–RH	1	
2	UE.5613	MANIFOLD–Exhaust–LH	1	
3	UA.753/R	STUD–Exhaust Manifold	6	
4	UE.1683	JOINT–Downtake Pipe to Manifold	2	
5	UE.3418	NUT–Stud–Exhaust Manifold	6	
6	UE.5646	ASSEMBLY–Adaptor–Tube–Exhaust Manifold–RH	1	
7	KB.1094/R	WASHER–Joint–Exhaust Manifold	1	
8	UA.5802/R	UNION–Adaptor–Exhaust Manifold	2	
9	KB.1078/R	WASHER–Joint–Exhaust Manifold	2	
10	UE.3499	ASSEMBLY–Downtake Pipe–Exhaust–RH	1	
11	UE.3416	ASSEMBLY–Downtake Pipe–Exhaust–LH	1	
12	UE.7716	ASSEMBLY–Angle Bracket–Downtake Pipe–RH	1	
13	UA.153/Z	SETSCREW–Angle Bracket	2	
14	UA.6103/Z	WASHER–Plain–Setscrew	2	
15	UE.1683	JOINT–Flange	2	
16	UA.157/Z	BOLT–Flanges–Downtake Pipe	6	
17	UA.1252/Z	WASHER–Plain–Bolt	6	
18	UA.302/R	NUT–Bolt	6	
19	UE.7563	ASSEMBLY–Front Silencer and Inter Pipe	1	123" W/Base Cars.
20	UE.7587	ASSEMBLY–Front Silencer and Inter Pipe	1	127" W/Base Cars.
21	UE.1144	PACKING–Flange	1	
22	UA.157/Z	BOLT–Flange	3	
23	UA.1252/Z	WASHER–Plain–Bolt	3	
24	UA.302/R	NUT–Bolt	3	
25	RE.18216	STRIP–Suspension	1	
26	EW.1332	PLATE–Holding–Suspension Strip	8	
27	UA.156/Z	BOLT–Suspension Strip	4	
28	UA.1252/Z	WASHER–Plain–Bolt	4	
29	E.50062	PIECE–Distance	4	
30	UA.302/Z	NUT–Bolt	4	
31	UE.7585	ASSEMBLY–Rear Silencer and Front Inter Pipe	1	
32	UE.1683	JOINT–Flange	1	
33	UA.157/Z	BOLT–Flange	3	
34	UA.1252/Z	WASHER–Plain–Bolt	3	
35	UA.302/R	NUT–Bolt	3	
36	RE.18216	STRIP–Suspension	1	
37	EW.1332	PLATE–Holding–Suspension Strip	8	
38	UA.156/Z	BOLT–Suspension Strip	4	
39	UA.1252/Z	WASHER–Plain–Bolt	4	
40	E.50062	PIECE–Distance	4	
41	UA.302/Z	NUT–Bolt	4	
42	UE.7591	ASSEMBLY–Rear Pipe and Damper Box	1	Other than Continental.
43	UE.7735	ASSEMBLY–Rear Pipe and Damper Box	1	Continental except Park Ward.
44	RE.18216	STRIP–Suspension	2	
45	EW.1332	PLATE–Holding–Suspension Strip	16	
46	UA.156/Z	BOLT–Suspension Strip	8	Other than Park Ward Continental.
47	UA.1252/Z	WASHER–Plain–Bolt	8	
48	E.50062	PIECE–Distance	8	
49	UA.302/Z	NUT–Bolt	8	
50	UE.7827	ASSEMBLY–Rear Pipe and Damper Box	1	
51	RE.18216	STRIP–Suspension	1	
52	EB.3559	STRIP–Suspension	1	
53	EW.1332	PLATE–Holding–Suspension Strip	16	
54	UA.156/Z	BOLT–Suspension Strip	8	
55	UA.1252/Z	WASHER–Plain–Bolt	8	Park Ward Continental.
56	E.50062	PIECE–Distance	8	
57	UA.302/Z	NUT–Bolt	8	
58	UE.7825	BRACKET–Angle	1	
59	UA.152/Z	BOLT–Angle Bracket	2	
60	UA.1252/Z	WASHER–Plain–Bolt	2	
61	UA.302/Z	NUT–Bolt	2	
62	UR.4610	SHIELD–Heat–Front–Engine	1	
63	UB.1366	ASSEMBLY–Heat Shield–Small–Front Silencer	1	Not required with Refrigeration.
64	UB.1370	ASSEMBLY–Heat Shield–Large–Front Silencer	1	Not required when Refrigeration or Safety Belts are fitted.
65	UB.1218	ASSEMBLY–Heat Shield–Rear Silencer	1	
66	CS.31061/Z	SCREW–Binding Head	17	
67	CS.31044/Z	SCREW–Binding Head	2	
68	K.4404/Z	WASHER–Plain–Screw	19	
69	UB.2685	ASSEMBLY–Heat Shield–Large–Front Silencer	1	For use with Safety Belts.
70	UB.2686	ASSEMBLY–Heat Shield–Rear Silencer	1	Not required with Refrigeration.

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

FRAME—

EXHAUST FITTINGS

M.3.—Amendment 1.

CHASSIS No's.

SILVER CLOUD II— From SPA.2 to STB.50 Incl. 54 to 64 Incl.
From SRA.1 68 to 114 Incl.
118 to 148 Incl., 152 to 206 Incl., 210, 216 to 220 Incl.
228, 230, 236, 238, 242, 246, 248, 252 to 278 Incl.
282, 286, 288, 292, 296, 298, 304, 308 to 324 Incl.
328, 330, 334, 338, 340, 344 to 366 Incl., 372, 374,
378, 396, 398, 400, 402, 408, 410, 414, 420,
424, 428 to 444 Incl., 454 to 468 Incl.
480 to 484 Incl., 490 to 500 Incl.
SVB.29 to 49 Incl., 53, 61, 63, 79 to 91 Incl.
95 to 99 Incl., 105, 109, 125, 139 to 151 Incl., 157,
161, 175, 181, 187, 189, 205 to 209 Incl., 213, 217,
219, 223, 233, 235, 245, 249, 255 to 259 Incl., 263, 265,
271, 275, 277, 283, 291, 301, 303, 307, 309, 315, 317,
321 to 327 Incl., 333, 335, 339 to 343 Incl.,
349 to 353 Incl., 357, 371 to 375 Incl., 383, 389,
395, 401, 403, 407, 413, 417, 419, 421, 429, 435, 441,
447, 455, 463 to 469 Incl., 495 to 501 Incl.

SILVER CLOUD II, LWB— From LCA.1 to 39 Incl., 42, 43, 51, 54, 56, 58, 59,
62, 64, 70, 71, 72, 74, 75.

BENTLEY S.2— From B.1.AA to B.119.BR.123 to 131 Incl.,
From B.2.AM 135 to 145 Incl.
149 to 245 Incl., 249, 253, 257 to 269 Incl.
273 to 287 Incl., 291, 297 to 321 Incl., 325 to 333 Incl.
341, 345 to 369 Incl., 377 to 383 Incl., 387 to 419 Incl.
431 to 439 Incl., 443 to 449 Incl., 455 to 471 Incl.,
475, 485 to 489 Incl., 497 to B.14.BS Incl.
24, 30 to 46 Incl., 54 to 60 Incl., 70 to 90 Incl.,
94, 98, 102, 106 to 114 Incl., 118 to 130 Incl.
138 to 148 Incl., 154 to 162 Incl., 166, 170, 174,
178, 182, 190, 192, 200, 202, 208, 212, 216, 220, 224,
228 to 242 Incl., 248, 252, 254, 260, 266, 274 to 292 Incl.
302 to 310 Incl., 314, 324 to 328 Incl., 332,
334, 344, 354 to 368 Incl., 378, 380, 416.


BENTLEY S.2, LWB— From LBA.1 to 6 Incl., 8, 10 to 17 Incl.

BENTLEY CONTINENTAL S.2—From BC.1.AR

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

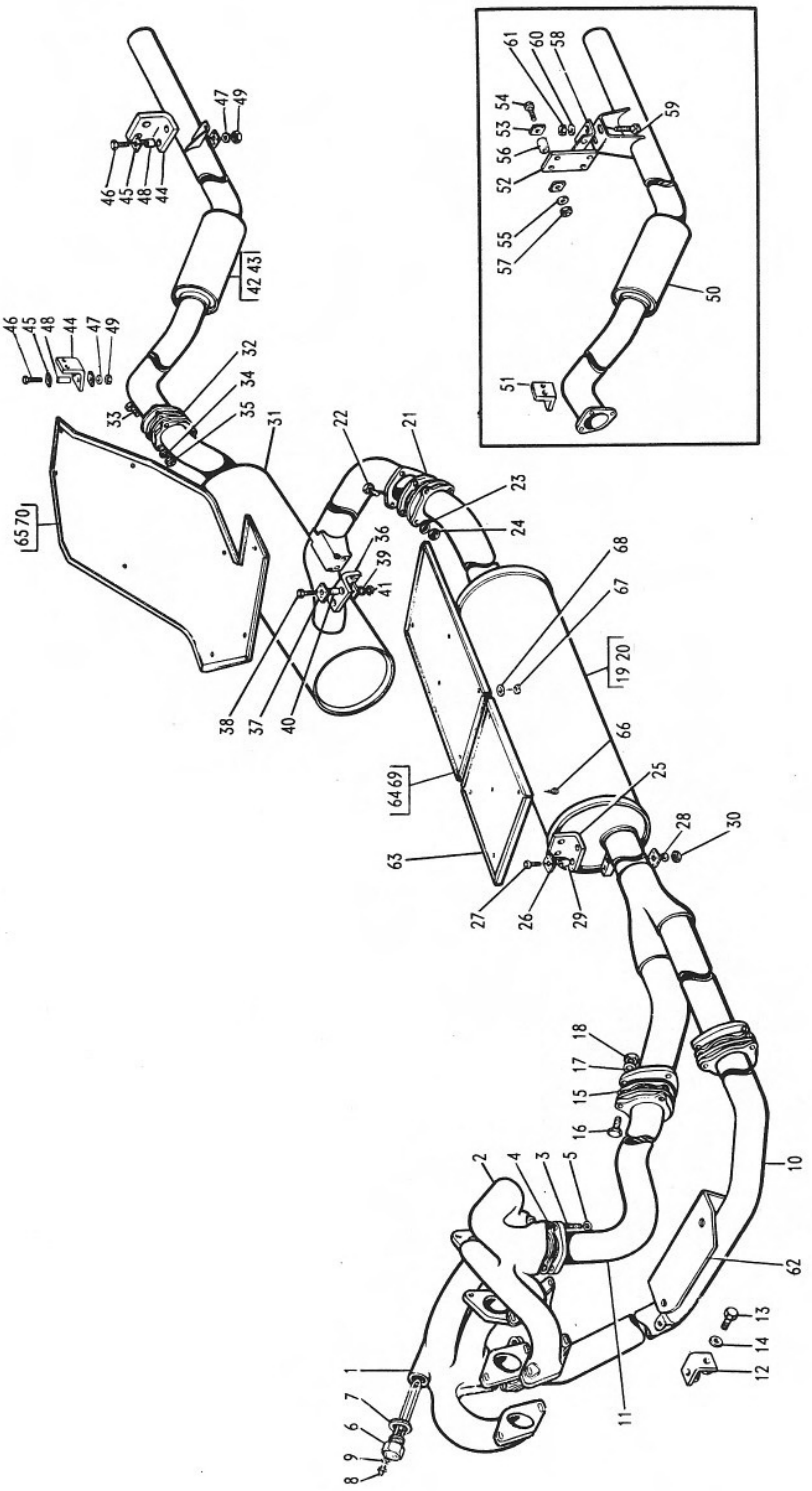

FRAME—

EXHAUST FITTINGS

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UE.5612	MANIFOLD–Exhaust–RH	1	
2	UE.5613	MANIFOLD–Exhaust–LH	1	
3	UA.753/R	STUD–Exhaust Manifold	6	
4	UE.1683	JOINT–Downtake Pipe to Manifold	2	
5	UE.3418	NUT–Stud–Exhaust Manifold	6	
6	UE.5646	ASSEMBLY–Adaptor–Tube–Exhaust Manifold–RH	1	
7	KB.1094/R	WASHER–Joint–Exhaust Manifold	1	
8	UA.5802/R	UNION–Adaptor–Exhaust Manifold	2	
9	KB.1078/R	WASHER–Joint–Exhaust Manifold	2	
10	UE.3499	ASSEMBLY–Downtake Pipe–Exhaust–RH	1	
11	UE.3416	ASSEMBLY–Downtake Pipe–Exhaust–LH	1	
12	UE.7716	ASSEMBLY–Angle Bracket–Downtake Pipe–RH	1	
13	UA.153/Z	SETSCREW–Angle Bracket	2	
14	UA.6103/Z	WASHER–Plain–Setscrew	2	
15	UE.1683	JOINT–Flange	2	
16	UA.157/Z	BOLT–Flanges–Downtake Pipe	6	
17	UA.1252/Z	WASHER–Plain–Bolt	6	
18	UA.302/R	NUT–Bolt	6	
19	UE.7563	ASSEMBLY–Front Silencer and Inter Pipes	1	Continental.
20	UR.5187	ASSEMBLY–Front Silencer and Inter Pipes	1	123" W/Base Cars. Not Continental.
21	UR.5188	ASSEMBLY–Front Silencer and Inter Pipes	1	127" W/Base Cars.
22	UE.1144	PACKING–Flange	1	
23	UA.157/Z	BOLT–Flange	3	
24	UA.1252/Z	WASHER–Plain–Bolt	3	
25	UA.302/R	NUT–Bolt	3	
26	RE.18216	STRIP–Suspension	1	
27	EW.1332	PLATE–Holding–Suspension Strip	8	
28	UA.156/Z	BOLT–Suspension Strip	4	
29	UA.1252/Z	WASHER–Plain–Bolt	4	
30	E.50062	PIECE–Distance	4	
31	UA.302/Z	NUT–Bolt	4	
32	UE.7585	ASSEMBLY–Rear Silencer and Front Inter Pipe	1	
33	UE.1683	JOINT–Flange	1	
34	UA.157/Z	BOLT–Flange	3	
35	UA.1252/Z	WASHER–Plain–Bolt	3	
36	UA.302/R	NUT–Bolt	3	
37	RE.18216	STRIP–Suspension	1	
38	EW.1332	PLATE–Holding–Suspension Strip	8	
39	UA.156/Z	BOLT–Suspension Strip	4	
40	UA.1252/Z	WASHER–Plain–Bolt	4	
41	E.50062	PIECE–Distance	4	
42	UA.302/Z	NUT–Bolt	4	
43	UE.7591	ASSEMBLY–Rear Pipe and Damper Box	1	Other than Continental.
44	UE.7735	ASSEMBLY–Rear Pipe and Damper Box	1	Continental except Park Ward.
45	RE.18216	STRIP–Suspension	2	
46	EW1332	PLATE–Holding–Suspension Strip	16	
47	UA.156/Z	BOLT–Suspension Strip	8	Other than Park
48	UA.1252/Z	WASHER–Plain–Bolt	8	Ward Continental.
49	E.50062	PIECE–Distance	8	
50	UA.302/Z	NUT–Bolt	8	
51	UE.7827	ASSEMBLY–Rear Pipe and Damper Box	1	
52	RE.18216	STRIP–Suspension	1	
53	EB.3559	STRIP–Suspension	1	
54	EW.1332	PLATE–Holding–Suspension Strip	16	
55	UA.156/Z	BOLT–Suspension Strip	8	
56	UA.1252/Z	WASHER–Plain–Bolt	8	Park Ward
57	E.50062	PIECE–Distance	8	Continental.
58	U.A.302/Z	NUT–Bolt	8	
59	UE.7825	BRACKET–Angle	1	
60	UA.152/Z	BOLT–Angle Bracket	2	
61	UA.1252/Z	WASHER–Plain–Bolt	2	
62	UA.302/Z	NUT–Bolt	2	
63	UR.4610	SHIELD–Heat–Front–Engine	1	
64	UB.1366	ASSEMBLY–Heat Shield–Small–Front Silencer	1	Not required with Refrigeration.
65	UB.1370	ASSEMBLY–Heat Shield–Large–Front Silencer	1	Not required when Refrigeration or Safety Belts are fitted.
66	UB.1218	ASSEMBLY–Heat Shield–Rear Silencer	1	
67	CS.31061/Z	SCREW–Binding Head	17	
68	CS.31044/Z	SCREW–Binding Head	2	
69	K.4404/Z	WASHER–Plain–Screw	19	
70	UB.2685	ASSEMBLY–Heat Shield–Large–Front Silencer	1	For use with Safety Belts.
71	UB.2686	ASSEMBLY–Heat Shield–Rear Silencer	1	Not required with Refrigeration.

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

FRAME—

EXHAUST FITTINGS


M.3/1.

	CHASSIS No's.
SILVER CLOUD II—	STB.52, 66, 116, 150, 208, 212, 214, 222, 224, 226, 232, 234, 240, 244, 250, 280, 284, 290, 294, 300, 302, 306, 326, 332, 336, 342, 368, 370, 376, 380 to 394 Incl., 404, 406, 412, 416, 418, 422, 426, 446 to 452 Incl., 470 to 478 Incl., 486, 488. SVB.1 to 27 Incl., 51, 55, 57, 59, 65 to 77 Incl., 93, 101, 103, 107, 111 to 123 Incl., 127 to 137 Incl., 153, 155, 159, 163 to 173 Incl., 177, 179, 183, 185, 191 to 203 Incl., 211, 215, 221, 225 to 231 Incl., 237 to 243 Incl., 247, 251, 253, 261, 267, 269, 273, 279, 281, 285 to 289 Incl., 293 to 299 Incl., 305, 311, 313, 319, 329, 331, 337, 345, 347, 355, 359 to 369 Inc., 377 to 381 Incl., 385, 387, 391, 393, 397, 399. 405, 409, 411, 415, 423, 425, 427, 431, 433, 437, 439, 443, 445, 449 to 453 Incl., 457 to 461 Incl., 471 to 493 Incl. SWC.2 to SXC.369 Incl., 373 to 397 Incl.
SILVER CLOUD II, LWB—	LCA.40, 41, 44 to 50 Incl., 52, 53, 55, 57, 60, 61, 63, 65 to 69 Incl., 73, 76 to LCB.62 Incl.
BENTLEY S.2—	B.121.BR.133, 147, 247, 251, 255, 271, 289, 293, 295, 323, 335, 337, 339, 343, 371, 373, 375, 385, 421 to 429 Incl., 441, 451, 453, 473, 477 to 483 Incl., 491, 493, 495. B.16.BS to 22 Incl., 26, 28, 48, 50, 52, 62 to 68 Incl., 92, 96, 100, 104, 116, 132, 134, 136, 150, 152, 164, 168, 172, 176, 180, 184, 186, 188, 194, 196, 198, 204, 206, 210, 214, 218, 222, 226, 244, 246, 250, 256, 258, 262, 264, 268, 270, 272, 294 to 300 Incl., 312, 316 to 322 Incl., 330, 336 to 342 Incl., 346 to 352 Incl. 370 to 376 Incl., 382 to 414 Incl., 418 to B.260.CU Incl.
BENTLEY S.2, LWB—	LBA.7, 9, 18 to 24 Incl.
BENTLEY CONTINENTAL S.2—	From BC.1AR to BC.75.BY Incl.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

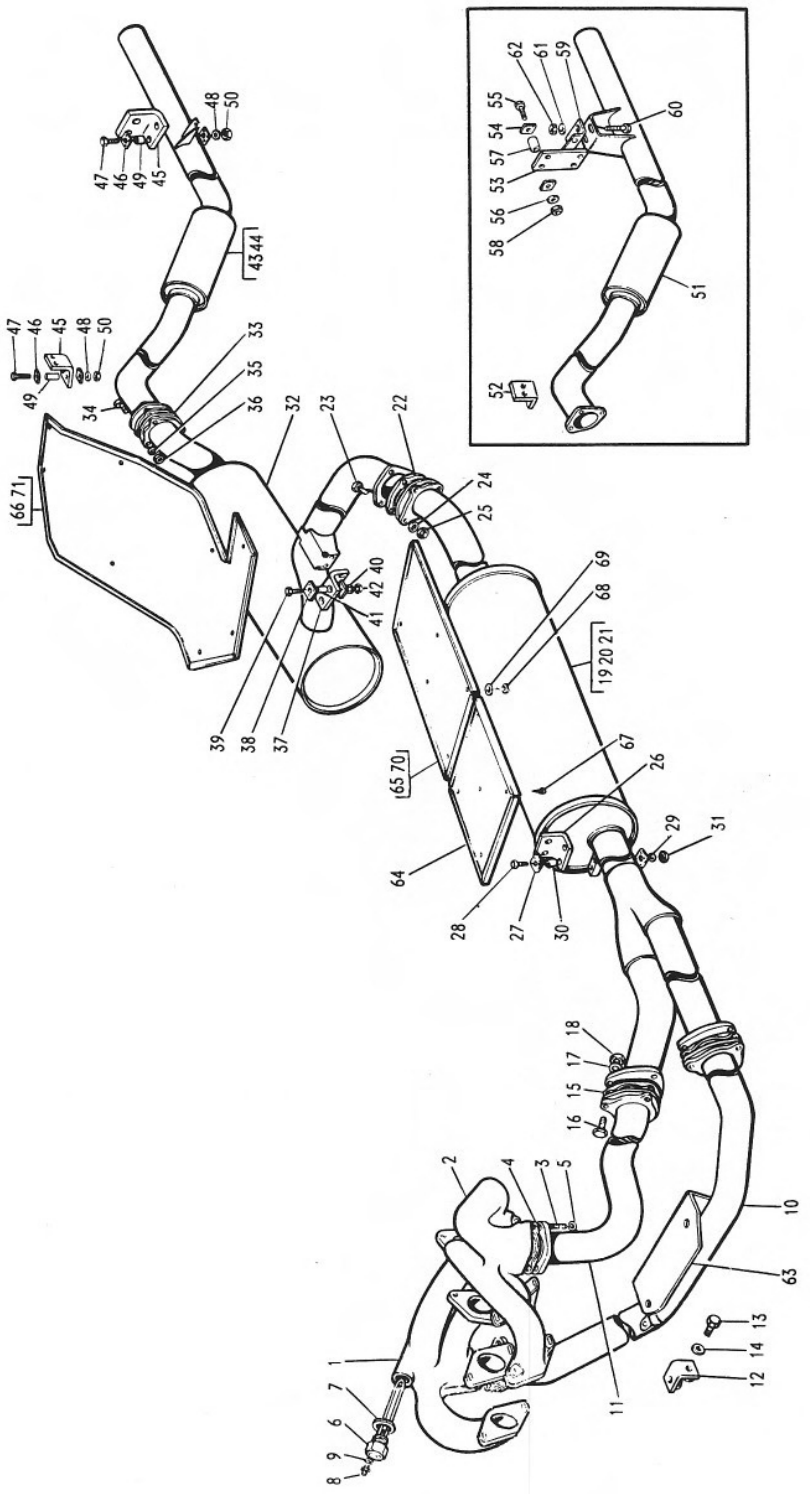

FRAME—

EXHAUST FITTINGS

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UE.5612	MANIFOLD–Exhaust–RH	1	
2	UE.5613	MANIFOLD–Exhaust–LH	1	
3	UA.753/R	STUD–Exhaust Manifold	6	
4	UE.1683	JOINT–Downtake Pipe to Manifold	2	
5	UE.3418	NUT–Stud–Exhaust Manifold	6	
6	UE.5646	ASSEMBLY–Adaptor–Tube–Exhaust Manifold–RH	1	
7	KB.1094/R	WASHER–Joint–Exhaust Manifold	1	
8	UA.5802/R	UNION–Adaptor–Exhaust Manifold	2	
9	KB.1078/R	WASHER–Joint–Exhaust Manifold	2	
10	UE.3499	ASSEMBLY–Downtake Pipe–Exhaust–RH	1	
11	UE.3416	ASSEMBLY–Downtake Pipe–Exhaust–LH	1	
12	UE.7716	ASSEMBLY–Angle Bracket–Downtake Pipe–RH	1	
13	UA.153/Z	SETSCREW–Angle Bracket	2	
14	UA.6103/Z	WASHER–Plain–Setscrew	2	
15	UE.1683	JOINT–Flange	2	
16	UA.157/Z	BOLT–Flanges–Downtake Pipe	6	
17	UA.1252/Z	WASHER–Plain–Bolt	6	
18	UA.302/R	NUT–Bolt	6	
19	UR.5453	ASSEMBLY–Front Silencer and Inter Pipes	1	Continental.
20	UR.5439	ASSEMBLY–Front Silencer and Inter Pipes	1	123" W/Base Cars. Not Continental.
21	UR.5388	ASSEMBLY–Front Silencer and Inter Pipes	1	127" W/Base Cars.
22	UE.1144	PACKING–Flange	1	
23	UA.157/Z	BOLT–Flange	3	
24	UA.1252/Z	WASHER–Plain–Bolt	3	
25	UA.302/R	NUT–Bolt	3	
26	RE.18216	STRIP–Suspension	1	
27	EW.1332	PLATE–Holding–Suspension Strip	8	
28	UA.156/Z	BOLT–Suspension Strip	4	
29	UA.1252/Z	WASHER–Plain–Bolt	4	
30	E.50062	PIECE–Distance	4	
31	UA.302/Z	NUT–Bolt	4	
32	UR.5389	ASSEMBLY–Rear Silencer and Front Inter Pipes	1	
33	UE.1683	JOINT–Flange	1	
34	UA.157/Z	BOLT–Flange	3	
35	UA.1252/Z	WASHER–Plain–Bolt	3	
36	UA.302/R	NUT–Bolt	3	
37	RE.18216	STRIP–Suspension	1	
38	EW.1332	PLATE–Holding–Suspension Strip	8	
39	UA.156/Z	BOLT–Suspension Strip	4	
40	UA.1252/Z	WASHER–Plain–Bolt	4	
41	E.50062	PIECE–Distance	4	
42	UA.302/Z	NUT–Bolt	4	
43	UE.7591	ASSEMBLY–Rear Pipe and Damper Box	1	Other than Continental.
44	UE.7735	ASSEMBLY–Rear Pipe and Damper Box	1	Continental except Park Ward.
45	RE.18216	STRIP–Suspension	2	
46	EW1332	PLATE–Holding–Suspension Strip	16	
47	UA.156/Z	BOLT–Suspension Strip	8	Other than Park Ward Continental.
48	UA.1252/Z	WASHER–Plain–Bolt	8	
49	E.50062	PIECE–Distance	8	
50	UA.302/Z	NUT–Bolt	8	
51	UE.7827	ASSEMBLY–Rear Pipe and Damper Box	1	
52	RE.18216	STRIP–Suspension	1	
53	EB.3559	STRIP–Suspension	1	
54	EW.1332	PLATE–Holding–Suspension Strip	16	
55	UA.156/Z	BOLT–Suspension Strip	8	
56	UA.1252/Z	WASHER–Plain–Bolt	8	Park Ward
57	E.50062	PIECE–Distance	8	Continental.
58	U.A.302/Z	NUT–Bolt	8	
59	UE.7825	BRACKET–Angle	1	
60	UA.152/Z	BOLT–Angle Bracket	2	
61	UA.1252/Z	WASHER–Plain–Bolt	2	
62	UA.302/Z	NUT–Bolt	2	
63	UR.4610	SHIELD–Heat–Front–Engine	1	
64	UB.1366	ASSEMBLY–Heat Shield–Small–Front Silencer	1	Not required with Refrigeration.
65	UB.1370	ASSEMBLY–Heat Shield–Large–Front Silencer	1	Not required when Refrigeration or Safety Belts are fitted.
66	UB.1218	ASSEMBLY–Heat Shield–Rear Silencer	1	
67	CS.31061/Z	SCREW–Binding Head	17	
68	CS.31044/Z	SCREW–Binding Head	2	
69	K.4404/Z	WASHER–Plain–Screw	19	
70	UB.2685	ASSEMBLY–Heat Shield–Large–Front Silencer	1	For use with Safety Belts.
71	UB.2686	ASSEMBLY–Heat Shield–Rear Silencer	1	Not required with Refrigeration.

Silver Cloud II—SXC.371, 399 Onwards
Silver Cloud II, LWB—LCB.63 Onwards
Bentley S.2—B.262.CU Onwards
Bentley S.2, LWB—LBA.25 Onwards
Bentley Continental S.2—BC.76.BY Onwards

Items marked † are not supplied as individual parts

FRAME—


EXHAUST FITTINGS

Printed in England

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

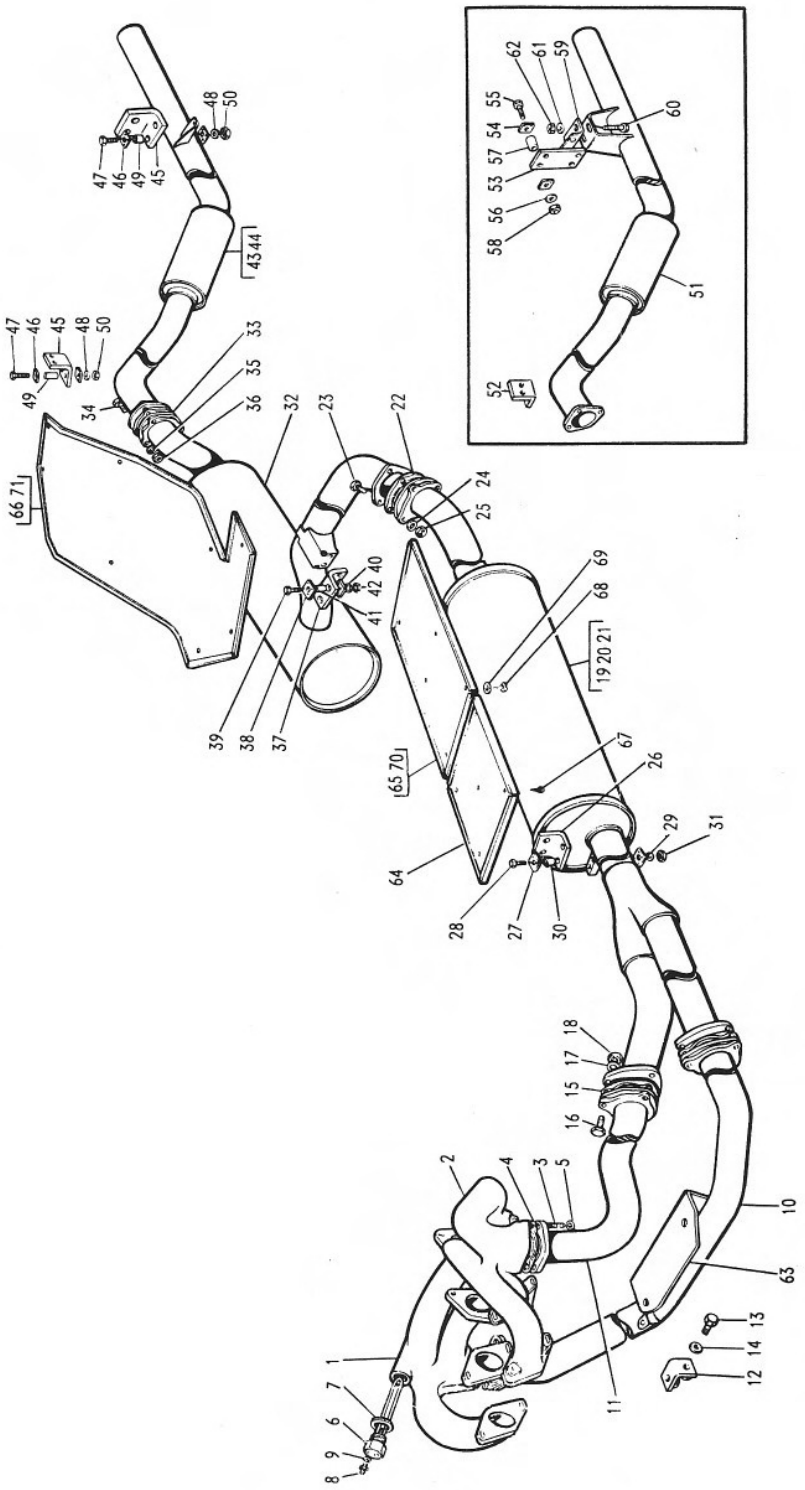


FRAME—

EXHAUST FITTINGS

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

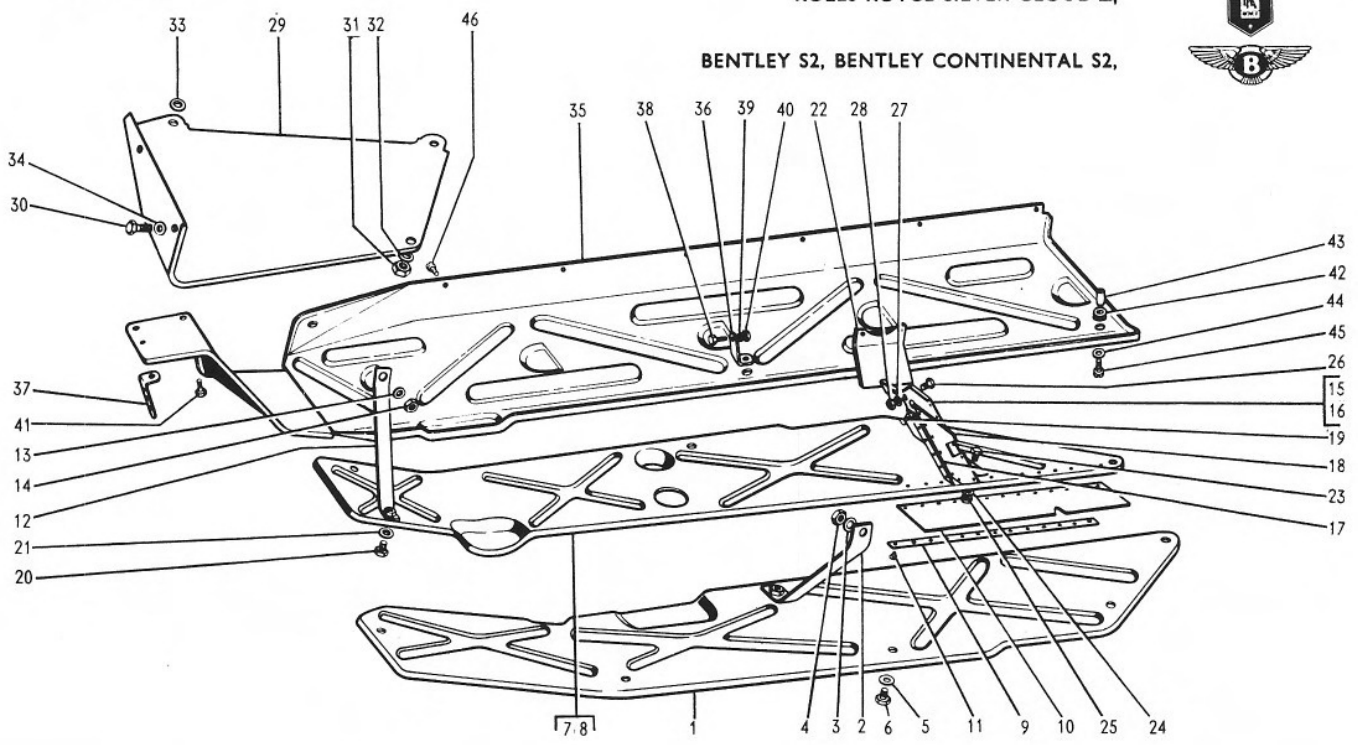

Ref.	Part No.	Description	No. off	Remarks
1	UE.7505	UNDERSHEET–L.H.	1	
2	UE.7506	ASSEMBLY–Support Stay–L.H.	1	
3	UA.1251/Z	WASHER–Plain–Support to Frame	1	
4	UA.301/Z	NUT–Support to Frame	1	
5	KB.3904/Z	WASHER–Plain–Undersheet Support	6	
6	KC.153/Z	SETSCREW–Undersheet Support	6	
7	UE.7508	ASSEMBLY–Undersheet–R.H.	1	
8	UE.7509	UNDERSHEET–R.H.	1	
9	UE.7511	STRIP–Trapping–Seal to Undersheet	1	
10	UE.7510	SEAL–Undersheet	1	
11	CS.35080/Z	RIVET–Bifurcated–Seal to Undersheet	13	
12	UE.7516	ASSEMBLY–Support–Stay–R.H.	1	
13	UA.1251/Z	WASHER–Plain–Support to Frame	1	
14	UA.301/Z	NUT–Support to Frame	1	
15	UE.7512	ASSEMBLY–Plate–Servo Protection and Seal	1	
16	UE.7513	PLATE–Servo Protection	1	
17	UE.7515	STRIP–Trapping–Seal to Servo Protection	1	
18	UE.7514	SEAL–Servo Protection	1	
19	CS.35080/Z	RIVET–Bifurcated–Seal to Servo Protection	6	
20	KC.153/Z	SETSCREW–Undersheet Support	4	
21	KB.3904/Z	WASHER–Plain–Setscrew–Undersheet Support	4	
22	UE.1450	PLATE–Servo Shield	1	
23	KC.153/Z	BOLT–Protection Plate to Undersheet	2	
24	KB.3904/Z	WASHER–Plain–Bolt–Protection Plate to Undersheet	4	
25	K.4006/Z	NUT–Bolt–Protection Plate to Undersheet	2	
26	KC.153/Z	BOLT–Protection Plate to Frame Bracket	2	
27	K.4404/Z	WASHER–Plain–Bolt–Protection Plate to Frame Bracket	2	
28	K.4006/Z	NUT–Bolt–Protection Plate to Frame Bracket	2	
29	UB.4060	ASSEMBLY–Undersheet	1	123" W/Base Cars.
30	UA.102/Z	BOLT–Undersheet	4	
31	RE.22428	NUT–Bolt–Undersheet	1	
32	UR.1926	WASHER–Undersheet	2	
33	UD.6176	WASHER–Packing–Undersheet	2	
34	UA.2052/Z	WASHER–Plain–Undersheet	2	
35	UE.7979	ASSEMBLY–Undersheet–Recirculating Duct	1	
36	UE.7948	BRACKET–Undersheet–Rear–Recirculating Duct	2	
37	UE.7975	BRACKET–Undersheet–Front–Recirculating Duct	1	
38	KC.153/Z	BOLT–Bracket to Frame	1	
39	K.4404/Z	WASHER–Plain–Bolt–Bracket to Frame	2	123" W/Base Cars
40	K.4006/Z	NUT–Bolt–Bracket to Frame	2	Other than Coachbuilt
41	CS.31723/Z	SCREW–Bracket to Steering Box–Mounting Bracket	3	
42	UE.7949	GROMMET–Undersheet–Recirculating Duct	4	
43	K.9809	PIECE–Distance–Grommet	4	
44	UE.7950	WASHER–Screw	4	
45	CS.31725/Z	SCREW–Undersheet to Frame Brackets	4	
46	CS.31722/Z	SCREW–Undersheet to Sill Flange	6	

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

FRAME—

UNDERSHEETS

FRAME—

UNDERSHEETS

M.4.—Amendment 1.


CHASSIS No's.

SILVER CLOUD II—	From SRA.1 / From SPA.2 } to SYD.48 Incl. SYD.52 to 62 Incl.
SILVER CLOUD II, LWB—	From LCA.1
BENTLEY S.2—	From B.1.AA / From B.2.AM } to B.502.CU Incl.
BENTLEY S.2, LWB—	From LBA.1
BENTLEY CONTINENTAL S.2—	From BC.1.AR

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

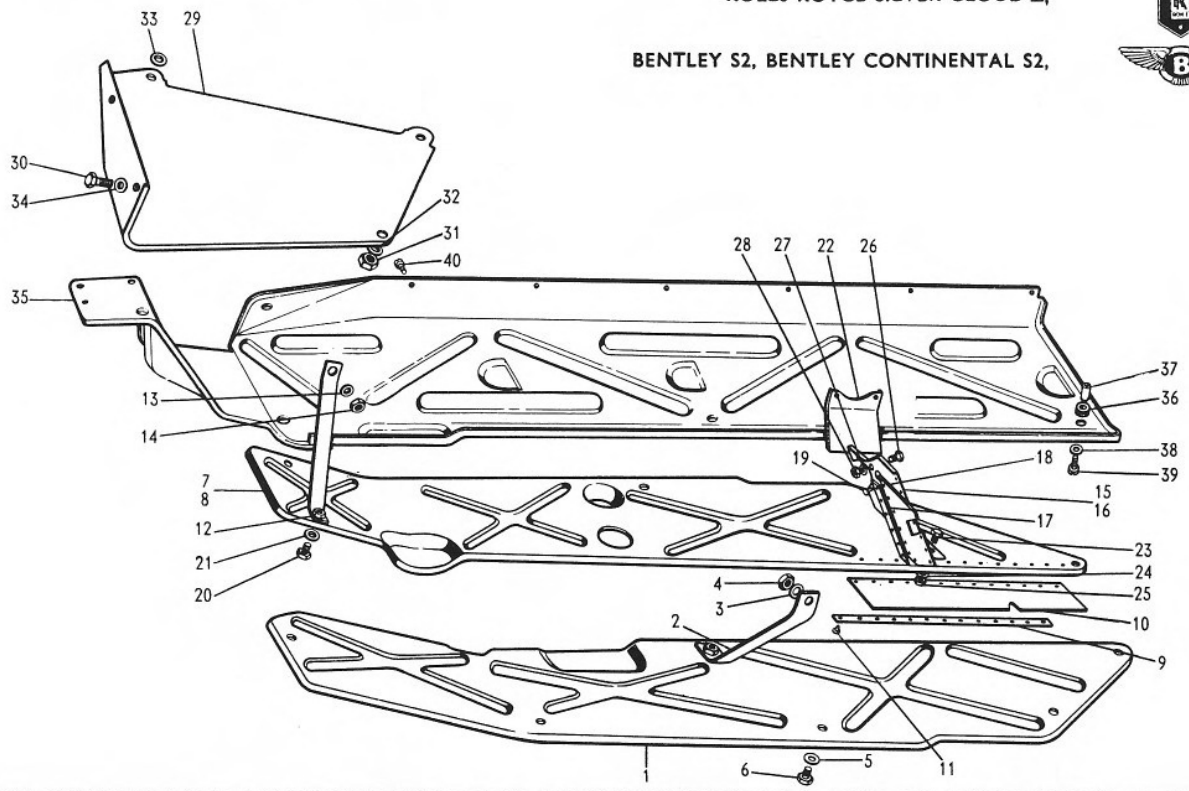

Ref.	Part No.	Description	No. off	Remarks
1	UE.7505	UNDERSHEET–LH	1	
2	UE.7506	ASSEMBLY–Support Stay–LH	1	
3	UA.1251/Z	WASHER–Plain–Support to Frame	1	
4	UA.301/Z	NUT–Support to Frame	1	
5	KB.3904/Z	WASHER–Plain–Undersheet Support	6	
6	KC.153/Z	SETSCREW–Undersheet Support	6	
7	UE.7508	ASSEMBLY–Undersheet–RH	1	
8	UE.7509	UNDERSHEET	1	
9	UE.7511	STRIP–Trapping–Seal to Undersheet	1	
10	UE.7510	SEAL–Undersheet	1	
11	CS.35080/Z	RIVET–Bifurcated–Seal to Undersheet	13	
12	UE.7516	ASSEMBLY–Support Stay–RH	1	
13	UA.1251/Z	WASHER–Plain–Support to Frame	1	
14	UA.301/Z	NUT–Support to Frame	1	
15	UE.7512	ASSEMBLY–Plate–Servo Protection and Seal	1	
16	UE.7513	PLATE–Servo Protection	1	
17	UE.7515	STRIP–Trapping–Seal to Servo Protection	1	
18	UE.7514	SEAL–Servo Protection	1	
19	CS.35080/Z	RIVET–Bifurcated–Seal to Servo Protection	6	
20	KC.153/Z	SETSCREW–Undersheet Support	4	
21	KB.3904/Z	WASHER–Plain–Setscrew	4	
22	UE.1450	PLATE–Servo Shield	1	
23	KC.153/Z	BOLT–Protection Plate to Undersheet	2	
24	KB.3904/Z	WASHER–Plain–Bolt	4	
25	K.4006/Z	NUT–Bolt	2	
26	KC.153/Z	BOLT–Protection Plate to Frame Bracket	2	
27	K.4404/Z	WASHER–Plain–Bolt	2	
28	K.4006/Z	NUT–Bolt	2	
29	UB.4060	ASSEMBLY–Undersheet	1	
30	UA.102/Z	BOLT–Undersheet	4	
31	RE.22428	NUT–Undersheet	1	
32	UR.1926	WASHER–Undersheet	2	
33	UD.6176	WASHER–Packing–Undersheet	2	
34	UA.2052/Z	WASHER–Plain–Undersheet	2	
35	UE.8062	ASSEMBLY–Undersheet–Recirculating Air Duct	1	123" W/Base Cars. Not Coachbuilt.
36	UE.7949	GROMMET–Undersheet–Recirculating Air Duct	5	123" W/Base Cars. Not Coachbuilt.
37	UE.9809	PIECE–Distance–Grommet	5	123" W/Base Cars. Not Coachbuilt.
38	UE.7950	WASHER–Screw–Undersheet to Frame Bracket	5	123" W/Base Cars. Not Coachbuilt.
39	CS.31725/Z	SCREW–Undersheet to Frame Bracket	5	123" W/Base Cars. Not Coachbuilt.
40	CS.31722/Z	SCREW–Undersheet to Sill Flange	6	123" W/Base Cars. Not Coachbuilt.

Silver Cloud II—SYD.50
64 Onwards
Silver Cloud II, LWB—From LCA.1
Bentley S.2—B.504.CU Onwards
Bentley S.2, LWB—From LBA.1
Bentley Continental S.2—From BC.1.AR

Items marked † are not supplied as individual parts

FRAME—

UNDERSHEETS

SECTION N.

BODY.

Containing :—

Group	1.	Body Mounting (123"—127" *W/Base*).
,,	2.	Body Mounting (*Continental*).
,,	3.	Body Mounting (*Drophead Coupe*).
,,	4.	Front Doors, Less Trim and Fittings.
,,	5.	Front Doors, Trim and Fittings.
,,	6.	Rear Doors, Less Trim and Fittings (123" *W/Base*).
,,	7.	Rear Doors, Trim and Fittings (123" *W/Base*).
,,	8.	Rear Door Fittings (127" *W/Base*).
,,	9.	Trunk Door.
,,	10.	Boot—Fixtures and Fittings.
,,	11.	Front Bumper.
,,	12.	Rear Bumper (*Not Park Ward or Mulliner Continental*).
,,	13.	Rear Bumper (*Park Ward and Mulliner Continental*).
,,	14.	Badge Bar and Badge Mounting.
,,	15.	Rear Number Plate. and G.B. Plate.
,,	16.	Wings and Front Apron.
,,	17.	Bonnet (*Bentley*).
,,	18.	Bonnet (*Rolls-Royce*).
,,	19.	Valance Plates.
,,	20.	Sliding Roof.
,,	21.	Body Shell (*Less Doors*)—Roof and Centre Section.
,,	22.	Body Shell (*Less Doors*)—Front End Section.
,,	23.	Body Shell (*Less Doors*)—Rear End Section.
,,	24.	Dashboard Fittings (123" *W/Base. Other than Coachbuilt*).
,,	25.	Dashboard Fittings (127" *W/Base. Other than Coachbuilt*).
,,	26.	Dashboard and Fittings—(*Coachbuilt*).
,,	27.	Facia Board—Upper—Windscreen and Sun Visor.
,,	28.	Windscreen Wiper.
,,	29.	Windscreen Washer.
,,	30.	Facia Board—Lower.
,,	31.	Front Seats—123" W/Base and 127" W/Base (*Non Division*).
,,	32.	Front Seats—Individual (*Customers Request*—123" *W/Base*).
,,	33.	Front Seats—127" W/Base (*With Division*).
,,	34.	Rear Seats—123" W/Base.
,,	35.	Rear Seats—127" W/Base.
,,	36.	Centre Division.
,,	37.	Division Window Lift.
,,	38.	Electrically Operated Windows (*Door Trim and Fittings*).
,,	39.	Electrically Operated Windows.
,,	40.	Body Trim—Roof and Front Section.
,,	41.	Body Trim—Centre Section.
,,	42.	Body Trim—Rear Quarter, Parcel Shelf and Back Light.
,,	43.	Body Trim—Boot.
,,	44.	Mouldings Applied.
,,	45.	Rear Compartment Speaker (*Customers Request*).
,,	46.	Body Trim—Bulk Supply Numbers.
,,	47.	Body Trim—Seals and Draught Excluders.
,,	48.	Standard Colours.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England

Ref.	Part No.	Description	No. off	Remarks
		No. 1 Mounting Bracket.		
1	UR.1924	WASHER–Body Mounting	4	123" W/Base Cars.
2	UR.1924	WASHER–Body Mounting	8	127" W/Base Cars.
3	UR.3376	FLANGE–Rubber	4	Not req. on Mulliner
4	UR.3377	TUBE–Distance	2	J. Young and Hooper C/Built Saloons.
5	UA.6104/Z	WASHER–Plain	2	
6	UR.3378	BRACKET–Steady–L.H.	1	
7	UR.3379	BRACKET–Steady–R.H.	1	
8	UR.2652	FLANGE–Spacing	4	All C/B Saloons for Mulliner. J. Young and Hooper.
9	UA.103/Z	BOLT–Steady Bracket	4	
10	UA.301/Z	NUT–Bolt–Steady Bracket	4	
11	UA.6102/Z	WASHER–Bolt–Steady Bracket	8	
12	UA.223/Z	BOLT–Mounting–L.H.	1	Alternatives.
13	UA.224/Z	BOLT–Mounting–L.H.	1	
14	UB.2842	BOLT–Mounting–R.H.	1	Alternatives.
15	UB.2843	BOLT–Mounting–R.H.	1	
		No. 1 Supplementary Mounting Bracket.		
16	UA.269/Z	BOLT–Mounting	2	All C/Built Saloons for Mulliner, Hooper and J. Young
17	UA.6104/Z	WASHER–Plain	4	
18	UB.2910	WASHER	2	
19	UB.2919	PIECE–Distance	2	
		No. 2 and 4 Mounting Brackets.		
20	UR.1623	ASSEMBLY–Mounting Bracket	2	
21	UR.2338	FLANGE–Rubber	4	
22	UR.1924	WASHER–Body Mounting	6	
23	UR.2872	TUBE–Distance	2	
24	UA.152/Z	BOLT–Mounting Bracket	8	
25	UR.2199	WASHER–Packing	2	
26	UR.1926	WASHER–Adjusting		As Required.
27	UR.2650	WASHER–Plain–Bolt	8	123" W/Base Cars.
28	UR.2650	WASHER–Plain–Bolt	6	127" W/Base Cars.
29	UA.1252/Z	WASHER–Plain	2	
30	UA.219/Z	BOLT–Mounting	2	
31	UA.220/Z	BOLT–Mounting	2	Alternatives.
32	UA.221/Z	BOLT–Mounting	2	
		No. 3 and 5 Mounting Brackets.		
33	UR.1622	ASSEMBLY–Silentbloc–Frustacon–Body Mounting Bracket	2	
34	UA.220/Z	BOLT–Mounting	2	
35	UA.221/Z	BOLT–Mounting	2	Alternatives.
36	UA.222/Z	BOLT–Mounting	2	
37	UR.2199	WASHER–Packing	2	
38	UA.152/Z	BOLT–Mounting Bracket	8	
39	UR.2650	WASHER–Plain–Bolt	8	
40	UR.1929	WASHER–Body Mounting	2	
41	UR.929	WASHER–Rebound	2	
		No. 6 Mounting Bracket		
42	UR.1622	ASSEMBLY–Silentbloc–Frustacon–Body Mounting Bracket	2	
43	UA.222/Z	BOLT–Mounting	2	
44	UA.223/Z	BOLT–Mounting	2	Alternatives.
45	UA.224/Z	BOLT–Mounting	2	
46	UR.2199	WASHER–Packing	2	
47	UR.1929	WASHER–Body Mounting	6	
48	UR.929	WASHER–Rebound	2	
49	UA.152/Z	BOLT–Mounting Bracket	8	
50	UR.2650	WASHER–Plain–Bolt	8	
		L.H. and R.H. Centre Mounting Brackets.		
51	UR.985	SILENTBLOC–Mounting–Centre	1	
52	RB.5450	WASHER–Packing	1	
53	KC.152/Z	BOLT–Mounting Bracket	4	Not required on Park Ward Cars with a Division. Alternatives.
54	K.4404/Z	WASHER–Plain–Bolt	4	
55	K.4307/Z	NUT–Lock–Bolt	4	
56	UA.212/Z	BOLT–Mounting	1	
57	UA.213/Z	BOLT–Mounting	1	
58	UA.214/Z	BOLT–Mounting	1	
59	UR.2199	WASHER–Packing	3	
		Centre–Rear–Mounting Bracket		
60	UR.984	SILENTBLOC–Mounting–Rear–Centre	1	
61	UR.983	WASHER–Rebound	1	
62	UR.1929	WASHER–Packing		As required.
63	UA.102/Z	BOLT–Mounting Bracket	2	
64	UA.1251/Z	WASHER–Plain–Bolt	2	
65	UA.351/Z	NUT–Bolt	2	
66	UA.218/Z	BOLT–Mounting	1	Alternatives.
67	UA.219/Z	BOLT–Mounting	1	
68	UA.220/Z	BOLT–Mounting	1	
69	UR.2199	WASHER–Packing	2	
		The following Items are Common to No. 1–2 and 4 Mounting Brackets.		
70	UR.2864/69	WASHER–Shim (.048" to .092" Respectively)	2	
71	UR.2870	WASHER–Shim (.104")	2	As required Not required on Mulliner. J. Young and Hooper. Coachbuilt Saloons.
		The following Item is Common to All Mounting Brackets.		
72	RE.22428	NUT–Bolt–Mounting	2	
		The following Item is for No. 4 Mounting Bracket only.		
73	UR.2084	BRACKET–Battery Cable Clip	1	

Silver Cloud II —From SRA1 —From SPA2

Silver Cloud II LWB—From LCA1

Bentley S2 —From B1AA —From B2AM

Bentley S2 LWB—From LBA1

Bentley Continental S2—From BC1AR—Mulliner, J. Young & Hooper.

Items marked † are not supplied as individual parts


BODY—

BODY MOUNTING

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

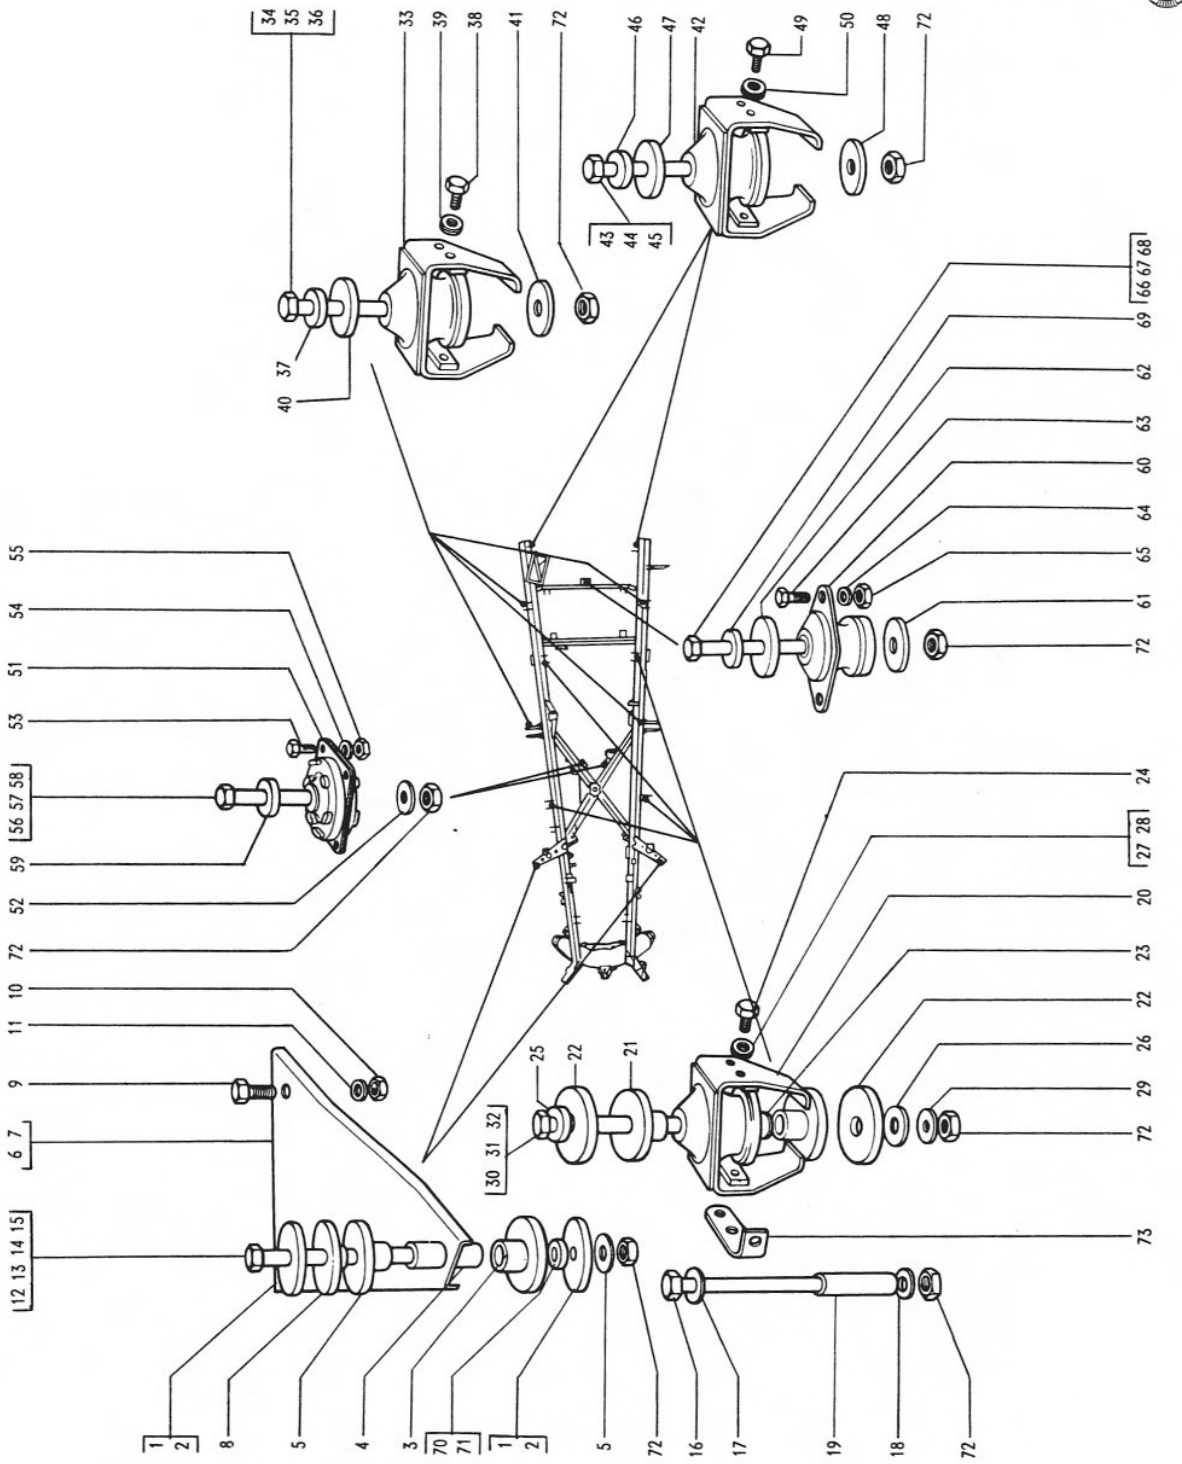


BODY—

BODY MOUNTING

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

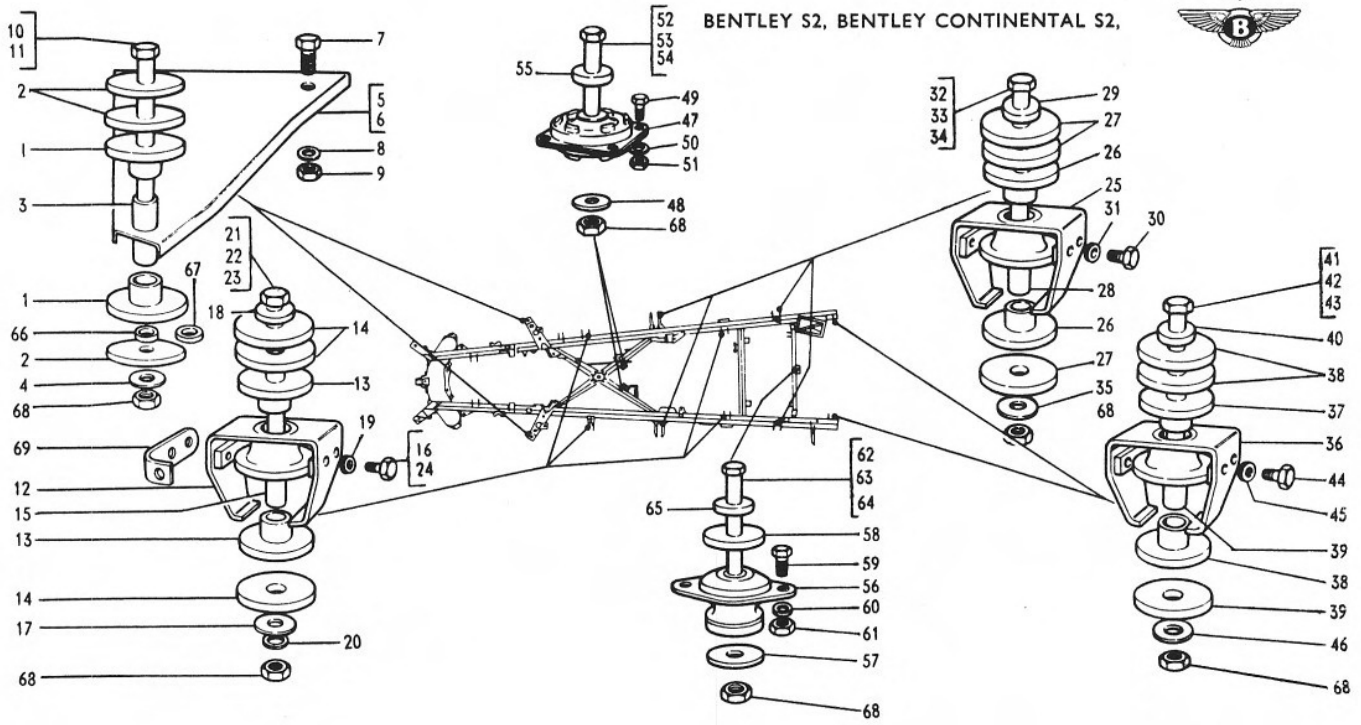

Ref.	Part No.	Description	No. off	Remarks
		No. 1 Mounting Bracket.		
1	UR.3376	FLANGE–Rubber	4	
2	UR.1924	WASHER–Mounting Bracket	4	
3	UR.3377	TUBE–Distance	2	
4	UA.6104/Z	WASHER–Plain	2	
5	UR.3378	BRACKET–Steady–L.H.	1	
6	UR.3379	BRACKET–Steady–R.H.	1	
7	UA.103/Z	BOLT–Steady Bracket	4	
8	UA.6102/Z	WASHER–Plain–Bolt	8	
9	UA.301/Z	NUT–Bolt	4	
10	UA.223/Z	BOLT–Mounting	2	Alternatives.
11	UA.224/Z	BOLT–Mounting	2	
		No. 2 and 4 Mounting Bracket.		
12	UR.1623	ASSEMBLY–Mounting Bracket	2	
13	UR.2338	FLANGE–Rubber	4	
14	UR.1924	WASHER–Mounting Bracket	6	
15	UR.2872	TUBE–Distance	2	
16	UA.152/Z	BOLT–Rear–R.H.	6	
17	UR.2199	WASHER–Plain–Bolt	2	
18	UR.1926	WASHER–Adjusting	As required.	
19	UR.2650	WASHER–Plain–Bolt	8	
20	UA.1252/Z	WASHER–Plain–Bolt	2	
21	UA.219/Z	BOLT–Mounting	2	Alternatives.
22	UA.220/Z	BOLT–Mounting	2	
23	UA.221/Z	BOLT–Mounting	2	
24	UA.153/Z	BOLT–Rear–R.H.	2	
		No. 3 and 5 Mounting Bracket.		
25	UR.1623	ASSEMBLY–Mounting Bracket	2	
26	UR.2338	FLANGE–Rubber	4	
27	UR.1924	WASHER–Mounting Bracket	6	
28	UR.2872	TUBE–Distance	2	
29	UR.1926	WASHER–Adjusting	As required.	
30	UA.152/Z	BOLT–Mounting Bracket	8	
31	UR.2650	WASHER–Plain–Bolt	8	
32	UA.220/Z	BOLT–Mounting	2	Alternatives.
33	UA.221/Z	BOLT–Mounting	2	
34	UA.222/Z	BOLT–Mounting	2	
35	UR.2199	WASHER–Plain–Bolt	2	
		No. 6 Mounting Bracket.		
36	UR.1623	ASSEMBLY–Mounting Bracket	2	
37	UR.2338	FLANGE–Rubber	4	
38	UR.1924	WASHER–Mounting Bracket	6	
39	UR.2872	TUBE–Distance	2	
40	UR.1926	WASHER–Adjusting	As required.	
41	UA.222/Z	BOLT–Mounting	2	Alternatives.
42	UA.223/Z	BOLT–Mounting	2	
43	UA.224/Z	BOLT–Mounting	2	
44	UA.152/Z	BOLT–Mounting Bracket	8	
45	UR.2650	WASHER–Plain–Bolt	8	
46	UR.2199	WASHER–Plain–Bolt	2	
		L.H. and R.H. Centre Mounting Brackets		
47	UR.985	SILENTBLOC–Mounting–Centre	1	Not required on Park Ward Cars with a Division.
48	RB.5450	WASHER–Packing	1	
49	KC.152/Z	BOLT–Mounting Bracket	4	
50	K.4404/Z	WASHER–Plain–Bolt	4	
51	K.4307/Z	NUT–Lock–Bolt	4	
52	UA.212/Z	BOLT–Mounting	1	Alt.
53	UA.213/Z	BOLT–Mounting	1	
54	UA.214/Z	BOLT–Mounting	1	
55	UR.2199	WASHER–Plain–Bolt	3	
		Centre–Rear–Mounting Bracket.		
56	UR.984	SILENTBLOC–Mounting–Rear–Centre	1	
57	UR.983	WASHER–Rebound	1	
58	UR.1929	WASHER–Packing	As required.	
59	UA.102/Z	BOLT–Mounting Bracket	2	
60	UA.1251/Z	WASHER–Plain–Bolt	2	
61	UA.351/Z	NUT–Bolt	2	
62	UA.218/Z	BOLT–Mounting	1	Alternatives.
63	UA.219/Z	BOLT–Mounting	1	
64	UA.220/Z	BOLT–Mounting	1	
65	UR.2199	WASHER–Plain–Bolt	2	
		The following items are common to No's 1 to 6 Mounting Bracket.		
66	UR.2864/69	WASHER–Shim (.048" to .092" respectively)	2	As required.
67	UR.2870	WASHER–Shim (.104")	2	
		The following item is common to all Mounting Brackets		
68	RE.22428	NUT–Bolt	2	
		The following item is for No. 4 Mounting Bracket only		
69	UR.2084	BRACKET–Battery Cable Clip	1	

Items marked † are not supplied as individual parts

Bentley Continental S2—From BC1AR


BODY—

BODY MOUNTING—(Not Mulliner—J. Young or Hoopers)

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

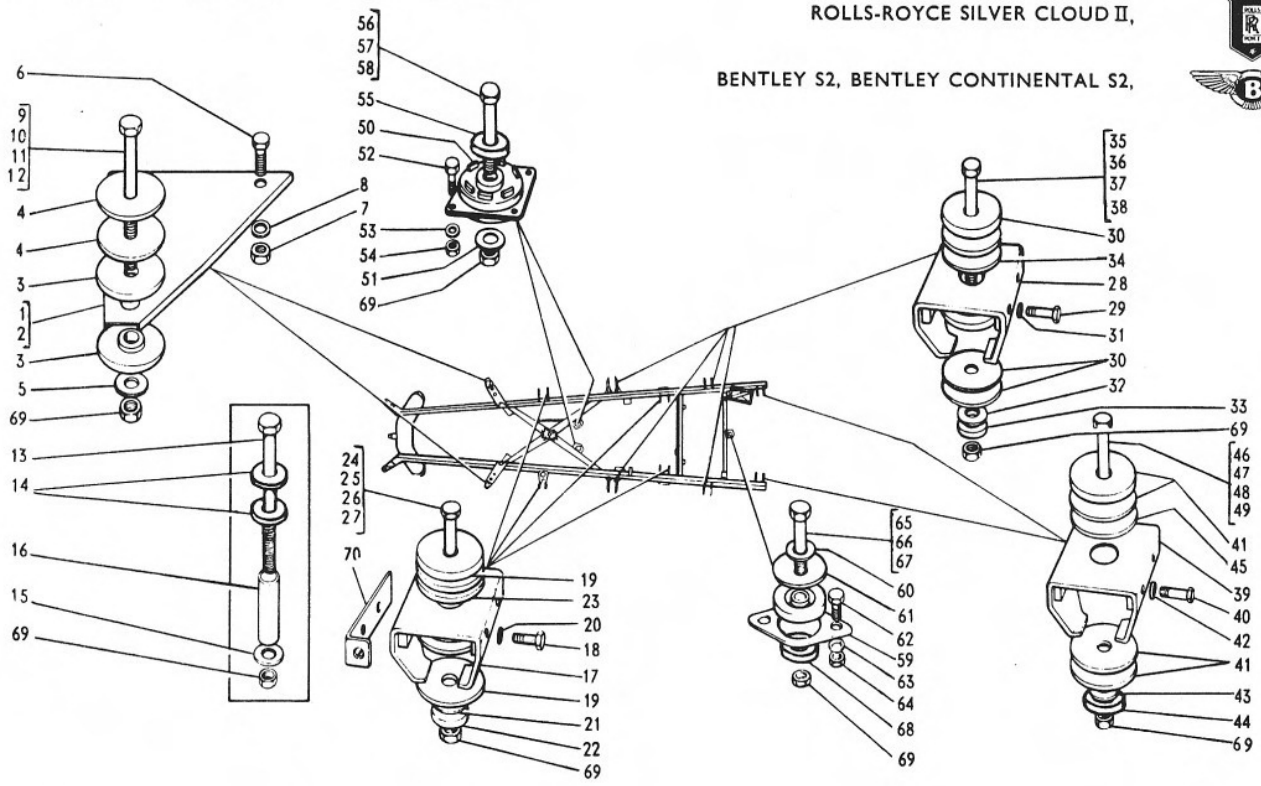

Ref.	Part No.	Description	No. off	Remarks
		No. 1 Mounting Bracket.		
1	UR.3378	BRACKET–Steady–L.H.	1	
2	UR.3379	BRACKET–Steady–R.H.	1	
3	UR.2652	FLANGE–Spacing	4	
4	UR.1924	WASHER–Mounting Bracket	4	
5	UA.6104/Z	WASHER–Plain–Bolt	2	
6	UA.103/Z	BOLT–Steady Bracket	4	
7	UA.301/Z	NUT–Bolt	4	
8	UA.6102/Z	WASHER–Plain–Bolt	8	
9	UA.223/Z	BOLT–Mounting	1	Alternatives.
10	UA.224/Z	BOLT–Mounting	1	
11	UB.2842	BOLT–Mounting	1	Alternatives.
12	UB.2843	BOLT–Mounting	1	
		No. 1 Supplementary Mounting Bracket.		
13	UA.269/Z	BOLT–Mounting Bracket	2	
14	UA.6104/Z	WASHER–Plain–Bolt	4	
15	UR.2910	WASHER–Plain–Bolt	2	
16	UB.2919	PIECE–Distance	2	
		No. 2 and 4 Mounting Bracket.		
17	UR.1623	ASSEMBLY–Mounting Bracket	2	
18	UA.152/Z	BOLT–Mounting Bracket	8	
19	UR.1924	WASHER–Mounting Bracket	6	
20	UR.2650	WASHER–Plain–Bolt	8	
21	UR.1926	WASHER–Adjusting	As required.	
22	UR.2199	WASHER–Packing	2	
23	UR.2652	FLANGE–Spacing	4	
24	UA.219/Z	BOLT–Mounting	2	
25	UA.220/Z	BOLT–Mounting	2	
26	UA.221/Z	BOLT–Mounting	2	Alternatives.
27	UA.222/Z	BOLT–Mounting	2	
		No. 3 and 5 Mounting Bracket.		
28	UR.1623	ASSEMBLY–Mounting Bracket	2	
29	UA.152/Z	BOLT–Mounting Bracket	8	
30	UR.1924	WASHER–Mounting Bracket	8	
31	UR.2650	WASHER–Plain–Bolt	8	
32	UR.1926	WASHER–Adjusting	As required.	
33	UR.2199	WASHER–Packing	2	
34	UR.2652	FLANGE–Spacing	4	
35	UA.219/Z	BOLT–Mounting	2	Alternatives.
36	UA.220/Z	BOLT–Mounting	2	
37	UA.221/Z	BOLT–Mounting	2	Alternatives.
38	UA.222/Z	BOLT–Mounting	2	
		No. 6 Mounting Bracket.		
39	UR.1623	ASSEMBLY–Mounting Bracket	2	
40	UA.152/Z	BOLT–Mounting Bracket	8	
41	UR.1924	WASHER–Mounting Bracket	4	
42	UR.2650	WASHER–Plain–Bolt	8	
43	UR.1926	WASHER–Adjusting	As required.	
44	UR.2199	WASHER–Packing	2	
45	UR.2652	FLANGE–Spacing	4	
46	UA.219/Z	BOLT–Mounting	2	
47	UA.220/Z	BOLT–Mounting	2	
48	UA.221/Z	BOLT–Mounting	2	Alternatives.
49	UA.222/Z	BOLT–Mounting	2	
		L.H. and R.H. Centre Mounting Brackets.		
50	UR.985	SILENTBLOC–Mounting–Centre	1	
51	RB.5450	WASHER–Packing	1	
52	KC.152/Z	BOLT–Mounting Bracket	4	
53	K.4404/Z	WASHER–Plain–Bolt	4	
54	K.4307/Z	NUT–Lock–Bolt	4	
55	UR.2199	WASHER–Packing	3	
56	UA.212/Z	BOLT–Mounting	1	
57	UA.213/Z	BOLT–Mounting	1	Alternatives.
58	UA.214/Z	BOLT–Mounting	1	
		Centre–Rear Mounting Bracket.		
59	UR.984	SILENTBLOC–Mounting–Rear	1	
60	UR.983	WASHER–Rebound	1	
61	UR.1929	WASHER–Packing	As required.	
62	UA.102/Z	BOLT–Mounting Bracket	2	
63	UA.1251/Z	WASHER–Plain–Bolt	2	
64	UA.351/Z	NUT–Bolt	2	
65	UA.218/Z	BOLT–Mounting	1	
66	UA.219/Z	BOLT–Mounting	1	Alternatives.
67	UA.220/Z	BOLT–Mounting	1	
68	UR.2199	WASHER–Packing	2	
		The following item is common to all Mounting Brackets.		
69	RE.22428	NUT–Bolt	2	
		The following item is for No. 4 Mounting Bracket only.		
70	UR.2084	BRACKET–Battery Cable Clip	1	

Silver Cloud II —From SRA1 —From SPA2

Bentley S2 —From B1AA —From B2AM

Bentley Continental S2—From BC1AR

Items marked † are not supplied as individual parts

BODY—


BODY MOUNTING—(DROP HEAD CARS ONLY)

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England.

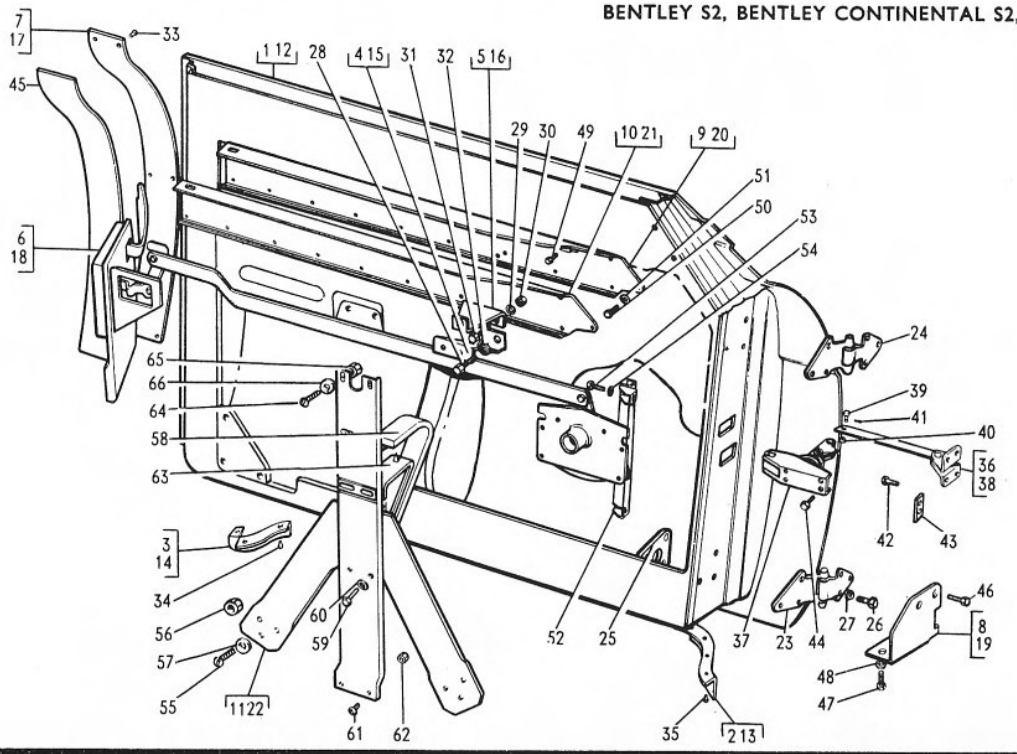

Ref.	Part No.	Description	No. off	Remarks
	373/426	ASSEMBLY–Front Door Complete– RH	1	
1	473/154	DOOR–Complete–(Less Fixtures and Fittings	1	
2	173/182	ANGLE–Sealing–Front Sill	1	
3	173/482	ANGLE–Sealing–Rear Sill	1	
4	173/532	Bracket–Stiffener–Inner Panel	1	
5	373/266	ASSEMBLY–Bracket–Stiffener–Front Door Facing–Inner Panel	1	
6	UB.1880	ASSEMBLY–Lock and Remote Control	1	
7	173/686	PLATE–Stiffener–Centre Pillar	1	
8	173/280	PLATE–Cover–Lower Hinge	1	
9	373/454	ASSEMBLY–Panel–Waistrail	1	
10	173/192	PANEL–Waistrail	1	127" W. Base Cars.
11	373/338	ASSEMBLY–Bracket–Glass Stop Support and Brace	1	
	373/427	ASSEMBLY–Front Door Complete– LH	1	
12	473/155	DOOR–Complete–(Less Fixtures and Fittings)	1	
13	173/183	ANGLE–Sealing–Front Sill	1	
14	173/483	ANGLE–Sealing–Rear Sill	1	
15	173/533	BRACKET–Stiffener–Inner Panel	1	
16	373/267	ASSEMBLY–Bracket–Stiffener–Front Door Facing–Inner Panel	1	
17	173/687	PLATE–Stiffener–Centre Pillar	1	
18	UB.1881	ASSEMBLY–Lock and Remote Control	1	
19	173/281	PLATE–Cover–Lower Hinge	1	
20	373/455	ASSEMBLY–Panel–Waistrail	1	
21	173/193	PANEL–Waistrail	1	127" W. Base Cars.
22	373/339	ASSEMBLY–Bracket–Glass Stop Support and Brace	1	
	The following items are common to RH and LH Door Assemblies:—			
23	473/146	ASSEMBLY–Hinge–Lower	1	
24	473/145	ASSEMBLY–Hinge–Upper	1	
25	273/184	PLATE–Tapping–Lower Hinge	1	
26	UA.4602/Z	SCREW–Hinge to Door	6	
27	CS.32060/Z	WASHER–Shakeproof–Screw	6	
28	CS.30200/Z	SCREW–Stiffener Bracket to Panel	2	
29	CS.32056/Z	WASHER–Shakeproof–Screw	2	
30	K.4006/Z	NUT–Screw	2	
31	CS.30143/Z	SCREW–Stiffener Bracket to Door	2	
32	CS.32056/Z	WASHER–Shakeproof–Screw	2	
33	TLP/D/BH429	RIVET–Pop–Plate Stiffener–Centre Pillar	6	
34	TLP/D/BS435	RIVET–Pop–Angle Sealing	2	
35	TLP/D/BS.424	RIVET–Pop–Angle Sealing	5	
36	UB.2631	ASSEMBLY–Check Strap and Door Opening Assistor	1	
37	UB.3652	ASSISTOR–Door Opening	1	
38	UB.3653	CHECK STRAP	1	
39	UB.3866	PIN–Assistor to Check Strap	1	
40	UB.3656	WASHER–Pin	1	
41	UB.3867	PIN–Split	1	
42	UA.102/Z	SETSCREW–Check Strap to Body	4	
43	273/187	WASHER–Plate–Check Strap	2	
44	UA.102/Z	SETSCREW–Check Strap to Door	4	
45	273/166	STRIP–Anti-Squeak–Centre Pillar	2	
46	CS.30562/Z.	SCREW–C Sunk Head–Cover Plate	2	
47	CS.30542/Z	SCREW–Binding Head–Cover Plate	2	
48	K.4404/Z	WASHER–Plain–Screw	2	
49	UA.101/Z	SCREW–Blanking–Nut–Waistrail	1	123" W/Base Cars.
50	CS.30542/Z	SCREW–Panel–Waistrail Attachment	5	
51	K4404/Z	WASHER–Plain–Screw	5	
52	373/120	CHANNEL–Glass–Front–Lower	1	
53	CS.30542/Z	SCREW–Glass Channel	2	
54	K.4404/Z	WASHER–Plain–Screw	2	
55	CS.30541/Z	SCREW–Brace–Corner Gusset	6	
56	K.4006/Z	NUT–Screw	6	
57	K.4404/Z	WASHER–Screw	6	
58	262/141	FELT–Glass Stop	1	Not required when Electric Op. Windows are fitted.
59	KC.178/Z	SCREW–Glass Stop Support Bracket –Door	4	
60	K.4404/Z	WASHER–Plain–Screw	6	Required at 4 off for Electric Op. Windows.
61	CS.30121/Z	SCREW–Bracket to Door	2	
62	K.4006/Z	NUT–Screw	2	
63	173/204	BRACKET–Glass Stop	1	Not required for Electric Op. Windows.
64	CS.30542/Z.	SCREW–Binding Head–Bracket	4	
65	K.4404/Z	WASHER–Plain–Screw	4	
66	K.4006/Z	NUT–Screw	4	

Items marked † are not supplied as individual parts

Silver Cloud II —From SRA1
—From SPA2
Silver Cloud II LWB—From LCA1

Bentley S2 —From B1AA
—From B2AM
Bentley S2 LWB—From LBA1

BODY—

FRONT DOOR—(Less Trim and Fittings).

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England

Ref.	Part No.	Description	No. off	Remarks
	UB.2218S/A	ASSEMBLY–Frame–Window and Ventilating–RH	1	
1	UB.2218	ASSEMBLY–Frame	1	
2	UB.2222	ASSEMBLY–Frame–Swivelling–Vent	1	
3	UB.2210	ASSEMBLY–Handle–Ventilator	1	
4	UB.2224	SEAL–Ventilator	1	
	UB.2217S/A	ASSEMBLY–Frame–Window and Ventilating–LH	1	
5	UB.2217	ASSEMBLY–Frame	1	
6	UB.2221	ASSEMBLY–Frame–Swivelling–Vent.	1	
7	UB.2211	ASSEMBLY –Handle–Ventilator	1	
8	UB.2223	SEAL–Ventilator	1	
		The following items are common to RH and LH Assemblies:—		
9	UB.1168	ASSEMBLY–Channel–Front Support	1	
10	UB.2216	GLASS–Ventilator	1	
11	UB2357	GLASS–Ventilator–(Sundym)	1	Customers' Request
12	UB.2381	SEAL–Top	1	Not required with Electric Op. Windows
13	UB.2319	SEAL–Forward	2	
14	RB.4539	STRIP–Glazing–Ventilator	1	
15	RB.5822	SCREW–Ventilator Handle	1	
16	RB.5836	WASHER–Wave–Screw	1	
17	K.9005/Z	WASHER–Spring–Screw	1	
18	RB.5821	BALL–Hinge–Ventilator	1	
19	RB.5810	WASHER–Spring Retainer–Friction Pivot	1	
20	RB.5811	WASHER–Star–Friction Pivot	1	
21	RB.5812	WASHER–Friction–Friction Pivot	2	
22	RB.5813	WASHER–Friction Disc–Friction Pivot	1	
23	RB.5814	WASHER–Thrust–Friction Pivot	1	
24	RB.5816	PLATE–Friction–Friction Pivot	2	
25	RB.5817	PIECE–Distance–Friction Pivot	1	
26	RB.5818	SLEEVE–Friction Pivot	1	
27	RB.5835	SPRING–Friction Pivot	1	
28	UB.2035-39	WASHER–Adjusting	As required	
29	UA.1251/Z	WASHER–Plain–Spindle	1	
30	UA.351/Z	NUT–Lock–Spindle	2	
31	UB.1863	WASHER–Packing–Friction Arm	4	
32	KC.152/N	SCREW–Friction Pivot Arm	2	
33	K.4404/Z	WASHER–Plain–Screw	2	
34	K.4875/N	PIN–Taper–Spindle–Friction Pivot	1	
35	UB.2212	PLATE–Striker	1	
36	CS.33078/Z	SCREW–Striker Plate	2	
37	CS.30601/SS	SCREW–Raised Head–Front Support Channel	2	
38	UB.3716	SEAL–Strip–Window Frame to Door	2	
39	RB.2534	STRIP–Glazing–Glass Channel	2	
40	KC.184/Z	SCREW–Front Support Channel	4	
41	K.4404/Z	WASHER–Plain–Screw	4	
42	UB.1351	GLASS–Window	2	Not required with Electrically Op. Windows.
43	UB.1087	GLASS–Window–(Sundym)	2	Customers Request
44	KB.13808/R	RIVET–Pop–Front Window Seal	10	
45	CS.30102/Z	SCREW–Side Plate–Outer Window Frame	2	
46	CS.32056/Z	WASHER–Shakeproof–Screw	2	
47	UB.2772	ASSEMBLY–Seal–Front Drop Glass	2	
48	UB.1224	ASSEMBLY–Lower Glass Channel–RH	1	
49	UB.1225	ASSEMBLY–Lower Glass Channel–LH	1	
50	UW.2120	FELT–Backing–Drop Glass Channel	2	
51	UB.1017	REGULATOR–Front–LH	1	Not required with Electrically Op. Windows
52	UB.1018	REGULATOR–Front–RH	1	
53	K.4404/Z	WASHER–Plain–Screw–Window Regulator	16	
54	UB.2015	PIECE–Distance–Window Regulator	2	
55	CS.30546/Z	SCREW–Window Regulator	2	
56	CS.30542/Z	SCREW–Window Regulator	14	
57	UW.1987	PAD–Anti–Rattle–Regulator	4	
58	UB.2196	ASSEMBLY–Handle–Outside Door	2	
59	UB.2197	HANDLE	2	
60	UB.2383	ASSEMBLY–Push Button with Spring	2	
61	UB.2177	PLATE–Retaining	2	
62	UB.1533	SCREW–Adjusting	2	
63	UB.1133	GROMMET–Handle	2	
64	KC.172/Z	SETSCREW–Handle–Door	2	
65	K.4006/Z	NUT–Handle–Door	2	
66	CS.30100/Z	SCREW–Binding Head–Remote Control	6	
67	K.4452/Z	WASHER–Plain–Screw	6	
68	UB.2460	LOCK–Private Unit–LH	1	Not U.S.A. or Canada.
69	UB.2461	LOCK–Private Unit–RH	1	
70	CS.30602/SS	SCREW–Raised Head–Door Lock	6	
71	CS.30562/SS	SCREW–C Sunk Head–Door Lock	2	
72	CS.30601/SS	SCREW–Raised Head–Door Lock	2	
73	CS.34324/E	WASHER– Cup–Door Lock	8	
74	UB.2355	LOCK–Private Unit–LH	1	
75	UB.2356	LOCK–Private Unit–RH	1	
76	UB.2349	HOUSING–Weather Shield	1	
77	UB.2352	SHIELD–Weather	1	U.S.A. and Canada
78	UB.2354	SCREW–Self Tapping	2	
79	K.4450/Z	WASHER–Plain–Screw	2	
80	UB.2351	SPRING	2	
81	UB.1360	BLOCK–Sealing–RH	1	
82	UB.1356	BLOCK–Sealing–LH	1	
83	UB.1678	PLATE–Striker–(.192" Thick)	2	
84	UB.1679	PLATE–Striker–(.252" Thick)	2	Alternative.
85	UB.1680	PLATE–Striker–(.128" Thick)	2	
86	CS.31183/Z	SCREW–Sheet Metal–Striker Plate	4	
87	KC.179/Z	SETSCREW–Window Frame	10	
88	CS.32068/Z	WASHER–Plain–Setscrew	6	
89	UA.2051/Z	WASHER–Plain–Setscrew	4	
90	UE.1269	WASHER–Adjusting–Door Pillars	26	
91	UW.1132	ASSEMBLY–Finisher–RH	1	RH 123"W. Base Cars, also RH and LH 127"W. Base Cars
92	UW.2154	ASSEMBLY–Finisher–RH	1	LH 123"W. Base Cars.
		The following items are common to the above Assembly Finishers:—		
93	UW.1128	†FINISHER	1	
94	UW.1916	†VENEER–Walnut–Straight Grain	1	
95	UB.1570	PLATE–Retaining–Rear	1	
96	UB.1572	PLATE–Retaining–Front	1	
97	UW.1133	ASSEMBLY–Finisher–LH	1	LH 123"W. Base Cars, also RH and LH 127" W. Base Cars
98	UW.2155	ASSEMBLY–Finisher–LH	1	RH 123" W. Base Cars.
		The following items are common to the above Assembly Finishers:—		
99	UW.1129	†FINISHER	1	
100	UW.1851	†VENEER–Walnut–Straight Grain	1	
101	UB.1569	PLATE–Retaining–Front	1	
102	UB.1572	PLATE–Retaining–Rear	1	
		The following items are common to all Assembly Finishers:—		
103	UW.1130	†VENEER–Cross Banding	1	
104	UW.1131	†VENEER–Burr Walnut	1	
105	RB.4737	RETAINER–Finisher	1	
106	UB.1568	PLATE–Retaining–Finisher–Rear	1	
107	CS.31342/Z	WOODSCREW	8	
108	CS.31333/Z	WOODSCREW	3	
109	UW.1557	STRIP–Felt–Waistrail Finisher– RH and LH	2	
110	UB.2873	ASSEMBLY–Pad–Anti-Drum	2	
111	CS.30542/Z	SCREW–Spring Securing–Anti-Drum Pad	2	
112	K.4404/Z	WASHER–Plain–Screw	2	
113	UB.2547	GROMMET–Blanking–Conduit Hole	2	Not required with Electric Op. Windows.
114	UA.151/Z	BOLT	4	
115	UW.1998	PAD–Anti-Rattle–Waistrail	4	
116	UB.1608	HANDLE–Grab	1	123" W. Base Cars
117	UB.2988	PIECE–Distance–Grab Handle	2	

Items marked † are not supplied as individual parts

BODY—

FRONT DOORS—(Trim and Fittings).

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
118	UW.1652	PANEL–Door–Plastic–Fabric	2	Not required with Electrically Op. Windows.
119	UW.1654	PANEL–Door Pocket–Plastic–Fabric	2	
120	UW.1250	FRAME–Trim Pamel–RH	1	
121	UW.1251	FRAME–Trim Panel–LH	1	
122	CS.34003 R	WOODSCREW–Frame–Trim Panel	8	
123	UW.12465 A	ASSEMBLY–Trim Panel Complete–RH	1	
124	UW.12475 A	ASSEMBLY–Trim Panel Complete–LH	1	
125	UW.1529	PANEL–Kicking–RH	1	
126	UW.1530	PANEL–Kicking–LH	1	
127	UB.1639	HOUSING–Slide–Armrest	2	
128	UB.1640	ASSEMBLY–Slide–Armrest	2	
129	UB.1643	ASSEMBLY–Baseplate–Armrest	2	
130	K.6509 Z	PIN–Baseplate	4	
131	UB.1647	SPRING–Armrest	4	
132	K.4407 Z	WASHER–Plain–Pin–Baseplate	8	
133	K.4607 Z	PIN–Split–Baseplate	4	
134	CS.34021 SS	WOODSCREW–Baseplate to Armrest	12	
135	K.9709 Z	TUBE–Distance	4	
136	CS.30127 SS	SCREW–C. Sunk Head–Slide Housing	4	
137	UW.1221	ASSEMBLY–Armrest–Trimmed	2	
138	UB.2154	ASSEMBLY–Pocket–Complete–RH	1	
139	UB.2153	ASSEMBLY–Pocket–Complete–LH	1	
140	CS.30053 Z	SCREW–C. Sunk Head–Pockets to Doors	8	
141	UB.1921	NUT–Blind Anchor–Avlock–Pockets to Doors	8	
142	UB.1833	WASHER–Cup–Pockets to Doors	8	
143	UB.2660	ASSEMBLY–Handle–Regulator	2	Not required with Electrically Op. Windows.
144	KB.1094 R	WASHER–Packing–Regulator Handle	2	
145	RB.2418	ASSEMBLY–Handle–Inside Door	2	
146	KB.1092 R	WASHER–Packing–Door Handle	2	
147	UB.1855	CUP–Drain–Dust Sealing–Drain Holes	4	Export Cars only.
148	UB.1856	FILTER–Drain Cup	4	
149	KB.13870 R	RIVET–Pop–Cup to Sill Facing Panel	12	
150	UB.3032	ASSEMBLY–Driving Mirror–Vent Frame	1	Customers' Request.
151	UD.4597	MIRROR–Convex	1	
152	UB.3034	NUT–Reach	1	

Ref.	Part No.	Description	No. off	Remarks

SILVER CLOUD II—From SRA.1 / —From SPA.2 } To SZD.345 Incl.

SILVER CLOUD II. LWB.–From LCA.1 to LCC.48 Incl.

BENTLEY S.2 —From B.1.AA. / —From B.2.A.M } To B.413.DV. Incl.

BENTLEY S2. LWB.—From LBA.1 to LBB.18 Incl.

Items marked † are not supplied as individual parts


BODY—

FRONT DOORS—(Trim and Fittings).

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

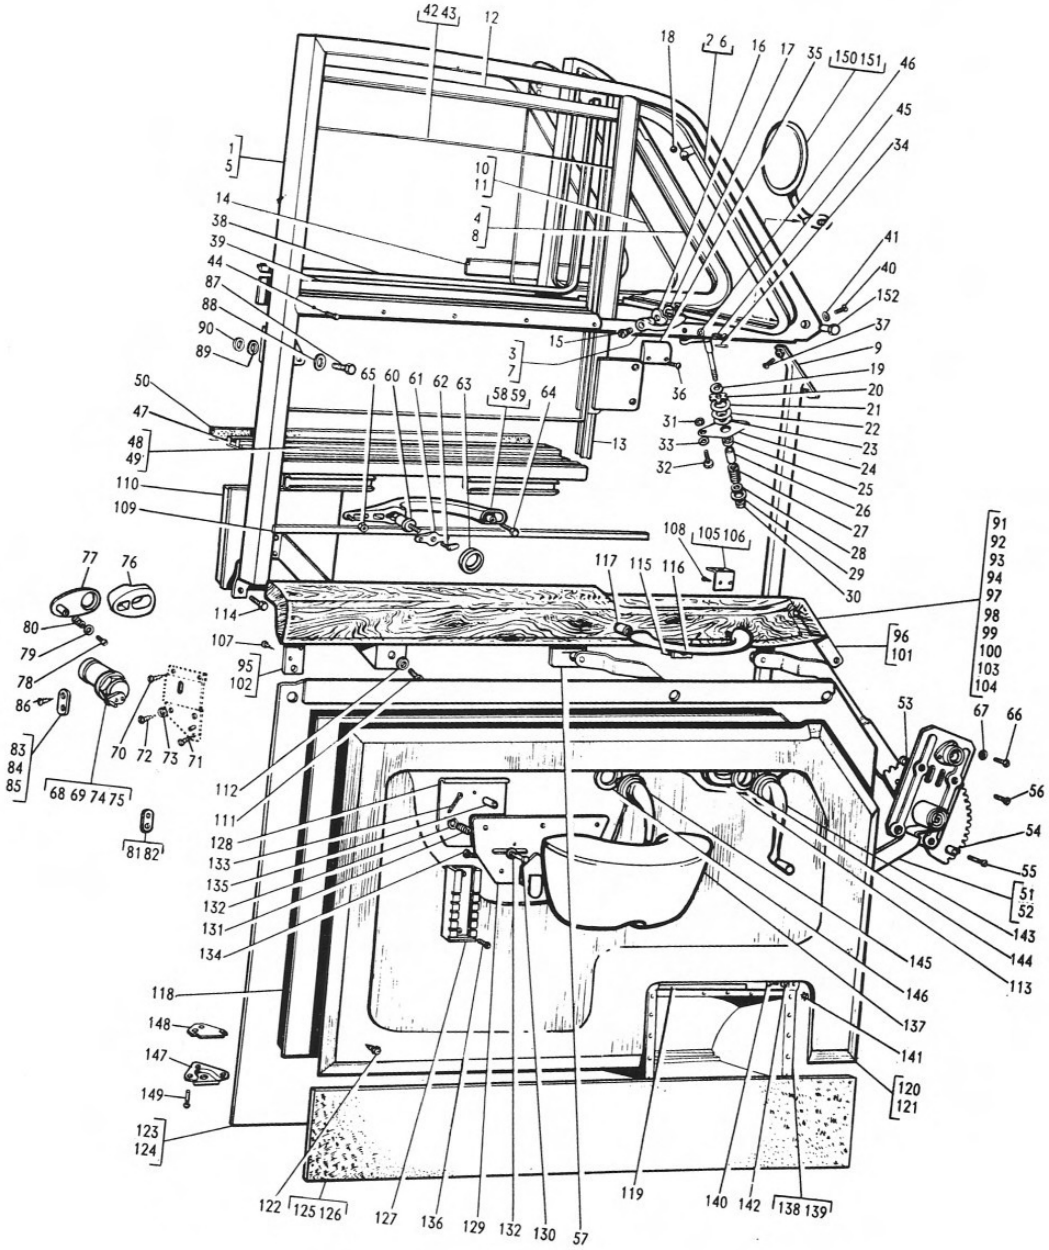

BODY—

FRONT DOORS—(Trim and Fittings).

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
	UB.2218S/A	ASSEMBLY–Frame–Window and Ventilating–RH	1	
1	UB.2218	ASSEMBLY–Frame	1	
2	UB.2222	ASSEMBLY–Frame–Swivelling–Vent.	1	
3	UB.2210	ASSEMBLY–Handle–Ventilator	1	
4	UB.2224	SEAL–Ventilator	1	
	UB.2217S/A	ASSEMBLY–Frame–Window and Ventilating–LH	1	
5	UB.2217	ASSEMBLY–Frame	1	
6	UB.2221	ASSEMBLY–Frame–Swivelling–Vent.	1	
7	UB.2211	ASSEMBLY–Handle–Ventilator	1	
8	UB.2223	SEAL–Ventilator	1	
		The following items are common to RH and LH Assemblies:—		
9	UB.1168	ASSEMBLY–Channel–Front Support	1	
10	UB.2216	GLASS–Ventilator	1	
11	UB.2357	GLASS–Ventilator–(Sundym)	1	Customers' Request.
12	UB.2381	SEAL–Top	1	Not required with Electrically Op. Windows
13	UB.2319	SEAL–Forward	2	
14	RB.4539	STRIP–Glazing–Ventilator	1	
15	RB.5822	SCREW–Ventilator Handle	1	
16	RB.5836	WASHER–Wave–Screw	1	
17	K.9005/Z	WASHER–Spring–Screw	1	
18	RB.5821	BALL–Hinge–Ventilator	1	
19	RB.5810	WASHER–Spring Retainer–Friction Pivot	1	
20	RB.5811	WASHER–Star–Friction Pivot	1	
21	RB.5812	WASHER–Friction–Friction Pivot	2	
22	RB.5813	WASHER–Friction Disc–Friction Pivot	1	
23	RB.5814	WASHER–Thrust–Friction Pivot	1	
24	RB.5816	PLATE–Friction–Friction Pivot	2	
25	RB.5817	PIECE—Distance–Friction Pivot	1	
26	RB.5818	SLEEVE–Friction Pivot	1	
27	RB.5835	SPRING–Friction Pivot	1	
28	UB.2035-39	WASHER–Adjusting	As	required.
29	UA.1251/Z	WASHER–Plain–Spindle	1	
30	UA.351/Z	NUT–Lock–Spindle	2	
31	UB.1863	WASHER–Packing–Friction Arm	4	
32	KC.152/N	SCREW–Friction Pivot Arm	2	
33	K.4404/Z	WASHER–Plain–Screw	2	
34	K.4875/N	PIN–Taper–Spindle–Friction Pivot	1	
35	UB.2212	PLATE–Striker	1	
36	CS.33078/Z	SCREW–Striker Plate	2	
37	CS.30601/SS	SCREW–Raised Head–Front Support Channel	2	
38	UB.3716	SEAL–Strip–Window Frame to Door	2	
39	RB.2534	STRIP–Glazing–Glass Channel	2	
40	KC.184/Z	SCREW–Front Support Channel	4	
41	K.4404/Z	WASHER –Plain–Screw	4	
42	UB.1351	GLASS–Window	2	Not required with Electrically Op. Windows
43	UB.1087	GLASS–Window–(Sundym)	2	Customers' Request.
44	KB.13808/R	RIVET–Pop–Front Window Seal	10	
45	CS.30102/Z	SCREW–Side Plate–Outer Window Frame	2	
46	CS.32056/Z	WASHER–Shakeproof–Screw	2	
47	UB.2772	ASSEMBLY–Seal–Front Drop Glass	2	
48	UB.1224	ASSEMBLY–Lower Glass Channel–RH	1	
49	UB.1225	ASSEMBLY–Lower Glass Channel–LH	1	
50	UW.2120	FELT–Backing–Drop Glass Channel	2	
51	UB.1017	REGULATOR–Front–LH	1	
52	UB.1018	REGULATOR–Front–RH	1	Not required with Electrically Op Windows.
53	K.4404/Z	WASHER–Plain–Screw—Window Regulator	16	
54	UB.2015	PIECE–Distance–Window Regulator	2	
55	CS.30546/Z	SCREW–Window Regulator	2	
56	CS.30542/Z	SCREW–Window Regulator	14	
57	UW.1987	PAD–Anti-Rattle–Regulator	4	
58	UB.2196	ASSEMBLY–Handle–Outside Door	2	
59	UB.2197	HANDLE	2	
60	UB.2383	ASSEMBLY–Push Button with Spring	2	
61	UB.2177	PLATE–Retaining	2	
62	UB.1533	SCREW–Adjusting	2	
63	UB.1133	GROMMET–Handle	2	
64	KC.172/Z	SETSCREW–Handle–Door	2	
65	K.4006/Z	NUT–Handle–Door	2	
66	CS.30100/Z	SCREW–Binding Head–Remote Control	6	
67	K.4452/Z	WASHER–Plain–Screw	6	
68	UB.2460	LOCK–Private Unit–LH	1	Not U.S.A. or Canada
69	UB.2461	LOCK–Private Unit–RH	1	
70	CS.30602/SS	SCREW–Raised Head–Door Lock	6	
71	CS.30562/SS	SCREW–C Sunk Head–Door Lock	2	
72	CS.30601/SS	SCREW–Raised Head–Door Lock	2	
73	CS.34324/E	WASHER–Cup–Door Lock	8	
74	UB.2355	LOCK–Private Unit–LH	1	U.S.A. and Canada
75	UB.2356	LOCK– Private Uint–RH	1	
76	UB.2349	HOUSING–Weather Shield	1	
77	UB.2352	SHIELD–Weather	1	
78	UB.2354	SCREW–Self Tapping	2	
79	K.4450/Z	WASHER–Plain–Screw	2	
80	UB.2351	SPRING	2	
81	UB.1360	BLOCK–Sealing–RH	1	
82	UB.1356	BLOCK–Sealing–LH	1	
83	UB.1678	PLATE–Striker–(.192" Thick)	2	Alternative.
84	UB.1679	PLATE–Striker–(.252" Thick)	2	
85	UB.1680	PLATE–Striker–(.128" Thick)	2	
86	CS.31183/Z	SCREW–Sheet Metal–Striker Plate	4	
87	KC.179/Z	SETSCREW–Window Frame	10	
88	CS.32068/Z	WASHER–Plain–Setscrew	6	
89	UA.2051/Z	WASHER–Plain–Setscrew	4	
90	UE.1269	WASHER–Adjusting–Door Pillars	26	
91	UW.1132	ASSEMBLY–Finisher–RH	1	RH 123" W/Base Cars also RH and LH 127" W/Base Cars.
92	UW.2154	ASSEMBLY–Finisher–RH	1	LH 123" W/Base Cars.
		The following items are common to the above Assembly Finishers:—		
93	UW.1128	†FINISHER	1	
94	UW.1916	†VENEER—Walnut–Straight Grain	1	
95	UB.1570	PLATE–Retaining–Rear	1	
96	UB.1572	PLATE–Retaining–Front	1	
97	UW.1133	ASSEMBLY–Finisher–LH	1	LH 123" W Base Cars, also RH and LH 127" W/Base Cars.
98	UW.2155	ASSEMBLY–Finisher–LH	1	RH 123" W/Base Cars.
		The following items are common to the above Assembly Finishers:—		
99	UW.1129	†FINISHER	1	
100	UW.1851	†VENEER–Walnut–Straight Grain	1	
101	UB.1569	PLATE–Retaining–Front	1	
102	UB.1572	PLATE–Retaining–Rear	1	
		The following items are common to all Assembly Finishers:—		
103	UW.1130	†VENEER–Cross Banding	1	
104	UW.1131	†VENEER–Burr Walnut	1	
105	RB.4737	RETAINER–Finisher	1	
106	UB.1568	PLATE–Retaining–Finisher–Rear	1	
107	CS.31342/Z	WOODSCREW	8	
108	CS.31333/Z	WOODSCREW	3	
109	UW.1557	STRIP–Felt–Waistrail Finisher–RH and LH	2	
110	UB.2873	ASSEMBLY–Pad–Anti-Drum	2	
111	CS.30542/Z	SCREW–Spring Securing–Anti-Drum Pad	2	
112	K.4404/Z	WASHER–Plain–Screw	2	
113	UB.2547	GROMMET–Blanking–Conduit Hole	2	Not required with Electrically Op. Windows.
114	UA.151/Z	BOLT	4	
115	UW.1998	PAD–Anti-Rattle–Waistrail	4	
116	UB.1608	HANDLE–Grab	1	123" W. Base Cars.
117	UB.2988	PIECE–Distance–Grab Handle	2	
118	UW.2405	ASSEMBLY–Trim Pad Complete–LH	1	
119	UW.2403	PAD–Trim	1	
	UW.2443	HIDE	1	

Items marked † are not supplied as individual parts

BODY—

FRONT DOORS—(Trim and Fittings).

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
120	UW.1529	PANEL–Kicking	1	
121	UW.2404	ASSEMBLY–Trim Pad Complete–RH	1	
122	UW.2402	PAD–Trim	1	
	UW.2444	HIDE	1	
123	UW.1530	PANEL–Kicking	1	
		The following items are common to the above Assembly Trim Pads:—		
124	UB.2301	CLIP–Trim Retainer	22	
125	UB.2302	RETAINER–Clip	21	
126	UB.2331	RETAINER–Clip	1	
127	UA.8003/Z	SCREW–Retainer	2	Not required with
128	UB.3480	SLIDE–Door	2	Electrically Op.
129	UA.8004/Z	SCREW–Door Slide	10	Windows.
130	UW.2331	STOP–Rear	1	
131	UA8004/Z	SCREW–Stop	2	
132	UW.2541	STOP–Front	1	
133	UA.8022/Z	SCREW–Stop	3	
134	UB.3551	DOOR–Sliding	1	
135	UB.1611	HANDLE–Door	1	
136	UB.3552	PIECE–Distance–Handle	1	
137	UA6742/E	SCREW–Handle	2	
138	K.8829/R	WASHER–Plain–Screw	2	
	UW.2351	HIDE–Sliding Door	1	
	UW.2561	POLYURATHENE–Panel–Trim Pad	1	
	UW.2445	PIPING	1	
	UW.2446	HIDE–Panel–Lower	1	
139	UB.3546	ASSEMBLY–Pocket–RH.	1	
140	UB.3457	ASSEMBLY–Pocket–LH	1	
141	CS.30053/Z	SCREW–C/Sunk Head–Pockets to Doors	4	
142	UB.1833	WASHER–Cup–Screw	8	
143	UB.1921	NUT–Blind Anchor–Avlock	4	
144	UB.1639	HOUSING–Slide–Armrest	2	
145	UB.1640	ASSEMBLY–Slide–Armrest	2	
146	UB.1643	ASSEMBLY–Baseplate–Armrest	2	
147	K.6509/Z	PIN–Baseplate	4	
148	UB.1647	SPRING–Armrest	4	
149	K.4407/Z	WASHER–Plain–Pin–Baseplate	8	
150	K.4607/Z	PIN–Split–Baseplate	4	
151	CS.34021/SS	WOODSCREW–Baseplate to Armrest	12	
152	K.9709/Z	TUBE–Distance	4	127" W/Base Cars.
153	K.9711/Z	TUBE–Distance	4	123" W/Base Cars.
154	CS.30127/SS	SCREW–C/Sunk Head–Slide Housing	4	
155	UW.1221	ASSEMBLY–Armrest–Trimmed	2	
156	UB.2660	ASSEMBLY–Handle–Regulator	2	Not required with
157	KB.1094/R	WASHER–Packing–Regulator Handle	2	Electrically Op. Windows.
158	RB.2418	ASSEMBLY–Handle–Inside–Door	2	
159	KB.1092/R	WASHER–Packing–Door Handle	2	
160	UB.1855	CUP–Drain–Dust Sealing–Drain Holes	4	Export Cars
161	UB.1856	FILTER–Drain Cup.	4	only.
162	KB.13870/R	RIVET–Pop–Cup to Sill Facing Panel	12	
163	UB.3032	ASSEMBLY–Driving Mirror–Vent Frame	1	Customers' Request
164	UD.4597	MIRROR–Convex	1	
165	UB.3034	NUT–Reach	1	

Ref.	Part No.	Description	No. off	Remarks

Items marked † are not supplied as individual parts

SILVER CLOUD II—SZD.347 Onwards.
SILVER CLOUD II. LWB.–LCC.49 Onwards.
BENTLEY S2—B.415DV. Onwards.
BENTLEY S2 LWB.–LBB.19. Onwards.


BODY—

FRONT DOORS—(Trim and Fittings).

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

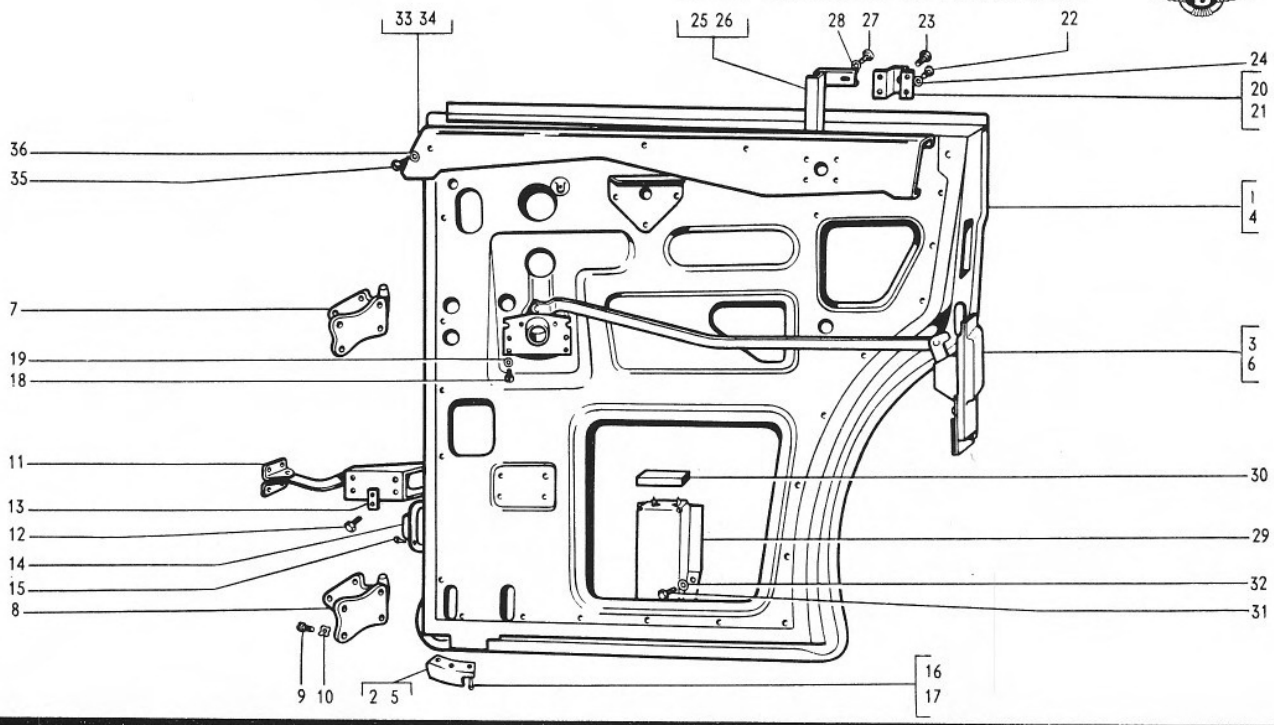

Ref.	Part No.	Description	No. off	Remarks
—	373/046	ASSEMBLY–Rear Door Complete–R.H.	1	Not required for Electric Op. Windows.
1	473/114	DOOR–Complete (less Fixtures and Fittings)	1	
2	173/222	ANGLE–Sealing Sill	1	
3	UB.1882	ASSEMBLY–Lock and Remote Control	1	
—	373/047	ASSEMBLY–Rear Door Complete–L.H.	1	Not required for Electric Op. Windows.
4	473/115	DOOR–Complete (Less Fixtures and Fittings)	1	
5	173/223	ANGLE–Sealing Sill	1	
6	UB.1883	ASSEMBLY–Lock and Remote Control	1	
	The following items are common to R.H. and L.H. :—			
7	473/147	ASSEMBLY–Hinge–Upper	1	
8	473/148	ASSEMBLY–Hinge–Lower	1	
9	UCF.201/ H10HT.	SCREW–UNF Cone Point–Hinge to Door	8	
10	W.S.201	WASHER–Shakeproof–Screw	8	
11	UB.2632	ASSEMBLY–Check Strap and Door Opening Assistor	1	
12	UA.102/Z	SCREW–Check Strap to Door and Body	8	
13	UB.2341	WASHER–Plate–Screw	2	
14	173/661	MOUNTING–Buffer Stop	1	
15	TLP/D/BS429	RIVET–Pop–Mounting	4	
16	TLP/D/BS.440	RIVET–Pop–Angle Sealing	1	
17	TLP/D/BS.424	RIVET–Pop–Angle Sealing	2	
18	CS.30100/Z	SCREW–Binding Head–Remote Control	6	
19	K.4452/Z	WASHER–Plain–Screw	6	
20	373/282	ASSEMBLY–Bracket Support–Panel Waist Rail–R.H.	1	
21	373/283	ASSEMBLY–Bracket Support–Panel Waist Rail–L.H.	1	
22	CS.30101/Z	SCREW–Binding Head–Support Bracket	8	
23	KC.153/Z	SCREW–Support Bracket	2	
24	K.4404/Z	WASHER–Plain–Screw	10	
25	473/150	ASSEMBLY–Glass Channel–Rear Lower–R.H.	1	
26	473/151	ASSEMBLY–Glass Channel–Rear Lower–L.H.	1	
27	CS.30542/Z	SCREW–Binding Head–Glass Channel	4	
28	K.4404/Z	WASHER–Plain–Screw	6	
29	173/244	BRACKET–Glass Stop	2	Not required for Electric Op. Windows.
30	273/122	FELT–Bracket–Glass Stop	2	
31	KC.178/Z	SCREW–Bracket–Glass Stop	8	
32	K.4404/Z	WASHER–Plain–Screw	8	
33	373/284	ASSEMBLY–Panel Waist Rail–R.H.	1	
34	373/285	ASSEMBLY–Panel Waist Rail–L.H.	1	
35	CS.30542/Z	SCREW–Binding Head–Panel Waist Rail	4	
36	K.4404/Z	WASHER–Plain–Screw	4	

Items marked – are not supplied as individual parts

Silver Cloud II —From SRA1 Bentley S2 —From B1AA


BODY—

REAR DOORS (Less Trim and Fittings)

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

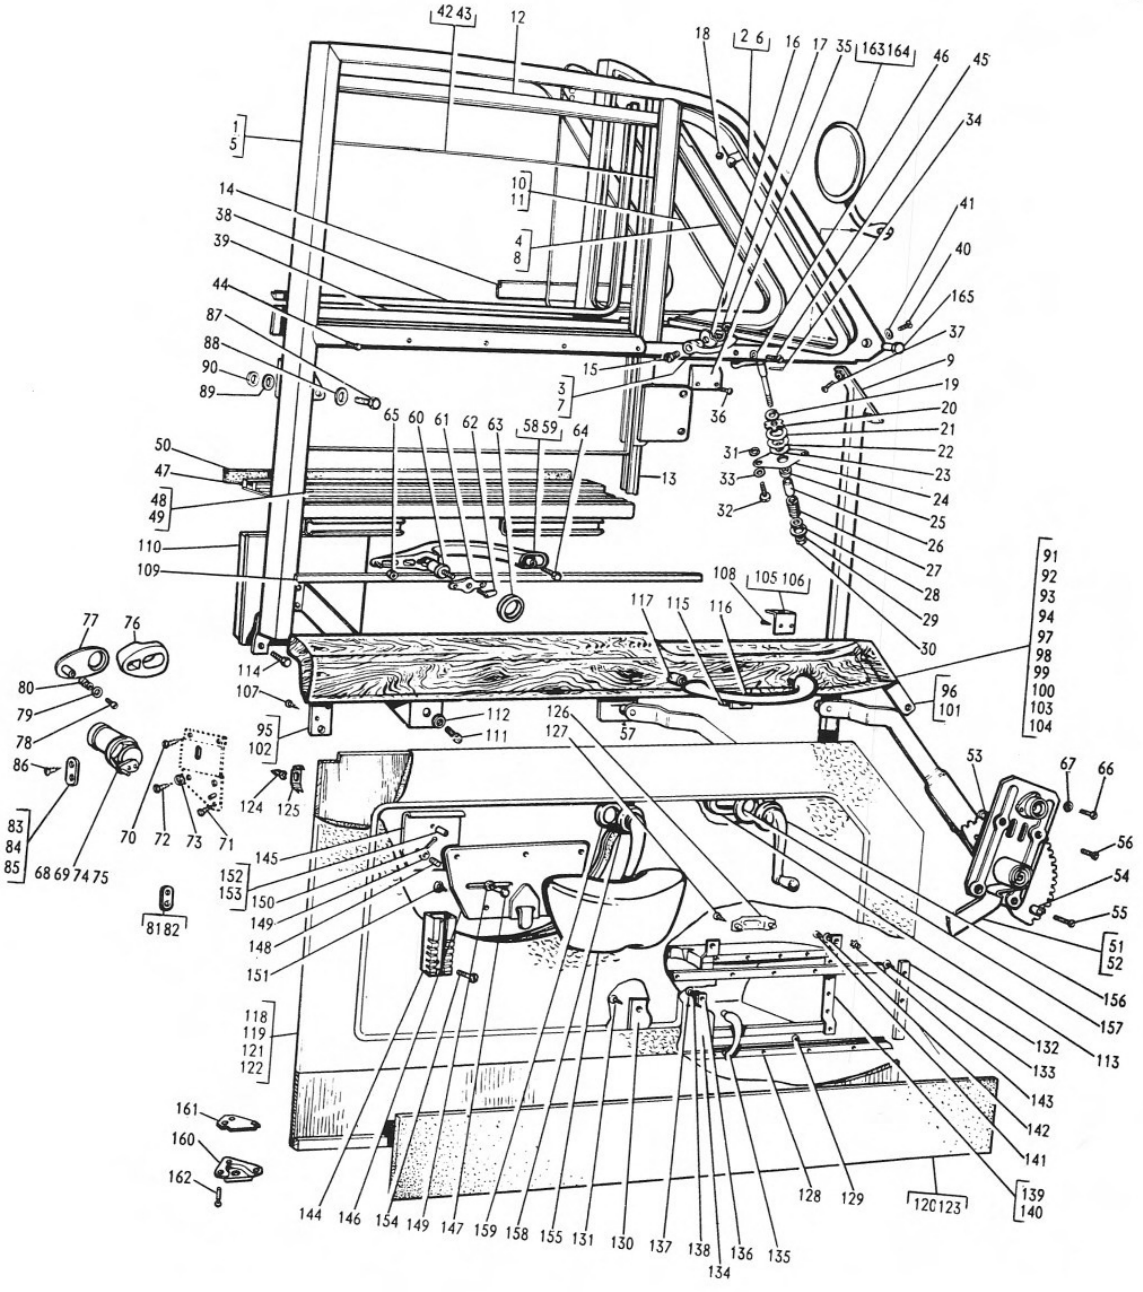

BODY—

FRONT DOORS—(Trim and Fittings).

AIR CONDITIONING—BOOT REFRIGERATION—
UNIT AND COMPRESSOR

L.16/1.—Amendment 1.

CHASSIS No's.

BENTLEY S.2—	B.151.CT.155, 187, 217, 273 285, 305, 363, 367, 415. B.8.CU. 70, 72, 172, 312, 340, 348, 364, 386, 390, 396, 406, 466, 490, 498, 534, 536. 570 to B.413.DV Incl.
BENTLEY S.2, LWB—	LBA.21 to LBB.22 Incl.
BENTLEY CONTINENTAL S.2—	BC.90.BY Onwards.
SILVER CLOUD II—	SWC.78, 270, 310, 396, 474, 478, 480, 482, 486, 500, 502, 516, 558, 560, 636, 638, 652, 664, 678. SXC.1, 9, 11, 87, 89, 145, 149, 151, 159, 213, 239, 259, 335, 339, 359, 375, 381, 405, 437, 455, 471, 491, 513, 547. 639 to SZD.345 Incl.
SILVER CLOUD II, LWB—	LCB.15, 18, 28, 31, 41, 44, 45, 46, 48, 50, 52, 53, 73, 82, 87, 90, 91. 92 to LCC.50 Incl.

FRAME—

FRAME FITTINGS—

M.2.—Amendment 1.

CHASSIS No's.


SILVER CLOUD II—	SPA.1 / SRA.2 to SYD.44 Incl.
SILVER CLOUD II LWB—	LCA.1 to LCB.85 Incl. LCB.91, 92.
BENTLEY S.2—	B.1 AA / B.2 AM to B.426 CU Incl. 430 to 478 Incl. 482, 576, 582, 588, 592.
BENTLEY S.2 LWB—	LBA.1 to LBB.2 Incl. LBB.7
BENTLEY CONTINENTAL S.2—	BC.1 AR to BC.99 BY Incl.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Printed in England.

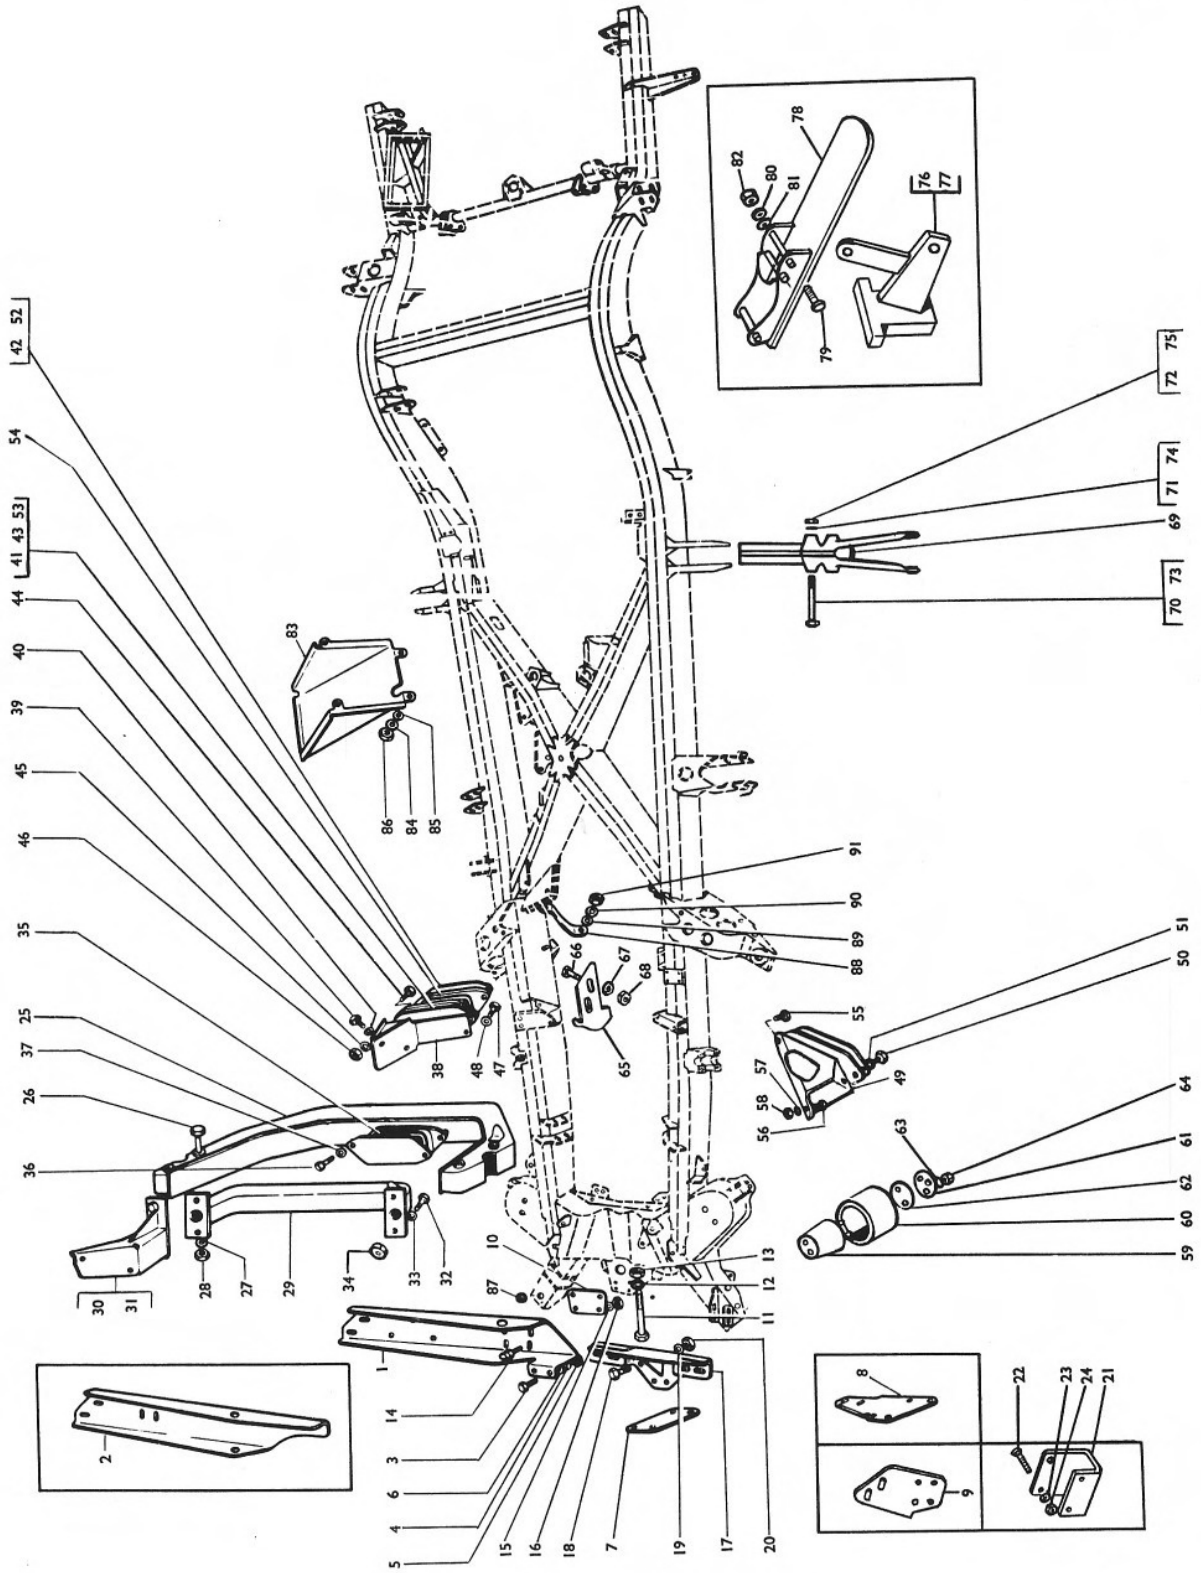

FRAME—

FRAME FITTINGS.

FRAME—

FRAME FITTINGS

	CHASSIS No's.
SILVER CLOUD II—	SYD.46 Onwards.
SILVER CLOUD II LWB—	LCB.86 to 90 Incl. LCB.93 Onwards.
BENTLEY S.2—	B.428.CU 480 484 to 574 Incl. 578, 580, 584, 586, 590 594 to 604 Onwards.
BENTLEY S.2 LWB—	LBB.3 to 6 Incl. 8 Onwards.
BENTLEY CONTINENTAL S.2—	BC.100.BY Onwards.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UR.4935	CHANNEL–Cross–Receiver–Cooling	1	Continental Cars.
2	UR.5203	CHANNEL–Cross–Receiver–Cooling	1	Other than Continental Cars.
3	UA.157/Z	BOLT–Cross Channel	2	
4	UA.6103/Z	WASHER–Plain–Bolt	4	
5	UA.302/Z	NUT–Bolt	2	
6	UA.6103/Z	WASHER–Plain–Packing–Cross Channel to Backing Plate	As required.	
7	UR.635	PLATE–Backing–LH–Anti Roll Bar	1	Continental Cars.
8	UR.2623	PLATE–Backing–LH–Anti Roll Bar	1	Other than Continental Cars.
9	UR.2622	PLATE–Backing–RH–Anti Roll Bar	1	
10	UR.1069	PLATE–Spreader–Radiator Mounting Bracket		As required for Radiator Packing Purposes.
11	UE.1032	BOLT–Radiator	1	
12	UA.1255/Z	WASHER–Plain–Bolt	1	
13	UA.355/Z	NUT–Bolt	1	
14	UA.104/Z	BOLT–Radiator Mounting and Spreader Plate	4	
15	UA.1251/Z	WASHER–Plain–Bolt	4	
16	UA.301/Z	NUT–Bolt	4	
17	UR.2626	ASSEMBLY–Bracket–Horn Mounting	1	
18	UA.155/Z	BOLT–Bracket	4	Other than Continental Cars.
19	UA.6103/Z	WASHER–Plain–Bolt	8	
20	UA.302/Z	NUT–Bolt	4	
21	UR.3369	BRACKET–Mounting–H.F. Horn	2	Required when High Frequency Horns are fitted.
22	UA.102/Z	BOLT–Bracket	4	
23	UA.1251/Z	WASHER–Plain–Bolt	4	
24	UA.301/Z	NUT–Bolt	4	
25	UR.4594	ASSEMBLY–Crossmember–Front Engine Mounting	1	
26	UR.4652	BOLT–Crossmember	4	
27	UA.6111/Z	WASHER–Plain–Bolt	16	
28	UA.305/Z	NUT–Bolt	4	
29	UR.4602	ASSEMBLY–Crossmember–Front Engine Mounting	1	
30	UR.4607	ASSEMBLY–Bracket–Front Engine Mounting–RH	1	
31	UR.4609	ASSEMBLY–Bracket–Front Engine Mounting–LH	1	
32	UA.153/Z	BOLT–Bracket to Engine Crossmember	4	
33	UA.1252/Z	WASHER–Plain–Bolt	4	
34	UA.302/Z	NUT–Bolt	4	
35	UR.4639	ASSEMBLY–Block–Engine Mounting	1	
36	UA.152/Z	SETSCREW–Mounting Block	4	
37	UA.1252/Z	WASHER–Plain–Setscrew	4	
38	UR.4618	ASSEMBLY–Bracket–Clutch Casing–RH	1	
39	UA.154/Z	SETSCREW–Bracket to Clutch Casing–RH	2	
40	UA.1252/Z	WASHER–Plain–Setscrew	2	
41	UR.3476	ASSEMBLY–Block–Engine Mounting	1	
42	UR.4615	ASSEMBLY–Plate–Bottom–Engine Mounting	1	
43	UR.4612	PLATE–Top–Engine Mounting	1	
44	UA.153/Z	BOLT–Mounting Block–Front	3	
45	UA.1252/Z	WASHER–Plain–Bolt	3	
46	UA.302/Z	NUT–Bolt	3	
47	UA.155/Z	SETSCREW–Mounting Block–RH	1	
48	UA.1252/Z	WASHER–Plain–Setscrew	1	
49	UE.8350	ASSEMBLY–Bracket–Rear Engine Mounting–LH	1	
50	UA.255/Z	SETSCREW–Bracket to Clutch Casing–LH	2	
51	UA.1254/Z	WASHER–Plain–Setscrew	2	
52	UR.4615	ASSEMBLY–Plate–Bottom–Engine Mounting	1	
53	UR.4612	PLATE–Top–Engine Mounting	1	
54	UR.3476	ASSEMBLY–Block–Engine Mounting	1	
55	UA.154/Z	BOLT–Mounting Block–Rear	3	
56	UA.155/Z	BOLT–Mounting Block–Rear	1	
57	UA.1252/Z	WASHER–Plain–Bolt	4	
58	UA.302/Z	NUT–Bolt	4	
59	UR.3941	STOP–Bump–Front Suspension	2	
60	UR.3939	HOUSING Bump Stop	2	
61	RF.8708	PIECE–Packing–Bump Stop	2	Alternative.
62	UR.4767	PIECE–Packing–Bump Stop	2	
63	UA.1251/Z	WASHER–Plain–Bump Stop	4	
64	UA.301/Z	NUT–Bump Stop	4	
65	UR.3167	ON STOP–Adjustable	1	
66	UA.204/Z	BOLT–On Stop	2	
67	UA.6104/Z	WASHER–Plain–Bolt	4	
68	RE.22430	NUT–Bolt	2	
69	UR.1072	ASSEMBLY–Jacking Bracket	2	Not required on Wider Bodied Cars.
70	UR.1002	BOLT–Jacking Bracket	4	
71	UA.1253/Z	WASHER–Plain–Bolt	4	
72	RE.22430	NUT–Lock–Bolt	4	
73	UA.253/Z	BOLT–Jacking Bracket	4	Not required on Wider Bodied Cars.
74	UA.1254/Z	WASHER–Plain–Bolt	4	
75	UA.354/Z	NUT–Lock–Bolt	4	
76	UR.4007	ASSEMBLY–Jacking Bracket–LH	1	
77	UR.4006	ASSEMBLY–Jacking Bracket–RH	1	
78	UR.2735	ASSEMBLY–Jacking Bracket	2	Required on Wider Bodied Cars.
79	UA.272/Z	BOLT–Jacking Bracket	2	
80	UA.1254/Z	WASHER–Plain–Bolt	2	
81	UR.2781	WASHER–Shim–Jacking Bracket	2	
82	UA.354/Z	NUT–Bolt	2	
83	UR.3048	STONEGUARD–Petrol Pump	1	Not required on cars fitted with A.C.U.
84	K.4404/Z	WASHER–Plain–Stoneguard	4	
85	UA.1252/Z	WASHER–Plain–Stoneguard	4	
86	K.4006/Z	NUT–Stoneguard	4	
87	UD.2136	GROMMET–Blanking–Frame	2	
88	UR.3138	STAY–Fulcrum Lever	1	
89	UA.1251/Z	WASHER–Plain–Stay	1	RH Cars.
90	K.4404/Z	WASHER–Plain–Stay	1	
91	K.4006/Z	NUT–Stay	1	

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF


FRAME—

FRAME FITTINGS

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

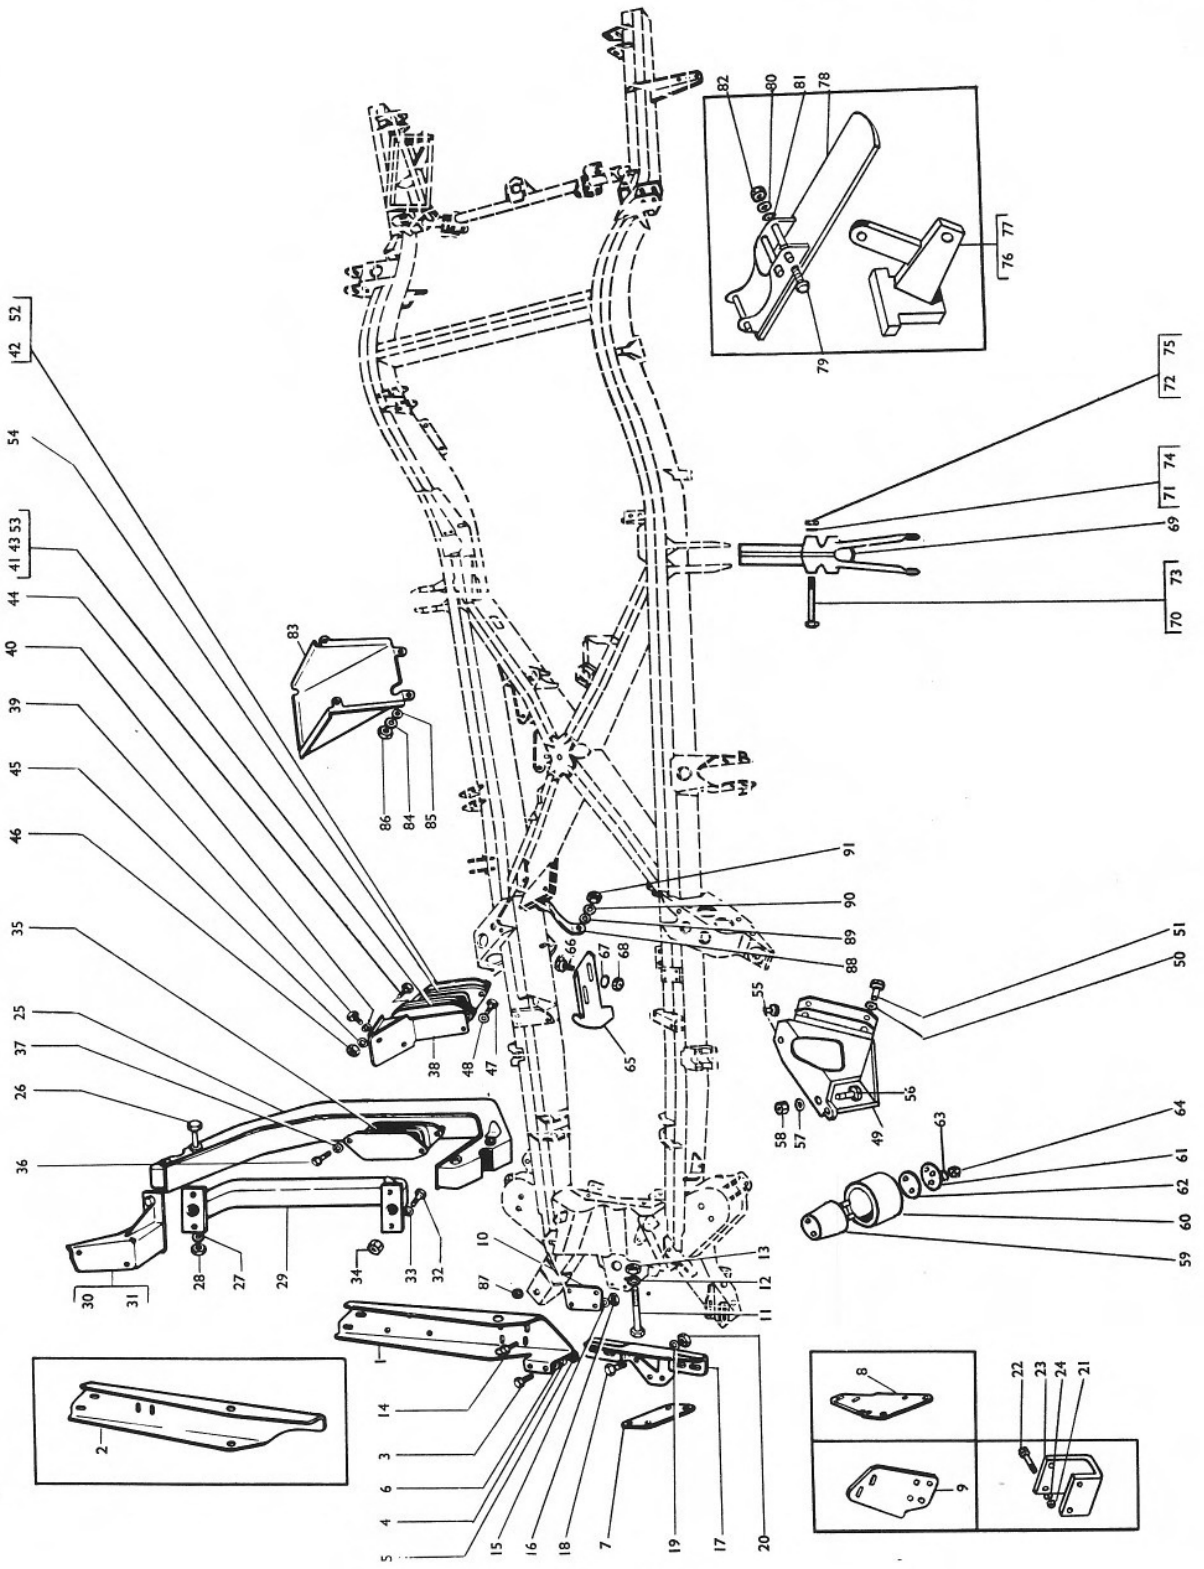

FRAME—

FRAME FITTINGS.

PARTS LIST

ROLLS-ROYCE SILVER CLOUD II,

BENTLEY S2, BENTLEY CONTINENTAL S2,

Ref.	Part No.	Description	No. off	Remarks
1	UE.5612	MANIFOLD–Exhaust–RH	1	
2	UE.5613	MANIFOLD–Exhaust–LH	1	
3	UA.753/R	STUD–Exhaust Manifold	6	
4	UE.1683	JOINT–Downtake Pipe to Manifold	2	
5	UE.3418	NUT–Stud–Exhaust Manifold	6	
6	UE.5646	ASSEMBLY–Adaptor–Tube–Exhaust Manifold–RH	1	
7	KB.1094/R	WASHER–Joint–Exhaust Manifold	1	
8	UA.5802/R	UNION–Adaptor–Exhaust Manifold	2	
9	KB.1078/R	WASHER–Joint–Exhaust Manifold	2	
10	UE.3499	ASSEMBLY–Downtake Pipe–Exhaust–RH	1	
11	UE.3416	ASSEMBLY–Downtake Pipe–Exhaust–LH	1	
12	UE.7716	ASSEMBLY–Angle Bracket–Downtake Pipe–RH	1	
13	UA.153/Z	SETSCREW–Angle Bracket	2	
14	UA.6103/Z	WASHER–Plain–Setscrew	2	
15	UE.1683	JOINT–Flange	2	
16	UA.157/Z	BOLT–Flanges–Downtake Pipe	6	
17	UA.1252/Z	WASHER–Plain–Bolt	6	
18	UA.302/R	NUT–Bolt	6	
19	UE.7563	ASSEMBLY–Front Silencer and Inter Pipe	1	123" W/Base Cars.
20	UE.7587	ASSEMBLY–Front Silencer and Inter Pipe	1	127" W/Base Cars.
21	UE.1144	PACKING–Flange	1	
22	UA.157/Z	BOLT–Flange	3	
23	UA.1252/Z	WASHER–Plain–Bolt	3	
24	UA.302/R	NUT–Bolt	3	
25	RE.18216	STRIP–Suspension	1	
26	EW.1332	PLATE–Holding–Suspension Strip	8	
27	UA.156/Z	BOLT–Suspension Strip	4	
28	UA.1252/Z	WASHER–Plain–Bolt	4	
29	E.50062	PIECE–Distance	4	
30	UA.302/Z	NUT–Bolt	4	
31	UE.7585	ASSEMBLY–Rear Silencer and Front Inter Pipe	1	
32	UE.1683	JOINT–Flange	1	
33	UA.157/Z	BOLT–Flange	3	
34	UA.1252/Z	WASHER–Plain–Bolt	3	
35	UA.302/R	NUT–Bolt	3	
36	RE.18216	STRIP–Suspension	1	
37	EW.1332	PLATE–Holding–Suspension Strip	8	
38	UA.156/Z	BOLT–Suspension Strip	4	
39	UA.1252/Z	WASHER–Plain–Bolt	4	
40	E.50062	PIECE–Distance	4	
41	UA.302/Z	NUT–Bolt	4	
42	UE.7591	ASSEMBLY–Rear Pipe and Damper Box	1	Other than Continental.
43	UE.7735	ASSEMBLY–Rear Pipe and Damper Box	1	Continental except Park Ward.
44	RE.18216	STRIP–Suspension	2	
45	EW.1332	PLATE–Holding–Suspension Strip	16	
46	UA.156/Z	BOLT–Suspension Strip	8	Other than Park Ward Continental.
47	UA.1252/Z	WASHER–Plain–Bolt	8	
48	E.50062	PIECE–Distance	8	
49	UA.302/Z	NUT–Bolt	8	
50	UE.7827	ASSEMBLY–Rear Pipe and Damper Box	1	
51	RE.18216	STRIP–Suspension	1	
52	EB.3559	STRIP–Suspension	1	
53	EW.1332	PLATE–Holding–Suspension Strip	16	
54	UA.156/Z	BOLT–Suspension Strip	8	
55	UA.1252/Z	WASHER–Plain–Bolt	8	Park Ward Continental.
56	E.50062	PIECE–Distance	8	
57	UA.302/Z	NUT–Bolt	8	
58	UE.7825	BRACKET–Angle	1	
59	UA.152/Z	BOLT–Angle Bracket	2	
60	UA.1252/Z	WASHER–Plain–Bolt	2	
61	UA.302/Z	NUT–Bolt	2	
62	UR.4610	SHIELD–Heat–Front–Engine	1	
63	UB.1366	ASSEMBLY–Heat Shield–Small–Front Silencer	1	Not required with Refrigeration.
64	UB.1370	ASSEMBLY–Heat Shield–Large–Front Silencer	1	Not required when Refrigeration or Safety Belts are fitted.
65	UB.1218	ASSEMBLY–Heat Shield–Rear Silencer	1	
66	CS.31061/Z	SCREW–Binding Head	17	
67	CS.31044/Z	SCREW–Binding Head	2	
68	K.4404/Z	WASHER–Plain–Screw	19	
69	UB.2685	ASSEMBLY–Heat Shield–Large–Front Silencer	1	For use with Safety Belts.
70	UB.2686	ASSEMBLY–Heat Shield–Rear Silencer	1	Not required with Refrigeration.

Items marked † are not supplied as individual parts

FOR CHASSIS NUMBERS SEE OVERLEAF

FRAME—

EXHAUST FITTINGS

M.3.—Amendment 1.

CHASSIS No's.

SILVER CLOUD II— From SPA.2 to STB.50 Incl. 54 to 64 Incl.
From SRA.1 68 to 114 Incl.
118 to 148 Incl., 152 to 206 Incl., 210, 216 to 220 Incl.
228, 230, 236, 238, 242, 246, 248, 252 to 278 Incl.
282, 286, 288, 292, 296, 298, 304, 308 to 324 Incl.
328, 330, 334, 338, 340, 344 to 366 Incl., 372, 374,
378, 396, 398, 400, 402, 408, 410, 414, 420,
424, 428 to 444 Incl., 454 to 468 Incl.
480 to 484 Incl., 490 to 500 Incl.
SVB.29 to 49 Incl., 53, 61, 63, 79 to 91 Incl.
95 to 99 Incl., 105, 109, 125, 139 to 151 Incl., 157,
161, 175, 181, 187, 189, 205 to 209 Incl., 213, 217,
219, 223, 233, 235, 245, 249, 255 to 259 Incl., 263, 265,
271, 275, 277, 283, 291, 301, 303, 307, 309, 315, 317,
321 to 327 Incl., 333, 335, 339 to 343 Incl.,
349 to 353 Incl., 357, 371 to 375 Incl., 383, 389,
395, 401, 403, 407, 413, 417, 419, 421, 429, 435, 441,
447, 455, 463 to 469 Incl., 495 to 501 Incl.

SILVER CLOUD II, LWB— From LCA.1 to 39 Incl., 42, 43, 51, 54, 56, 58, 59,
62, 64, 70, 71, 72, 74, 75.

BENTLEY S.2— From B.1.AA to B.119.BR.123 to 131 Incl.,
From B.2.AM 135 to 145 Incl.
149 to 245 Incl., 249, 253, 257 to 269 Incl.
273 to 287 Incl., 291, 297 to 321 Incl., 325 to 333 Incl.
341, 345 to 369 Incl., 377 to 383 Incl., 387 to 419 Incl.
431 to 439 Incl., 443 to 449 Incl., 455 to 471 Incl.,
475, 485 to 489 Incl., 497 to B.14.BS Incl.
24, 30 to 46 Incl., 54 to 60 Incl., 70 to 90 Incl.,
94, 98, 102, 106 to 114 Incl., 118 to 130 Incl.
138 to 148 Incl., 154 to 162 Incl., 166, 170, 174,
178, 182, 190, 192, 200, 202, 208, 212, 216, 220, 224,
228 to 242 Incl., 248, 252, 254, 260, 266, 274 to 292 Incl.
302 to 310 Incl., 314, 324 to 328 Incl., 332,
334, 344, 354 to 368 Incl., 378, 380, 416.

BENTLEY S.2, LWB— From LBA.1 to 6 Incl., 8, 10 to 17 Incl.

BENTLEY CONTINENTAL S.2—From BC.1.AR