



SECTION F
BRAKES

Title	Assembly	Page No.
FRONT BRAKE		F. 1
REAR BRAKE		F. 2
	WHEEL CYLINDER AND ADJUSTER	F. 3
SERVO MOTOR		F. 4
SERVO LEVER, RODS AND LINKAGES	EARLY TYPE LATER TYPE	F. 5 F. 6
BRAKE PEDAL	(R.C.) EARLY TYPE	F. 7
	(R.C.) LATER TYPE	F. 8
	(L.C.) EARLY TYPE	F. 9
	(L.C.) LATER TYPE	F. 10
PEDAL GAP PLATE	STANDARD CARS	F. 11
	COACHBUILT CARS	F. 12
RESERVOIR AND SUPPLY PIPES		F. 13
	'CONTINENTAL' CARS	F. 14
MASTER CYLINDERS		F. 15
OPERATING PIPES	FRONT BRAKES	F. 16
	REAR BRAKES	F. 17
REAR BRAKE LEVERS, RODS AND BRACKETS		F. 18
HANDBRAKE	(R.C.)	F. 19
	(L.C.)	F. 20

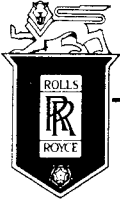

SPARES schedule


SILVER CLOUD AND BENTLEY 'S' TYPE

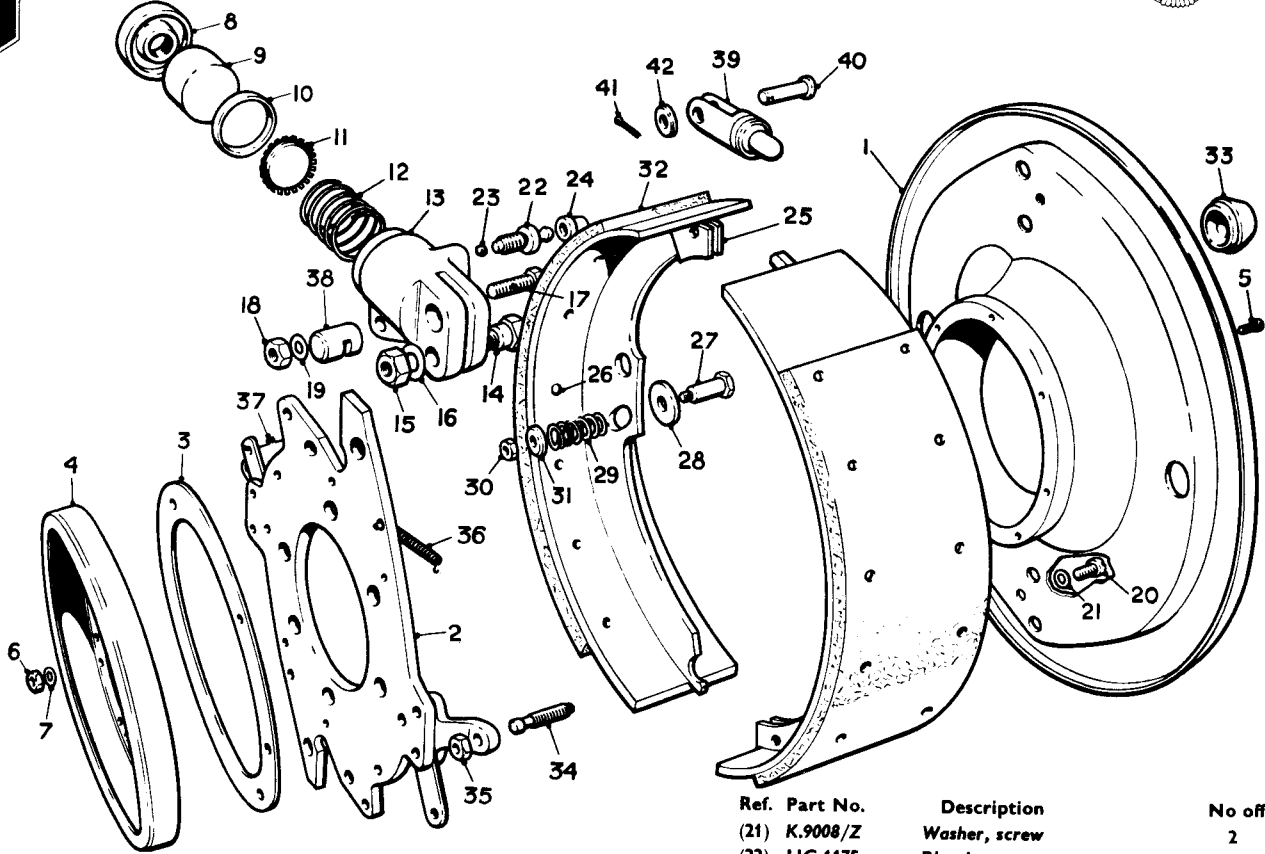

Ref. Part No.	Description	No off
UG.2885	FRONT BRAKE ASSY. R.H. Mintex lining	1 } Alt.
UG.2884	FRONT BRAKE ASSY. R.H. Ferodo lining	
UG.2887	FRONT BRAKE ASSY. L.H. Mintex lining	1 } Alt.
UG.2886	FRONT BRAKE ASSY. L.H. Ferodo lining	
(1) UG.2478	Water excluder, R.H. assy.	1
UG.2477	Water excluder, L.H. assy.	1
(2) UG.2403	Carrier plate, R.H. assy.	1
UG.2404	Carrier plate, L.H. assy.	1
(3) UG.675	Joint, grease catcher	1
(4) UG.667	Grease catcher	1
(5) K.1910/Z	Screw, excluder	8
(6) K.4307/Z	Nut, Screw	8
(7) K.9006/Z	Washer Screw	8
UG.2783	WHEEL CYLINDER ASSY. R.H.	1
UG.2782	WHEEL CYLINDER ASSY. L.H.	1
(8) UG.1383	Dust cover	1
(9) UG.1177	Piston	1
(10) UG.1385	Seal	1
(11) UG.2784	Spreader	1
(12) UG.1386	Spring	1
(13) UG.2460	Body, R.H. assy.	1
UG.2459	Body, L.H. assy.	1
CD.1203	Kit, service, wheel cylinder	
(14) UG.658	Bolt, .500", cylinder	2
(15) UA.355/Z	Nut, bolt	2
(16) K.9012/Z	Washer, nut	2
(17) UG.1379	Bolt, .312", cylinder	2
(18) UA.302/Z	Nut, Bolt	2
(19) CS.32060/Z	Washer, nut	2
(20) UA.2101/Z	Screw, .250", cylinder	2


Ref. Part No.	Description	No off
(21) K.9008/Z	Washer, screw	2
(22) UG.1175	Bleed, screw	2
(23) UG.1181	Ball valve, bleed screw	2
(24) UG.2427	Dust cap, bleed screw	2
UG.2804	SHOE & LINING ASSY. R.H. (Ferodo)	2 } Alt.
UG.2801	SHOE & LINING ASSY. L.H. (Ferodo)	
UG.2803	SHOE & LINING ASSY. R.H. (Mintex)	2 } Alt.
UG.2862	SHOE & LINING ASSY. L.H. (Mintex)	
(25) UG.2682	Shoe	1
(26) UG.3114	Rivet	12
(27) UG.3658	Collar, shake back stop	1
(28) UG.3222	Washer, friction	2
(29) UG.2032	Spring, shake back stop	1
(30) UG.3659	Nut, clamping	1
(31) UG.1262	Washer, bolt	1
(32) UG.2071	Lining (Ferodo)	1
UG.1523	Lining (Mintex)	1
(33) UG.1169	Dust cap, shake back stop	2
(34) UG.2325	Steady post	2
(35) UA.352/Z	Nut, steady post	2
(36) UG.1285	Spring, return, shoe	2
(37) UG.661	Spring, warning	2
(38) UG.1280	Pivot pin, shoe	2
(39) UG.3576	Link, shoe	2
(40) UG.2805	Pin, link	2
(41) K.4607	Split pin, link	2
(42) UG.1446	Washer, link pin	2
RH.2035	SHOE & LINING ASSY. (Ferodo) (without shake back stop)	
RH.2036	SHOE & LINING ASSY. (Mintex) (without shake back stop)	

BRAKES—FRONT




SPARES schedule

SILVER CLOUD AND BENTLEY 'S' TYPE

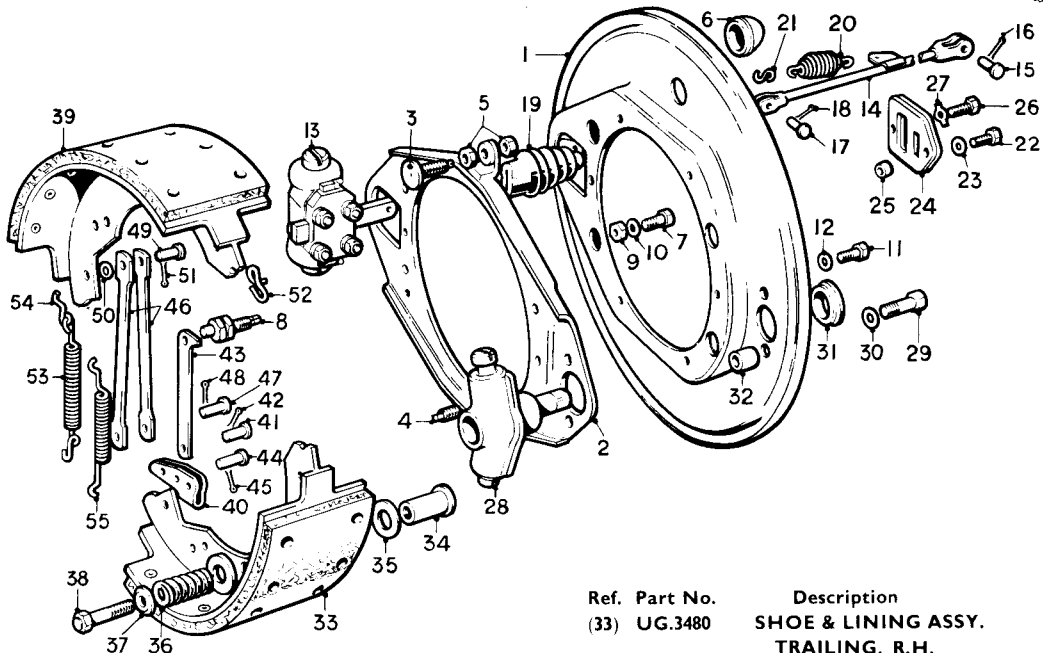

Ref.	Part No.	Description	No off	Ref.	Part No.	Description	No off
(1)	UG.2555	Water excluder	1	(33)	UG.3480	SHOE & LINING ASSY. TRAILING, R.H.	1
(2)	UG.2299	Carrier plate	1				
(3)	UG.3409	Steady post	1				
(4)	UG.2325	Steady post, shake back stop	1				
(5)	UA.352/Z	Lock nut, steady post	2				
(6)	UG.1169	Dust cover, steady post	2				
(7)	UG.803	Bolt, excluder	3				
(8)	UG.1166	Eccentric, adjusting	1				
(9)	UA.302/Z	Nut, Bolt	4				
(10)	UA.1252/Z	Washer, nut	4	(34)	UG.2324	Collar, shake back stop	1
(11)	K.1904/Z	Screw, excluder	5	(35)	UG.3222	Washer, friction	2
(12)	K.4404/Z	Washer, screw	5	(36)	UG.2032	Spring, shake back stop	1
(13)	UG.2747	WHEEL CYLINDER ASSY., R.H.	1	(37)	UG.1262	Washer, clamping	1
	UG.2748	WHEEL CYLINDER ASSY., L.H.	1	(38)	UG.2326	Bolt, clamping	1
(14)	UG.872	Rod assembly, link to equaliser lever, R.H.	1	(39)	UG.3478	SHOE & LINING ASSY. LEADING	1
	UG.870	Rod assembly, link to equaliser lever, L.H.	1				
(15)	K.6504/Z	Pin, rod to link	1				
(16)	K.4608/Z	Split pin, pin	1				
(17)	K.6513/Z	Pin, rod to equaliser lever	1	(40)	UG.2236	Lever, compression link	1
(18)	K.4608/Z	Split pin, pin	1	(41)	K.6504/Z	Pin, lever to shoe	1
(19)	UG.1174	Boot, brake rod	1	(42)	K.4608/Z	Split Pin, Pin	1
(20)	RE.17032	Spring, rod to excluder	1	(43)	UG.864	Link, compression	1
(21)	RG.6025	Link, spring	2	(44)	UG.2237	Pin, centre lever to link	1
(22)	K1910/Z	Screw, cover plate	1	(45)	K.4602/Z	Split pin, pin	1
(23)	K.4404/Z	Washer, screw	1	(46)	UG.1173	Link, tension	2
(24)	UG.2549	COVER PLATE & SEAL ASSY.	1	(47)	K.6508/Z	Pin, links	1
	UG.2301	Seal	1	(48)	K.4608/Z	Split pin, pin	1
(25)	UG.2302	Piece, distance, cover plate	2	(49)	K.6504/Z	Pin, links to shoe	1
(26)	KC.178/Z	Setscrew, cover plate	1	(50)	K.4404/Z	Washer, pin	1
(27)	KB.7104/Z	Tab washer, setscrew	1	(51)	K.4608/Z	Split pin, pin	1
(28)	UG.795	ADJUSTER UNIT ASSY.	1	(52)	UG.1171	Hook, spring, eccentric	2
(29)	UG.1376	Setscrew, adjuster	2				
(30)	UA.1253/Z	Washer, setscrew	2				
(31)	GB.4327	Seal, adjuster	1				
(32)	UG.1367	Distance piece, excluder	2	(53)	UG.1154	Spring	1
				(54)	UG.1155	Lever	1
				(55)	UG.1552	Spring, adjuster	1

BRAKES - REAR


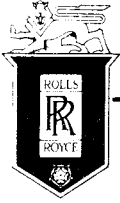


SPARES schedule


SILVER CLOUD AND BENTLEY 'S' TYPE



Ref.	Part No.	Description	No off
	UG.2747	WHEEL CYLINDER ASSY. R.H.	1
	UG.2748	WHEEL CYLINDER ASSY. L.H.	1
	UG.2725	Cylinder unit	1
(1)	UG.2464	Body	1
(2)	UG.1149	Piston	1
(3)	UG.2729	Seal	1
(4)	UG.2726	Spreader	1
(5)	UG.1146	Spring	1
(6)	UG.1150	Boot, rubber	2
(7)	UG.1227	Tappet guide	1
(8)	UG.1228	Sandwich plate	1
(9)	UG.3462	Distance piece, tappet guide	4
(10)	UG.2068	Stud, body	4
(11)	K.4404/Z	Washer, stud	4
(12)	K.9006/Z	Washer, spring stud	4
(13)	K.4307/Z	Nut, stud	4
(14)	UG.3664	Draw link, R.H.	1
	UG.3665	Draw link, L.H.	1
(15)	UG.863	Roller, tappet guide	2
(16)	UG.861	Tappet	2
(17)	UG.1175	Bleed screw	1
(18)	UG.1181	Ball, valve	1
(19)	UG.2427	Dust cap, bleed screw	1
	CD.1204	KIT, SERVICE, WHEEL CYL.	1
(6)	UG.1150	Boot, rubber	2
(5)	UG.1146	Spring	1
(3)	UG.2729	Seal	2
(4)	UG.2726	Spreader	2
(19)	UG.2427	Dust cap	1
(18)	UG.1181	Ball, valve	1
	UG.795	ADJUSTER UNIT, ASSY.	1
(20)	UG.797	Plunger, R.H.	1
(21)	UG.798	Plunger, L.H.	1
(22)	UG.759	Housing	1
(23)	UG.760	Cone, adjuster	1

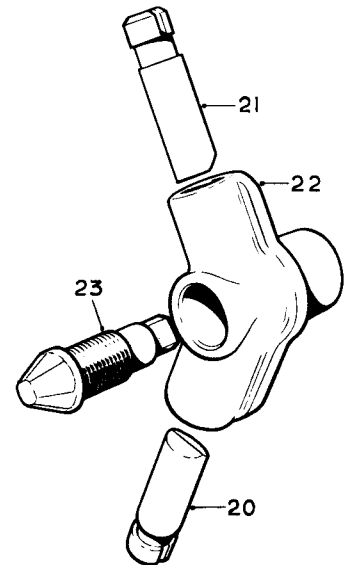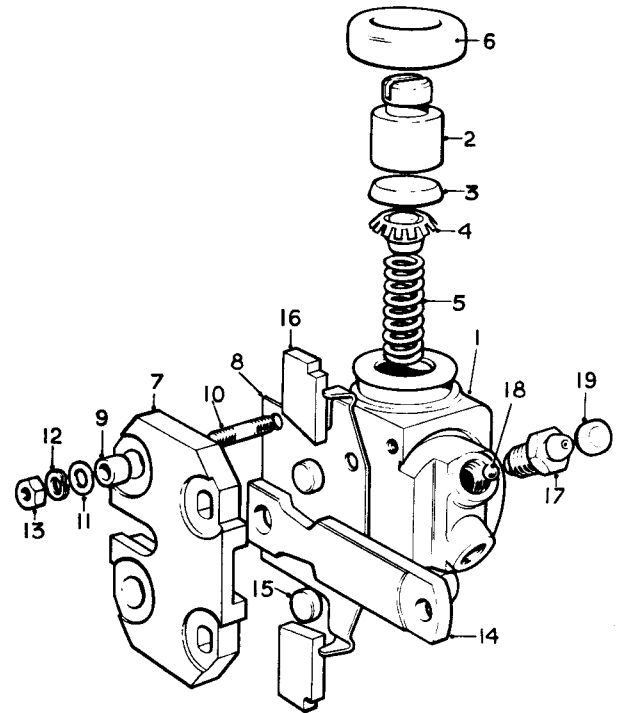


BRAKES - REAR

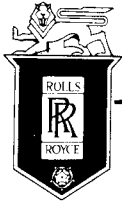


SPARES schedule

SILVER CLOUD AND BENTLEY 'S' TYPE

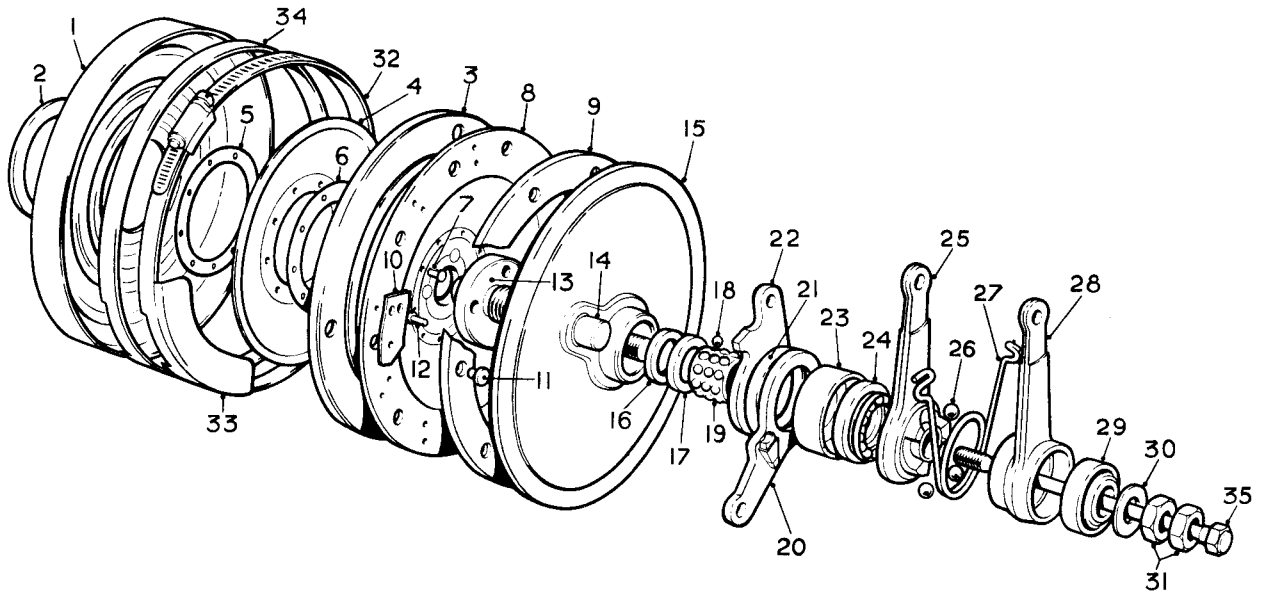


Ref.	Part No.	Description	No off	Ref.	Part No.	Description	No off
	UG.2475	SERVO MOTOR ASSY.	1		UG.2446	REVERSE LEVER ASSY.	1
(1)	UG.3528	SPRING PLATE ASSY.	1		RG.8021	Bump rubber	1
(2)	UG.2936	Washer	1		RG.8022	Cup, bump	1
	UG.2543	DRIVING PLATE ASSY.	1		UG.2445	Lever	1
(3)	RG.4767	Inertia ring	1	(21)	GB.5083	Washer, levers	1
(4)	RG.4220	Belleville washer	1	(22)	UG.2554	FORWARD LEVER ASSY.	1
(5)	RG.4221	Backing plate	1	(23)	RG.3939	Cover, dust	1
(6)	RG.7148	Washer, adjusting, .003"	As	(24)	GB.3501	THRUST BEARING ASSY.	1
(6)	RG.7149	Washer, adjusting, .005"	reqd.		RG.3100	Cage, thrust race	1
(7)	KB.13126	Rivet	9	(25)	UG.2586	LEVER, CAM, INNER, ASSY.	1
	UG.2541	PLATE AND LININGS ASS.	1		GB.3546	Bush	1
(8)	RG.7150	Plate, driving	1	(26)	RG.6131	Ball	3
(9)	UG.2542	Lining, friction	1		RG.6594	Ball	3 } Alt.
(10)	RG.3905	Spring plate	9	(27)	UG.1247	Spring, torsion	1
(11)	RG.3916	Rivet, lining	9	(28)	UG.2587	LEVER, CAM, OUTER, ASSY.	1
(12)	KB.13123	Rivet, countersunk head	18		GB.3545	Sleeve	1
(13)	UG.805	Shaft	1	(29)	RG.4450	Bearing	1
	UG.3066	PRESSURE PLATE ASSY.	1		RG.5656	Bearing	1 } Alt.
(14)	RG.8073	Pin, operating	1	(30)	UG.1136	Washer, shaft	1
(15)	UG.3052	Plate, pressure	1	(31)	UA.356/Z	Nut	2
(16)	D.54399	Washer, felt	1	(32)	UG.3069	Clip, "Jubilee"	1
(17)	GB.4171	Washer, steel	1	(33)	UG.2907	Excluder, water	1
	RH.210	BEARING, INNER, SHELL, ASS.	1	(34)	UG.2140	Band, sealing	1
(18)	RG.6209	Ball	24	(35)	UG.775	Setscrew, servo shaft	1
	RG.6593	Ball	24		GB.5117	Setscrew, servo shaft	1
(19)	GB.3898	Cage, ball	1				1 } "Continental" with synchro gearbox

SERVO MOTOR.



SPARES schedule


SILVER CLOUD AND BENTLEY 'S' TYPE

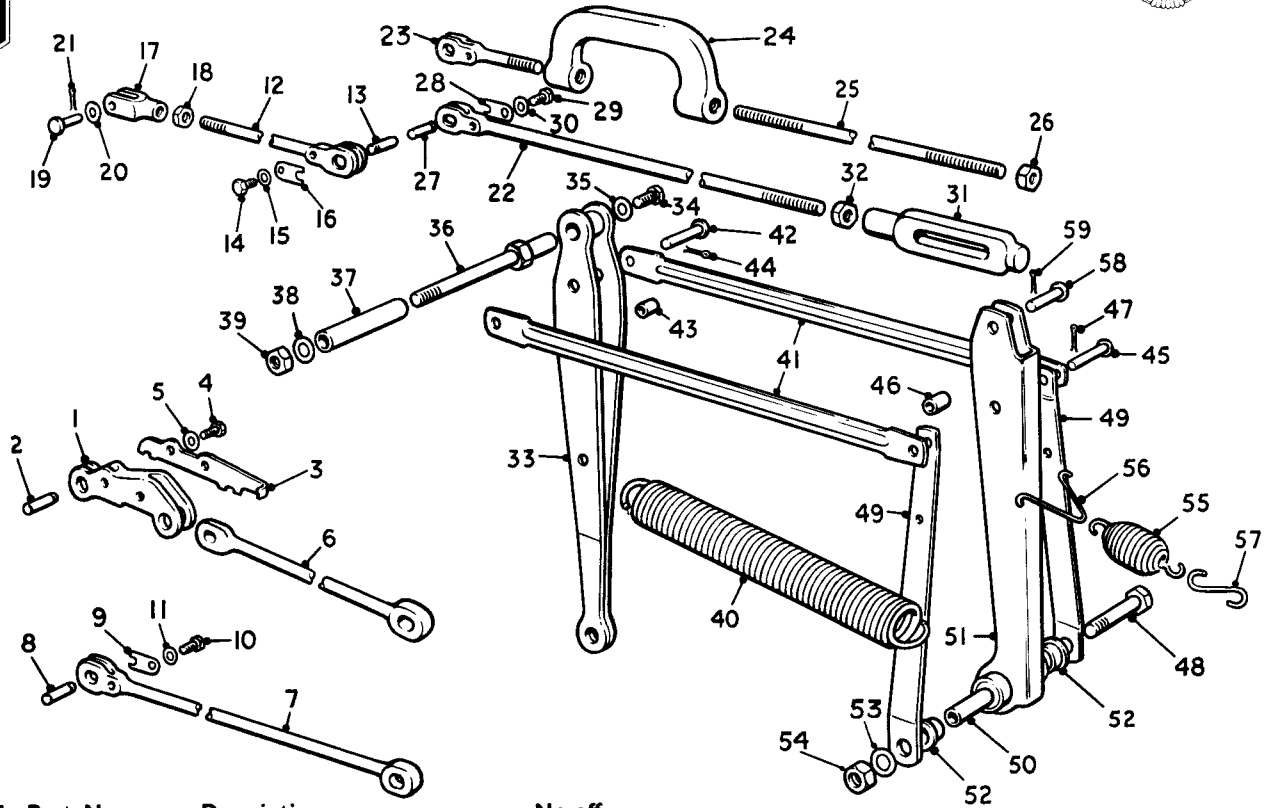

Ref.	Part No.	Description	No off	Ref.	Part No.	Description	No off
(1)	RG.8028	Link, forward, take-off lever	1	(30)	K.4404/Z	Washer, setscrew	1
(2)	GB.5086	Pin, locating	2	(31)	UG.1264	Link rod	1
(3)	RG.8027	Stop, lever	1	(32)	UA.351/Z	Nut, link	1
(4)	KC.151/Z	Screw, stop	2	(33)	UG.1196	Lever, operating, handbrake linkage	1
(5)	K.4404/Z	Washer, screw	2	(34)	UA.102/Z	Setscrew, fulcrum pin	1
(6)	UG.2454	Rod, forward take-off	1	(35)	UA.1251/Z	Washer, setscrew	1
(7)	UG.2582	Rod, reverse take-off	1	(36)	UG.1206	Pin, fulcrum, handbrake lever	1
(8)	GB.5086	Pin, locating	1	(37)	UG.925	Distance piece	1
(9)	GB.5085	Plate, locking	1	(38)	UA.1252/Z	Washer, fulcrum pin	1
(10)	KC.151/Z	Screw, plate	1	(39)	UA.352/Z	Nut, fulcrum pin	1
(11)	K.4404/Z	Washer, screw	1	(40)	UB.1534	Spring, return, handbrake lever	1
(12)	UG.986	Rod, servo to operating lever	1	(41)	UG.1200	Link, connecting, handbrake lever	2
(13)	GB.5086	Pin, locating	1	(42)	K.6513/Z	Pin, plain	1
(14)	UA.1501/Z	Setscrew, pin	1	(43)	UG.1199	Distance piece	1
(15)	K.4404/Z	Washer, setscrew	1	(44)	K.4608/Z	Split pin	1
(16)	GB.5085	Plate, locking	1	(45)	K.6515/Z	Pin, plain, fulcrum lever	1
(17)	UG.1184	Jaw, rod, operating lever	1	(46)	UG.913	Distance piece, fulcrum lever	1
(18)	UA.351/Z	Nut, jaw	1	(47)	K.4608/Z	Split pin	1
(19)	K.6507/Z	Pin, plain jaw	1	(48)	UA.162/Z	Bolt, fulcrum lever to bracket	1
(20)	UR.2630	Washer, tension	1	(49)	UG.918	Fulcrum operating levers	2
(21)	K.4608/Z	Pin, split	1	(50)	UG.914	Distance piece, levers	1
(22)	UG.1265	Rod, servo to fulcrum lever (Except Bentley with Synchro gearbox)	1	(51)	UG.916	FULCRUM LEVER ASSY.	1
(23)	UG.2011	Rod, servo to cranked rod	1	(52)	RF.7381	Bush, "Oilite"	1
(24)	UG.1998	Rod, cranked	1	(53)	UA.1252/Z	Washer, bolt	1
(25)	UG.2012	Rod, cranked rod to fulcrum lever	1	(54)	UA.352/Z	Nut, bolt	1
(26)	UA.351/Z	Nut, rods ("Continental" with Synchro gearbox only)	2	(55)	RE.17032	Spring, anti-rattle, levers	1
(27)	GB.5086	Pin, locating servo lever	1	(56)	UG.917	Hook, spring to lever	1
(28)	GB.5085	Plate, locking, servo lever	1	(57)	UG.1266	Hook, spring to frame	1
(29)	UA.1501/Z	Setscrew, plate	1	(58)	K.6508/Z	Pin, plain, fulcrum levers	1
				(59)	K.4608/Z	Split pin	1


Silver Cloud SWA-2 to SHF-75
 Bentley AN-2 to FD-107

SERVO LEVERS, RODS & LINKAGES

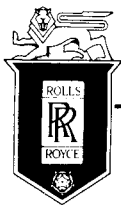

SPARES schedule


SILVER CLOUD AND BENTLEY 'S' TYPE

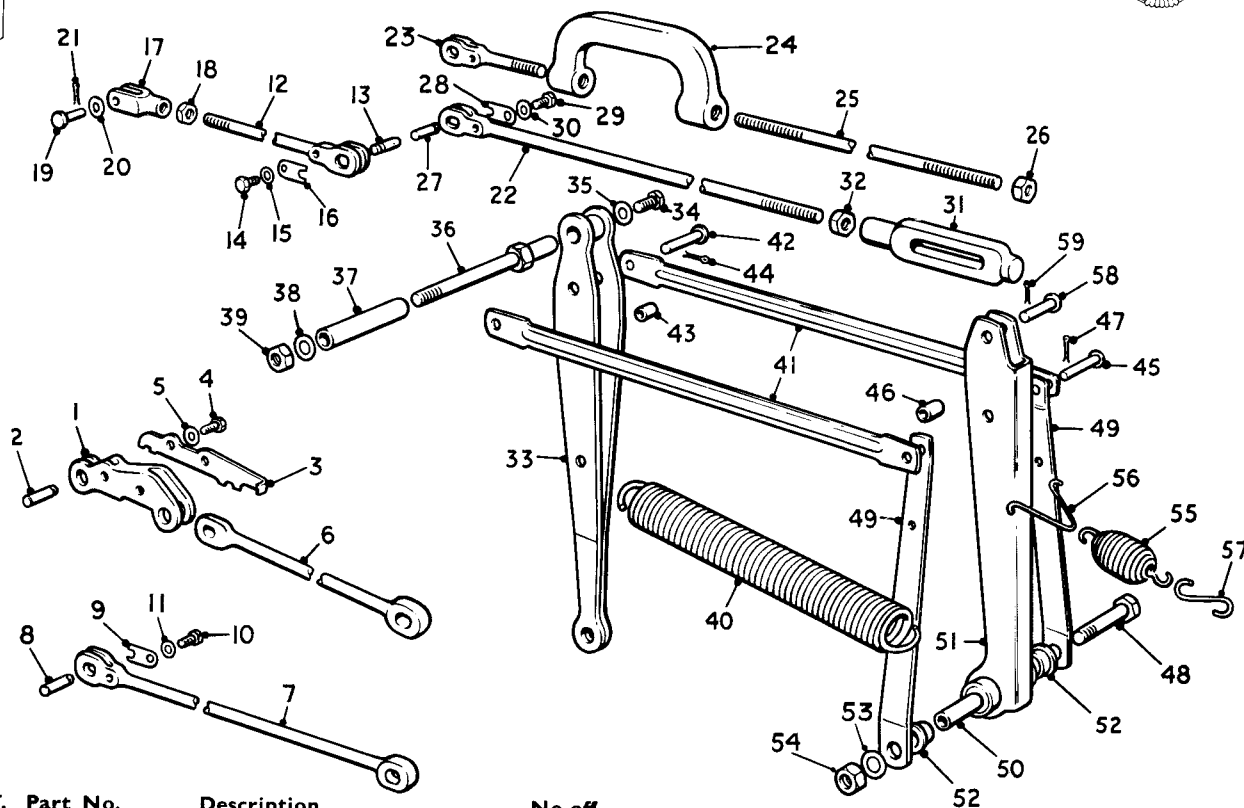

Ref.	Part No.	Description	No off	Ref.	Part No.	Description	No off
(1)	RG.8028	Link, forward, take-off lever	1	(30)	K.4404/Z	Washer, setscrew	1
(2)	GB.5086	Pin, locating	2	(31)	UG.1264	Link rod	1
(3)	RG.8027	Stop, lever	1	(32)	UA.351/Z	Nut, link	1
(4)	KC.151/Z	Screw, stop	2	(33)	UG.1196	Lever, operating, handbrake linkage	1
(5)	K.4404/Z	Washer, screw	2	(34)	UA.102/Z	Setscrew, fulcrum pin	1
(6)	UG.2454	Rod, forward take-off	1	(35)	UA.1251/Z	Washer, setscrew	1
(7)	UG.2582	Rod, reverse take-off	1	(36)	UG.1206	Pin, fulcrum, handbrake lever	1
(8)	GB.5086	Pin, locating	1	(37)	UG.925	Distance piece	1
(9)	GB.5085	Plate, locking	1	(38)	UA.1252/Z	Washer, fulcrum pin	1
(10)	KC.151/Z	Screw, plate	1	(39)	UA.352/Z	Nut, fulcrum pin	1
(11)	K.4404/Z	Washer, screw	1	(40)	UB.1534	Spring, return, handbrake lever	1
(12)	UG.986	Rod, servo to operating lever	1	(41)	UG.1200	Link, connecting, handbrake lever	2
(13)	GB.5086	Pin, locating	1	(42)	K.6513/Z	Pin, plain	1
(14)	UA.1501/Z	Setscrew, pin	1	(43)	UG.1199	Distance piece	1
(15)	K.4404/Z	Washer, setscrew	1	(44)	K.4608/Z	Split pin	1
(16)	GB.5085	Plate, locking	1	(45)	K.6515/Z	Pin, plain, fulcrum lever	1
(17)	UG.1184	Jaw, rod, operating lever	1	(46)	UG.913	Distance piece, fulcrum lever	1
(18)	UA.351/Z	Nut, jaw	1	(47)	K.4608/Z	Split pin	1
(19)	K.6507/Z	Pin, plain jaw	1	(48)	UA.162/Z	Bolt, fulcrum lever to bracket	1
(20)	UR.2630	Washer, tension	1	(49)	UG.3042	Fulcrum operating levers	2
(21)	K.4608/Z	Pin, split	1	(50)	UG.3033	Distance piece, levers	1
(22)	UG.1265	Rod, servo to fulcrum lever (Except Bentley "S" with Synchro gearbox)	1	(51)	UG.3031	FULCRUM LEVER ASSY.	1
(23)	UG.2011	Rod, servo to cranked rod	1	(52)	RF.7381	Bush, "Oilite"	1
(24)	UG.1998	Rod, cranked	1	(53)	UA.1252/Z	Washer, bolt	1
(25)	UG.2012	Rod, cranked rod to fulcrum lever	1	(54)	UA.352/Z	Nut, bolt	1
(26)	UA.351/Z	Nut, rods ("Continental" with Synchro gearbox only)	2	(55)	RE.17032	Spring, anti-rattle, levers	1
(27)	GB.5086	Pin, locating servo lever	1	(56)	UG.917	Hook, spring to lever	1
(28)	GB.5085	Plate, locking, servo lever	1	(57)	UG.1266	Hook, spring to frame	1
(29)	UA.1501/Z	Setscrew, plate	1	(58)	K.6508/Z	Pin, plain, fulcrum levers	1
				(59)	K.4608/Z	Split pin	1


Silver Cloud ... SHF-77 onwards
 Bentley ... FD-109 onwards

SERVO LEVERS, RODS AND LINKAGES

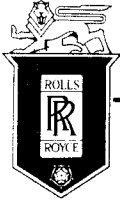

SPARES schedule


SILVER CLOUD AND BENTLEY 'S' TYPE

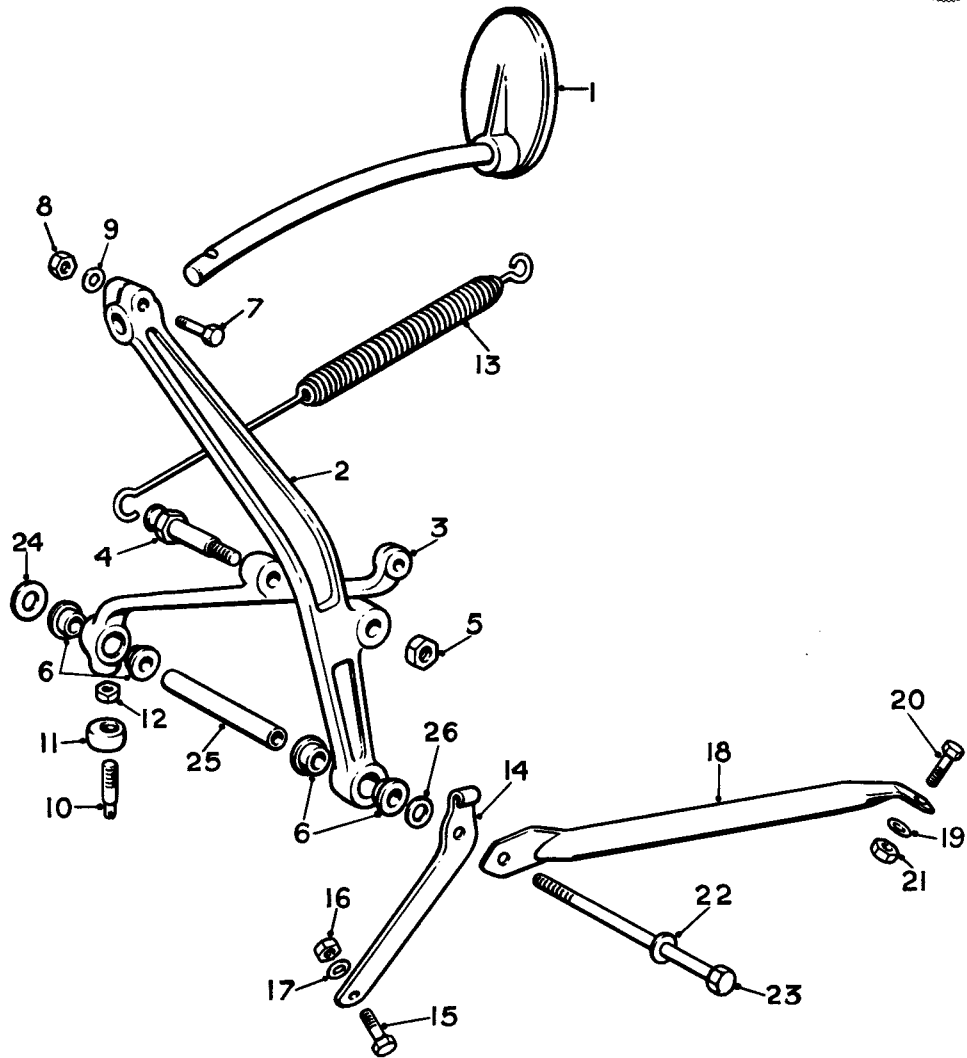

Ref.	Part No.	Description	No off	Ref.	Part No.	Description	No off
(1)	RF.7376	BRAKE PEDAL ASSEMBLY	1	(12)	UA.351/Z	Nut, screw	1
			Bentley	(13)	UR.1279	Spring, pull-off	1
	UR.946	BRAKE PEDAL ASSEMBLY	1	(14)	UR.926	Bracket, support.	1
			Silver Cloud	(15)	UA.151/Z	Bolt, bracket	1
	UR.840	BRAKE PEDAL LEVER ASSEMBLY	1	(16)	UA.352/Z	Nut, bolt	1
(2)	UR.831	Lever, pedal	1	(17)	UA.1252/Z	Washer, bolt	1
(3)	UR.832	Lever, operating	1	(18)	UR.1291	Stay, pedal pivot	1
(4)	UR.839	Bolt, return spring	1	(19)	UG.900	Washer, stay to bracket	1
(5)	RE.22430	Nut, bolt	1	(20)	UA.152/Z	Bolt, stay	1
(6)	RF.7381	Bush "Oilite"	4	(21)	UA.352/Z	Nut, bolt	1
(7)	UA.157/Z	Bolt, pedal stem	1	(22)	UA.1252/Z	Washer, bolt	1
(8)	UA.302/Z	Nut, bolt	1	(23)	UA.179/Z	Bolt, pivot	1
(9)	UA.1252/Z	Washer, bolt	1	(24)	UG.900	Washer, pivot, .750" O/D	3
	UR.835	STOP AND SCREW ASSY., stop lamp switch	1		UG.902	Washer, pivot, .875" O/D	1
(10)	UR.836	Screw	1			Cars with synchro gearbox	
(11)	UR.837	Stop	1	(25)	UR.843	Distance piece, pedal shaft	1
				(26)	UA.1252/Z	Washer, pivot, .625" O/D	1


Silver Cloud	...	SWA—SGE-474
Silver Cloud L.W.B.	...	ALC—BLC-32
Bentley	...	AN—FD-39
Bentley L.W.B.	...	ALB—1-16
Continental	...	AF—FM-4

BRAKE PEDAL - R.C. CARS

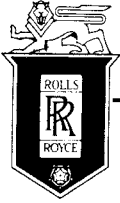

SPARES schedule


SILVER CLOUD AND BENTLEY 'S' TYPE

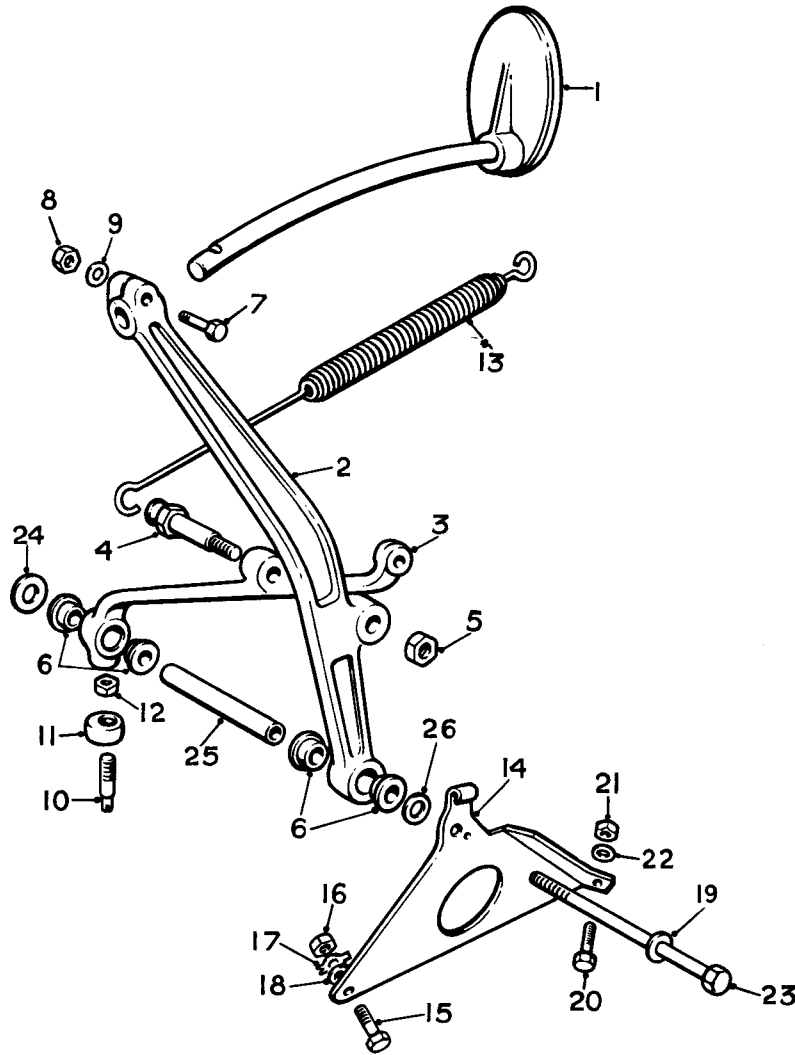

Ref.	Part No.	Description	No off	Ref.	Part No.	Description	No off
(1)	RF.7376	BRAKE PEDAL ASSEMBLY	1	(12)	UA.351/Z	Nut, screw	1
	UR.946	BRAKE PEDAL ASSEMBLY	1	(13)	UR.1279	Spring, pull-off	1
		(Bentley)		(14)	UR.2479	Bracket, pedal pivot	1
		(Silver Cloud)		(15)	UA.151/Z	Bolt, bracket	1
	UR.840	BRAKE PEDAL LEVER ASSEMBLY	1	(16)	UA.352/Z	Nut, bolt	1
(2)	UR.831	Lever, pedal	1	(17)	UR.2482	Washer, tab, bracket	1
(3)	UR.832	Lever, operating	1	(18)	UA.1252/Z	Washer, plain, bracket	1
(4)	UR.839	Bolt, return spring	1	(19)	UG.900	Washer, stay to bracket	1
(5)	RE.22430	Nut, bolt	1	(20)	UA.152/Z	Bolt, stay	1
(6)	RF.7381	Bush "Oilite"	4	(21)	UA.352/Z	Nut, bolt	1
(7)	UA.157/Z	Bolt, pedal stem	1	(22)	UA.1252/Z	Washer, bolt	1
(8)	UA.302/Z	Nut, bolt	1	(23)	UA.183/Z	Bolt, pivot	1
(9)	UA.1252/Z	Washer, bolt	1	(24)	UG.900	Washer, pivot, .750" O/D	3
	UR.835	STOP AND SCREW ASSY., stop				Auto gearbox cars	
		lamp switch	1		UG.902	Washer, pivot, .875" O/D	1
(10)	UR.836	Screw	1			Synchro gearbox cars	
(11)	UR.837	Stop	1	(25)	UR.843	Distance piece, pedal shaft	1
				(26)	UA.1252/Z	Washer, pivot, .625" O/D	1


Silver Cloud ... LSGE-476 onwards
 Silver Cloud L.W.B. ... BLC-33 onwards
 Bentley ... FD-41 onwards
 Bentley L.W.B. ... ALB-17 onwards
 Continental ... FM-5 onwards

BRAKE PEDAL - R.C. CARS

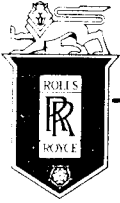

SPARES schedule


SILVER CLOUD AND BENTLEY 'S' TYPE

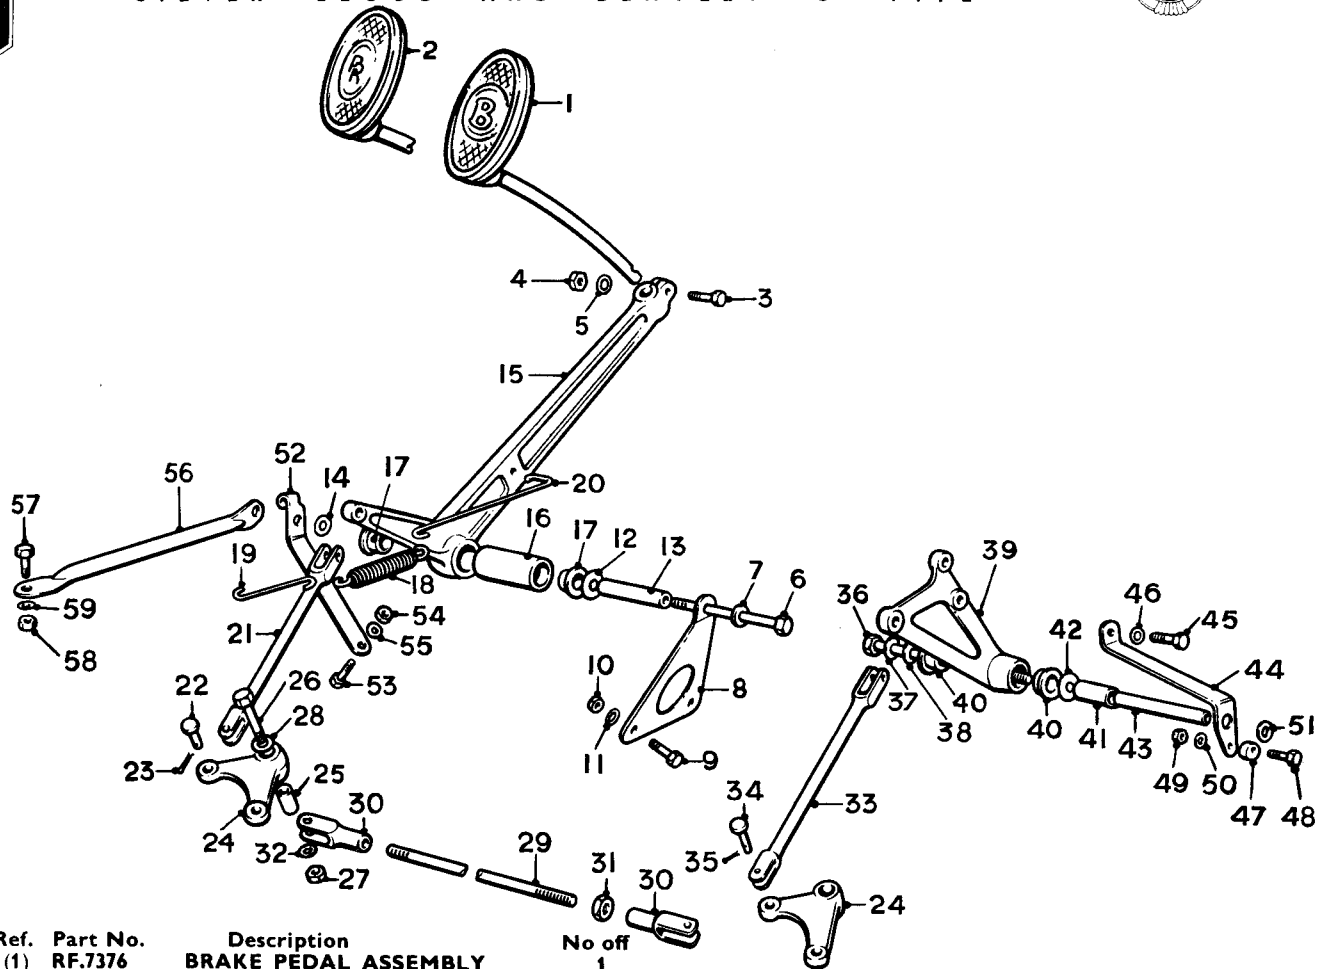

Ref.	Part No.	Description	No off	Ref.	Part No.	Description	No off
(1)	RF.7376	BRAKE PEDAL ASSEMBLY	1				
(2)	UR.946	BRAKE PEDAL ASSEMBLY	Bentley 1	(29)	UR.936	Rod, inter	1
			Silver Cloud 1	(30)	UG.1184	Jaw, levers	2
(3)	UA.157/Z	Bolt, pedal stem	1	(31)	UA.351	Nut, jaw	1
(4)	UA.302/Z	Nut, bolt	1	(32)	K.4410/Z	Washers	2
(5)	UA.1252/Z	Washer, bolt	1	(33)	UR.934	Link, connecting, 2nd inter lever	1
(6)	UR.1465	Bolt, pivot	1	(34)	K.6507/Z	Pin, jaw	4
(7)	UA.1252/Z	Washer, bolt	1	(35)	K.4608/Z	Pin, split, levers	4
(8)	UR.933	Plate, support	1	(36)	UA.179	Bolt, pivot	1
(9)	UA.152/Z	Bolt, support plate	2	(37)	UA.1252/Z	Washer, bolt	1
(10)	UA.302/Z	Nut, bolt	2	(38)	UG.900	Washer, pivot	1
(11)	UA.1252/Z	Washer, bolt	2		UR.950	LEVER, BELLCRANK, ASSY.	1
(12)	UG.900	Washer, pivot	1	(39)	UR.937	Lever	1
(13)	UR.931	Tube, distance, lever	1	(40)	RF.7381	Bush	2
(14)	UG.900	Washer, pivot	1	(41)	UR.945	Piece, distance, lever	1
	UR.949	BRAKE PEDAL LEVER ASSY.	1	(42)	UG.900	Washer, pivot	1
(15)	UR.930	Lever	1	(43)	UR.941	Piece, distance, stop lamp lever	1
(16)	UR.932	Tube	1	(44)	UR.944	Lever, stop lamp	1
(17)	RF.7381	Bush	2	(45)	UA.102/Z	Bolt, lever	1
(18)	GB.5097	Spring, pull-off	1	(46)	UA.1251/Z	Washer lever	1
(19)	RG.3446	Link, pull-off spring	1	(47)	UR.943	Cam, operating	1
(20)	UR.942	Link, pedal to spring	1	(48)	KC.173/Z	Bolt, cam	1
(21)	UR.934	Link, bellcrank lever to brake lever	1	(49)	K.4307/Z	Nut, bolt	1
(22)	K.6507/Z	Pin, jaw	2	(50)	K.4404/Z	Washer, nut	1
(23)	K.4608/Z	Pin, split	2	(51)	FW.991	Washer, pivot	1
(24)	UR.935	Lever, bellcrank, inter.	2	(52)	UR.926	Bracket, support, lever	1
(25)	UR.952	Tube, distance, bellcranks	2	(53)	UA.152/Z	Bolt, bracket	1
(26)	UA.161/Z	Bolt, levers	2	(54)	UA.302/Z	Nut, bolt	1
(27)	UA.302/Z	Nut, bolt	2	(55)	UA.1252/Z	Washer, nut	1
(28)	UA.1252/Z	Washer, bolt	2	(56)	UR.1291	Stay, lever pivot	1
				(57)	UA.151/Z	Bolt, stay	1
				(58)	UA.352/Z	Nut, stay	1
				(59)	UA.1252/Z	Washer, stay	1


Silver Cloud	...	SWA—SGE-474
Silver Cloud L.W.B.	...	ALC—BLC-32
Bentley	...	AN—FD-39
Bentley L.W.B.	...	ALB 1—16
Continental	...	AF—FM-4

BRAKE PEDAL, L.C. CARS

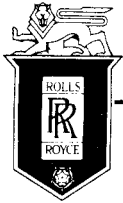

SPARES schedule

SILVER CLOUD AND BENTLEY 'S' TYPE

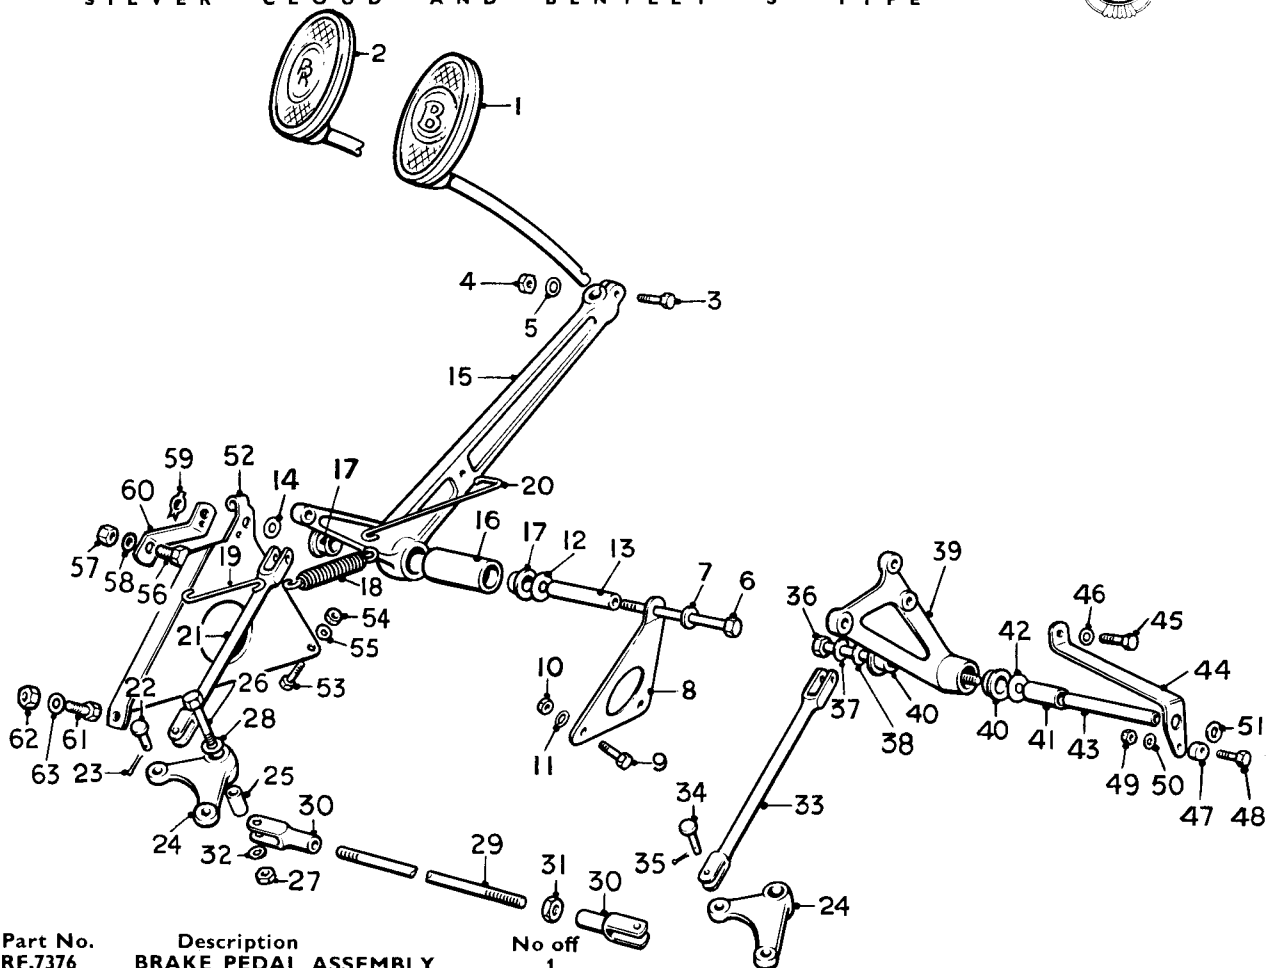


Ref.	Part No.	Description	No off
(1)	RF.7376	BRAKE PEDAL ASSEMBLY	1
(2)	UR.946	BRAKE PEDAL ASSEMBLY	1
		(Bentley)	
		(Silver Cloud)	
(3)	UA.157/Z	Bolt, pedal stem	1
(4)	UA.302/Z	Nut, bolt	1
(5)	UA.1252/Z	Washer, bolt	1
(6)	UR.1465	Bolt, pivot	1
(7)	UA.1252/Z	Washer, bolt	1
(8)	UR.933	Plate, support	1
(9)	UA.152/Z	Bolt, support plate	2
(10)	UA.302/Z	Nut, bolt	2
(11)	UA.1252/Z	Washer, bolt	2
(12)	UG.900	Washer, pivot	1
(13)	UR.931	Tube, distance, lever	1
(14)	UG.900	Washer, pivot	1
	UR.949	BRAKE PEDAL LEVER ASSY.	1
(15)	UR.930	Lever	1
(16)	UR.932	Tube	1
(17)	RF.7381	Bush	2
(18)	GB.5097	Spring, pull-off	1
(19)	RG.3446	Link, pull-off spring	1
(20)	UR.942	Link, pedal to spring	1
(21)	UR.934	Link, bellcrank lever to brake lever	1
(22)	K.6507/Z	Pin, jaw	2
(23)	K.4608/Z	Pin, split	2
(24)	UR.935	Lever, bellcrank, inter.	2
(25)	UR.952	Tube, distance, bellcranks	2
(26)	UA.161/Z	Bolt, levers	2
(27)	UA.302/Z	Nut, bolt	2
(28)	UA.1252/Z	Washer, bolt	2
(29)	UR.936	Rod, inter	1
(30)	UG.1184	Jaw, levers	2

Ref.	Part No.	Description	No off
(31)	UA.351	Nut, jaw	1
(32)	K.4410/Z	Washers	2
(33)	UR.934	Link, connecting, 2nd inter lever	1
(34)	K.6507/Z	Pin, jaw	4
(35)	K.4608/Z	Pin, split, levers	4
(36)	UR.2483	Bolt, pivot	1
(37)	UA.1252/Z	Washer, bolt	1
(38)	UG.900	Washer, pivot	1
	UR.950	LEVER, BELLCRANK, ASSY.	1
(39)	UR.937	Lever	1
(40)	RF.7381	Bush	2
(41)	UR.945	Piece, distance, lever	1
(42)	UG.900	Washer, pivot	1
(43)	UR.941	Piece, distance, stop lamp lever	1
(44)	UR.944	Lever, stop lamp	1
(45)	UA.102/Z	Bolt, lever	1
(46)	UA.1251/Z	Washer lever	1
(47)	UR.943	Cam, operating	1
(48)	KC.173/Z	Bolt, cam	1
(49)	K.4307/Z	Nut, bolt	1
(50)	K.4404/Z	Washer, nut	1
(51)	FW.991	Washer, pivot	1
(52)	UR.2479	Bracket, pedal pivot	1
(53)	UA.152/Z	Bolt, bracket	1
(54)	UA.302/Z	Nut, bolt	1
(55)	UA.1252/Z	Washer, nut	1
(56)	UA.151/Z	Bolt, stay	1
(57)	UA.352/Z	Nut, stay	1
(58)	UA.1252/Z	Washer, stay	1
(59)	UR.2482	Washer, tab, bracket	1
(60)	UR.2480	Bracket, support, pedal pivot	1
(61)	UA.102/Z	Bolt, support bracket	1
(62)	UA.301/Z	Nut, Bolt	1
(63)	UA.1251/Z	Washer, bolt	1

Silver Cloud LSGE-476 onwards
 Silver Cloud L.W.B. BLC-33 onwards
 Bentley FD-41 onwards
 Bentley L.W.B. ALB-17 onwards
 Continental FM-5 onwards


BRAKE PEDAL, L.C. CARS

PAGE NO.

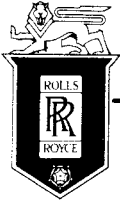

SPARES schedule


SILVER CLOUD AND BENTLEY 'S' TYPE

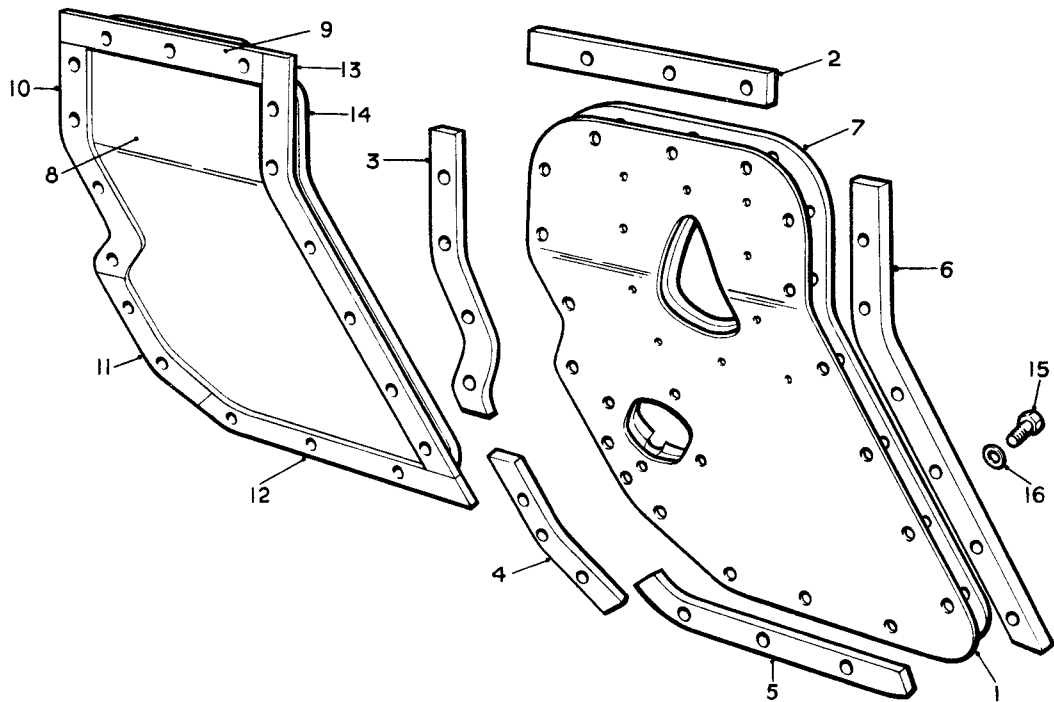

Ref.	Part No.	Description	No off
(1)	UR.1058	PLATE, PEDAL GAP, ASSY.	1— Standard
	UR.2087	PLATE, PEDAL GAP, ASSY.	1— When horn foot switch is fitted
(2)	UR.1011	Seal, top	1
(3)	UR.1012	Seal, upper, R.H.	1
(4)	UR.2614	Seal, lower, R.H.	1
(5)	UR.1014	Seal, bottom	1
(6)	UR.1015	Seal, L.H.	1
(7)	UR.1057	Felt	1
	UR.2087	PLATE, PEDAL GAP, MOD. ASS.	1
	K.1804/Z	Screw, footswitch	3
	K.4446/Z	Washer, screw	3
	K.4005/Z	Nut, screw	3
(8)	UR.3341	PLATE, BLANKING, ASSY. L.C.	1
	UR.1062	PLATE, BLANKING, ASSY. R.C.	1
(9)	UR.1011	Seal, top	1
(10)	UR.1012	Seal, upper, R.H.	1
(11)	UR.2614	Seal, lower, R.H.	1
(12)	UR.1014	Seal, bottom	1
(13)	UR.1015	Seal, L.H.	1
(14)	UR.1061	Felt	1
	UR.4649	PLATE, BLANKING, MOD. ASS.	1
	UA.101/Z	Bolt, compressor to plate	2
	K.4407/Z	Washer, bolt	2
(15)	CS.30542/Z	Screw, plates to dash	35— L.C.
	CS.30542/Z	Screw, plates to dash	34— R.C.
	CS.30545/Z	Screw, plates to dash	1
(16)	KB.3905/Z	Washer, screw	36
	K.4307/Z	Nut, pedal to speedo-drive, bkt.	1
	K.4404/Z	Washer, nut	1


PEDAL GAP PLATE

(Standard Bodies)

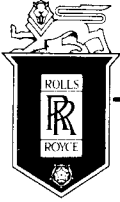

SPARES schedule


SILVER CLOUD AND BENTLEY 'S' TYPE

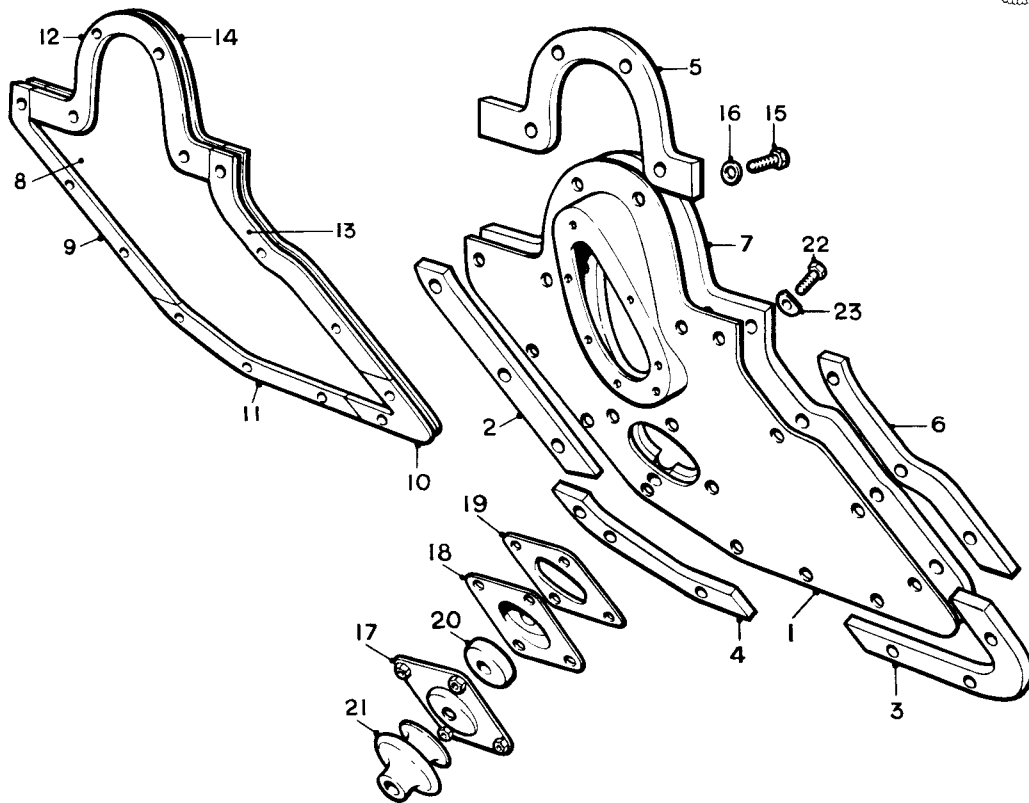

Ref.	Part No.	Description	No off
(1)	UR.2024	PLATE, PEDAL GAP, ASSY.	1
(2)	UR.2032	Seal, side, R.H.	1
(3)	UR.2033	Seal, lower, L.H.	1
(4)	UR.2034	Seal, lower, R.H.	1
(5)	UR.2085	Seal, upper	1
(6)	UR.2125	Seal, side L.H.	1
(7)	UR.2035	Felt	1
(8)	UR.3338	PLATE, BLANKING, ASSY. L.C.	1
	UR.2025	PLATE, BLANKING, ASSY. R.C.	1
(9)	UR.2032	Seal, side, R.H.	1
(10)	UR.2033	Seal, lower, L.H.	1
(11)	UR.2034	Seal, lower, R.H.	1
(12)	UR.2085	Seal, upper	1
(13)	UR.2125	Seal, side, L.H.	1
(14)	UR.2026	Felt	1
(15)	CS.30542/Z	Screw, plates to dash	29
(16)	KB.3905/Z	Washer, screw	30
(17)	373/235	Housing, bottom, pedal, L.C.	1
	373/234	Housing, bottom, pedal, R.C.	1
(18)	173/528	Housing, top, pedal, L.C.	1
	173/494	Housing, top, pedal, R.C.	1
(19)	UR.1007	Joint, rubber, housings	1
(20)	UR.1009	Seal, felt, housings	1
(21)	UR.1634	Seal, rubber, pedal	1
(22)	CS.30542/Z	Screw, housings	4
(23)	UR.1570	Washer, screws	4

PEDAL GAP PLATE

(Coachbuilt Cars)


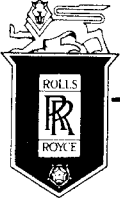


SPARES schedule


SILVER CLOUD AND BENTLEY 'S' TYPE



Ref.	Part No.	Description	No off
(1)	UR.3234	Hose, short, 1" m/cylinder	1
	UR.3235	Hose, short, 3/4" m/cylinder	1
(2)	RE.9418	Clip, Jubilee	2
(3)	UR.3237	Pipe, m/cylinder to reservoir hose	2
(4)	UR.3290	Clip, pipes to floor	4
(5)	KC.179/Z	Screw, clip	2
(6)	K.4006/Z	Nut, screw	2
(7)	K.4404/Z	Washer, screw	2
(8)	UR.3231	Hose, long, 1" m/cylinder	1
	UR.3285	Hose, long, 1" m/cylinder	1
	UR.3285	Cars with twin heater matrix	1
	UR.3285	Hose, long, 3/4" m/cylinder	1
(9)	UR.3289	Clip, hose	4
(10)	KC.171/Z	Screw, clip to valance	1
	UA.505/Z	Screw, clip to valance	1
	K.9714/Z	Distance piece, clip	1
		Cars with interior cooling system	
(11)	K.4404/Z	Washer, screw	1
(12)	UR.1734	Clip, hose to reservoir	2
(13)	UR.3246	Reservoir	2
(14)	UR.2837	Filter, reservoir	2
(15)	UR.2842	Gasket, filter	4
(16)	UR.3214	Connection	2
(17)	UR.1362	Distance piece, rear tank	2
(18)	UA.107/Z	Bolt, rear tank	2
(19)	K.4407/Z	Washer, bolt	2
(20)	UR.2852	Distance piece, front tank	4
(21)	UA.108/Z	Bolt, front tank	2
(22)	K.4407/Z	Washer, bolt	2

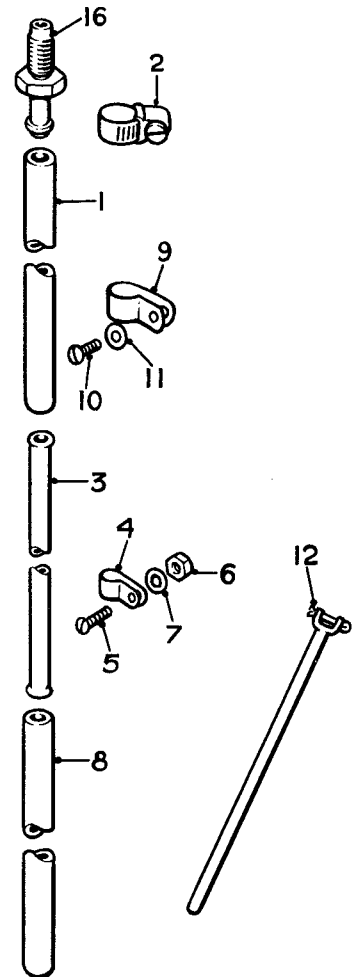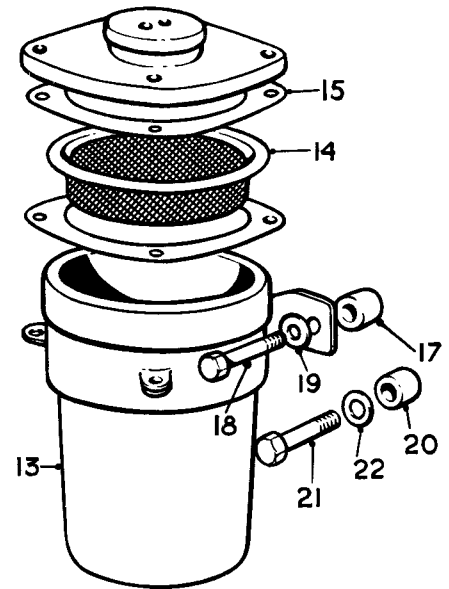

RESERVOIR AND SUPPLY PIPES


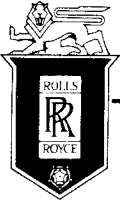


SPARES schedule


SILVER CLOUD AND BENTLEY 'S' TYPE



Ref.	Part No.	Description	No off
(1)	UR.3234	Hose, short, 1" m/cylinder	1
	UR.3235	Hose, short, 3/4" m/cylinder	1
(2)	RE.9418	Clip, Jubilee	2
(3)	UR.3237	Pipe, m/cylinder to reservoir hose	2
(4)	UR.3290	Clip, pipes to floor	4
(5)	KC.179/Z	Screw, clip	2
(6)	K.4006/Z	Nut, screw	2
(7)	K.4404/Z	Washer, screw	2
(8)	UR.3340	Hose, long, 1" m/cylinder	1
	UR.3285	Hose, long, 3/4" m/cylinder	1
(9)	UR.3289	Clip, hose	5
(10)	KC.171/Z	Screw, clip to valance	2
(11)	K.4404/Z	Washer, screw	2
(12)	UR.1734	Clip, hose to reservoir	2
(13)	UR.3246	Reservoir	2
(14)	UR.2837	Filter, reservoir	2
(15)	UR.2842	Gasket, filter	4
(16)	UR.3214	Connection	2
(17)	UR.1362	Distance piece, rear tank	2
(18)	UA.107/Z	Bolt, rear tank	2
(19)	K.4407/Z	Washer, bolt	2
(20)	UR.2853	Bracket, front tank	2
(21)	CS.30541/Z	Screw, bracket	3
	CS.30542/Z	Screw, bracket	1
(22)	UA.102/Z	Bolt, front tank	2
(23)	UA.301/Z	Nut, bolt	2
(24)	K.4407/Z	Washer, bolt	2

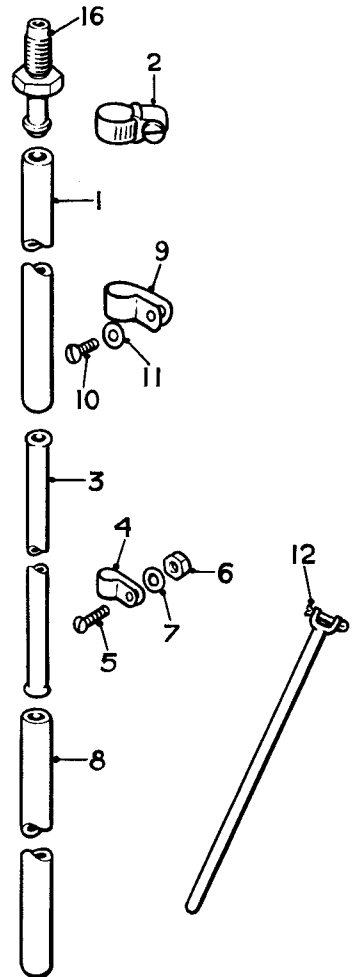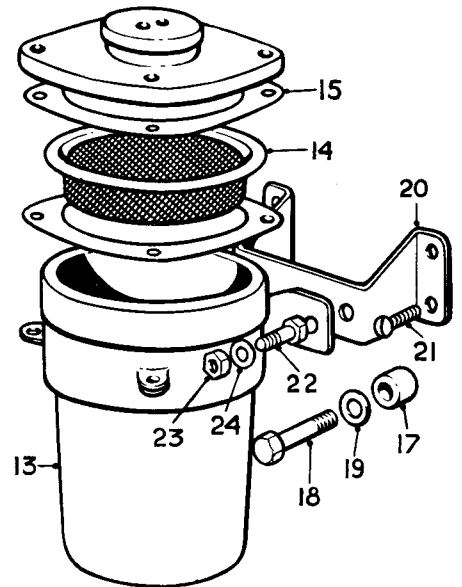


RESERVOIR AND SUPPLY PIPES ("CONTINENTAL")

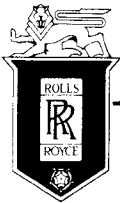


SPARES schedule

SILVER CLOUD AND BENTLEY 'S' TYPE

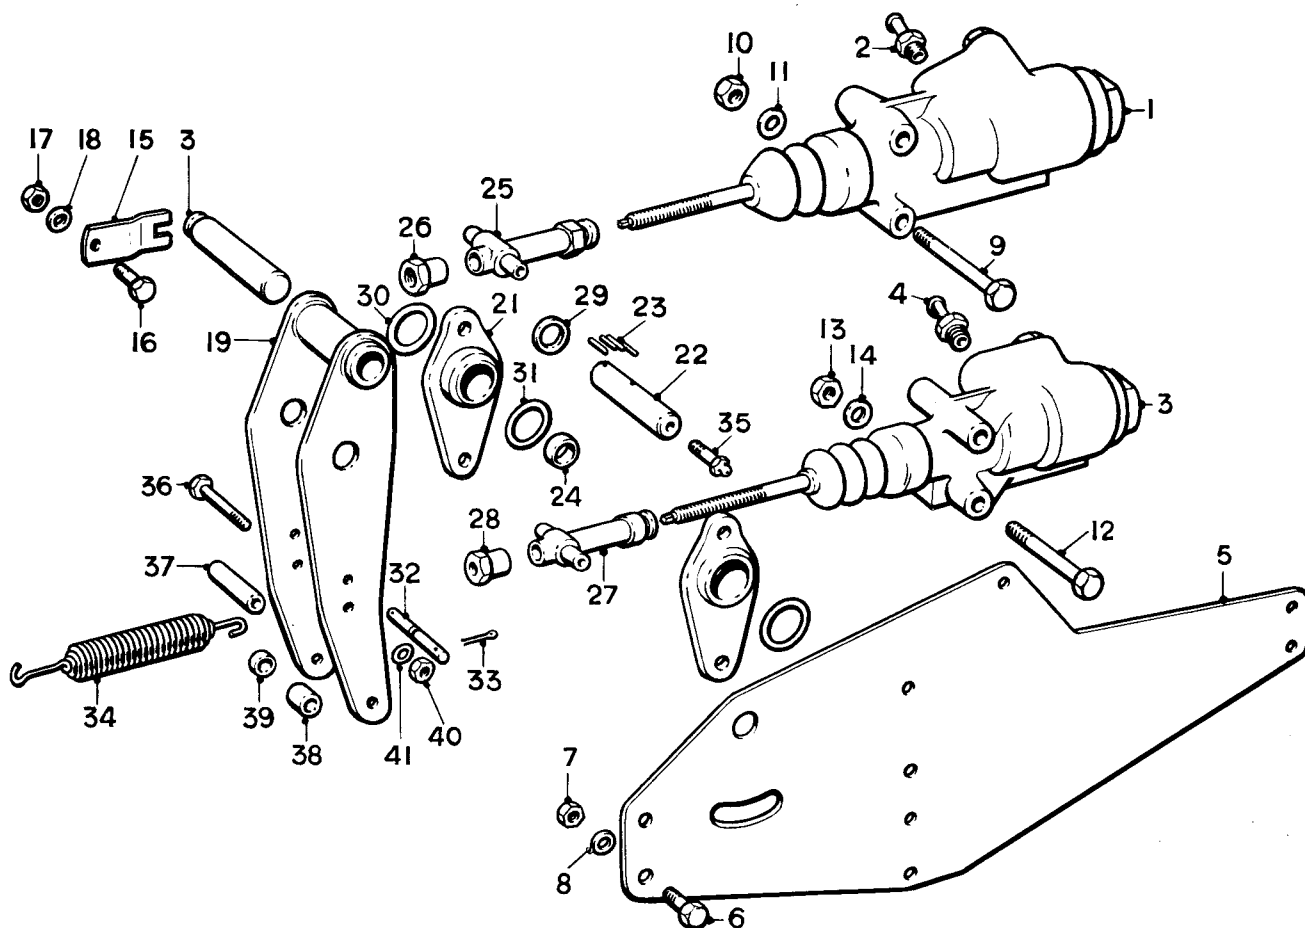


Ref.	Part No.	Description	No off	Ref.	Part No.	Description	No off
	UG.2891	MASTER CYLINDER ASSY., 1"	1	(23)	RF.7364	Needle roller	46
(2)	UG.2883	Connection	1	(24)	UG.2448	Distance piece, pivot pin	1
	CD.1206	KIT, SERVICE, 1" MASTER CYL.	1	(25)	UG.2466	Trunnion, upper	1
(3)	UG.2892	MASTER CYLINDER ASSY., 3/4"	1	(26)	UG.2473	Nut, upper trunnion	1
(4)	UG.2883	Connection	1	(27)	UG.2484	Trunnion, lower	1
	CD.1207	KIT, SERVICE, 3/4" MASTER CYL.	1	(28)	UG.2485	Nut, lower trunnion	1
(5)	UG.2487	Plate, inter support	1	(29)	UG.3155	Washer, adjusting, balance lever, .0675"	2 As req
(6)	UA.152/Z	Bolt, plate retaining	4		UG.2436	Washer, adjusting, balance lever, .0625"	
(7)	UA.302/Z	Nut, bolt	4		UG.2437	Washer, adjusting, balance lever, .0575"	
(8)	UA.1252/Z	Washer, bolt	4		UG.2438	Washer, adjusting, balance lever, .0525"	
(9)	UG.1205	Bolt, mounting, 1" M/Cylinder	2		UG.2439	Washer, adjusting, balance lever, .0475"	
(10)	RE.22428	Nut, bolt	2		UG.2440	Washer, adjusting, balance lever, .0425"	
(11)	UA.1253/Z	Washer, bolt	2	(30)	LC.280	Ring, sealing, .954 i/D	2
(12)	UA.171/Z	Bolt, mounting, 3/4" M/Cylinder	2	(31)	UG.2467	Ring, sealing, .859 i/D	1
(13)	UA.302/Z	Nut, bolt	2	(32)	UG.2510	Pin, pull-off spring	1
(14)	UA.1252/Z	Washer, bolt	2	(33)	K.4607/Z	Split, pin pin	2
(15)	UG.2434	Plate, pivot pin	1	(34)	UG.2509	Spring, pull-off	1
(16)	UA.103/Z	Bolt, retaining, plate	1	(35)	UG.2472	Grease nipple, balance lever	1
(17)	UA.301/Z	Nut, bolt	1	(36)	UG.2469	Bolt, pivot, servo drag link	2
(18)	UA.1251/Z	Washer, bolt	1	(37)	UG.2452	Bush, pivot	2
(19)	UG.2576	OPERATING LEVER ASSY.	1	(38)	UG.2470	Distance tube, long	2
(20)	UG.2447	Pin, pivot	1	(39)	UG.2471	Distance tube, short	2
(21)	UG.2994	BALANCE LEVER ASSY.	2	(40)	UA.301/Z	Nut, bolt	2
(22)	UG.2449	Pin, pivot	1	(41)	UA.1251/Z	Washer, nut	2

HYDRAULIC MASTER CYLINDER

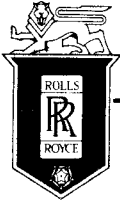


SPARES schedule

SILVER CLOUD AND BENTLEY 'S' TYPE

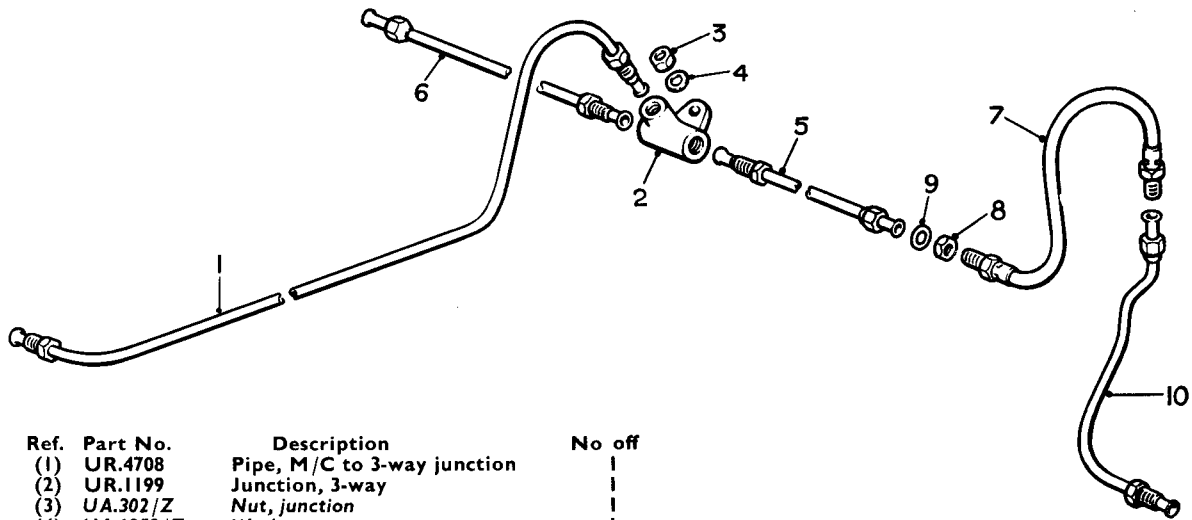


Ref.	Part No.	Description	No off
(1)	UR.4708	Pipe, M/C to 3-way junction	1
(2)	UR.1199	Junction, 3-way	1
(3)	UA.302/Z	Nut, junction	1
(4)	UA.1252/Z	Washer, nut	1
(5)	UR.3064	Pipe, brkt. on R.H. shock damper	1
(6)	UR.3065	Pipe, brkt. on L.H. shock damper	1
(7)	UR.4807	Hose, flexible	2
(8)	RE.22430	Nut, hose to brackets	4
(9)	UA.1253/Z	Washer	4
(10)	UG.1183	Pipe, operating, lower cylinder, R.H.	1
	UG.1182	Pipe, operating, lower cylinder, L.H.	1

**OPERATING PIPES.
FRONT BRAKES.**
($\frac{3}{8}$ in. MASTER CYLINDER)

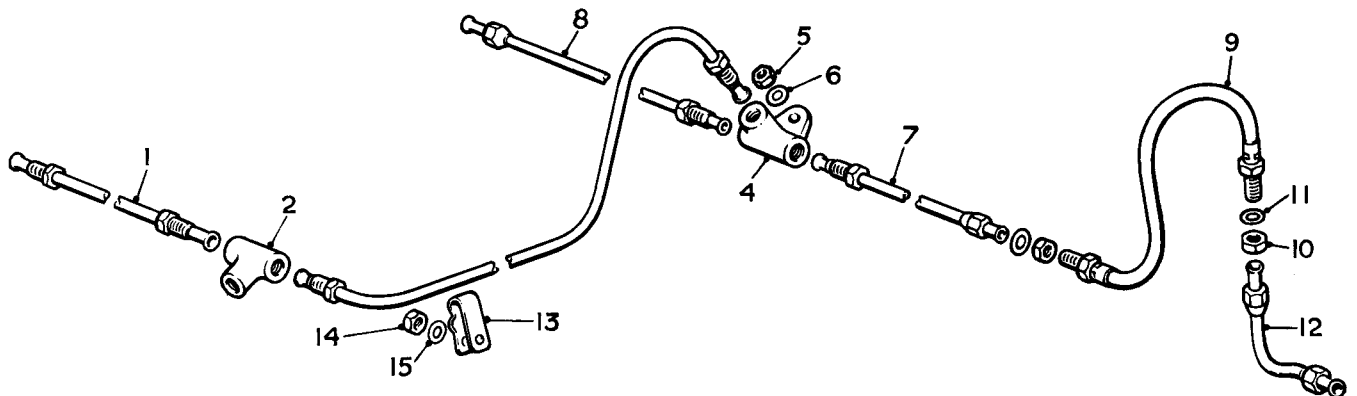


Ref.	Part No.	Description	No off
(1)	UR.4707	Pipe, M/C to 3-way junction	1
(2)	UR.3647	Junction, 3-way	1
(3)	UR.3072	Pipe, junction to junction front pan	1
(4)	UR.1199	Junction, front pan	1
(5)	UA.302/Z	Nut, junction	1
(6)	UA.1252/Z	Washer, nut	1
(7)	UR.1721	Pipe, bracket on R.H. shock damper	1
(8)	UR.1722	Pipe, bracket on L.H. shock damper	1
(9)	UR.4807	Hose, flexible, front brakes	2
(10)	RE.22430	Nut, hose to brackets	4
(11)	UA.1253/Z	Washer	4
(12)	UR.3061	Pipe, operating, upper cylinder, R.H.	1
	UR.3063	Pipe, operating, upper cylinder, L.H.	1
(13)	UR.2922	Clip, double, delivery pipes	7
(14)	K.4307/Z	Nut, clips	7
(15)	K.4404/Z	Washer	7

**OPERATING PIPES.
FRONT BRAKES.**
(1 in. MASTER CYLINDER)




SPARES schedule

SILVER CLOUD AND BENTLEY 'S' TYPE

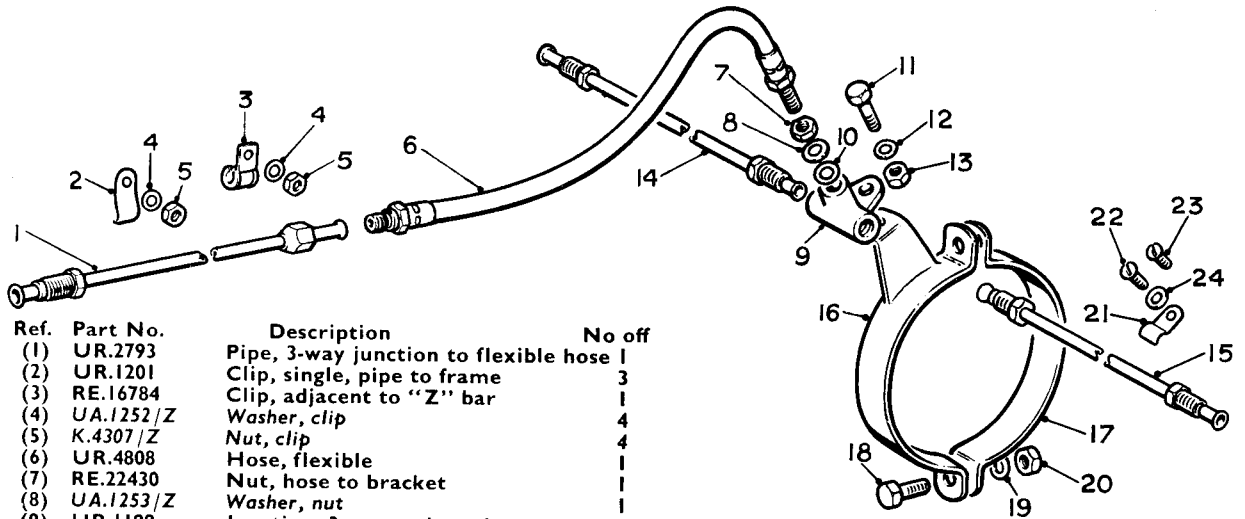


Ref.	Part No.	Description	No off
(1)	UR.2793	Pipe, 3-way junction to flexible hose	1
(2)	UR.1201	Clip, single, pipe to frame	3
(3)	RE.16784	Clip, adjacent to "Z" bar	1
(4)	UA.1252/Z	Washer, clip	4
(5)	K.4307/Z	Nut, clip	4
(6)	UR.4808	Hose, flexible	1
(7)	RE.22430	Nut, hose to bracket	1
(8)	UA.1253/Z	Washer, nut	1
(9)	UR.1199	Junction, 3-way, axle casing	1
(10)	UR.1200	Washer, sealing hose	1
(11)	UA.204/Z	Bolt, 3-way junction	1
(12)	UA.1253/Z	Washer, bolt	1
(13)	RE.22430	Nut, bolt	1
(14)	UR.2794	Pipe, junction to R.H. brake	1
(15)	UR.2795	Pipe, junction to L.H. brake	1
(16)	UR.2790	Support bracket, clamping strap	1
(17)	UR.2850	Clamping strap, bracket	1
(18)	UA.102/Z	Bolt, strap	2
(19)	UA.1251/Z	Washer, bolt	2
(20)	UA.301/Z	Nut, bolt	2
(21)	UR.1201	Clip, pipe to rear axle	5
(22)	K.1904/Z	Screw, clip	4
(23)	K.1910/Z	Screw, clip	1
(24)	K.4404/Z	Washer, clip	5

**OPERATING PIPES
REAR BRAKES.
("CONTINENTAL")**

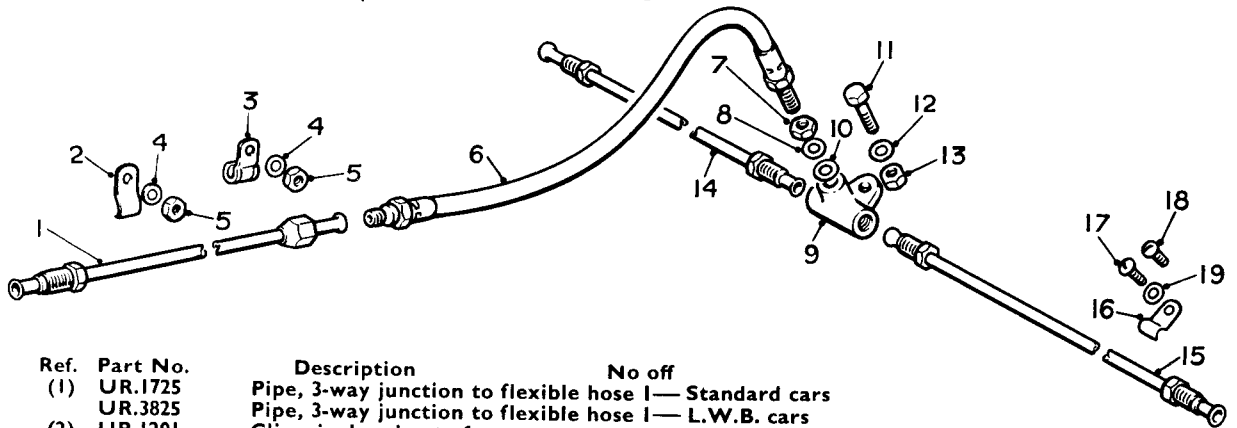


Ref.	Part No.	Description	No off
(1)	UR.1725	Pipe, 3-way junction to flexible hose	1 — Standard cars
	UR.3825	Pipe, 3-way junction to flexible hose	1 — L.W.B. cars
(2)	UR.1201	Clip, single, pipe to frame	3
(3)	RE.16784	Clip, adjacent "Z" bar	1
(4)	UA.1252/Z	Washer, clip	4
(5)	K.4307/Z	Nut, clip	4
(6)	UR.4808	Hose, flexible	1
(7)	RE.22430	Nut, hose to bracket	1
(8)	UA.1253/Z	Washer, nut	1
(9)	UR.1199	Junction, 3-way, axle casing	1
(10)	UR.1200	Washer, sealing hose	1
(11)	UA.204/Z	Bolt, 3-way junction	1
(12)	UA.1253/Z	Washer, bolt	1
(13)	RE.22430	Nut, bolt	1
(14)	UR.1727	Pipe, junction to R.H. brake	1
(15)	UR.1728	Pipe, junction to L.H. brake	1
(16)	UR.1201	Clip, pipe to rear axle	5
(17)	K.1904/Z	Screw, clip	4
(18)	K.1910/Z	Screw, clip	1
(19)	K.4404/Z	Washer, screw	5

**OPERATING PIPES
REAR BRAKES.
(EXCEPT "CONTINENTAL")**

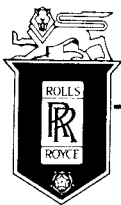


SPARES schedule

SILVER CLOUD AND BENTLEY 'S' TYPE

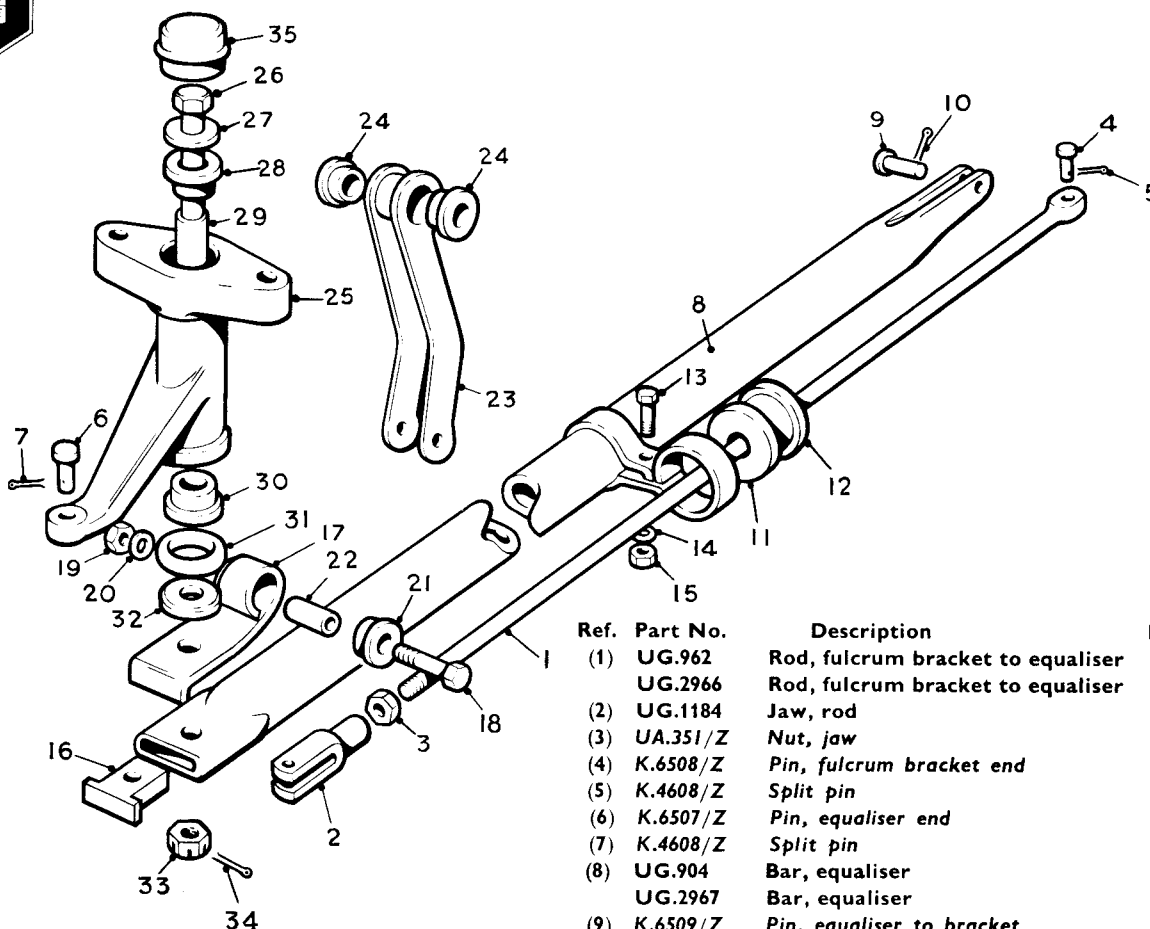


Ref.	Part No.	Description	No off
(1)	UG.962	Rod, fulcrum bracket to equaliser	1— Standard
	UG.2966	Rod, fulcrum bracket to equaliser	1— L.W.B. cars
(2)	UG.1184	Jaw, rod	1
(3)	UA.351/Z	Nut, jaw	1
(4)	K.6508/Z	Pin, fulcrum bracket end	1
(5)	K.4608/Z	Split pin	1
(6)	K.6507/Z	Pin, equaliser end	1
(7)	K.4608/Z	Split pin	1
(8)	UG.904	Bar, equaliser	1— Standard
	UG.2967	Bar, equaliser	1— L.W.B. cars
(9)	K.6509/Z	Pin, equaliser to bracket	1
(10)	K.4608/Z	Split pin	1
(11)	UG.1054	Steady bracket, equaliser	1
(12)	RG.4204	Bush, steady bracket	1
(13)	K.C173/Z	Setscrew, bracket	1
(14)	K.4404/Z	Washer, setscrew	1
(15)	K.4307/Z	Nut, setscrew	1
(16)	UG.906	Distance piece, equaliser bar	1
(17)	UG.896	Shackle, equaliser bar	1
(18)	KC.158/Z	Screw, shackle plate	1
(19)	K.4307/Z	Nut, screw	1
(20)	K.4404/Z	Washer, screw	1
(21)	RG.5085	Bush, rubber, shackle	2
(22)	UG.895	Distance piece, shackle	1
(23)	UG.891	SHACKLE PLATES, ASSEMBLY	1
(24)	RG.5085	Bush, rubber	2
(25)	UG.897	Lever, equaliser	1
(26)	UG.899	Bolt, lever	1
(27)	UG.900	Washer, top, bolt	1
(28)	RF.7381	Bush "Oilite," lever	1
(29)	UG.901	Distance piece, lever	1
(30)	RF.7381	Bush, "Oilite" equaliser	1
(31)	FB.3940	Ring, sealing, equaliser	1
(32)	UG.902	Washer, thrust, lever	1
(33)	UA.1102/Z	Nut, bolt, equaliser	1
(34)	K.4602/Z	Split pin	1
(35)	UG.898	Cap, lever	1

REAR BRAKE LEVERS, RODS AND SUPPORT BRACKETS

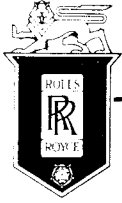


SPARES schedule

SILVER CLOUD AND BENTLEY 'S' TYPE

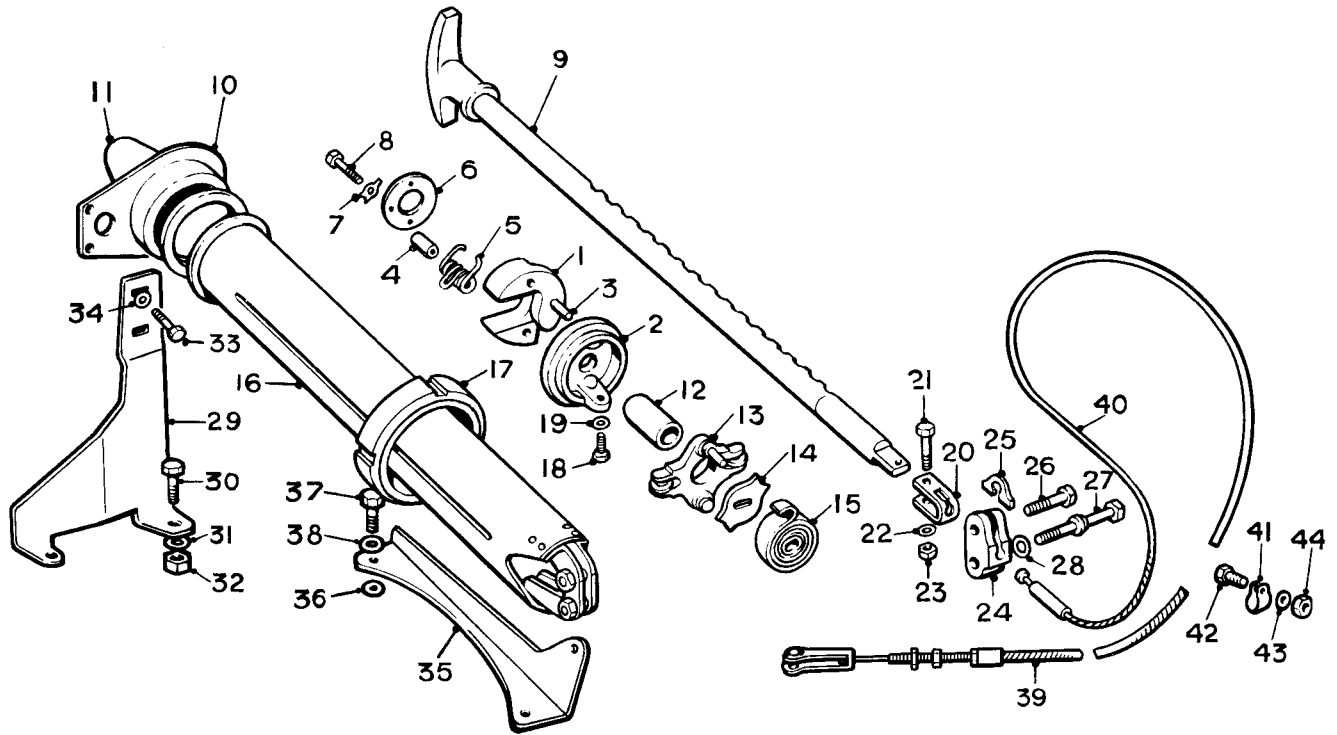


Ref.	Part No.	Description	No off	Ref.	Part No.	Description	No off
	RH.282	HANDBRAKE ASSEMBLY	1	(23)	K.4006/Z	Nut, screw	1
(1)	RG.5723	Pawl	2	(24)	UG.2351	Clamp, conduit	1
(2)	UG.1823	Carrier, pawl	1	(25)	UG.1833	Spacer, clamp	1
(3)	RG.5325	Pin	2	(26)	UA.105/Z	Bolt, clamp	1
(4)	RG.5303	Distance piece, pawl spring	1	(27)	UG.1876	Screw, handbrake to bracket	1
(5)	RG.6208	Spring	1	(28)	UA.1251/Z	Washer, screw	1
(6)	RG.5326	Cover plate	1	(29)	UG.1874	Bracket, upper	1
(7)	KB.7103	Washer, tab	1	(30)	UA.102/Z	Bolt, bracket to panel	2
(8)	KC.106/Z	Screw, cover plate	1	(31)	UA.1251/Z	Washer, bolt	2
(9)	UG.1862	Rod and Handle Assembly	1	(32)	UA.301/Z	Nut, bolt	2
(10)	UG.1865	Plate and Retainer Assembly	1	(33)	UA.102/Z	Bolt, handbrake to bracket	2
(11)	UG.1839	Cover Assembly	1	(34)	UA.2052/Z	Washer, bolt	2
(12)	UG.1821	Stop sleeve	1	(35)	UG.1875	Bracket, lower	1
(13)	UG.1871	Roller Carrier Assembly	1	(36)	FW.337	Washer, packing	1
(14)	UG.1820	Stop plate	1	(37)	UA.102/Z	Bolt, bracket to panel	2
(15)	UG.1817	Return spring	1	(38)	UA.1251/Z	Washer, bolt	2
(16)	UG.1873	Tube Assembly	1	(39)	UG.1201	Cable Assembly	1
(17)	UG.1829	Ring nut	1	(40)	RF.5302	Grommet, cable	1
(18)	K.1907/Z	Screw, tube to carrier	1	(41)	UG.1431	Clip, cable	1
(19)	K.4404/Z	Washer, screw	1	(42)	UA.1501/Z	Bolt, clip	1
(20)	UG.2350	Connector, cable	1	(43)	K.4404/Z	Washer, bolt	1
(21)	UA.1551/Z	Screw, connector	1	(44)	K.4307/Z	Nut, bolt	1
(22)	K.4404/Z	Washer, screw	1		UA.2101/Z	Bolt, blanking, brkt. holes	2

HANDBRAKE—R.C.



SPARES schedule

SILVER CLOUD AND BENTLEY 'S' TYPE

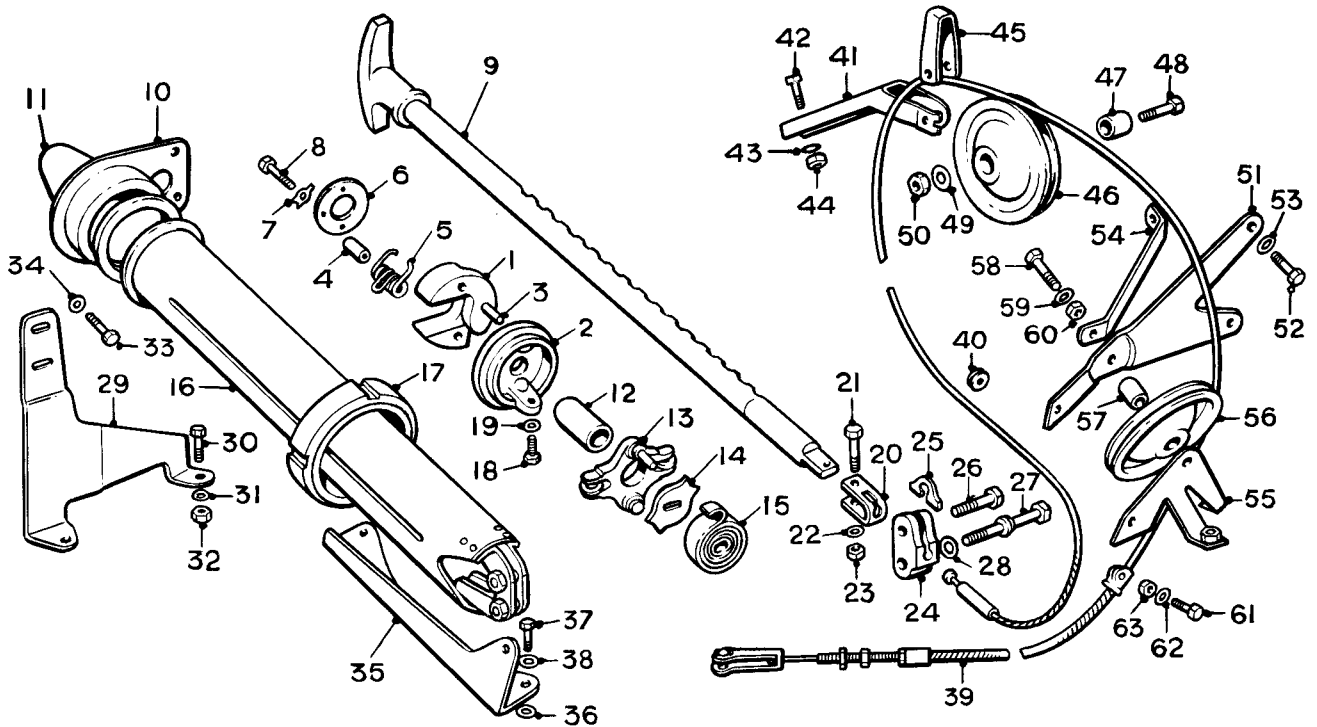

Ref.	Part No	Description	No off	Ref.	Part No.	Description	No off
	RH.282	HANDBRAKE ASSEMBLY	1	(33)	UA.102/Z	Bolt, handbrake to bracket	2
(1)	RG.5723	Pawl	2	(34)	UA.2052/Z	Washer, bolt	2
(2)	UG.1823	Carrier, pawl	1	(35)	UG.1892	Bracket, lower	1
(3)	RG.5325	Pin	2	(36)	FW.337	Washer, packing	1
(4)	RG.5303	Distance piece, pawl spring	1	(37)	UA.102/Z	Bolt, bracket to panel	2
(5)	RG.6208	Spring	1	(38)	UA.1251/Z	Washer, bolt	2
(6)	RG.5326	Cover plate	1	(39)	UG.1214	Cable Assembly	1
(7)	KB.7103	Washer, tab	1	(40)	RF.5302	Grommet, cable	1
(8)	KC.106/Z	Screw, cover plate	1	(41)	UG.1980	Bracket, pulley, dash	1
(9)	UG.1862	Rod and Handle Assembly	1		UG.1981	Bracket, pulley, dash	(Standard cars)
(10)	UG.1865	Plate and Retainer Assembly	1				(Coachbuilt cars)
(11)	UG.1839	Cover Assembly	1	(42)	UA.152/Z	Bolt, bracket	2
(12)	UG.1821	Stop sleeve	1	(43)	UA.1252/Z	Washer, bolt	2
(13)	UG.1871	Roller carrier Assembly	1	(44)	UA.302/Z	Nut, bolt	2
(14)	UG.1820	Stop plate	1	(45)	UG.1476	Shield, cable	1
(15)	UG.1817	Return spring	1	(46)	UG.1478	Pulley, Assembly	1
(16)	UG.1873	Tube Assembly	1	(47)	UG.1475	Tube, distance	1
(17)	UG.1829	Ring nut	1	(48)	UA.108/Z	Bolt, pulley	1
(18)	K.1907/Z	Screw, tube to carrier	1	(49)	UA.1251/Z	Washer, bolt	1
(19)	K.4404/Z	Washer, screw	1	(50)	UA.301/Z	Nut, bolt	1
(20)	UG.2350	Connector, cable	1	(51)	UG.1483	Bracket, frame, pulley	1
(21)	UA.1551/Z	Screw, connector	1	(52)	UA.102/Z	Bolt, bracket	2
(22)	K.4404/Z	Washer, screw	1	(53)	UA.1251/Z	Washer, bolt	2
(23)	K.4006/Z	Nut, screw	1	(54)	UG.1480	Stay, stiffening	1
(24)	UG.2351	Clamp, conduit	1	(55)	UG.1481	Plate, backing	1
(25)	UG.1833	Spacer, clamp	1	(56)	UG.1478	Pulley, Assembly	1
(26)	UA.105/Z	Bolt, clamp	1	(57)	UG.1475	Tube, distance	1
(27)	UG.1876	Screw, handbrake to bracket	1	(58)	UA.108/Z	Bolt, pulley	1
(28)	UA.1251/Z	Washer, screw	1	(59)	UA.1251/Z	Washer, bolt	1
(29)	UG.1893	Bracket, upper	1	(60)	UA.301/Z	Nut, bolt	1
(30)	UA.102/Z	Bolt, bracket to panel	2	(61)	UA.106/Z	Bolt, conduit abutment	1
(31)	UA.1251/Z	Washer, bolt	2	(62)	UA.1251/Z	Washer, bolt	1
(32)	UA.301/Z	Nut, bolt	2	(63)	UA.301/Z	Nut, bolt	1

HANDBRAKE AND PULLEYS—LC